PLC Connection Guide

EB Pro Ver.5.07.01

Table of content

ABB AC500 1
ABB NextMove ES 6
ABB TOTALFLOW FCU 9
Altus ALNET-I 10
Arcus DMX-K-SA Series 16
Artrich Inverter AR100 Series 23
Artrich Inverter AR200/216/600 Series 27
BACnet/IP 34
BACnet/MSTP 45
Barcode/Keyboard (USB/COM) 52
Baumuller 56
Beckhoff ADS/AMS (Ethernet) 59
Beckhoff Embedded PC 67
Beckhoff TwinCAT 3 ADS/AMS (Ethernet) 78
Beckhoff TwinCAT PLC (Ethernet) – Free Tag Names 79
Bosch Rexroth 83
CAN Bus CANopen Slave 89
CAN Bus 2.0A/2.0B General and SAE J1939 93
CAS CI-1580A 97
CD MODBUS RTU 103
CD MODBUS TCP/IP 109
Change 111
Cimon CM1-CP4A/ECO1A 114
Cimon CM1-SC02A 117
CoDeSys Automation Alliance 120
CoDeSys V2 (Symbolic Addressing) (Ethernet) 121
CoDeSys V3 (Ethernet) 124
Control Technology 2500 Series 128
Control Technology 2500 Series (Ethernet) 133
Copley Digital Drives 134
CO-TRUST CTH300-H (Ethernet) 139
CO-TRUST CTH300-H PPI 141
CROUZET M3 (FBD) 148
CROUZET M3 (LAD) 152
Danfoss ECL Apex20 156
Danfoss ECL Apex20 (Ethernet) 162
Danfoss FC Series 163
Danfoss VLT2800 Series 167
DELTA DVP 171
DELTA DVPEN01-SL (Ethernet) 177
DELTA Ethernet/IP (AS Series) 180
DL-BCM Server 182
DL/T645 CHUANG HONG 188
DL/T645 Standard 196
DL/T645-2007 Standard 200
ELSIST MODBUS ASCII 204
ELSIST MODBUS RTU 210
ELSIST MODBUS TCP/IP 216
EMERSON Charge Module 217
EMERSON ControlWave (Ethernet) – Free Tag Names 220
EMERSON PLC EC20 224
Emotiontek MCU Controller 227
FATEK FB/FBs/B1/B1z Series 232
Fuji NB Series 244
Fuji SPH2000 (Ethernet) 247
GE Fanuc 0i MD 249
GE Fanuc CMM 253
GE Fanuc RX3i 261
GE Fanuc RX3i (Ethernet) 267
GE Fanuc Series 90-30 (Ethernet) 268
GE Fanuc SNP-X 270
GE Fanuc VersaMax (Ethernet) 279
Haiwell PLC 281
Haiwell PLC (Ethernet) 287
Hangzhou Maiou MO-TECH 289
Hanyoung Controller 292
HAWE PLVC 296
HeFei ShenNong Motor 299
Heng Yuan EU series 302
Hitachi EH-SIO 306
Hitachi EHV Series (Ethernet) 314
Hitachi H/EH/EHV Series 315
HollySys LE/LM PLC 327
HUST H4C 331

HUST H4X....334
IAI PCON-C-42PI....337
IAI X-SEL CONTROLLER....344
IAI X-SEL CONTROLLER-SSE....348
IDEC Micro....352
IDEC MicroSmart....361
IEC 60870-5-104 IEC 104 Client....370
IEC 60870-5-104 IEC 104 Server....372
Inovance H2U/H1U....376
JTEKT Toyopuc CMP-Link (Ethernt)....380
JTEKT Toyopuc PCk05....385
JTEKT Toyopuc PCk06....388
Justfi Controller....393
Kernel sistemi DMX Series....396
KEYENCE KV-10/16/24/40/80/Visual KV Series....399
KEYENCE KV-3000....404
KEYENCE KV-L20V/700/1000/3000/5000/Nano Series....407
KEYENCE KV-L20V/700/1000/3000/5000/7500/Nano Series (Ethernet)....418
KEYENCE KV-L20V/700/1000/3000/5000/Nano Series (KV Studio Mode)....420
KONNEX KNXnet/IP....430
Korenix 6550....433
KOYO CLICK....434
KOYO CLICK (Ethernet)....437
KOYO DIRECT....439
KOYO Do-more....461
KOYO Do-more (Ethernet)....465
KOYO Ethernet....467
KW ProConOS....469
Lenze....472
LingYan BMS....476
LIYAN EX series....479
LoXin....482
LS GLOFA Cnet....486
LS GLOFA FEnet (Ethernet)....493
LS GLOFA GM3467 (LOADER)....494
LS MASTER-K Cnet....497
LS MASTER-K CPU Direct....500
LS MASTER-K MODBUS RTU....503
LS MASTER-K10S1....506
LS XBM/XBC Cnet....509
LS XBM/XBC FEnet (Ethernet)....515
LS XBM/XBC/XGK CPU DIRECT....517
LS XEC Cnet....522
LS XEC FEnet (Ethernet)....529
LS XEC/XGI CPU DIRECT....531
LS XGI Cnet....535
LS XGI FEnet (Ethernet)....541
LS XGK Cnet....543
LS XGK FEnet (Ethernet)....548
LS Mecapion Metronix AnyPack....550
LTi Motion LustBus....553
LTi Motion ServoOne (Ethernet)....557
Master-Slave Server....558
MEGMEET MC Series....561
MEIKONG Metro Safe Server....564
Memory Map....573
MIKOM MX Series PLC....581
Mitsubishi A1S/A2N....585
Mitsubishi A2A/A2U/A2AS/A2USH....588
Mitsubishi A2US....591
Mitsubishi A3A/A3N/A1SH/A2SH....594
Mitsubishi AJ71....597
Mitsubishi AJ71 (AnA/AnU CPU)....604
Mitsubishi AJ71 (Format 4)....611
Mitsubishi Alpha2....618
Mitsubishi F930GOT Server....621
Mitsubishi FX0S/FX0N/FX1S/FX1N/FX2....625
Mitsubishi FX232/485BD....634
Mitsubishi FX2N....643
Mitsubishi FX2N-10GM/20GM....647
Mitsubishi FX3U (Ethernet)....651
Mitsubishi FX3U/FX3G....658
Mitsubishi FX5U....662
Mitsubishi FX5U - ASCII Mode (Ethernet)....667

Mitsubishi FX5U - Binary Mode (Ethernet) 670
Mitsubishi L6ADP 673
Mitsubishi MELSEC-Q/L - ASCII Mode (Ethernet) 676
Mitsubishi MELSEC-Q/L - Binary Mode (Ethernet) 680
Mitsubishi MR J3/J4 A 684
Mitsubishi MR-MQ100 (Ethernet) 693
Mitsubishi Q00/Q00UJ/Q01/QJ71 695
Mitsubishi Q00J 706
Mitsubishi Q00U/Q01U/Q02U/QnUD/QnUDH 709
Mitsubishi Q00UJ/QnU/QnUD/QnUDH/QnUDEH/L (mini USB) 713
Mitsubishi Q02/02H 715
Mitsubishi Q06H 719
Mitsubishi QJ71E71 (Ethernet) 723
Mitsubishi R04 (Ethernet) 730
MODBUS ASCII 732
MODBUS ASCII Server 740
MODBUS RTU 748
MODBUS RTU (0x/1x Range Adjustable) 758
MODBUS RTU (Adjustable) 771
MODBUS RTU (zero-based addressing) 782
MODBUS Server (COM/Ethernet) 791
MODBUS TCP/IP 803
MODBUS TCP/IP (0x/1x Range Adjustable) 805
MODBUS TCP/IP (zero-based addressing) 810
MODBUS TCP/IP 32Bit 811
Moeller XC-CPU101 812
motrona CT-150 815
motrona CT15012B 818
motrona MC700 821
Nanjing CIGU Controller (for i-Series only) 824
Nanotec Stepper Motor 827
NMEA 0183 831
ODVA EtherNet/IP Explicit Messaging 834
OMRON C/CQM1 Series 837
OMRON CJ/CS/CP 842
OMRON CJ/CS/CP (Ethernet - FINS/TCP) 847
OMRON CP Series (USB) 849
OMRON E5CN/E5EZ/E5ZN 850
OMRON Ethernet 855
OMRON Ethernet (FINS/TCP) 859
OMRON EtherNet/IP (NJ Series) 861
OMRON Host Link 866
OPC UA Client 871
OuHua OHJX 872
Panasonic Eco-Power Meters 875
Panasonic FP/KW 881
Panasonic FP (Ethernet) 892
Panasonic FP2 (Ethernet) 894
Panasonic MEWTOCOL7 896
Panasonic MINAS A4 902
Panasonic MINAS A5 907
Parker ACR9000 914
Parker Compax3 917
Parker Compumotor 6K Series 925
Parker SLVD Series 928
PATLITE VM/VMS Series 931
Rockwell CompactLogix - Free Tag Names 940
Rockwell CompactLogix/FlexLogix 948
Rockwell DF1 953
Rockwell DF1 (BCC) 958
Rockwell DH485 963
Rockwell EtherNet/IP (CompactLogix) 971
Rockwell EtherNet/IP (CompactLogix) – Free Tag Names 973
Rockwell EtherNet/IP (ControlLogix) – Free Tag Names 979
Rockwell EtherNet/IP (DF1) 985
Rockwell Micro850 (Ethernet) - Free Tag Names 987
Rockwell Micro850 - Free Tag Names 993
Rockwell PLC5 1001
RS Automation OEMAX Series 1005
RS Automation X8 Series 1008
SAIA PCD PGU Mode 1012
SAIA PCD S-BUS Mode 1015
SAIA S-BUS (Ethernet) 1026

Samsung SPC-10 1028
SCENE6 Controller 1032
Schleicher XCS 20C 1034
Schleicher XCX 300 1037
Schneider IMS SERVO 1042
Schneider MODBUS RTU 1045
Schneider MODBUS TCP/IP 1054
Schneider PowerLogic Modbus RTU 1056
Schneider SoMachine M Series (Ethernet) 1064
Schneider UniTelway 1066
SERVO BLDC (400/750WD) 1070
SEUNGIL AHU 1073
SEW Movilink 1077
SEW MOVITRAC LTE 1081
SHIMADEN MR13/FP93 1086
SHJ-A 1100
SICK FLEXI SOFT 1103
Siemens LOGO (Ethernet) 1106
Siemens S7-1200 (symbolic addressing) (Ethernet) 1111
Siemens S7-1200/S7-1500 (absolute addressing) (Ethernet) 1124
Siemens S7-200 1131
Siemens S7-200 (Ethernet) 1137
Siemens S7-200 (VD any address) 1145
Siemens S7-200 PPI 1151
Siemens S7-200 SMART (Ethernet) 1160
Siemens S7-200 SMART PPI 1162
Siemens S7-300 1166
Siemens S7-300/S7-400 (ISO Ethernet) 1175
Siemens S7-300 MPI 1178
Siemens S7-300/ET200S (Ethernet) 1189
Siemens S7-400 (Ethernet) 1195
Siemens TI505 1202
Siemens TI505 (Ethernet) 1209
Siemens TI565 1210
SIGMATEK S-DIAS CPU (Ethernet) 1217
SSTC SSD Series 1222
TECHSOFT Intelligent Servo 1236
TECO Inverter 1239
TECO TP02 Series 1243
TECO TP03 Series/AP-360BT-A 1249
TINHAO 1253
Toptek Topvert 1257
TOSHIBA INVERTER VF 1262
TOSHIBA T Series 1266
TOSHIBA MACHINE Provisor TC200 1275
Trio MODBUS RTU, TCP/IP 1278
Trio MODBUS RTU, TCP/IP (Mode 7) 1286
VIGOR 1294
VIGOR VS Series 1299
VIPA 200 1305
VIPA 200 (VD any address) 1309
VIPA 200, for ex. 214-2BT10 (Ethernet) 1313
VIPA 200/300 MPI 1314
VIPA 300 1323
VIPA 300S (Ethernet) 1333
VIPA 300S, for ex. 315-4NE12 (Ethernet) 1340
WIELAND SAMOS PRO 1345
XINJE XC Series 1348
YAMAHA ERCD 1351
YASKAWA CCMEP 1355
YASKAWA DX100/DX200/FS100 Robot Controller 1358
YASKAWA Memobus (MP Series Controllers) 1360
YASKAWA MP Series Ethernet (Extension) 1370
YASKAWA MP Series Memobus (Ethernet) 1374
YASKAWA MP Series SIO (Extension) 1376
YASKAWA MP2300Siec 1382
YASKAWA Sigma-5 1391
YASKAWA SMC 3010 1394
YASKAWA SMC 3010 (Ethernet) 1398
YOKOGAWA FA-M3 1401
YOKOGAWA FA-M3 (Ethernet) 1408
YUDIAN AIBUS 1410

ABB AC500

Supported Series: ABB AC500

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	ABB AC500		
PLC I/F	RS485 2W	RS232/RS485 2W / Ethernet	
Baud rate	19200		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		
Port no.	502		Ethernet

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MX0	DDDDo	0 ~ 81917	%MX0.0.0 ~ 0.8191.7
W	MW0	DDDDD	0 ~ 32767	%MW0.0 ~ 0.32767
W	MW1	DDDDD	0 ~ 32767	%MW0.1 ~ 1.32767

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS485 2W 9P Female	RS485 2W 9P Female		
Rx	2	8	⟷	2 TX
Tx	3	7	⟷	3 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Female
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Female
Rx	9	2 TX
Tx	6	3 RX
GND	5	5 GND

RS-485 2W 9P D-Sub (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI			PLC
	COM1 RS485 2W 9P Female	COM3 RS485 2W 9P Female	RS485 2W 9P D-Sub Female
Data-	1	6	8 Data-
Data+	2	9	3 Data+
GND	5	5	5 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 2W 9P Female	COM3 RS485 2W 9P Female	RS485 2W 9P D-Sub Female
Data-	7	4	8 Data-
Data+	6	1	3 Data+
GND	5	5	5 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Female
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	3 Data+
GND	5	9	⟷	5 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Female
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8 Data-
Data+	2	9	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Female
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 9

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Female
	RS485 2W 9P Male		
Rx-	1	⟷	8 Data-
Rx+	2	⟷	3 Data+
Tx-	5	⟷	5 GND

Diagram 10

Ethernet cable:

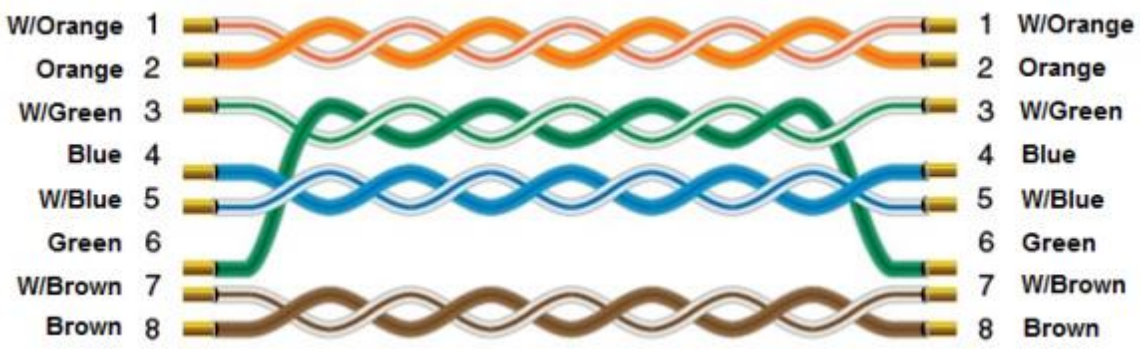


ABB NextMove ES

Supported Series: ABB NextMove ES

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	ABB NextMove ES		
PLC I/F	RS232		
Baud rate	9600	9600~115200	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	2	0~127	

Device Address:

Bit/Word	Device type	Format	Range	Memo
DW	COMMS_Int_Bit	DDDdd	100 ~ 25531	
DW	COMMS	DDD	1 ~ 255	Float
DW	COMMS_Int	DDD	1 ~ 255	Int

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Female
	RS232 9P Female		
Rx	2	⟷	3 TX
Tx	3	⟷	2 RX
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	3 TX
Tx	6	⟷	2 RX
GND	5	⟷	5 GND

ABB TOTALFLOW FCU

Supported Series: ABB TOTALFLOW FCU
Website: http://new.abb.com/us

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	ABB TOTALFLOW FCU		
PLC I/F	Ethernet		
Port no.	10000		
PLC sta. no.	0		


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	BIT	DDD.DDD.DDDD	0 ~ 255.255.9999	
B	W_BIT	DDD.DDD.DDDDdd	0 ~ 255.255.999915	
Byte	BYTE	DDD.DDD.DDDD	0 ~ 255.255.9999	
W	WORD	DDD.DDD.DDDD	0 ~ 255.255.9999	
DW	DWORD	DDD.DDD.DDDD	0 ~ 255.255.9999	
W	STRING	DDD.DDD.DDDD	0 ~ 255.255.9999	

Wiring Diagram:

Diagram 1

Ethernet cable:

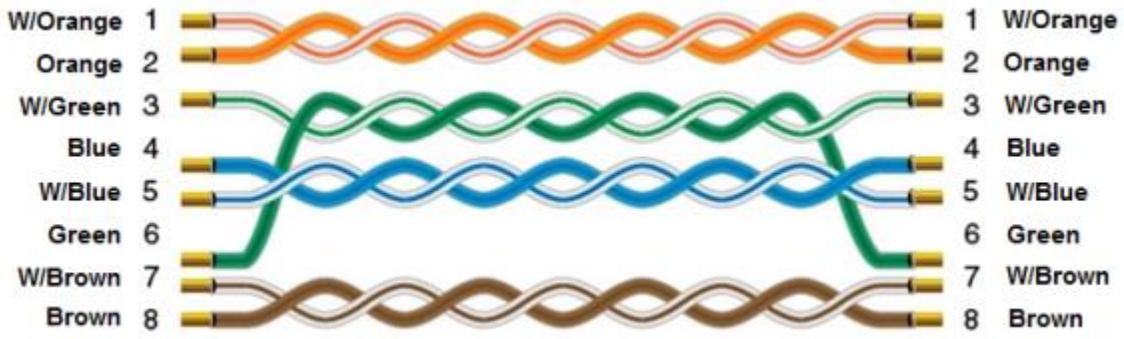

Altus ALNET-I

Supported Series: Altus SeriesMode PO3042, PO3142, PO3242, PO3342, PL103, PL104, PL105, QK800, QK801, QK2000.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Altus ALNET-I		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device Type	Format	Range	Memo
B	M_Bit	DDDDh	0 ~ 1023f	Memories
B	A	DDDh	0 ~ 511f	Auxiliary Relays
B	E	DDDh	0 ~ 511f	Input Relays
B	D_Bit	DDDDdd	0 ~ 102331	Decimals
B	F_Bit	DDDDdd	0 ~ 102331	Reals
B	I_Bit	DDDDdd	0 ~ 102331	Integers
B	S	DDDh	0 ~ 511f	Output Relays
W	M	DDDD	0 ~ 4096	Memories
DW	D	DDDD	0 ~ 4096	Decimals
DW	F	DDDD	0 ~ 1023	Reals
DW	I	DDDD	0 ~ 1023	Integers
W	TM	HHHH	0 ~ ffff*	Memory Tables
DW	TD	HHHH	0 ~ ffff*	Decimal Tables
DW	TF	HHHH	0 ~ ffff*	Real Tables
DW	TI	HHHH	0 ~ ffff*	Integer Tables

Note: The formats of TM, TD, TF and TI in PLC software are represented as TXA[B]. “X” can be M, D, F, or I. The address range of B is 0~FF, and A is 0~FF. The device type is AABB, and the range depends on the PLC settings.

For example: Model PO3242, range of “A” is ”0” and range of “B” is 0 ~ 7.

Wiring Diagram:

PLC PO3042, PO3142, PO3242, PO3342: RS-232 8P RJ45 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P RJ45
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 TX
Tx	3	7	⟷	3 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 8P RJ45
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 8P RJ45
Rx	9	2 TX
Tx	6	3 RX
GND	5	5 GND

PLC PL103, PL104, PL105: RS-232 9P D-Sub (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female	COM3 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	8	7 TX
Tx	3	7	1 RX
GND	5	5	5 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	7 TX
Tx	3	⟷	1 RX
GND	5	⟷	5 GND

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	7 TX
Tx	6	⟷	1 RX
GND	5	⟷	5 GND

PLC QK800, QK801, QK2000: RS-232 9P D-Sub (Diagram 7 ~ Diagram 9)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 TX
Tx	3	7	⟷	3 RX
GND	5	5	⟷	7 GND

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	7 GND

Diagram 9

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	2 TX
Tx	6	⟷	3 RX
GND	5	⟷	7 GND

Arcus DMX-K-SA Series

Supported Series: Arcus DMX-K-SA Series.
Website: http://www.arcus-technology.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Arcus DMX-K-SA Series		
PLC I/F	RS232	RS232 / RS485 2W	
Baud rate	9600	9600 ~ 115200	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		


Device Address:

Bit/Word	Device Type	Format	Range	Memo
B	ABORT	D	0	
B	ABS	D	0	
B	CLR	D	0	
B	CLRS	D	0	
B	DI_Bit	D	1 ~ 6	
B	DO_Bit	D	1 ~ 3	
B	EDO	D	0	
B	EO	D	0	
B	H+	D	0	
B	H-	D	0	
B	J+	D	0	
B	J-	D	0	
B	L+	D	0	
B	L-	D	0	
B	LT	D	0	
B	MM	D	0	
B	MST	D	0 ~ 9	
B	POL	D	0 ~ 8	
B	RT	D	0	

Bit/Word	Device Type	Format	Range	Memo
B	SCV	D	0	
B	SL	D	0	
B	STORE	D	0	
B	SLOAD	D	0	
B	STOP	D	0	
B	Z+	D	0	
B	Z-	D	0	
B	ZH+	D	0	
B	ZH-	D	0	
W	ACC	D	0	
W	CUR	D	0	
W	CURI	D	0	
W	CURR	D	0	
W	DB	D	0	
W	DI	D	0	
W	DN	D	0 ~ 2	
W	DO	D	0	
W	DX	D	0	
W	EX	D	0	
W	HSPD	D	0	
W	ID	D	0 ~ 6	
W	LCA	D	0	
W	LSPD	D	0	
W	LTE	D	0	
W	LTP	D	0	
W	LTS	D	0	
W	PS	D	0	
W	PX	D	0	
W	SA	DDDD	0 ~ 1275	
W	SASTAT	D	0	
W	SLA	D	0	
W	SLE	D	0	
W	SLS	D	0	
W	SLT	D	0	
W	SR	D	0	
W	SPC	D	0	
W	SSPD	D	0	

Bit/Word	Device Type	Format	Range	Memo
W	SSPDM	D	0	
W	V	DD	0 ~ 99	
W	VER	D	0	
W	X	D	0	

Wiring Diagram:

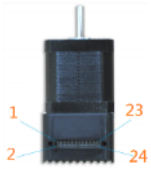

RS-232 24P Connector (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 24P Connector
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	9 TX
Tx	3	7	⟷	19 RX
GND	5	5	⟷	3;24 GND

Diagram 2


cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 24P Connector
Rx	2	⟷	9 TX
Tx	3	⟷	19 RX
GND	5	⟷	3;24 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 24P Connector
Rx	9	⟷	9 TX
Tx	6	⟷	19 RX
GND	5	⟷	3;24 GND

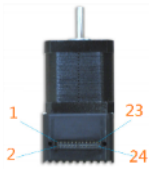

RS-485 2W 24P Connector (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 24P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	6 Data-
Data+	2	9	⟷	4 Data+
GND	5	5	⟷	3;24 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 24P Connector
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	6 Data-
Data+	6	1	⟷	4 Data+
GND	5	5	⟷	3;24 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 24P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	6 Data-
Data+	2	8	⟷	4 Data+
GND	5	9	⟷	3;24 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 24P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	6 Data-
Data+	2	9	⟷	4 Data+
GND	5	5	⟷	3;24 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 24P Connector
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	6 Data-
Data+	2	8	⟷	4 Data+
GND	5	5	⟷	3;24 GND

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 24P Connector
	RS485 2W 9P Female		
Data-	1	⟷	6 Data-
Data+	2	⟷	4 Data+
GND	5	⟷	3;24 GND

Artrich Inverter AR100 Series

Supported Series: Artrich Inverter AR100 Series
Website: www.artrich.cn

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Artrich Inverter AR100 Series		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	F3002_bit	Hh	0 ~ 0f	
B	F3003_bit	Hh	0 ~ 0f	
W	F0-0 ~ F0-1	D	0	W/R
W	F0-2	D	0 ~ 1	W/R *Note1
W	F0-3 ~ F0-157	D	0	W/R
W	F2-0 ~ F2-16	D	0	Read only
W	F3000 ~ F3001	D	0	Write only
W	F3002 ~ F3003	D	0	Read only
W	FC01 ~ FC12	D	0	Read only

Note 1: Value 0 means write to NAND Flash (Data will be saved after power off.) Value 1 means write to RAM (Data will not be saved after power off.)

Wiring Diagram:

RS-485 2W 8P RJ45 (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8 Data-
Data+	6	1	⟷	1 Data+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	1 Data+
GND	5	9	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	1 Data+
GND	5	5	⟷	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 8P RJ45
	RS485 2W 9P Female		
Data-	1	⟷	8 Data-
Data+	2	⟷	1 Data+
GND	5	⟷	

Artrich Inverter AR200/216/600 Series

Supported Series: Artrich Inverter AR200/216/600 Series
Website: www.artrich.cn

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Artrich Inverter AR200/216/600 Series		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	F3002_bit	Hh	0 ~ 0f	
B	F3003_bit	Hh	0 ~ 0f	
W	F0-0 ~ F0-1	D	0	W/R
W	F0-2	D	0 ~ 1	W/R *Note1
W	F0-3 ~ F0-178	D	0	W/R
W	F2-0 ~ F2-16	D	0	Read only
W	F3000 ~ F3001	D	0	Write only
W	F3002 ~ F3003	D	0	Read only
W	FC01 ~ FC12	D	0	Read only

Note 1: Value 0 means write to NAND Flash (Data will be saved after power off.) Value 1 means write to RAM (Data will not be saved after power off.)

Wiring Diagram:

RS-485 2W 8P RJ45 (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8 Data-
Data+	6	1	⟷	1 Data+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	1 Data+
GND	5	9	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	↔	8 Data-
Data+	2	8	↔	1 Data+
GND	5	5	↔	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 8P RJ45
	RS485 2W 9P Female		
Data-	1	↔	8 Data-
Data+	2	↔	1 Data+
GND	5	↔	

RS-485 2W Terminal (Diagram 7 ~ Diagram 12)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	RS485-
Data+	2	9	⟷	RS485+
GND	5	5	⟷	GND

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	RS485-
Data+	6	1	⟷	RS485+
GND	5	5	⟷	GND

Diagram 9

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	RS485-
Data+	2	8	⟷	RS485+
GND	5	9	⟷	GND

Diagram 10

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	RS485-
Data+	2	9	⟷	RS485+
GND	5	5	⟷	GND

Diagram 11

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	RS485-
Data+	2	8	⟷	RS485+
GND	5	5	⟷	GND

Diagram 12

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	⟷	RS485-
Data+	2	⟷	RS-485+
GND	5	⟷	GND

BACnet/IP


Supported series: BACnet/IP protocol devices

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	BACnet/IP		
PLC I/F	Ethernet		
Port no.	47808		47808 is the standard communication port of BACnet protocol.
HMI port no.	47808	49152~65535	Different HMI ports are required when connecting multiple
Device ID	342566	0~999999	According to device.
PLC sta. no.	1		

BACnet/IP to MS/TP Adapter Setting:

1. When using BACnet/IP driver, please correctly set “Mode”, “Maxinum number of segments accepted”, and “Maximum APDU length accepted” according to the actual device.

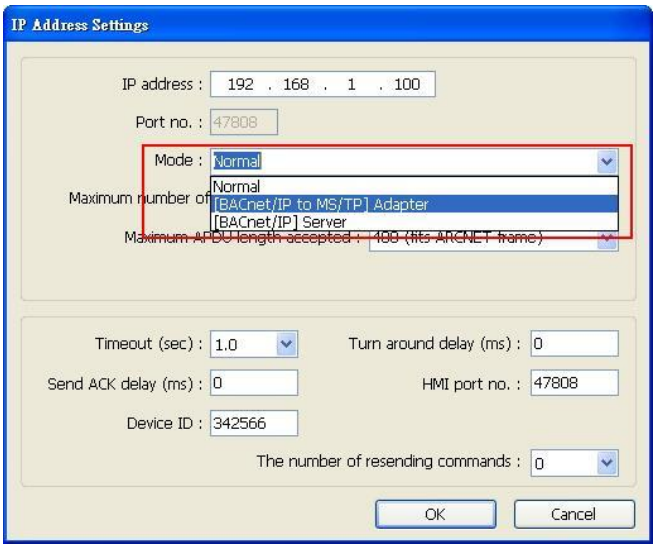



BACnet/IP to MS/TP adapter


2. As shown above, in BACnet/IP to MS/TP Adapter mode, [Network number] must follow the factory setting, and enter the device station number in [Device ID].

3. [HMI port no]. default: 47808, can be filled in other effective value.


How to Import Tags:

EasyBuilder Pro provides two ways to gain tag addresses. One is to directly get tag information via internet, another is to export the generated CSV file via SCADA, and then import to EasyBuilder Pro. The following introduces how to import tag address information.

Step 1. Add BACnet/IP driver in System Parameters Settings

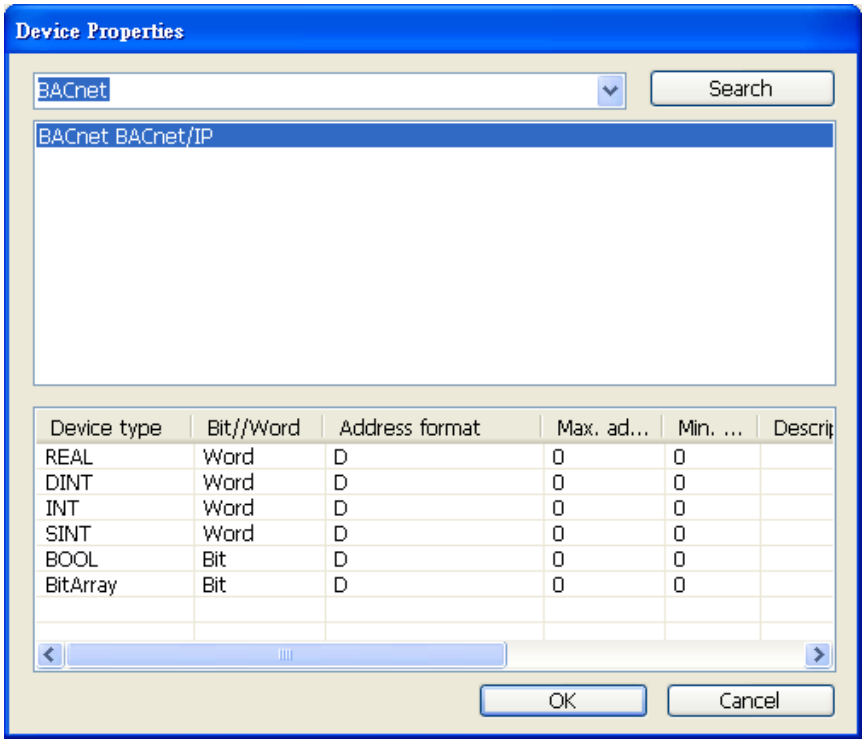


Step 2. Correctly set the relevant parameters.

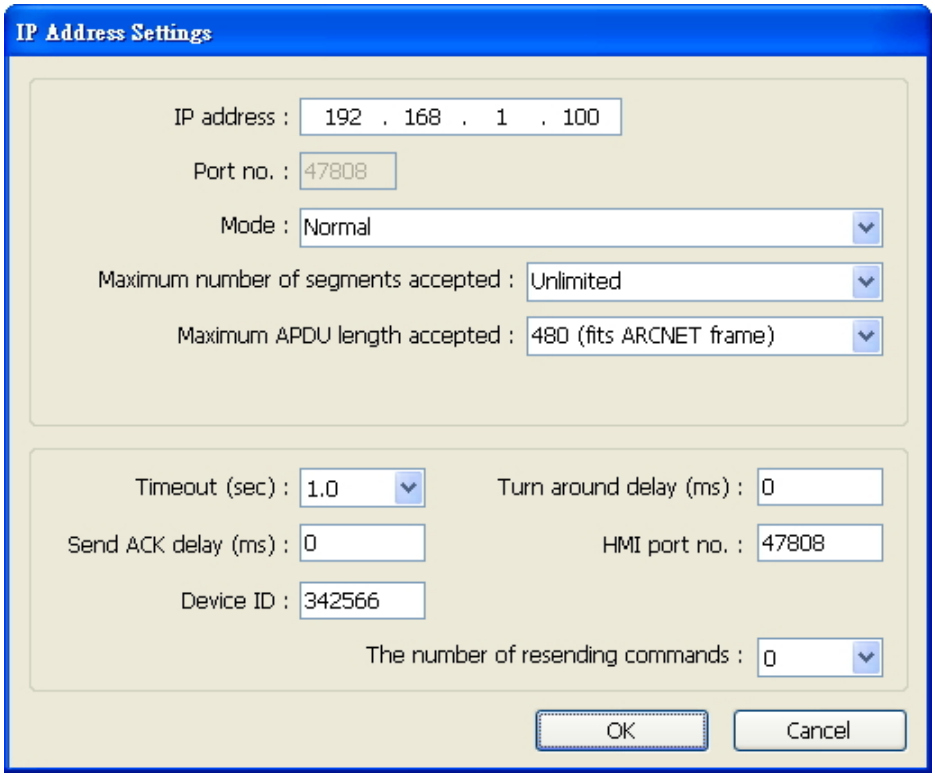


Step 3. Get tag address information

Way 1: Click **Get Tag Info**.

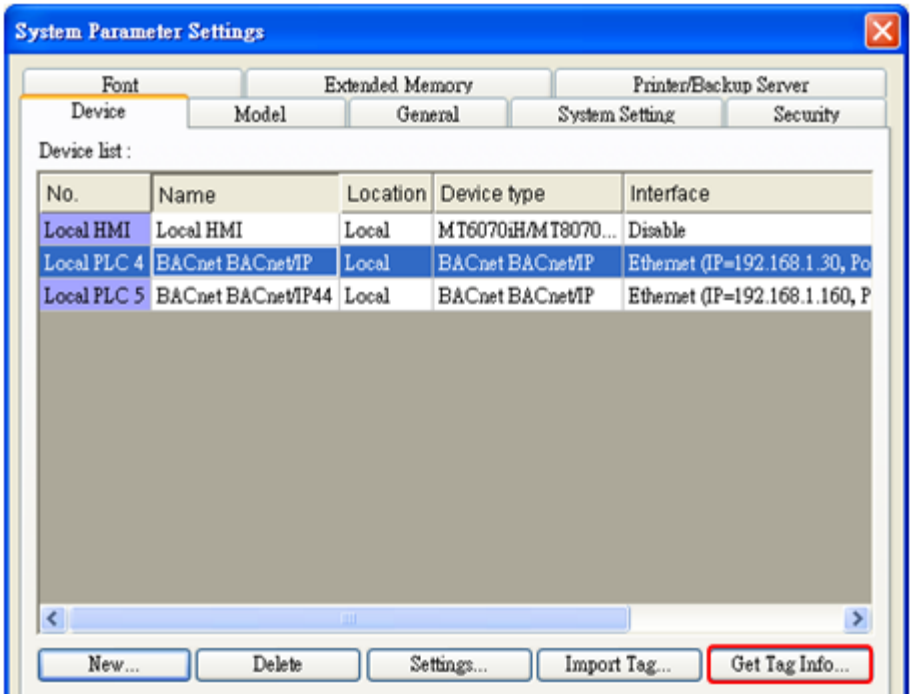

Way 2: Import the CSV file generated by SCADA software.

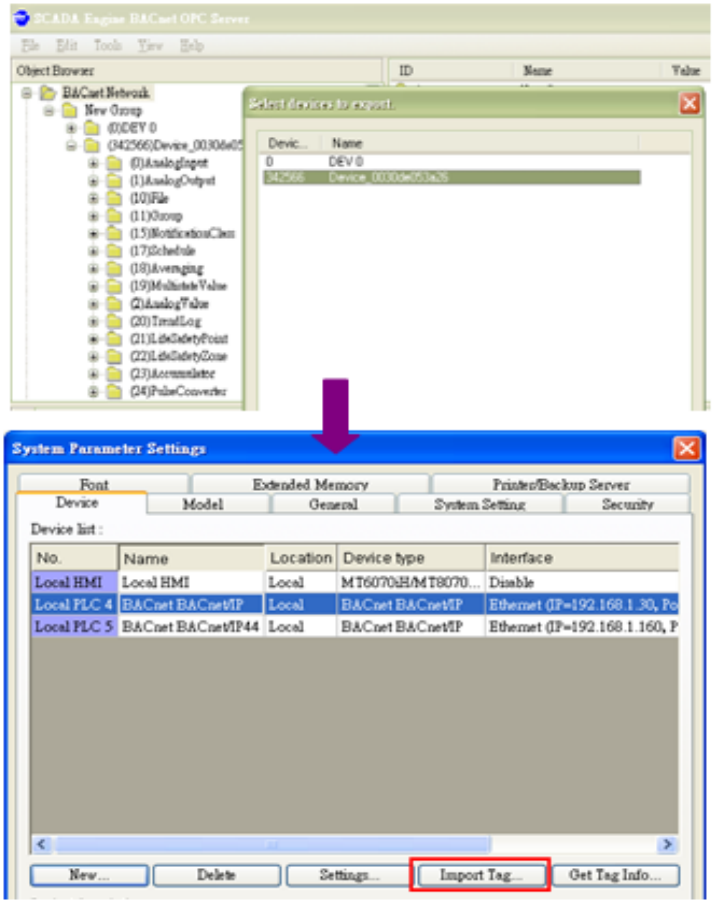

CSV file content is shown below; users can build the file and import:

a. Object format

b. OBJECT NAME (user defined tag name, EasyBuilder will start reading data from the 6th row of CSV file.), DEVICE ID, OBJECT TYPE(object ID) and INSTANCE(object address)


A1 GROUP_ID

	A	B	C	D
1	GROUP_ID	GROUP_NAME		
2	1	New Group		
3	DEVICE_ID	GROUP_ID	DEVICE_NAME	
4	342566	1	Device_0030de053a26	
5	DEVICE_ID	OBJECT_TYPE	INSTANCE	OBJECT_NAME
6	342566	0	0	ANALOG_INPUT_0
7	342566	0	1	ANALOG_INPUT_1
8	342566	0	2	ANALOG_INPUT_2
9	342566	1	0	ANALOG_OUTPUT_0
10	342566	1	1	ANALOG_OUTPUT_1
11	342566	1	2	ANALOG_OUTPUT_2
12	342566	2	0	ANALOG_VALUE_0
13	342566	2	1	ANALOG_VALUE_1
14	342566	2	2	ANALOG_VALUE_2
15	342566	2	3	ANALOG_VALUE_3
16	342566	3	0	BINARY_INPUT_0
17	342566	3	1	BINARY_INPUT_1
18	342566	3	2	BINARY_INPUT_2
19	342566	3	3	BINARY_INPUT_3
20	342566	3	4	BINARY_INPUT_4
21	342566	3	5	BINARY_INPUT_5

Step 4. File imported successfully.



Take **(10，2)File** as an example, **10** represents object ID, **2** represents object address, **File** represents user defined name or default name.

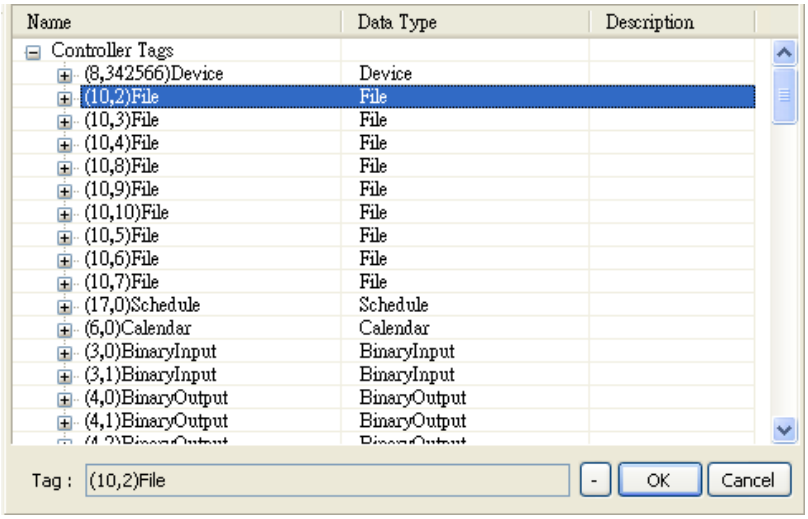

Default Object Model:

Object ID	Object Name	Object Structure
0	Analog Input	Object Name Object Identifier Object Type Present Value Event State Out Of Service Units Min Press Value Max Press Value Cov Increment Resolution High Limit Low Limit

Object ID	Object Name	Object Structure
		Dead Band Profile Name
1	Analog Output	Object Name Object Identifier Object Type Present Value Event State Out Of Service Units Relinquish Default Min Press Value Max Press Value Cov Increment Resolution High Limit Low Limit Dead Band Profile Name
2	Analog Value	Object Name Object Identifier Object Type Present Value Event State Out Of Service Units Relinquish Default Cov Increment High Limit Low Limit Dead Band Profile Name
3	Binary Input	Object Name Object Identifier Object Type Present Value Event State Out Of Service Polarity

Object ID	Object Name	Object Structure
		Profile Name Notify Type Alarm Value
4	Binary Output	Object Name Object Identifier Object Type Present Value Event State Out Of Service Polarity Profile Name Notify Type
5	Binary Value	Object Name Object Identifier Object Type Present Value Event State Out Of Service Profile Name Notify Type Alarm Value
6	Calendar	Object Name Object Identifier Object Type Present Value
7	Command	Object Name Object Identifier Object Type Present Value In Process All Writes Successful
8	Device	Object Name Object Identifier Object Type System Status Vendor Name Vendor Identifier Model Name

Object ID	Object Name	Object Structure
		Firmware Revision Application Software Version Protocol Version Protocol Revision Max APDU length Accepted Segmentation Supported Apdu Timeout Number Of APDU retries Data Base Revision Max Segments Accepted Day light Savings Status Apdu Segment Timeout Backup Failure Timeout
10	File	Object Name Object Identifier Object Type File Type File Size Archive Read Only
11	Group	Object Name Object Identifier Object Type
13	Multi State Input	Object Name Object Identifier Object Type Present Value Event State Out Of Service Reliability Number Of States Time Delay Notification Class Notify Type Profile Name
14	Multi State Output	Object Name Object Identifier Object Type

Object ID	Object Name	Object Structure
		Present Value Event State Out Of Service Reliability Number Of States Time Delay Notification Class Notify Type Profile Name
15	Notification Class	Object Name Object Identifier Object Type Notification Class Priority
17	Schedule	Object Name Object Identifier Object Type Present Value Priority For Writing Reliability Out Of Service
18	Averaging	Object Name Object Identifier Object Type Minimum Value Average Value Maximum Value Attempted Samples Valid Samples Window Interval Window Samples
19	Multi State Value	Object Name Object Identifier Object Type Present Value Event State Out Of Service Reliability

Object ID	Object Name	Object Structure
		Number Of States Notification Class Notify Type Profile Name Time Delay
20	Trend Log	Object Name Object Identifier Object Type Enable Stop When Full Buffer Size Record Count Total Record Count
21	Life Safety Point	Object Name Object Identifier Object Type Present Value Tracking Value Event State Reliability Out Of Service Mode Silenced
22	Life Safety Zone	Object Name Object Identifier Object Type Present Value Tracking Value Event State Reliability Out of Service Mode Silenced
23	Accumulator	Object Name Object Identifier Object Type Present Value Event State


Object ID	Object Name	Object Structure
		Out Of Service Scale Units Reliability
24	Pulse Converter	Object Name Object Identifier Object Type Present Value Event State Out Of Service Units Scale Factor Adjust Value High Limit Low Limit Dead Band Cov Increment Count

Note 1. Object name can not include “#”.

Wiring Diagram:

Diagram 1

Ethernet cable:

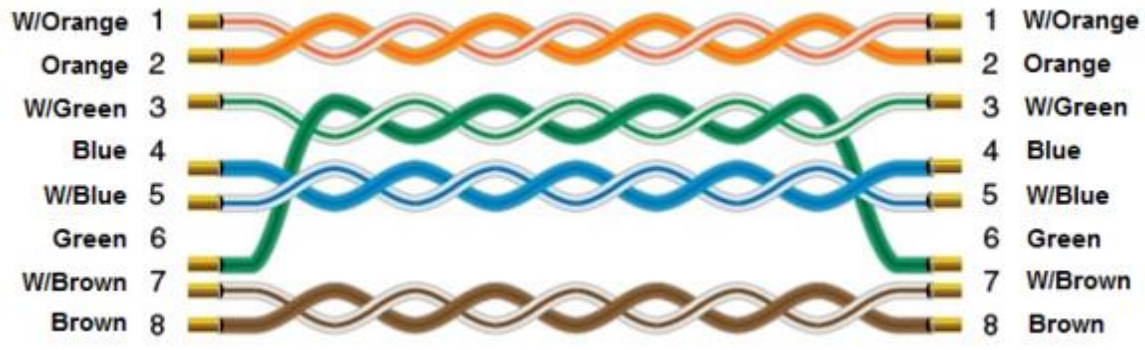

BACnet/MSTP


Supported series: BACnet/MSTP protocol devices

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	BACnet/MSTP		
PLC I/F	RS485-2W		
Baud rate	38400	9600,19200, 38400	
Data bits	8		
Parity	None		
Stop bits	1		
MAC	0	0 ~ 254	
HMI MAC	1	1 ~ 127	
Nmax_master	127	2 ~ 127	
Npoll	50	1 ~ 255	

How to Import Tags:


1. In EasyBuilder **System Parameter Settings** add **BACnet/MSTP** driver, set the communication parameters, and then click **Tag Manager** button.

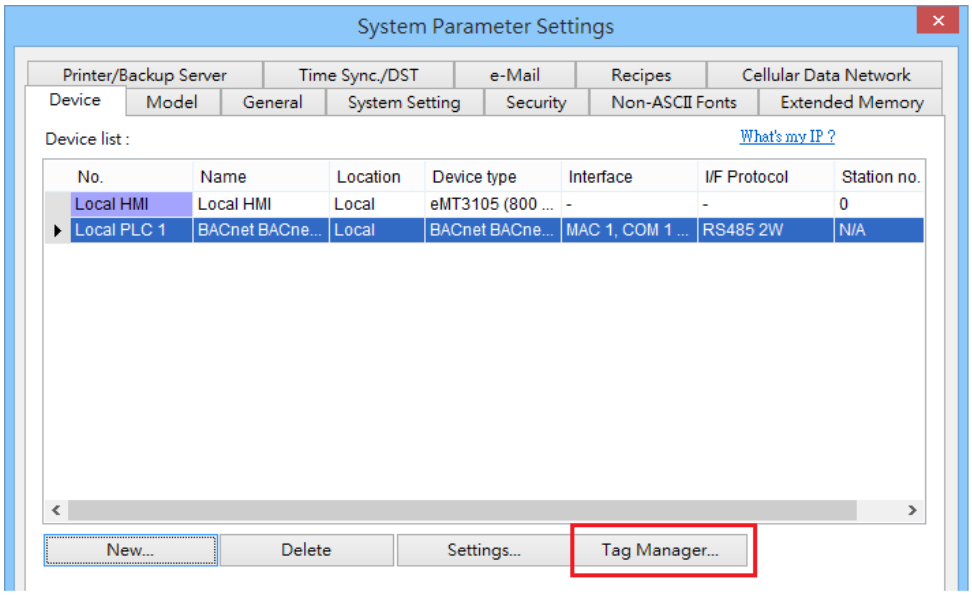


2. Use a RS-232/RS-485 converter to connect the BACnet MS/TP unit with PC. Only one BACnet MS/TP unit is allowed. Set **PC COM** and **Baud rate**, click **Scan Device** button to find the **MAC address** and **Device ID** of the BACnet MS/TP unit.

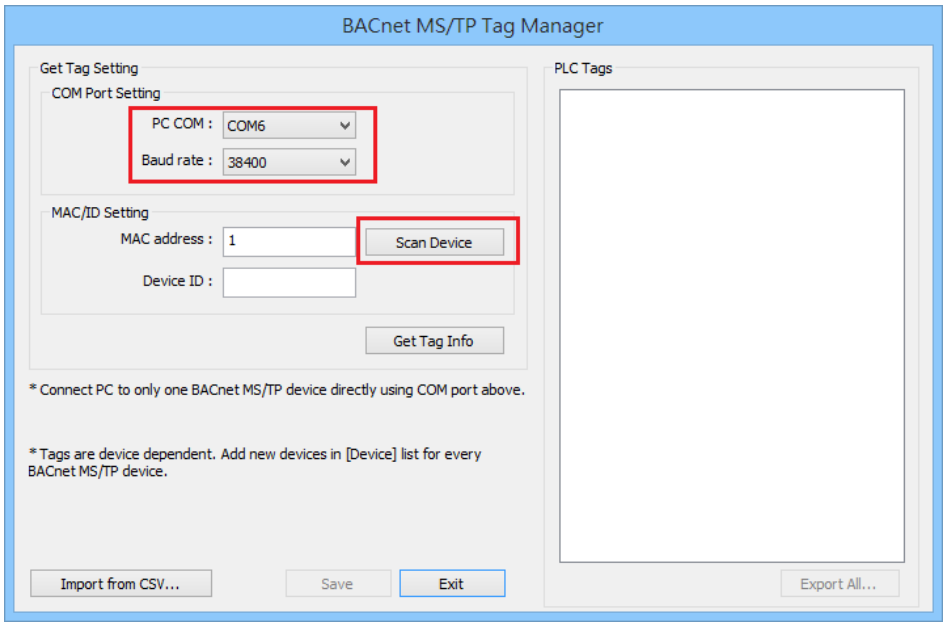


3. If the device is found, the following message shows, click **OK**.

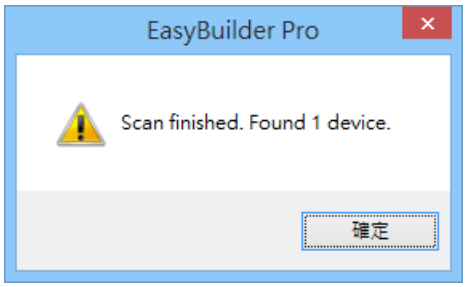


4. After getting the **MAC address** and **Device ID**, click **Get Tag Info** button to get the address tags.

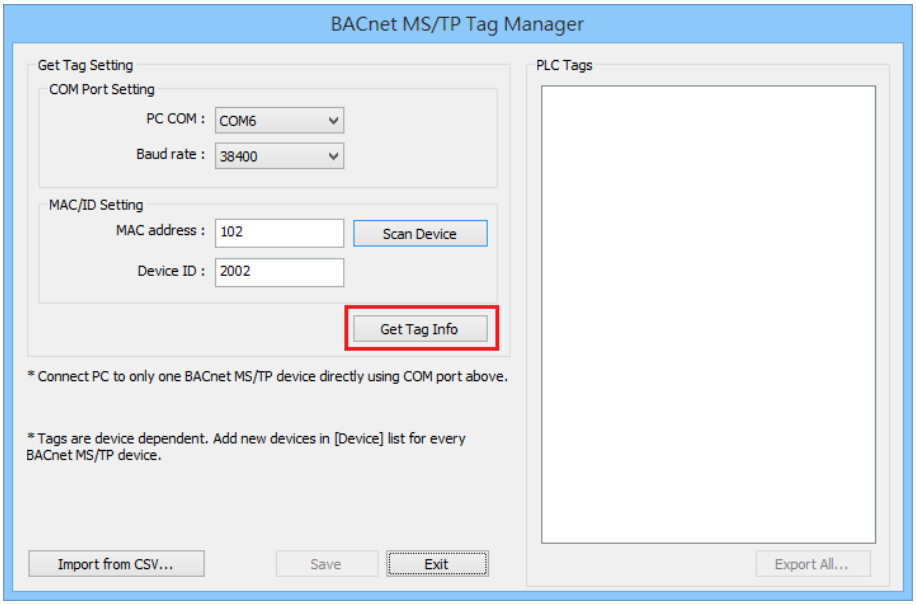


5. If the tags are obtained successfully, the following message shows, click **OK**.

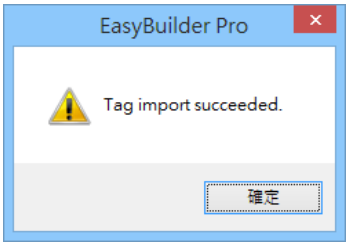

6. In the **PLC Tags** field, the tags with its check box selected can be imported. After selecting the tags, click **Save**, and then click **Export All**, to save the address tags as CSV file. When finished, click **Exit** to finish importing address tags.

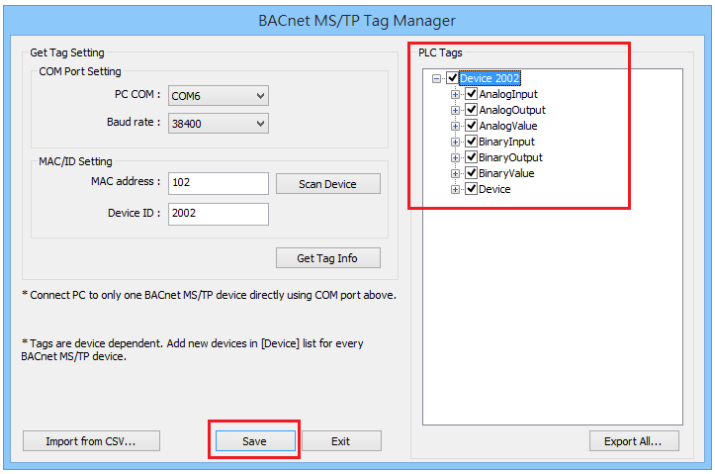

7. To connect another BACnet/MSTP unit, please add the **BACnet/MSTP** driver in EasyBuilder System Parameter Settings again. The communication parameters will follow the settings of the firstly added unit. The way to get tag information is the same as illustrated in the preceding steps. Another way to get tag information is to click **[Import form CSV]** button in Tag Manager.

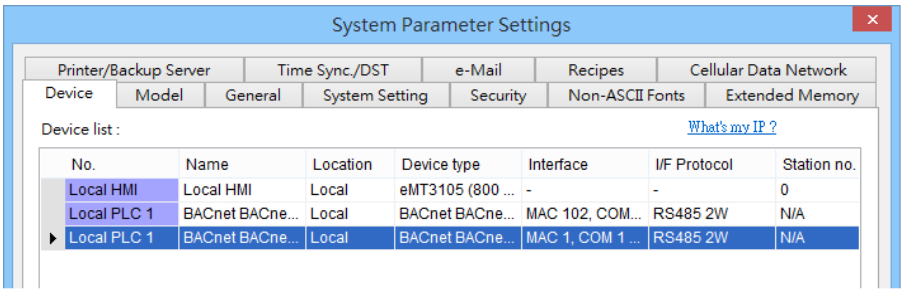

Notes:

1. The MAC address and Device ID of certain BACnet MS/TP units can be gained by clicking [Scan Device] only at the first time the unit is powered up. To get this information in the same way again, please power up the unit again.

2. Certain BACnet MS/TP units do not support [Scan Device] and [Get Tag Info].
3. If the MAC address gained by clicking [Scan Device] does not match the one specified in EasyBuilder Pro Device Properties settings, a message shows as a reminder when [Get Tag Info] is clicked.

Default Object Model:

Object ID	Object Name	Object Structure
0	Analog Input	Object Name Object Identifier Object Type Present Value Present Value Array Units
1	Analog Output	Object Name Object Identifier Object Type Present Value Present Valuse Array Units Priority Priority Array Relinquish Default SubscribeCovTime
2	Analog Value	Object Name Object Identifier Object Type Present Value Present Value Array Units Priority Priority Array Relinquish Default SubscribeCovTime
3	Binary Input	Object Name Object Identifier Object Type Present Value Present Value Array

Object ID	Object Name	Object Structure
		SubscribeCovTime
4	Binary Output	Object Name Object Identifier Object Type Present Value Present Value Array Priority Priority Array Polarity SubscribeCovTime
5	Binary Value	Object Name Object Identifier Object Type Present Value Present Value Array Priority Priority Array SubscribeCovTime

Wiring Diagram:

RS-485 2W Terminal (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	Data-
Data+	2	9	⟷	Data+
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	Data-
Data+	6	1	⟷	Data+
GND	5	5	⟷	GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	Data-
Data+	2	8	⟷	Data+
GND	5	9	⟷	GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male	
Data-	1	6	Data-
Data+	2	9	Data+
GND	5	5	GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	Data-
Data+	2	8	Data+
GND	5	5	GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***


HMI		PLC
	COM2	RS485 2W Terminal
	RS485 2W 9P Female	
Data-	1	Data-
Data+	2	Data+
GND	5	GND

Barcode/Keyboard (USB/COM)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Barcode/Keyboard (USB/COM)		
PLC I/F	RS232	RS232/485,USB	
Baud rate	9600	9600~115200	
Data bits	8	7,8	
Parity	None	None, Even, Odd	
Stop bits	1	1,2	
Terminator	CR/LF	CR/LF, STX/ETX, Other, None	

★When setting device properties, select [Barcode device] or [Keyboard] mode.

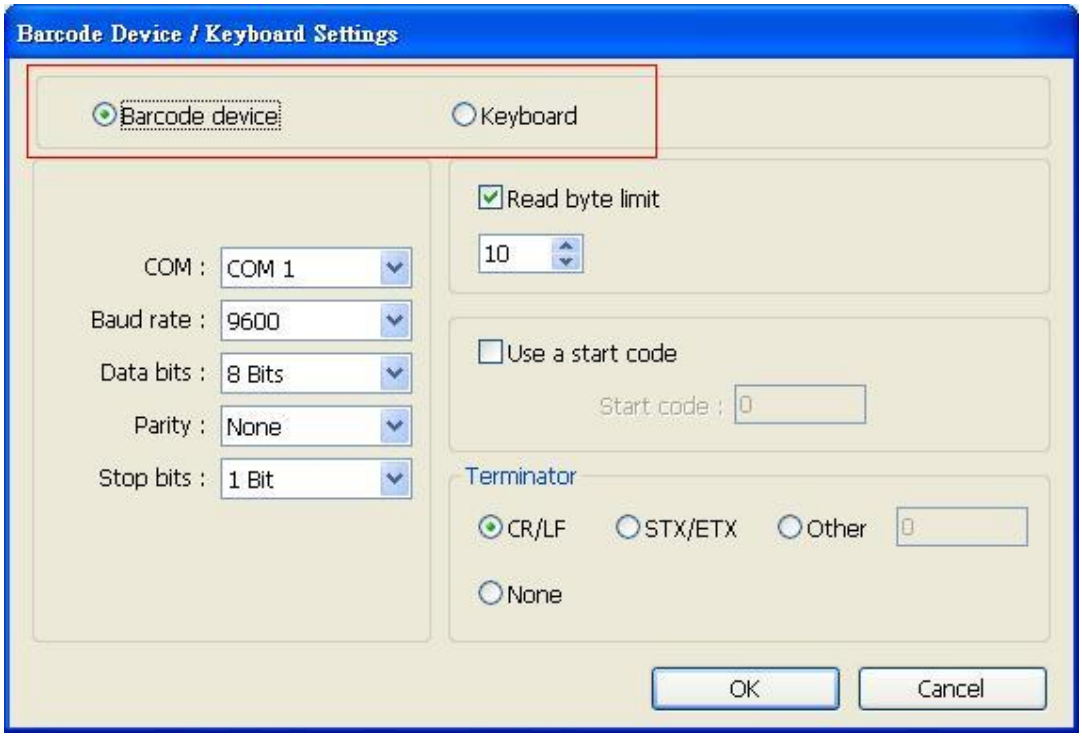

Device Address:

Bit/Wor	Device type	Format	Range	Memo
B	FLAG	DD	0	Flag
B	RESET	O	0	*Note 1
W	BARCODE 0	DD	0	Length
W	BARCODE 1	DD	1~255	String
W	RESULT	D	0	*Note 2



1. RESET: If set on, clears the data of BARCODE and RESULT, and clears FLAG to OFF.

2. RESULT:Indicates the result of data reading.
   The following values indicate:
   0 : Waiting to read BARCODE.
   1 : BARCODE is successfully read.
   2 : Invalid BARCODE format.
   3 : Exceeds the number of bytes specified in [Read byte limit].
   4 : The Start Code of the data read does not match the setting.
   5 : The Terminator of the data read does not match the setting.

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	2	⟷	TXD
Tx	3	⟷	RXD
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	TXD
Tx	6	⟷	RXD
GND	5	⟷	GND

Baumuller

Website: http://www.baumuller.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Baumuller		
PLC I/F	RS485 4W		
Baud rate	19200	9600, 19200	
Data bits	8	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1 or 2	
HMI sta. no.	0		
PLC sta. no.	0	Defaults	

PLC Setting:

Communication mode	RK 512 Protocol, 19200, 8, 1, Even

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	DB0_bit ~ DB29_bit	DDDh	0 ~ 255f	
W	DB0 ~ DB29	DDD	0 ~ 255	

Wiring Diagram:

Baumuller Servo: RS-485 4W 9P D-Sub (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 9P D-Sub Male
Rx-	1	⟷	1 TXD-
Rx+	2	⟷	9 TXD+
Tx-	3	⟷	5 RXD-
TX+	4	⟷	6 RXD+
GND	5	⟷	8 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 9P D-Sub Male
Rx-	7	⟷	1 TXD-
Rx+	6	⟷	9 TXD+
Tx-	9	⟷	5 RXD-
TX+	8	⟷	6 RXD+
GND	5	⟷	8 GND

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 9P D-Sub Male
Rx-	1	⟷	1 TXD-
Rx+	2	⟷	9 TXD+
Tx-	3	⟷	5 RXD-
TX+	4	⟷	6 RXD+
GND	5	⟷	8 GND

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 9P D-Sub Male
Rx-	1	⟷	1 TXD-
Rx+	2	⟷	9 TXD+
Tx-	3	⟷	5 RXD-
TX+	4	⟷	6 RXD+
GND	5	⟷	8 GND

Beckhoff ADS/AMS (Ethernet)

Supported Series: Twincat


HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Beckhoff ADS/AMS (Ethernet)		
PLC I/F	Ethernet		
Port no.	48898		
ADS port	801	801, 811, 821, 831	
PLC sta. no.	1		

PLC Setting:

Step1.

Open TwinCat System Properties.

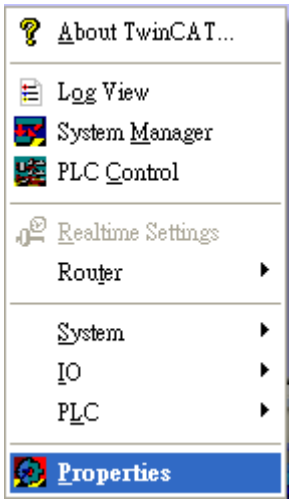

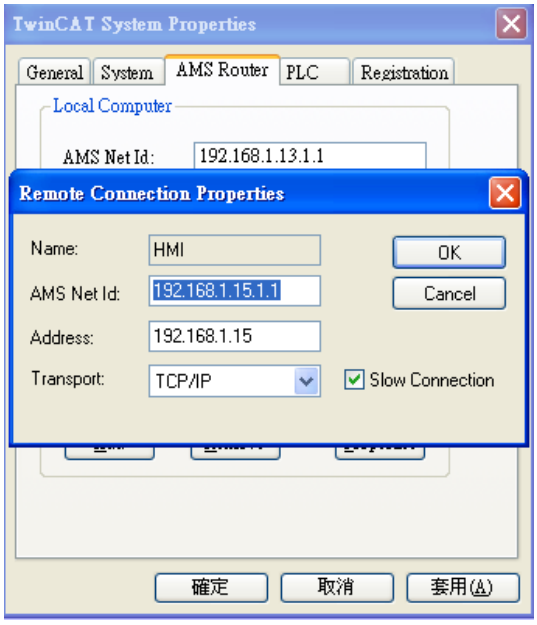

PLC Settings: Set HMI Name, AMS Net ID, and Address.

Ex:

HMI IP: 192.168.1.15


AMS Net ID: Must input 192.168.1.15.1.1


Address: 192.168.1.15


Name: Input “HMI” or any user–defined name.


Step2.

Simulate PLC on PC. 2 Twincat drivers must be installed as follows:

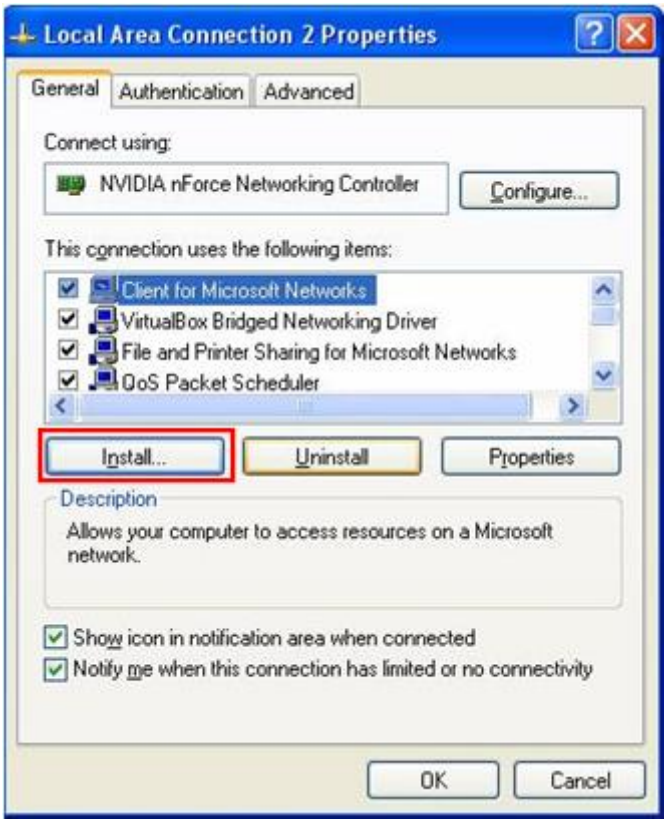

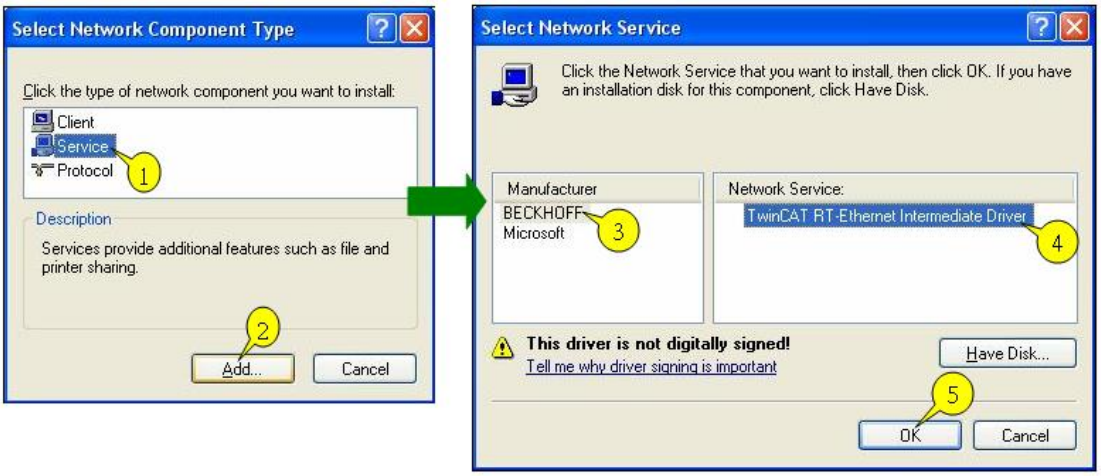


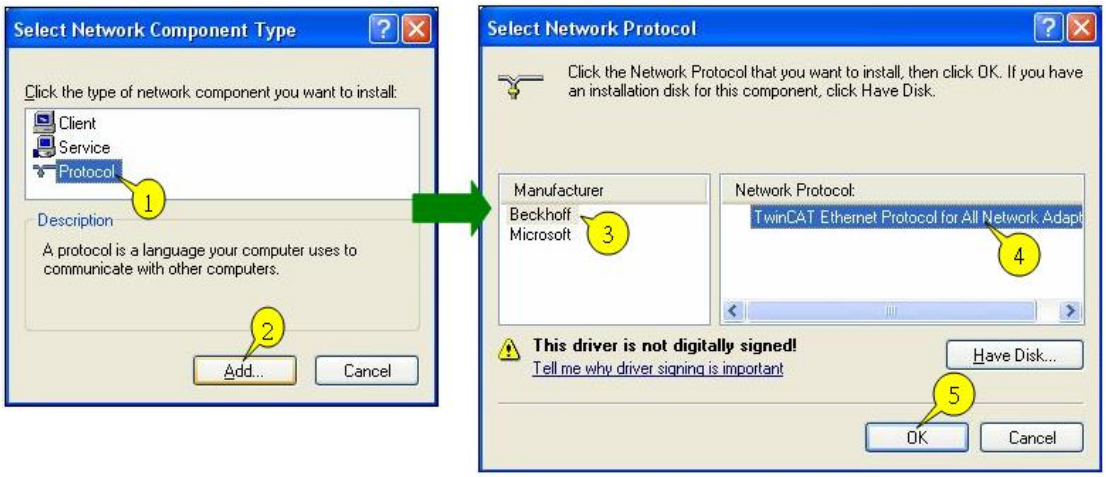

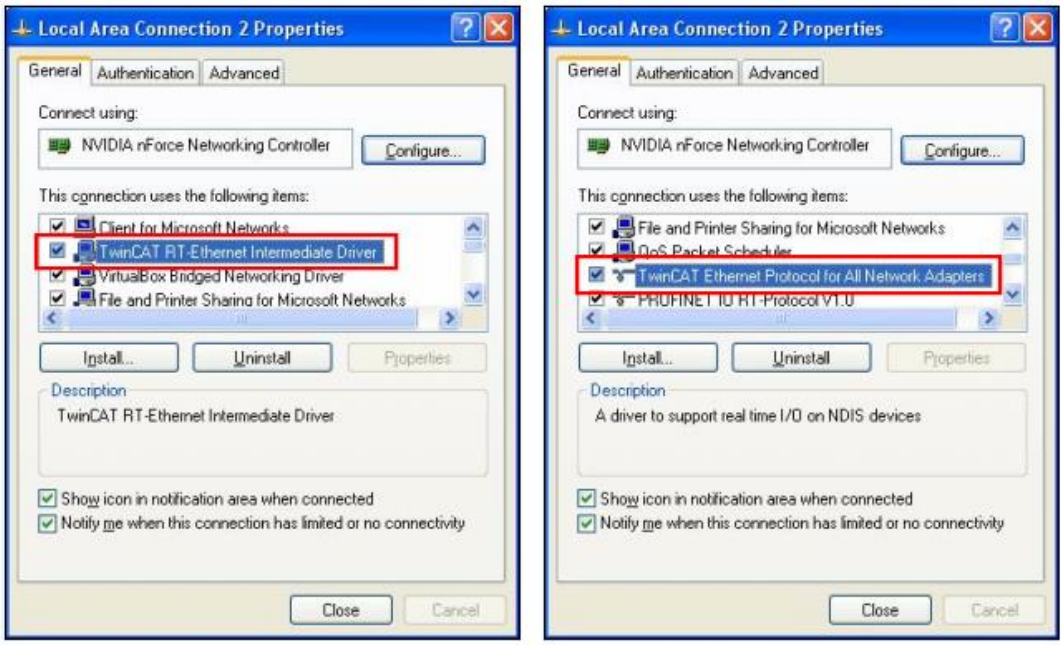

Step3.

The following commands can be utilized for Twincat PLC to output the parameters observed.

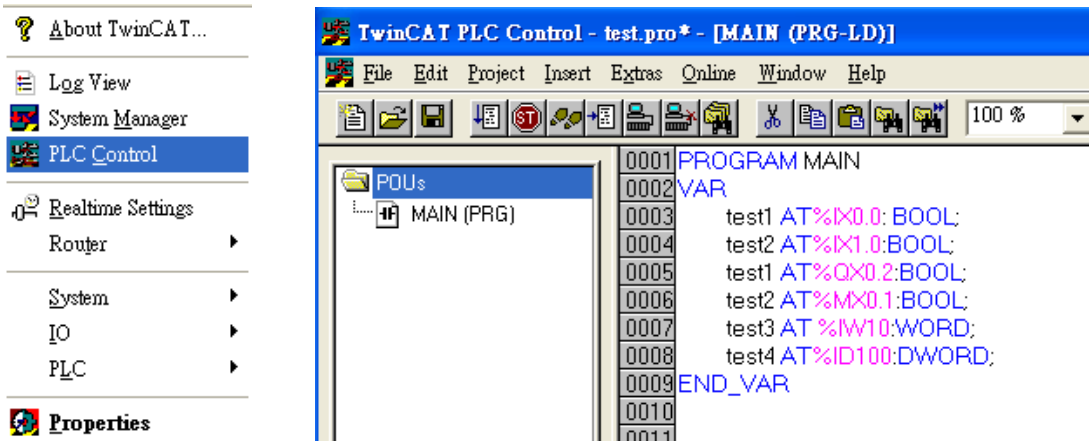

PS. Twincat PLC


IX, QX, MX - Must output in BOOL type.

IW, QW, MW - Must output in UINT, WORD, and INT types.


ID, QD, MD - Must output in UDINT, DWORD, and DINT types.

This driver supports variables under STRUCT structure. Click [Data Type] to open Structure Editor and create the same [Name] and [Data Type] as in Twincat PLC Control. The standard data types include:


BOOL, WORD, INT, UINT, DINT, UDINT, REAL, DWORD, ARRAY

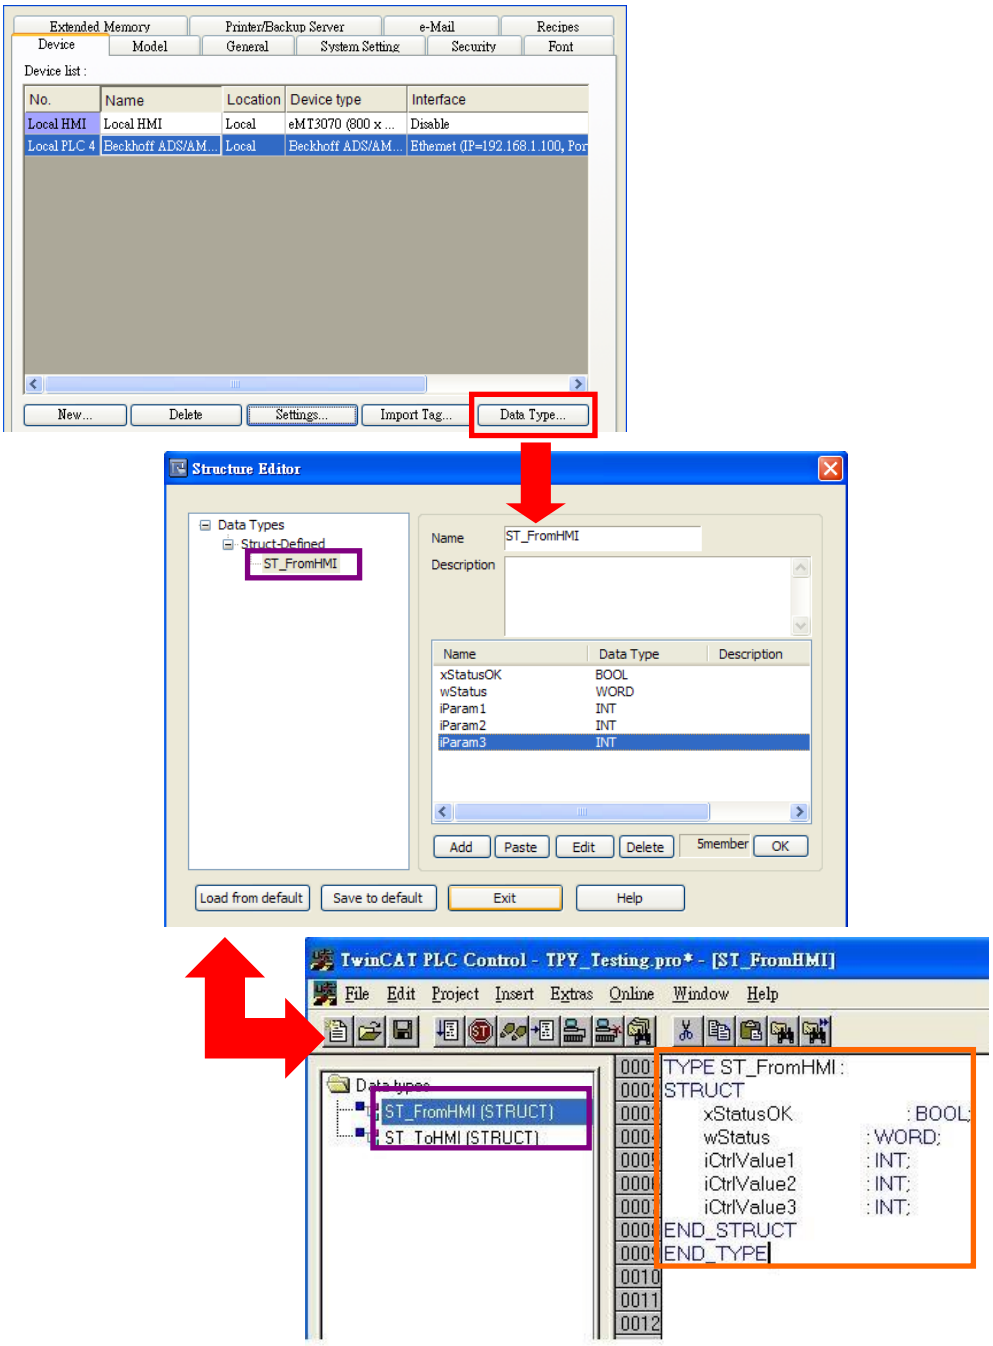


The syntax of Tag in Twincat software is: Tag Name +AT+%+Type,
as shown in the following figure.

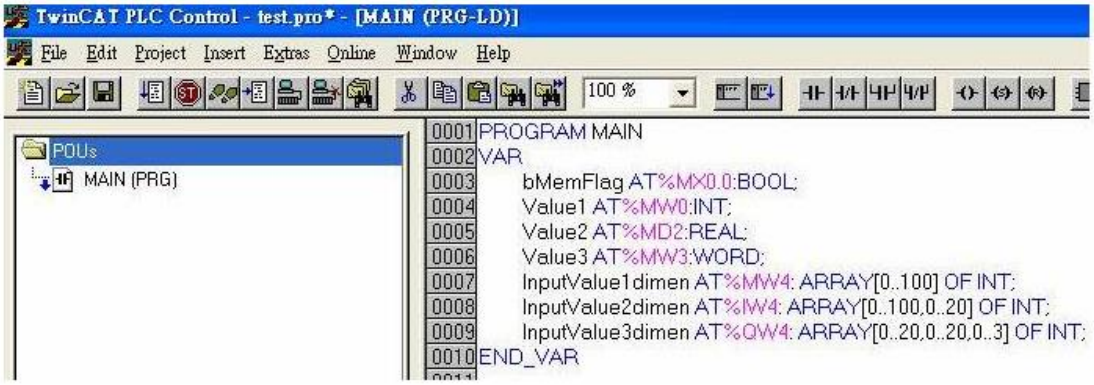

Project -> Rebuild all

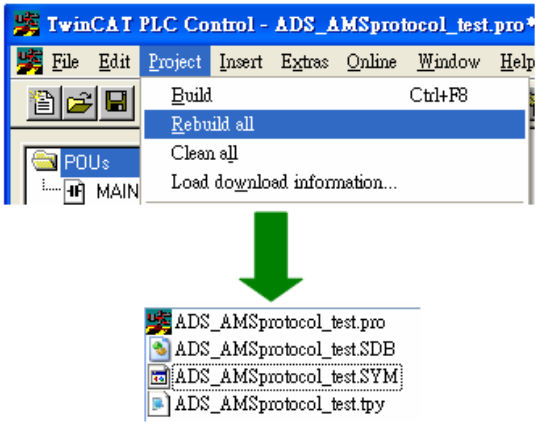


Step4. Set PLC IP in EasyBuilder.

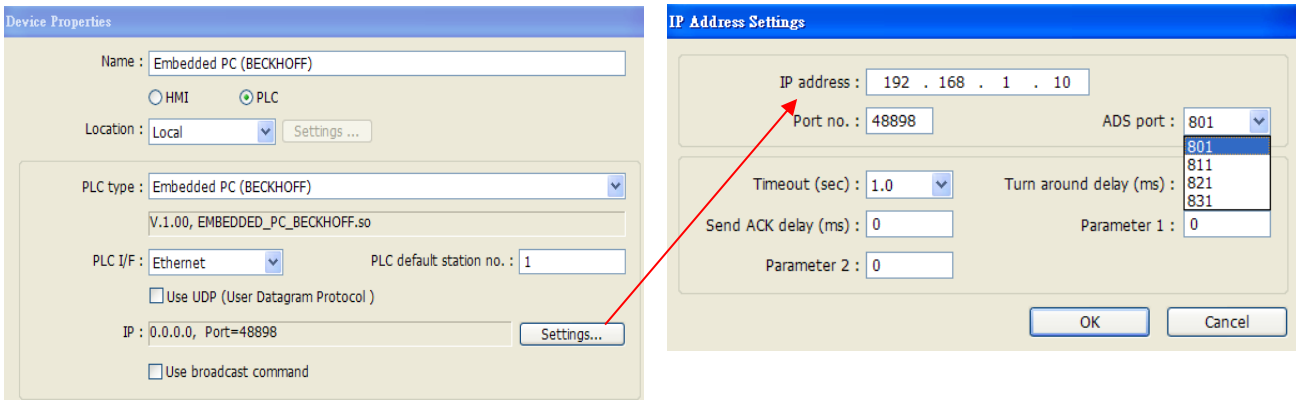


Step5.


Click [Import Tag] button in EasyBuilder to open the TPY file compiled by Twincat PLC Control.

Note: When using Beckhoff driver, if the TPY file cannot be imported, try download and install MSXML 4.0 in Microsoft - Download Center.

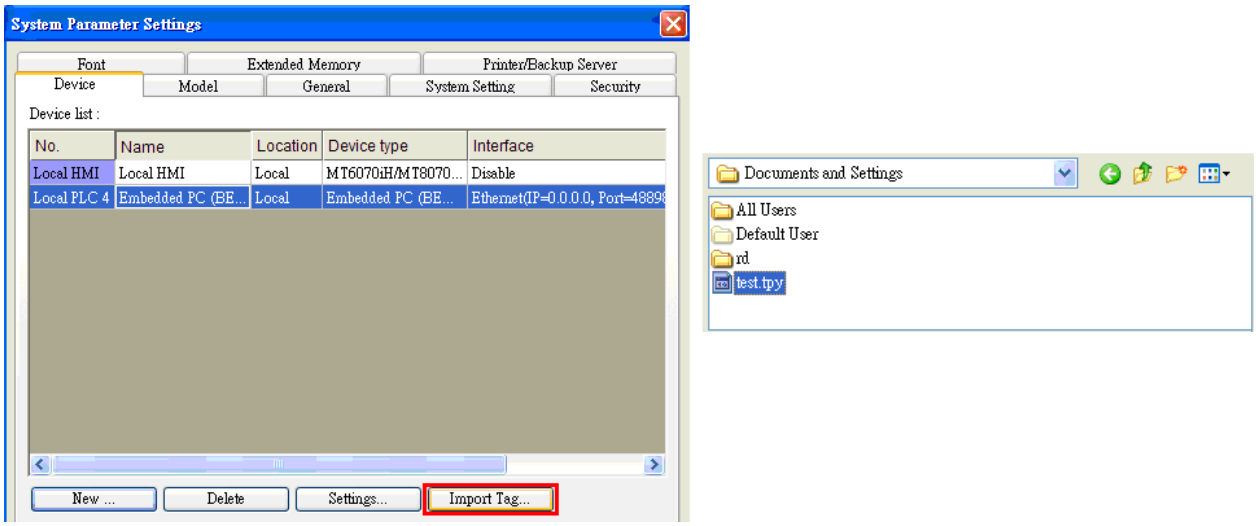

Import tpy to EasyBuilder, the result is shown in the following figure.

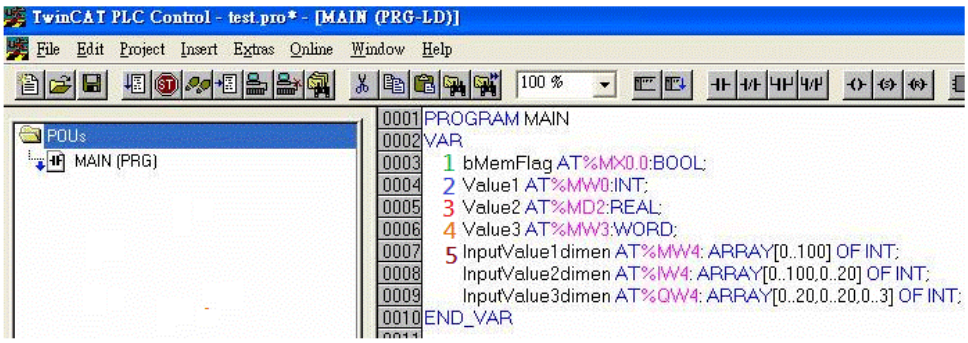


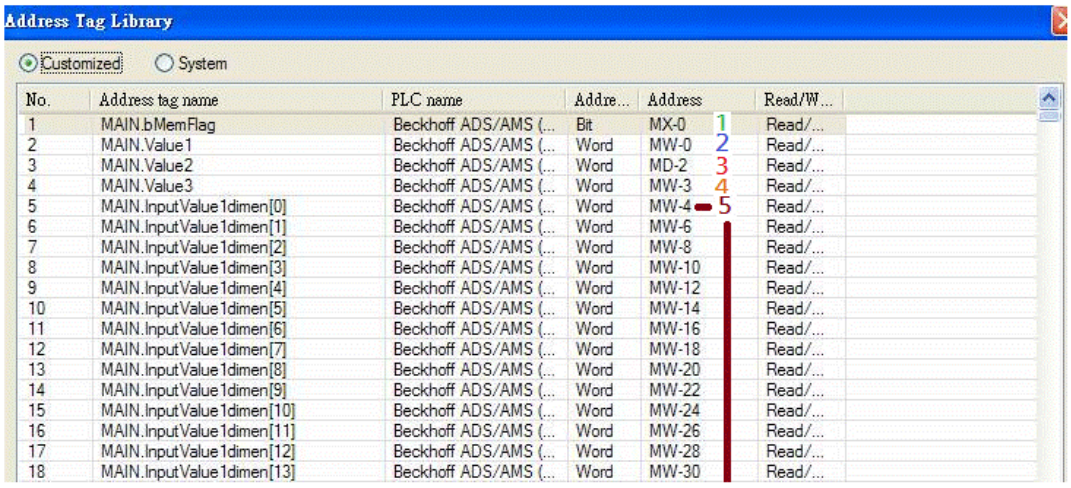



Step6.


The following dialog box appears for users to select all or part of the data to import. A reminding message is shown when import the same data repeatedly.


*EasyBuilder8000 does not support [Comment] setting.

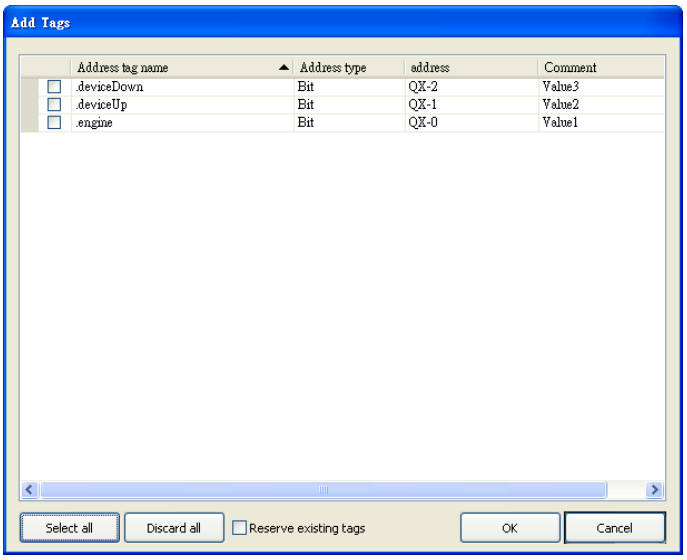

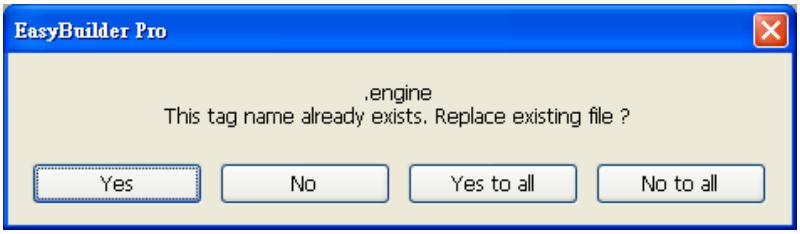

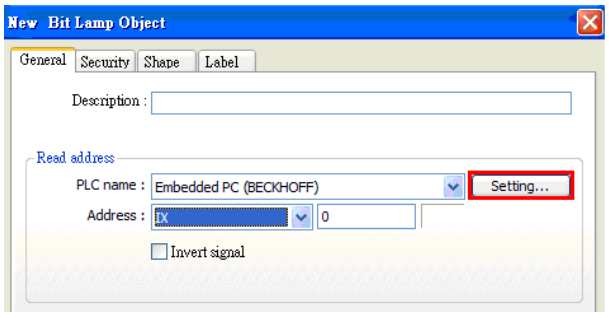

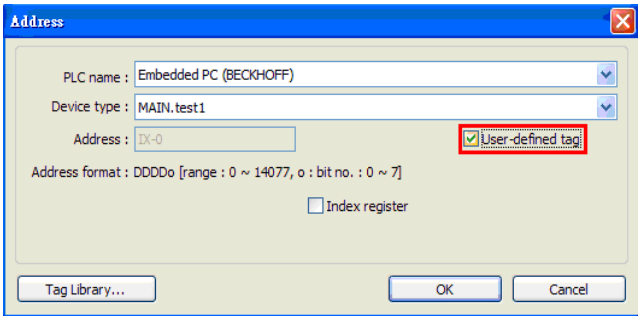

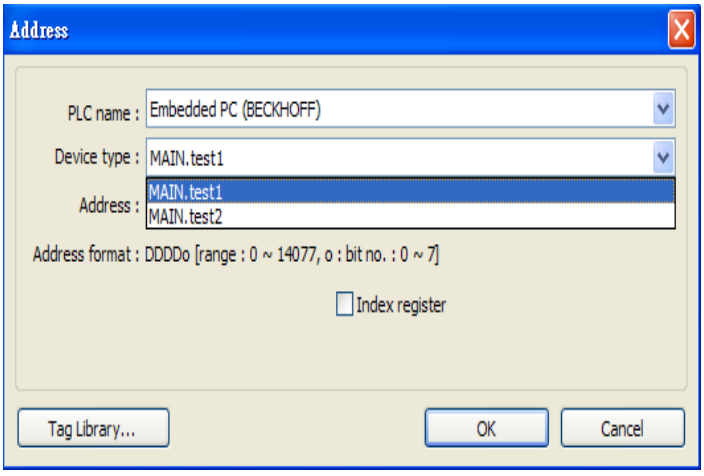

Step7.

Download the project compiled in EasyBuilder to HMI.

Device address:


Bit/Wor	Device type	Format	Range	Memo
B	IX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
B	QX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
B	MX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
W	IW	DDDDD	0 ~ 65535	
W	QW	DDDDD	0 ~ 65535	
W	MW	DDDDD	0 ~ 65535	
DW	ID	DDDDD	0 ~ 65535	
DW	QD	DDDDD	0 ~ 65535	
DW	MD	DDDDD	0 ~ 65535	

Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
String	ASCII input and ASCII display	

Wiring Diagram:

Ethernet cable:

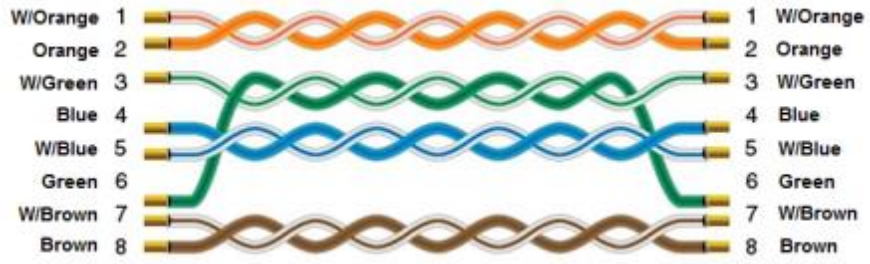

Beckhoff Embedded PC

Supported Series: Intel-CX10x0,CX50x0 and Twincat


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Beckhoff Embedded PC		
PLC I/F	Ethernet		
Port no.	48898		
ADS port	801	801, 811, 821, 831	
PLC sta. no.	1		


PLC Setting:


For Twincat:

a. Confirm PC IP address

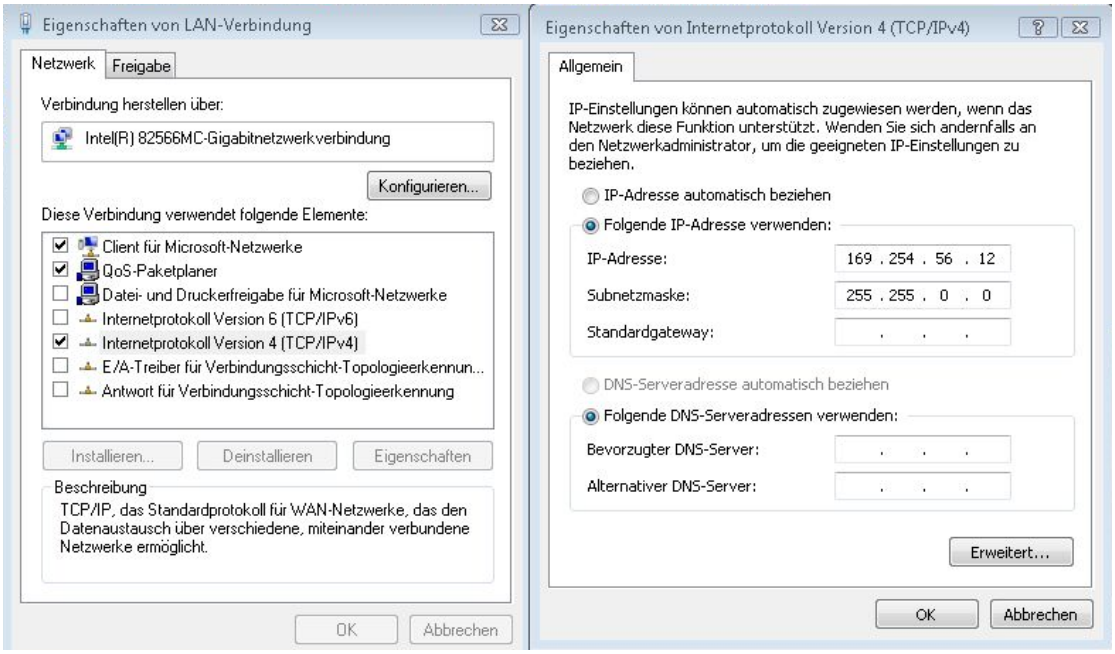


b. Open Twincat, Set IP address 169.254.56.12.1.1

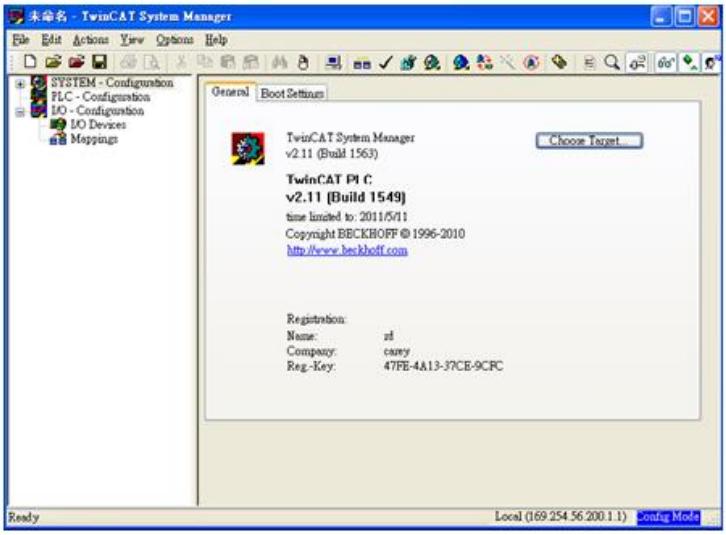


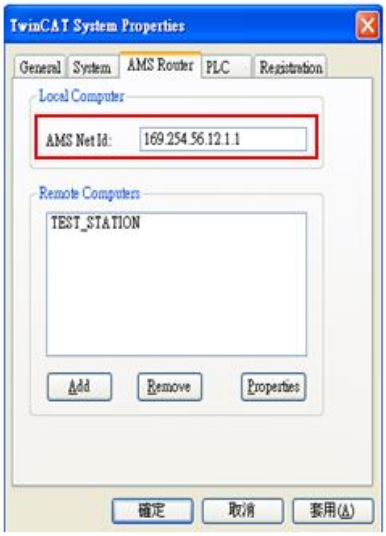

c. Use Twincat to build a Route Table to make sure the system is connected, if PLC power turns OFF and then ON, please redo this step.
Note: when connected, if “X” is displayed, the connection succeeded.

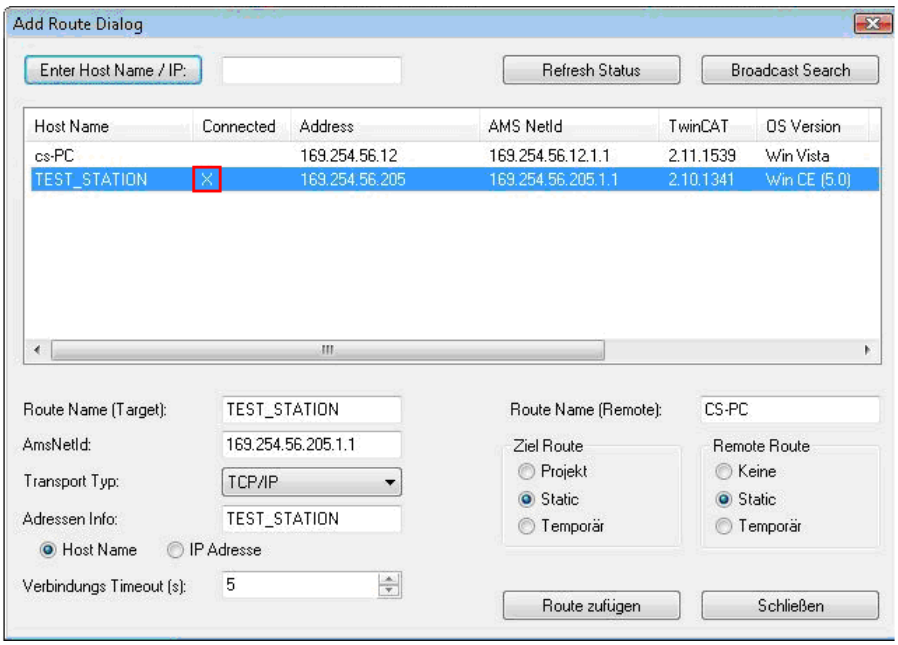

d. Open EasyBuilder, set IP address, ADS port and Port no.

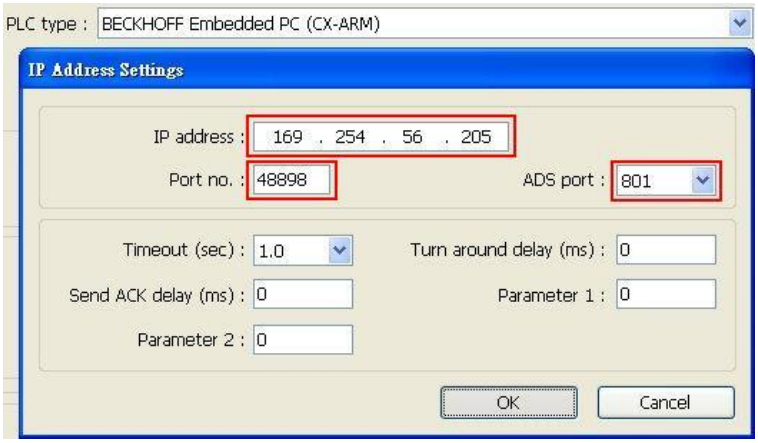


e. Run on line simulation.


Note: If the project is downloaded to HMI, please set HMI IP 169.254.56.12 identically to Twincat IP address setting.

For CERHOST:


a. Execute CERHOST.exe to connect with PLC on PC.

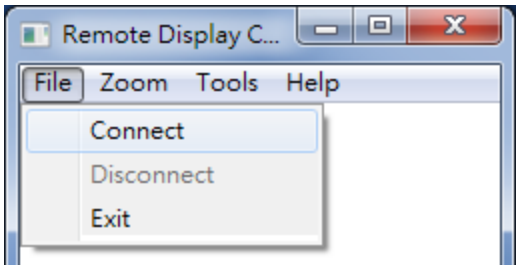


b. Enter PLC IP and Password (default password: 1).

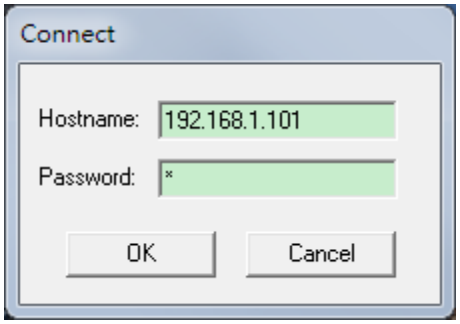


c. Succeeded to connect with PLC, click Start -> click Control Panel.

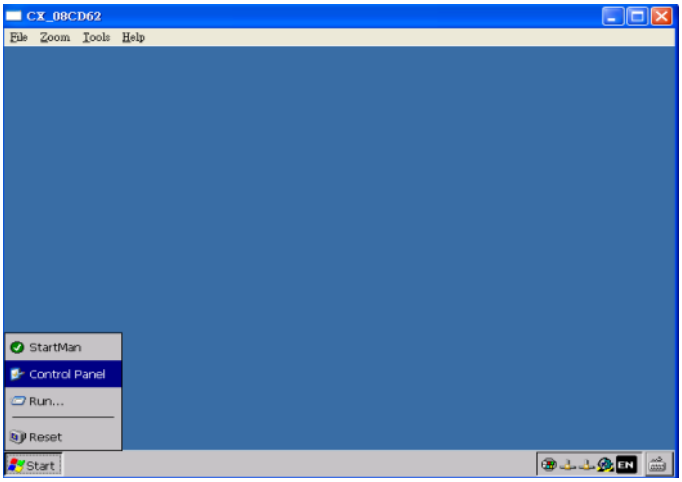


d. Click [Network and Dial-Up Connections] to display PLC device information; select the PLC to check its IP.

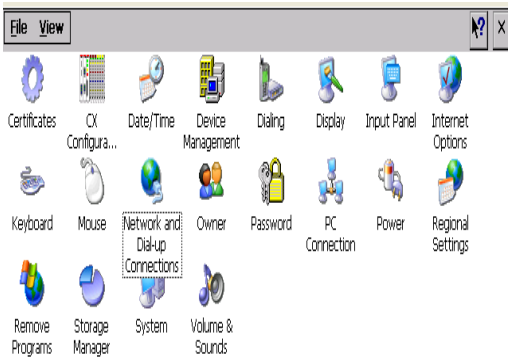


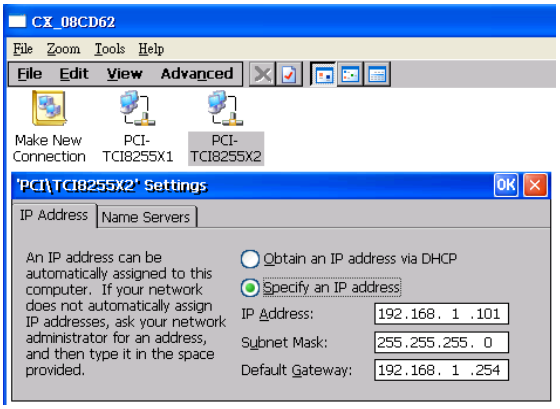

e. Access PLC system settings, the default directory: \Hard Disk\System, execute [TcAmsRemoteMgr].

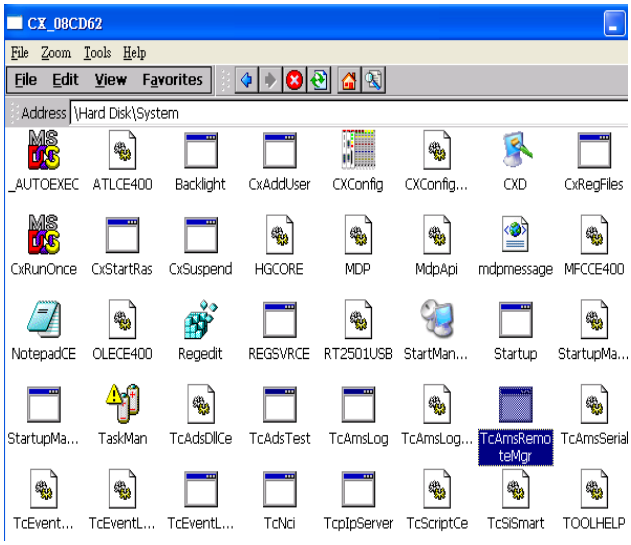

f. AMS Net Id consists of 6 numbers, separated by “.”. The first 4 numbers stand for IP and followed by “1.1”. The figure below shows the AMS Net Id of Local Computer, please enter PLC IP plus “1.1”. Remote Computers shows the information of the HMI to connect with. Click [Add] to add the HMI and click [OK] to finish setting.

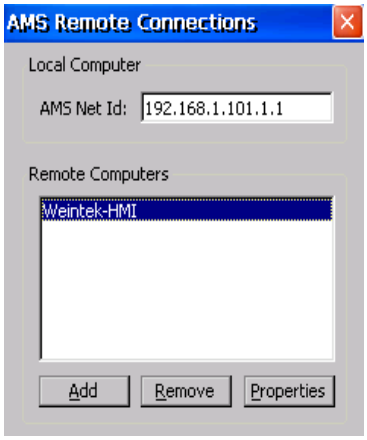


g. Name: Device name.

AMS Net Id: The IP followed by “1.1” of the device to connect with.


Address: The IP address of the device to connect with.

Transport: The way of connection.


Slow Connection: As shown in the figure below.

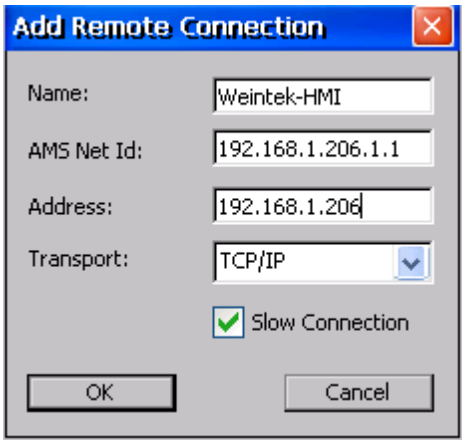

h. Return to Control Panel; execute CX Configuration Tool to confirm PLC AMS Net Id.

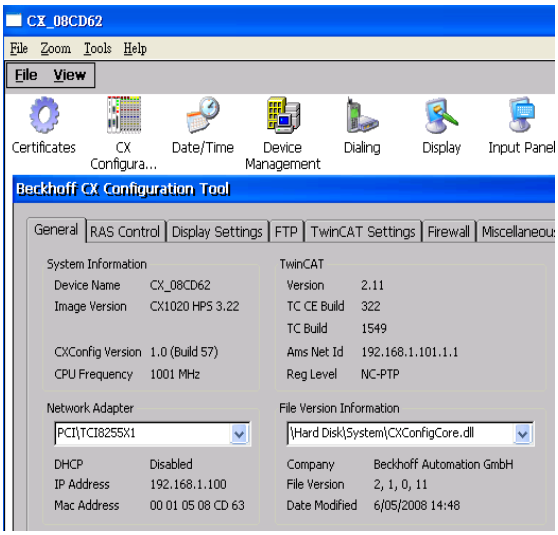



i. Confirm settings and click Start -> Reset PLC.

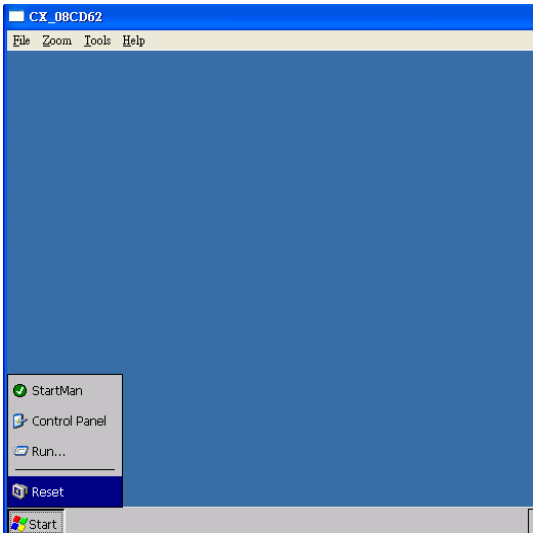


Building Data Structure：


Step1. This driver supports variables under STRUCT structure. Click [Data Type] to open Structure Editor and create the same [Name] and [Data Type] as in Twincat PLC Control. The standard data types include:
BOOL, WORD, INT, UINT, DINT, UDINT, REAL, DWORD, ARRAY

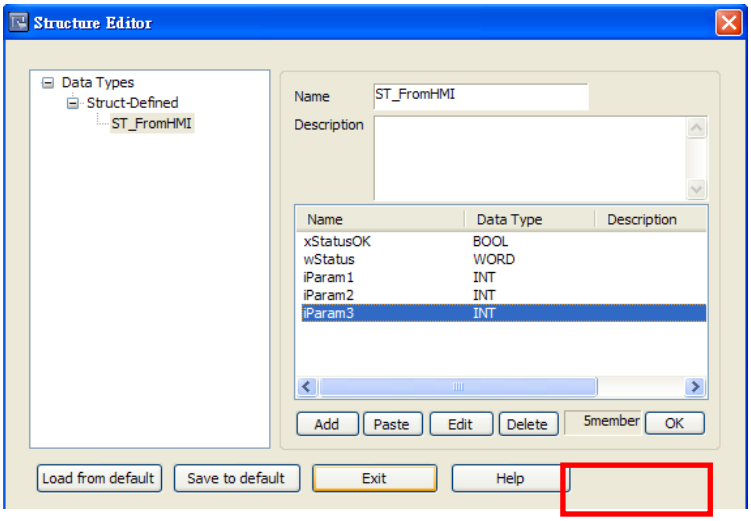

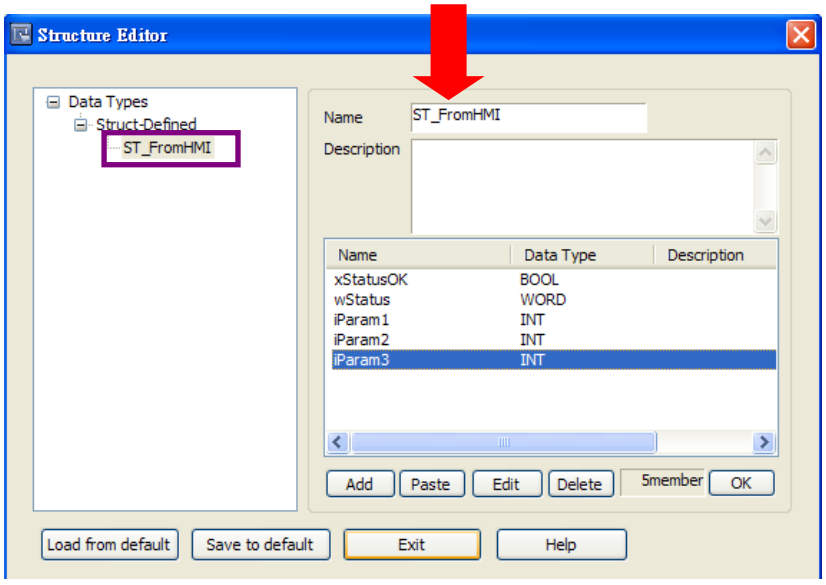


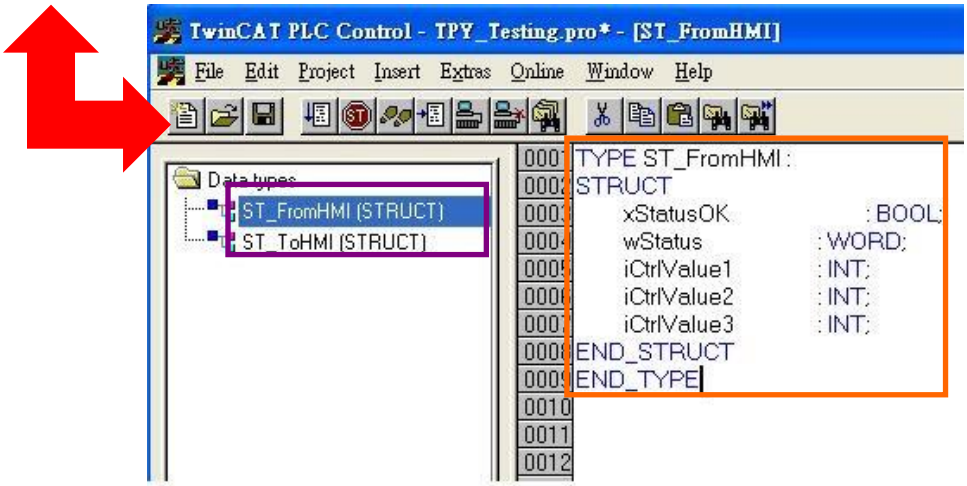


The syntax of Tag in Twincat software is: Tag Name +AT+%+Type,
as shown in the following figure.

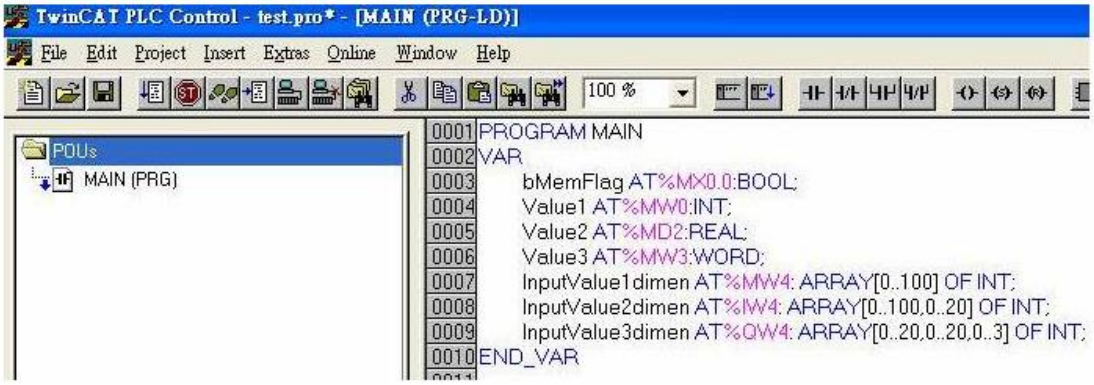

Step2. Project → Rebuild all

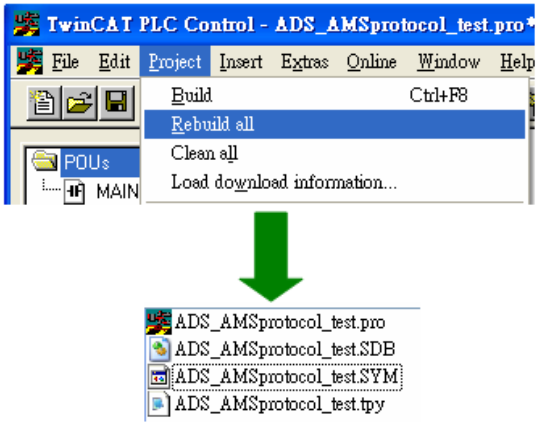


Step3. Set PLC IP in EasyBuilder.

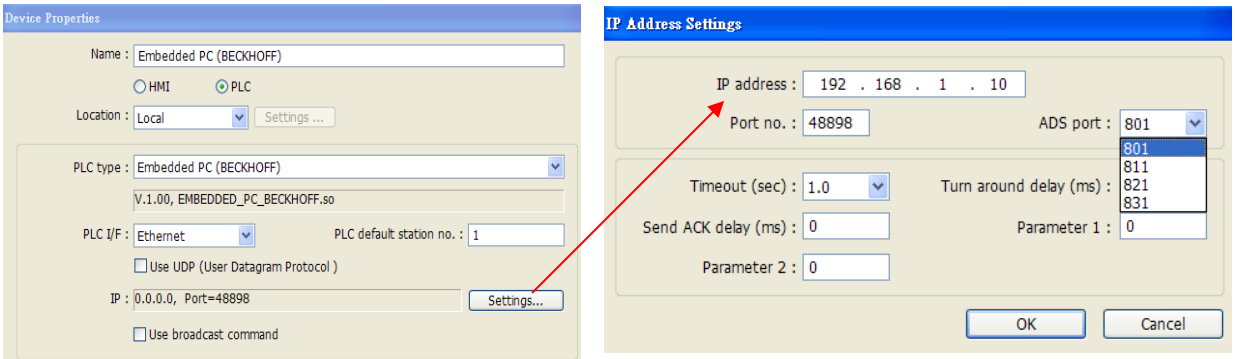


Step4.


Click [Import Tag] button in EasyBuilder to open the TPY file compiled by Twincat PLC Control.

Note: When using Beckhoff driver, if the TPY file cannot be imported, try download and install MSXML 4.0 in Microsoft - Download Center.

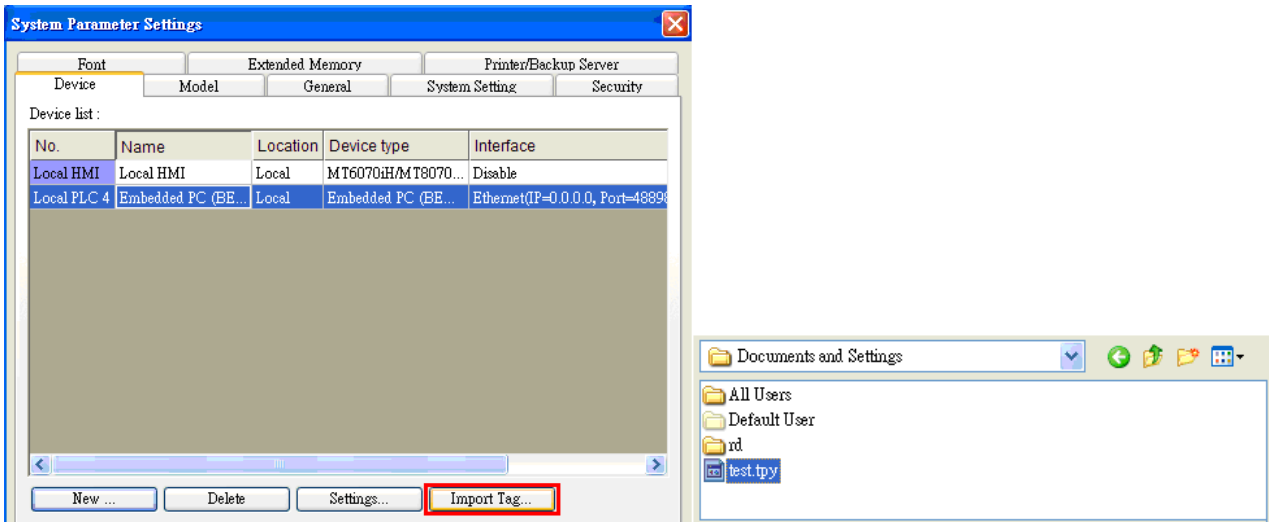

Import tpy to EasyBuilder, the result is shown in the following figure.

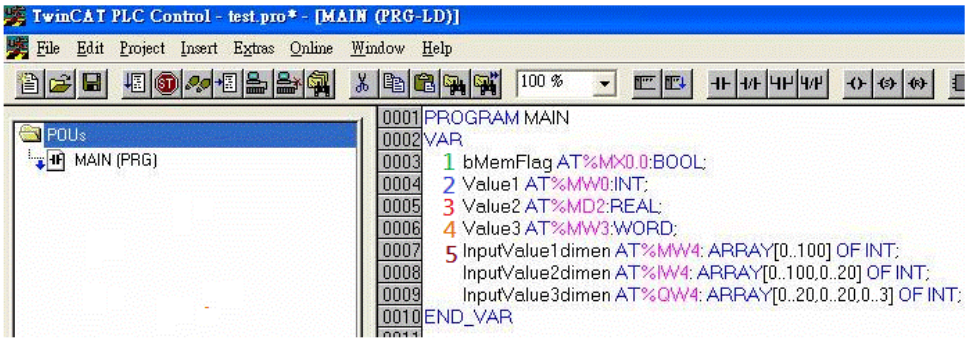


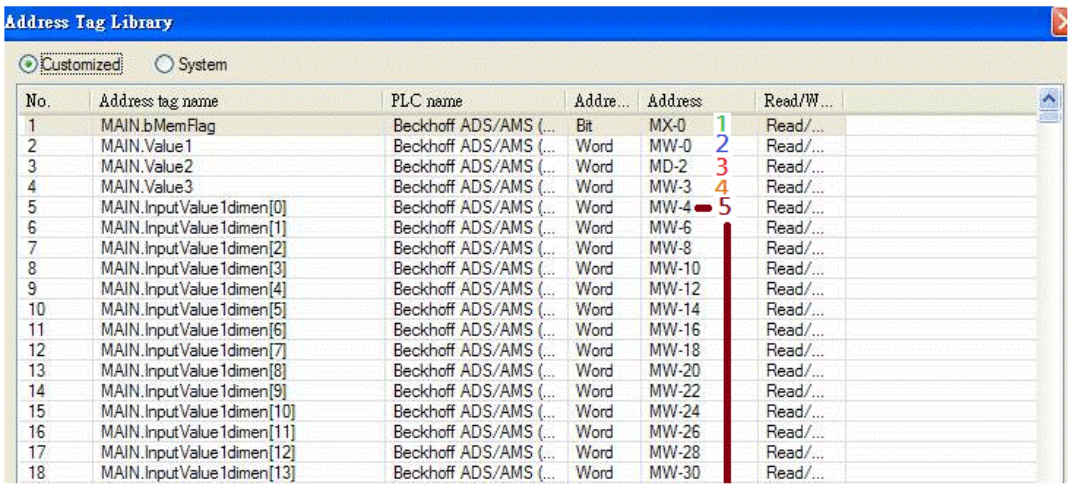



Step5.


The following dialog box appears for users to select all or part of the data to import. A reminding message is shown when import the same data repeatedly.


*EasyBuilder8000 does not support [Comment] setting.

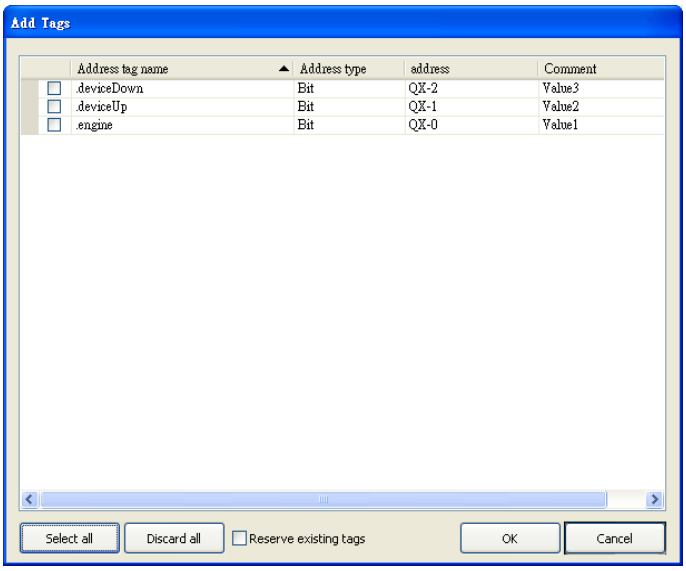

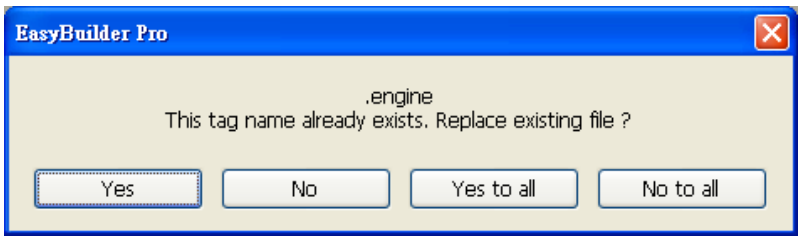

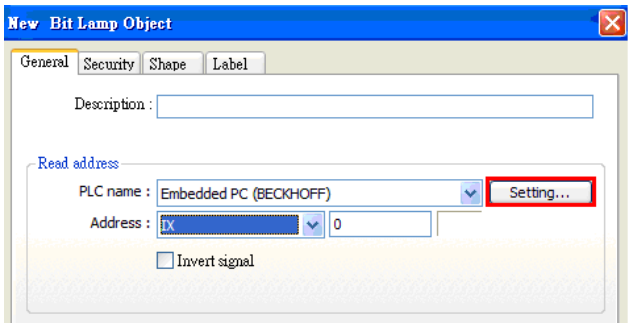

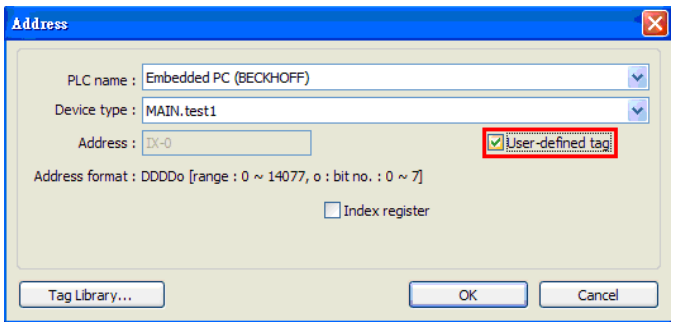

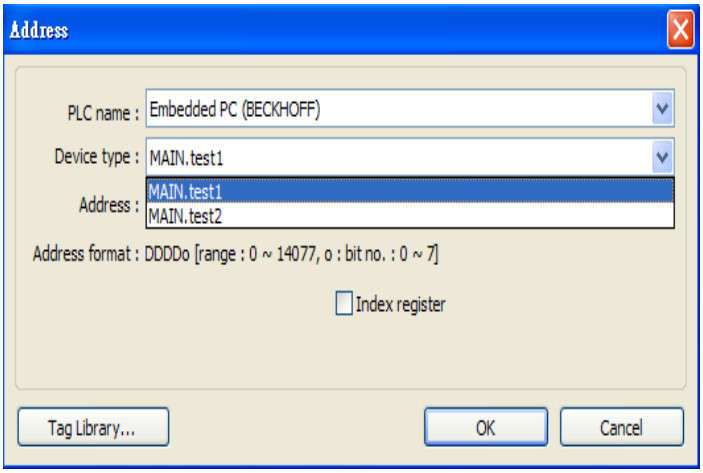

Step6.

Download the project compiled in EasyBuilder to HMI.

Device address:


Bit/Wor	Device type	Format	Range	Memo
B	IX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
B	QX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
B	MX	DDDDDo	0 ~ 655357	o : Bit no.(0 ~ 7)
W	IW	DDDDD	0 ~ 65535	
W	QW	DDDDD	0 ~ 65535	
W	MW	DDDDD	0 ~ 65535	
DW	ID	DDDDD	0 ~ 65535	
DW	QD	DDDDD	0 ~ 65535	
DW	MD	DDDDD	0 ~ 65535	

Support Device Type:

Data Type	EasyBuilder data format	Memo
Bool	bit	
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
String	ASCII input and ASCII display	

Wiring Diagram:

Ethernet cable:

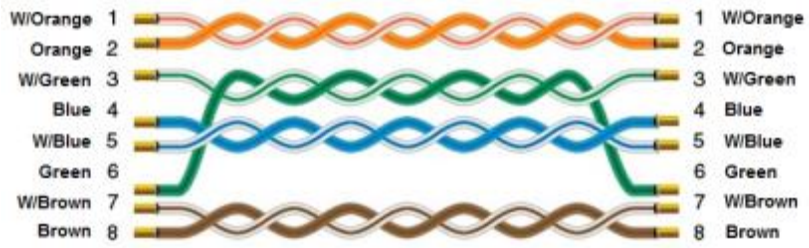

Beckhoff TwinCAT 3 ADS/AMS (Ethernet)

Supported Series:
CX8000,CX90x0,CX1010,CP62xx,CX5010,CP62xx,CX1020,CX2020,CPxxxx,C6920,CX2030,CPxxxx,CP6930,CX2040,C65xx,C69xx.
Website: http://infosys.beckhoff.com/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Beckhoff TwinCAT 3 ADS/AMS (Ethernet)		
PLC I/F	Ethernet		
Port no.	48898		
PLC sta. no.	No need to set station no.		

Device Address:

Bit/Word	Device	Format	Range	Memo
B	IX	DDDDDdd	0 ~ 6553515	
B	QX	DDDDDdd	0 ~ 6553515	
B	MX	DDDDDdd	0 ~ 6553515	
W	IW	OOOOOO	0 ~ 65535	
W	QW	DDDDD	0 ~ 65535	
W	MW	DDDDD	0 ~ 65535	
W	ID	DDDDD	0 ~ 65535	
W	QD	DDDDD	0 ~ 65535	
W	MD	DDDDD	0 ~ 65535	

Wiring Diagram:

Ethernet cable:

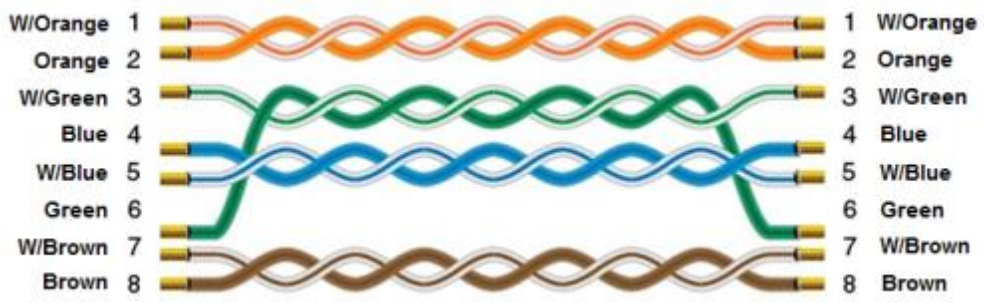

Beckhoff TwinCAT PLC (Ethernet) – Free Tag Names

Supported Series:
CX8000,CX90x0,CX1010,CP62xx,CX5010,CP62xx,CX1020,CX2020,CPxxxx,C6920,CX2030,CPxxxx,CP6930,CX2040,C65xx,C69xx.
Website: http://infosys.beckhoff.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Beckhoff TwinCAT PLC (Ethernet) – Free Tag Names		
PLC I/F	Ethernet		
Port no.	48898		
PLC sta. no.	No need to set station no.		


Support Device Type:

Data Type	EasyBuilder data format	Memo
Bool	bit	
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
String	ASCII input and ASCII display	


How to Import Tags:

The files generated after compilation in TwinCAT2 and TwinCAT3 programming software can be directly imported to EasyBuilder. The following steps explain how to import address tags.


1. Go to System Parameter Settings and add “Beckhoff TwinCAT PLC (Ethernet) – Free Tag Names” to the device list. Click [Settings] and configure the PLC parameters.

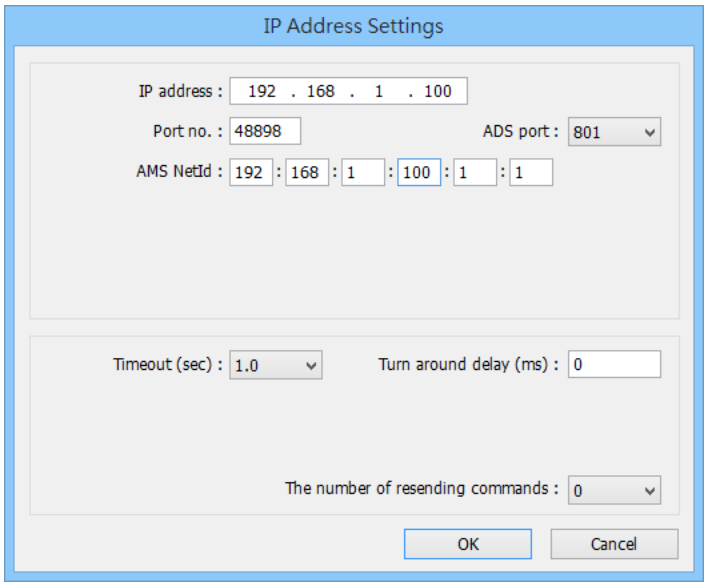


2. Go to System Parameter Settings » Tag Editor and click [Import].

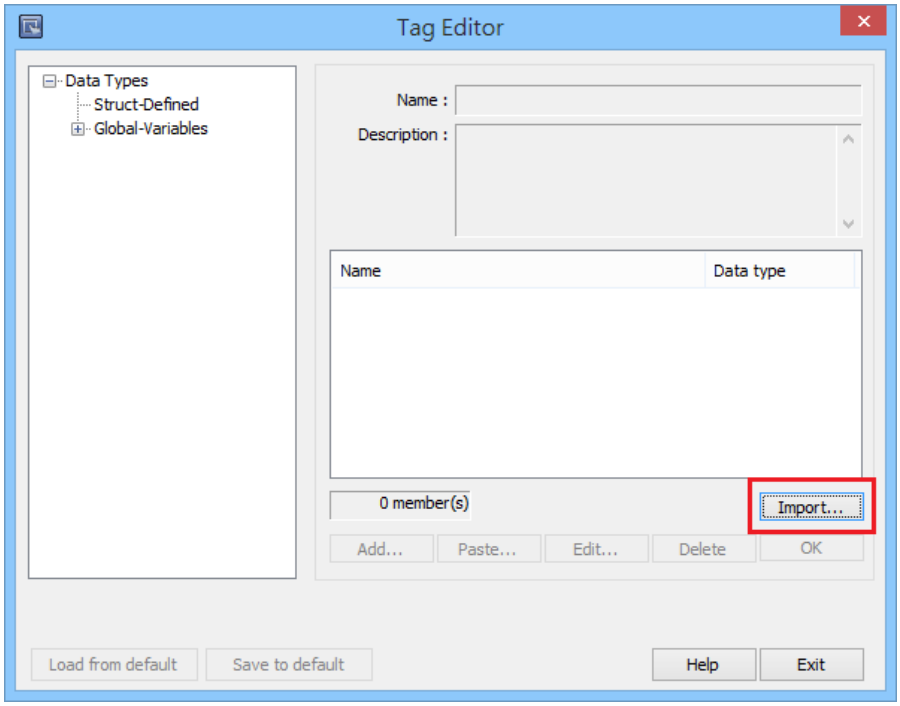


3. Select PLC Software Version. The standard file type of TwinCAT 2.0 is .typ. The standard file types of TwinCAT 3.0 are: .TcDUT, .TcGVL, and .TcPOU. The tags to be imported can be selected by a tag name filter. Select the file type and then click [Import]. The invalid address types will be displayed in Error Status field. Click [OK] to leave.
   Note1. Tag name can not include ".".
   Note2. GVL files with Tc2GvlVarNames attribute are not supported.

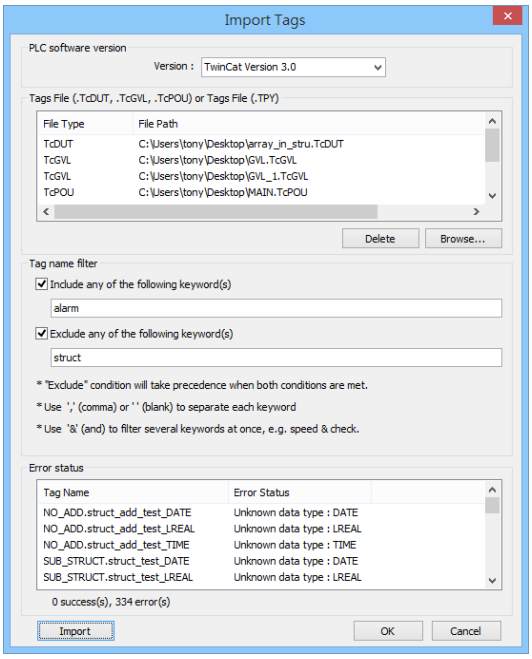

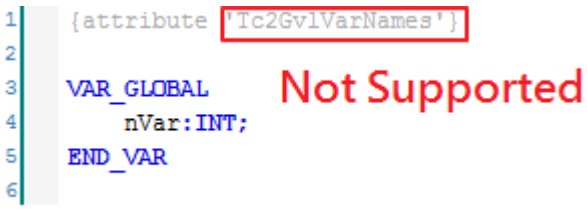


4. The "Import successfully" message will be shown upon completion.

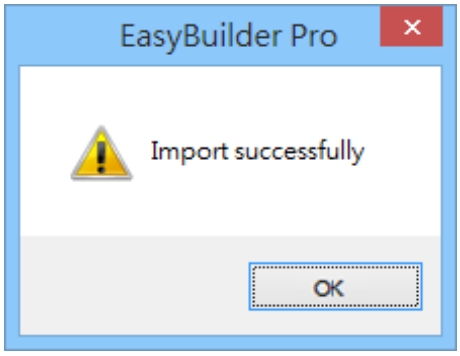

Wiring Diagram:

Ethernet cable:

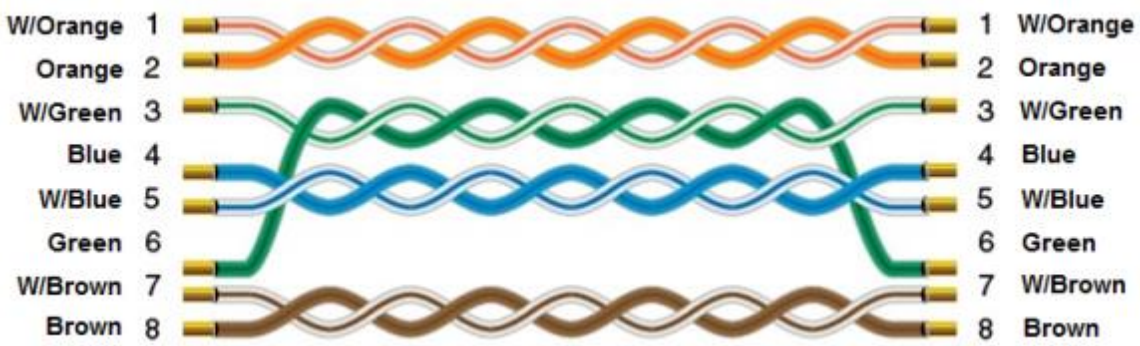

Bosch Rexroth

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Bosch Rexroth		
PLC I/F	RS232		
Baud rate	115200		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit


Import Tag:

1. Launch IndraWorks PLC software, click **[Global_Variables]**, and edit the project.

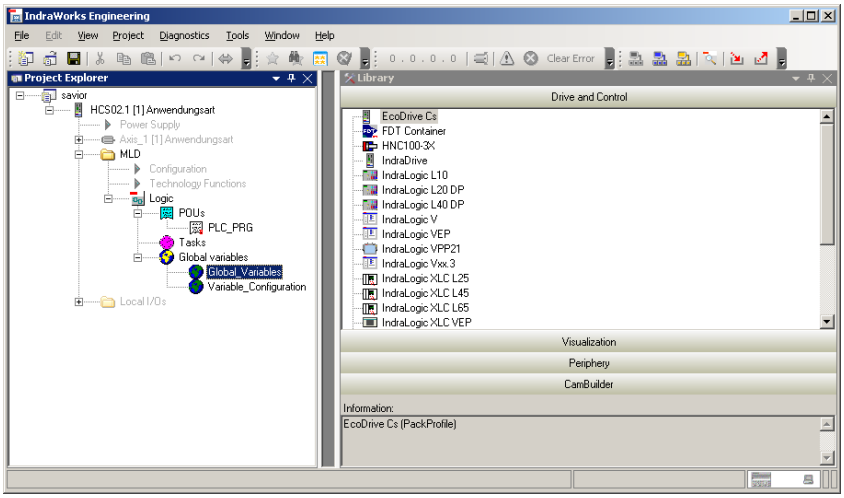


2. Struct can be edited in **[Data types]** tab, and Global_varaibles can be edited in **[Resources]** tab.


[Data types]

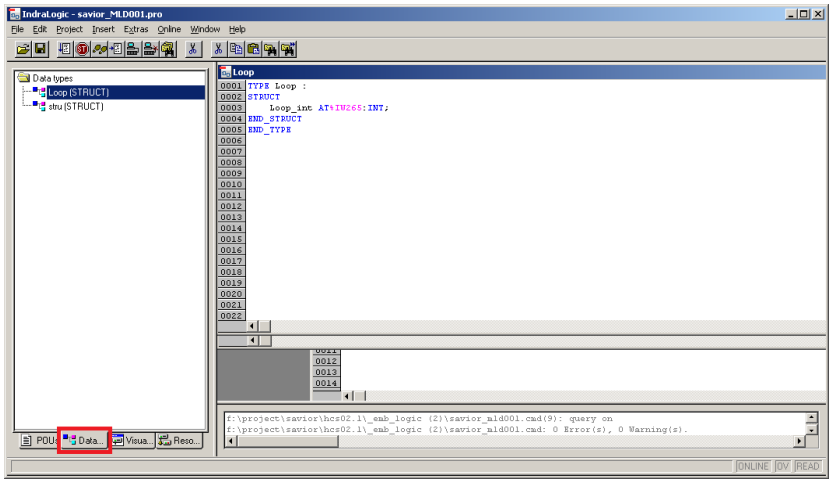


[Resources]

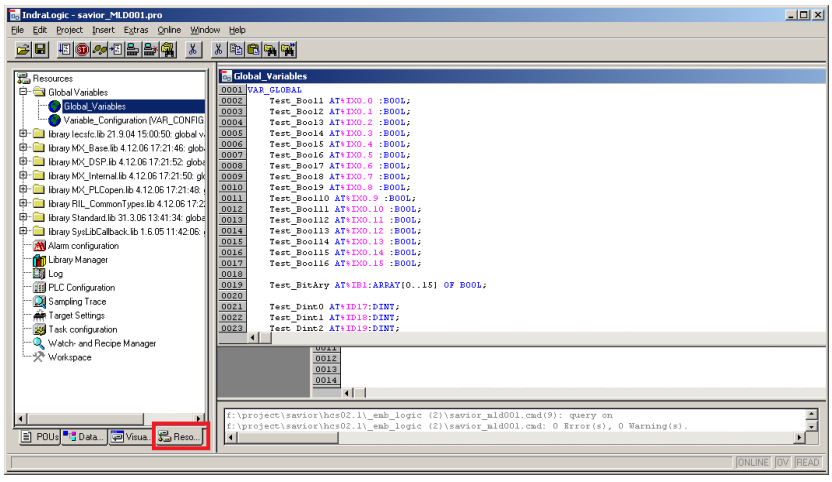


3. After editing the project, click **[Project]** -> **[Export]** to export the tags.

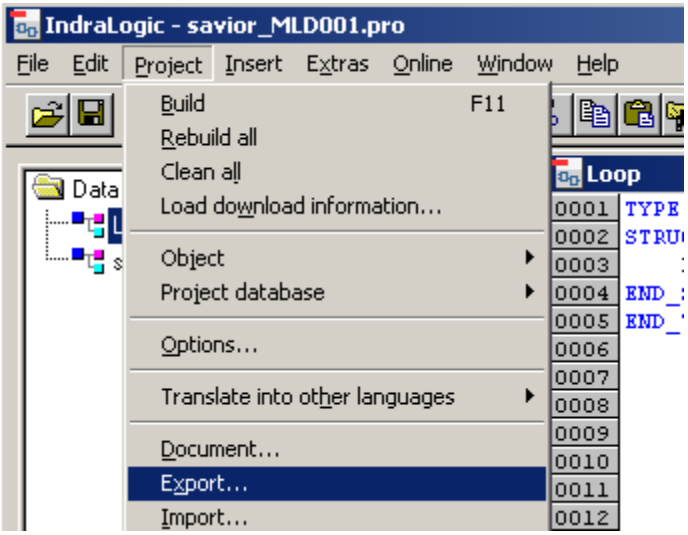


4. You may select all, a part of, or a single file to export. Click **[OK]**, enter the file name and designate the directory to store the file.

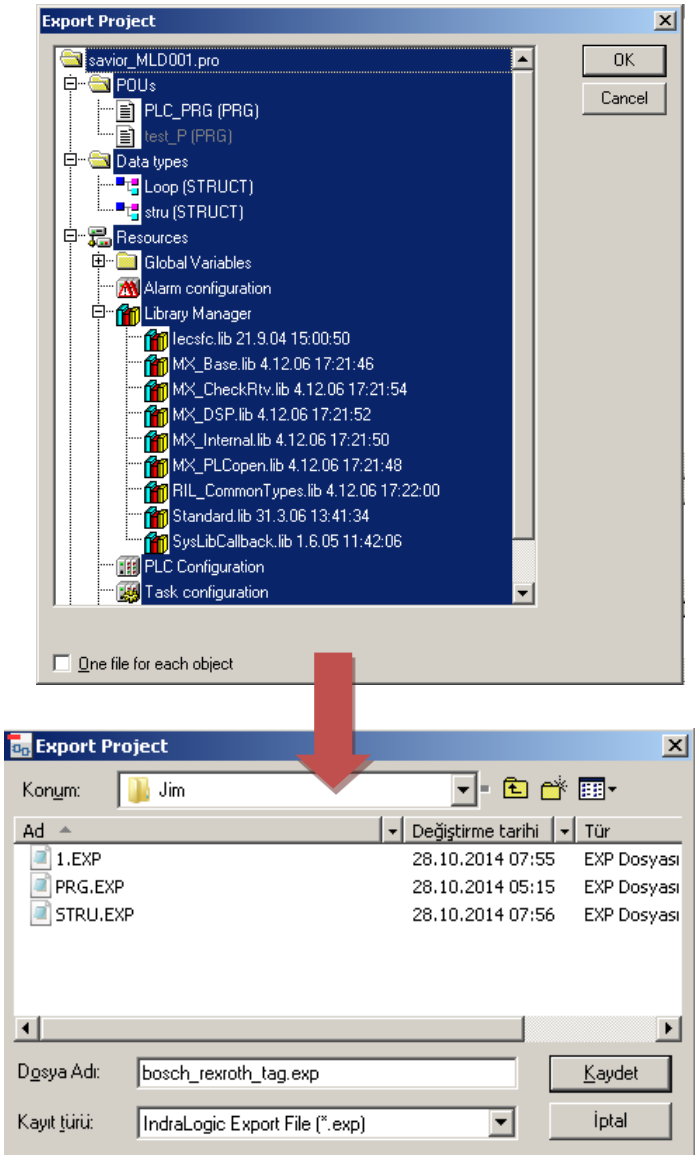

5. Launch EasyBuilder, select Bosch Rexroth driver, and import the address tags. The illegal addresses will be eliminated, and displayed in the **[Error status]** field. Click **[OK]** to leave.

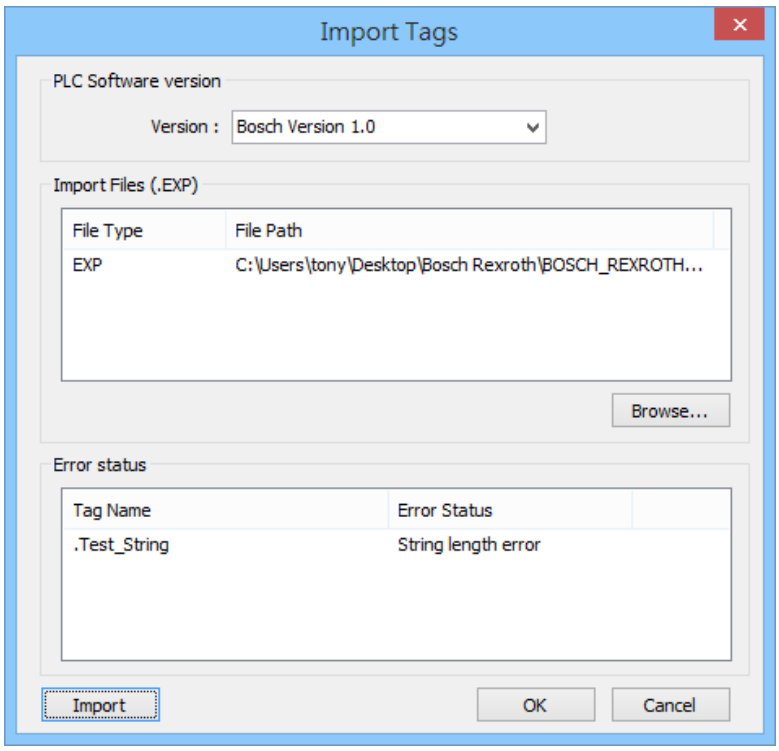

6. "Import successfully" message will be displayed when successfully import the address tags.

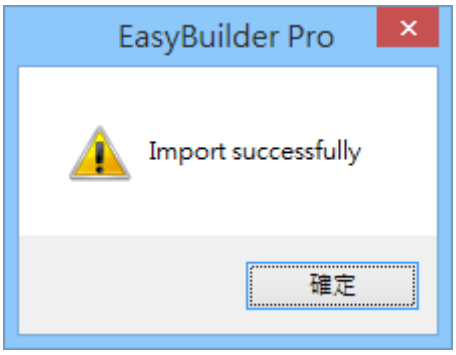

Wiring Diagram:

RS-232 Terminal (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 TX
Tx	3	7	⟷	3 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	9	⟷	2 TX
Tx	6	⟷	3 RX
GND	5	⟷	5 GND

CAN Bus CANopen Slave

Supported series: CAN Bus 2.0a / CAN Bus 2.0B device.


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CAN Bus CANopen Slave		
Node ID	1	1~127	
Baud rate	250K	10K~1M	


Online simulator	NO	**Extend address mode**	NO

Follow the steps to import EDS file.


Step 1. Object Dictionary Settings -> Setting

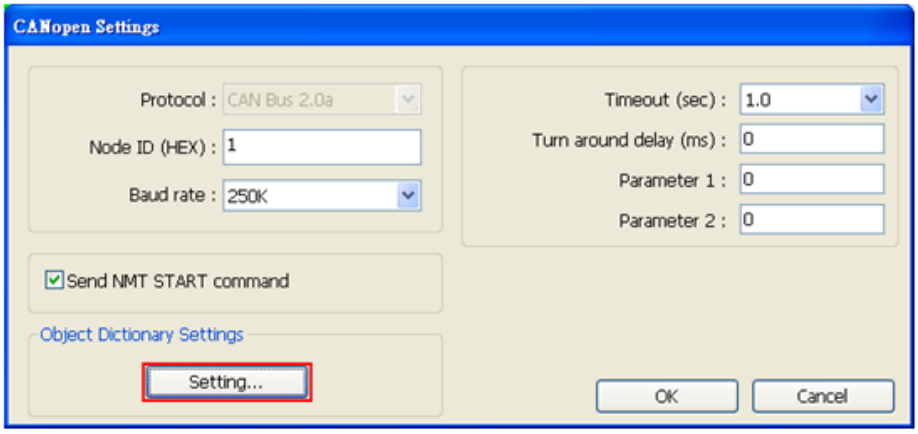

Step 2. Import EDS file.

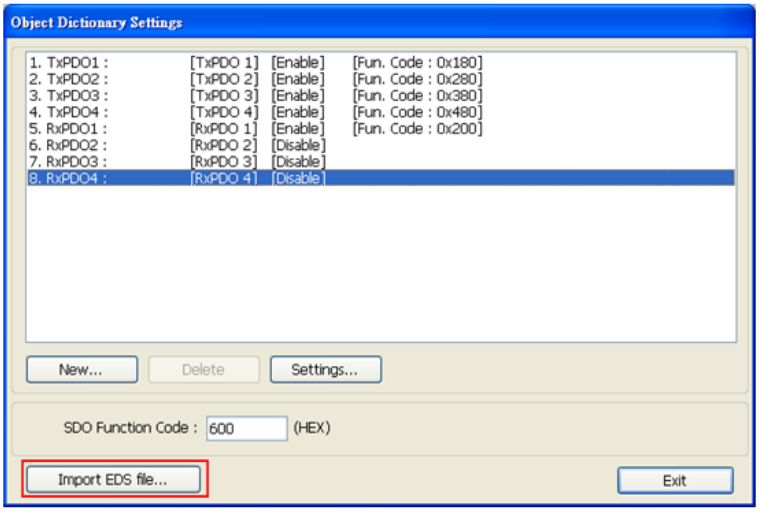

Step 3. Select the EDS file to be imported.

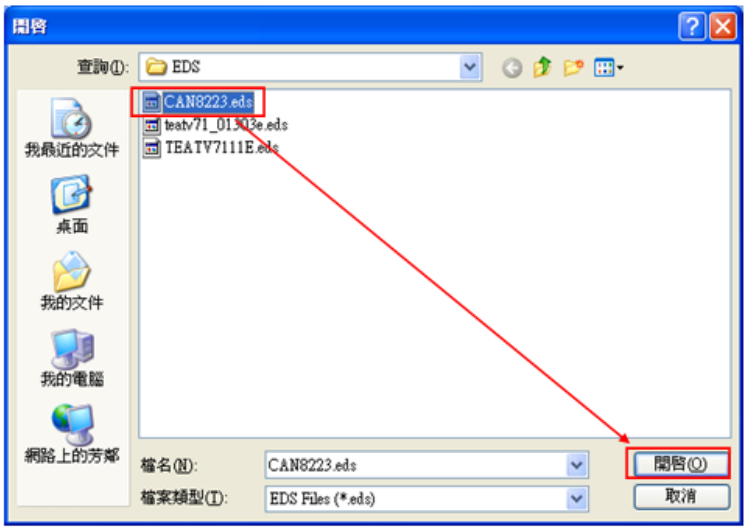

Step 4. Successfully import EDS file.



Device Address:

Bit/Wor	Device type	Format	Range	Memo
B	TxPDOn_BIT	DDDNo	100 ~ 99977	DDD：PDO no. N：address (unit：byte). o：bit no.
B	RxPDOn_BIT	DDDNo	100 ~ 99977	DDD：PDO no. N：address (unit：byte). o：bit no.
B	SDO_8bit_Bit	HHHHHHo	0 ~ FFFFFF7	HHHH(Index)+HH(Sub-index)+o(Bit no)
B	SDO_16bit_Bit	HHHHHHdd	0 ~ HHHHHH15	HHHH(Index)+HH(Sub-index)+dd(Bit no)
W	TxPDOn	DDDN	10 ~ 9997	DDD：PDO no. N：address(unit：byte)

Bit/Wor	Device type	Format	Range	Memo
W	TxPDOn_Byte	DDDN	10 ~ 9997	DDD：PDO no. N：address(unit：byte)
W	RxPDOn	DDDN	10 ~ 9997	DDD：PDO no. N：address(unit：byte)
W	RxPDOn_Byte	DDDN	10 ~ 9997	DDD：PDO no. N：address(unit：byte)
W	SDO_8bit	HHHHHH	0~FFFFFF	HHHH(Index)+HH(Sub-index)
W	SDO_16bit	HHHHHH	0~FFFFFF	
W	SDO_32bit	HHHHHH	0~FFFFFF	


Wiring Diagram:

Diagram 1

cMT Series	***cMT-3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-XE	***MT8092XE***

HMI			PLC
	CAN Bus 9P Male		CAN Bus Device
CAN-	7	⟷	CAN-
CAN+	8	⟷	CAN+
GND	5	⟷	GND

To minimize signal reflection on the CAN bus network, termination resistors should be installed at both ends of the network, as shown in the following figure. (eMT3070A has built-in termination resistor, so it is not required for eMT3070A)

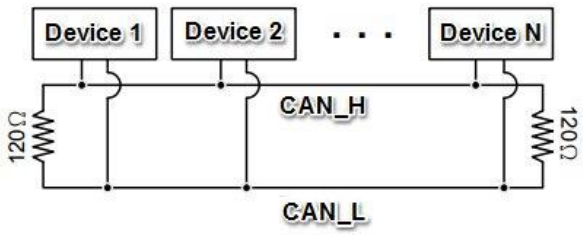

Demo Project Link:



CAN Bus 2.0A/2.0B General and SAE J1939

Supported series: CAN Bus 2.0A / CAN Bus 2.0B / SAE J1939.


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CAN Bus 2.0A/2.0B General and SAE J1939		
	General	General / SAE J1939	
Baud rate	250K	10K~1M	


Online simulator	NO	**Extend address mode**	NO

How to import SAE J1939 address tags:


1. In EasyBuilder Pro add **[CAN Bus 2.0A/2.0B General and SAE J1939]** driver.

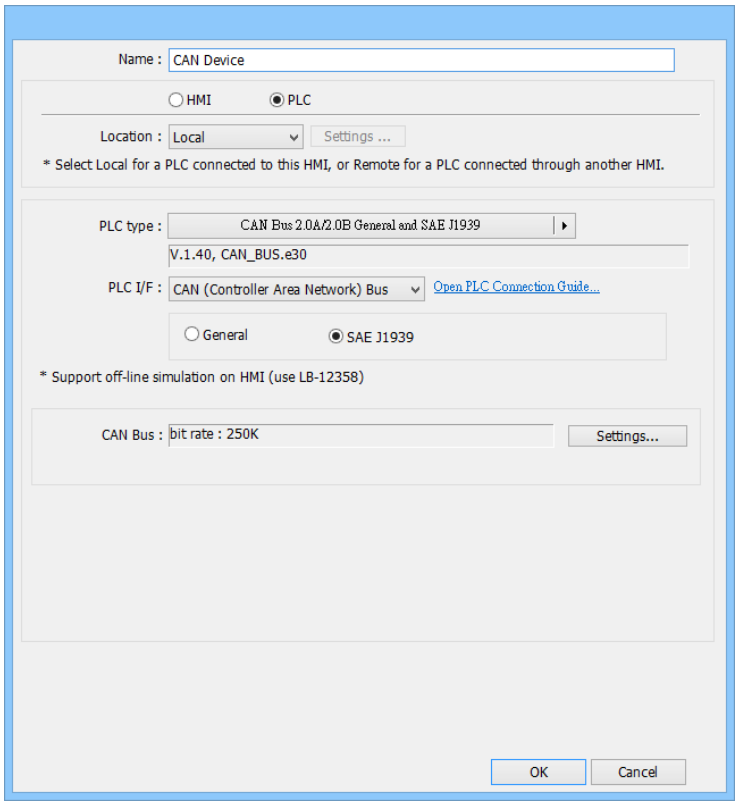


2. Open Address Tag Library, select **[User-defined tags]** and then click **[New]**.

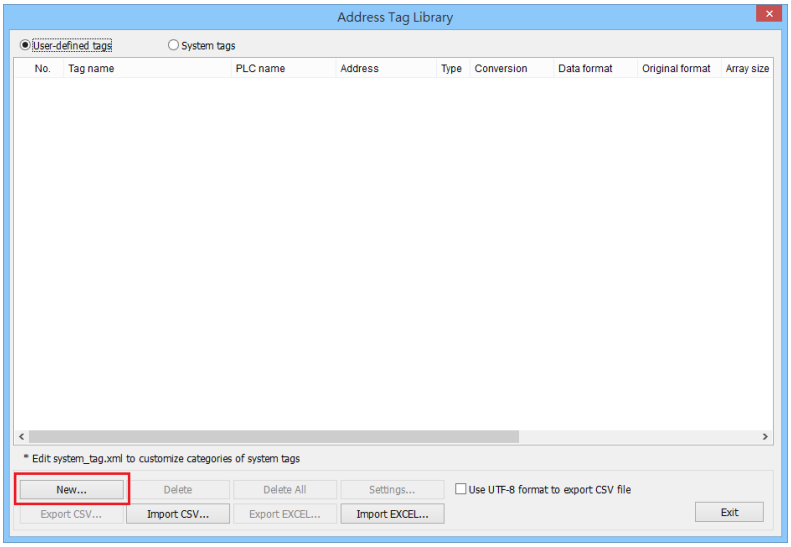


3. Name: Enter the tag name.
   PLC: Select the **SAE J1939**
   Address type: Select **Bit** or **Word**.
   Transmission rate:
   If **[Use the default]** is selected, then HMI will wait for the reply from CAN device.
   If **[Request mode]** is selected, then HMI will send polling packet.
   After entering the above information, click **[Settings]**.

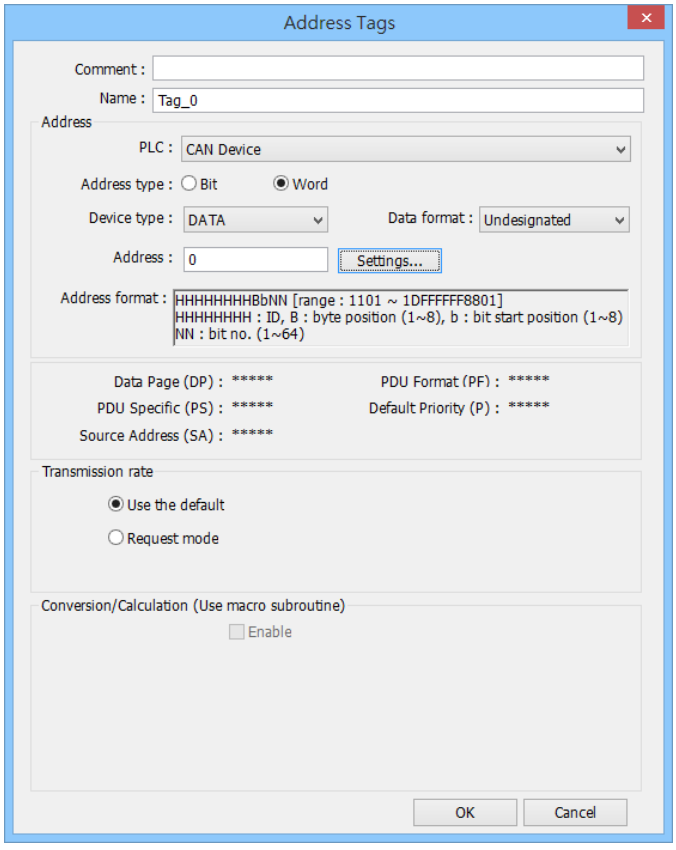

4. Please set the following parameters according to the specification of the CAN device used.

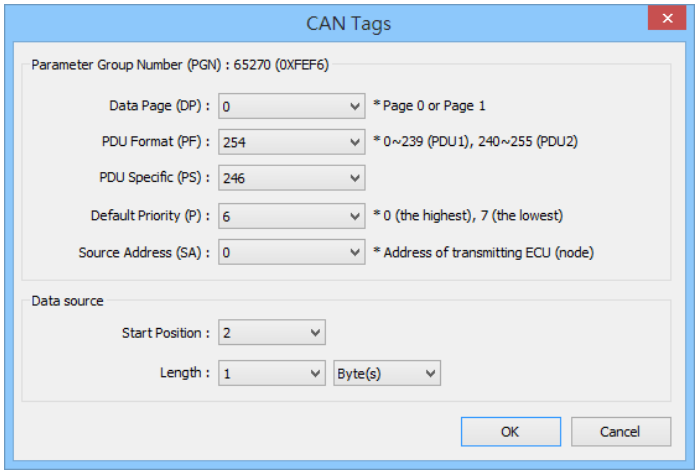

5. After building the tags click **[Exit]**.

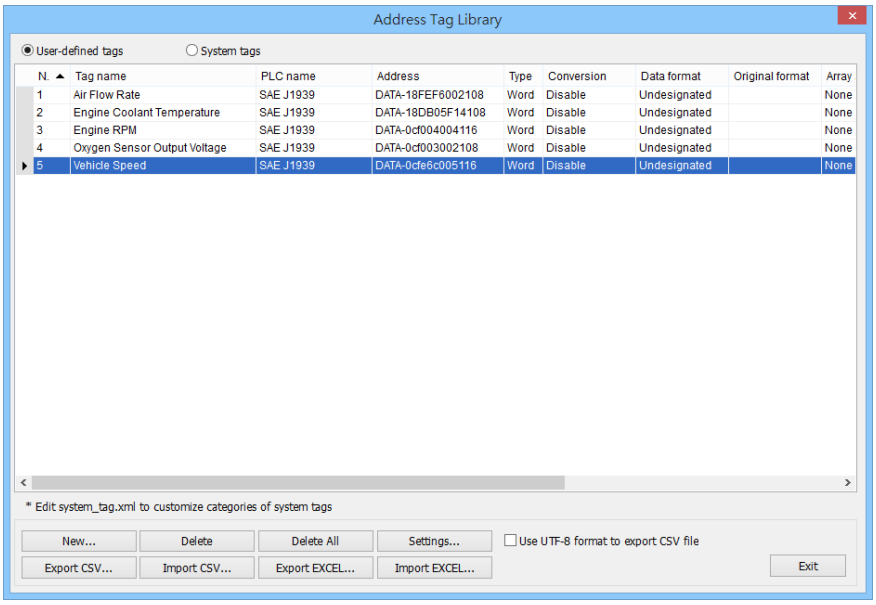

Device Address:

Bit/Wor	Device type	Format	Memo
B	DATA_Bit	HHHHHHHHBb	H: ID B: Byte position (1~8) b: bit start position (1~8)
W	DATA	HHHHHHHHBbNN	H: ID B: Byte position (1~8) b: bit start position (1~8) NN: bit no. (1~64)


Wiring Diagram:

Diagram 1

cMT Series	***cMT-3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-XE	***MT8092XE***

HMI			PLC
	CAN Bus 9P Male		CAN Bus Device
CAN-	7	⟷	CAN-
CAN+	8	⟷	CAN+
GND	5	⟷	GND

To minimize signal reflection on the CAN bus network, termination resistors should be installed at both ends of the network, as shown in the following figure. (eMT3070A has built-in termination resistor, so it is not required for eMT3070A)

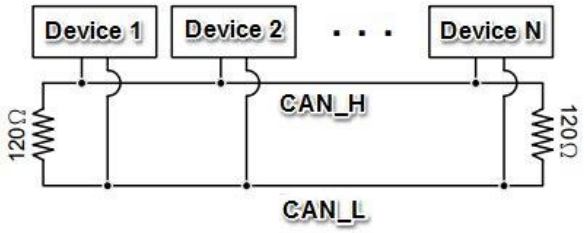

CAS CI-1580A

Supported Series : CAS CI-1580A

Website : http://www.globalcas.com/bemarket/main/main.php

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CAS CI-1580A		
PLC I/F	RS232	RS232/RS485 4W	
Baud rate	9600	9600 ~ 115200	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	1 ~ 99	
Parameter1	0	0,1	0:BBC not used / 1:BBC used

Online simulator	YES

PLC Setting:

F30 Parity bit	0 No Parity (default)
	1 Odd Parity
	2 Even Parity
F31 Baud rate	0 115200 bps
	1 76800 bps
	2 57600 bps
	3 38400 bps
	4 28800 bps
	5 19200 bps
	6 14400 bps
	7 9600 bps
	8 4800 bps
	9 2400 bps
F33 Communication Mode	0 Unilateral transmission mode
	1 Command mode
	2 LCD mode
	4 External display mode

F34 ID Number	1~99 (default:1)
F36 BCC selection mode	0 BCC not used
	1 BCC used
F40 Weight unit	0 kg
	1 g
	2 ton

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CURRENT_WEIGHT_HEAD	D	1	OL: OVER/UNDER LOAD
B	CURRENT_WEIGHT_HEAD	D	2	ST: Stable indicator
B	CURRENT_WEIGHT_HEAD	D	3	US: Unstable indicator
B	CURRENT_WEIGHT_HEAD	D	4	NT: NETWEIGHT
B	CURRENT_WEIGHT_HEAD	D	5	GS: GROSS WEIGHT
W	TARE	D	1	
W	TARE_RESET	D	1	
W	ZERO	D	1	
W	HOLD	D	1	
W	HOLD_RESET	D	1	
W	PACKMODE_START	D	1	
W	PACKMODE_STOP	D	1	
W	KEY_TARE	D	1	
W	CURRENT_WEIGHT	D	1	
W	CURRENT_WEIGHT_UNIT	D	1	0:KG , 1:ton , 2:g (F40)
W	LOWEST_LIMIT	D	1	
W	UPPER_LIMIT	D	1	
W	SERIAL_NUMBER	D	1	
W	CODE_NUMBER	D	1	
W	PART_NUMBER	D	1	

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TXD
Tx	3	7	⟷	2 RXD
GND	5	5	⟷	4,5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	2	⟷	3 TXD
Tx	3	⟷	2 RXD
GND	5	⟷	4,5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	3 TXD
Tx	6	⟷	2 RXD
GND	5	⟷	4,5 GND

RS-485 4W 9P D-Sub (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 9P D-Sub Female
Rx-	1	↔	9 TX-
Rx+	2	↔	8 TX+
Tx-	3	↔	7 RX-
TX+	4	↔	6 RX+
GND	5	↔	4,5 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 9P D-Sub Female
Rx-	7	↔	9 TX-
Rx+	6	↔	8 TX+
Tx-	9	↔	7 RX-
TX+	8	↔	6 RX+
GND	5	↔	4,5 GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 9P D-Sub Female
Rx-	1	⟷	9 TX-
Rx+	2	⟷	8 TX+
Tx-	3	⟷	7 RX-
TX+	4	⟷	6 RX+
GND	5	⟷	4,5 GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 9P D-Sub Female
Rx-	1	⟷	9 TX-
Rx+	2	⟷	8 TX+
Tx-	3	⟷	7 RX-
TX+	4	⟷	6 RX+
GND	5	⟷	4,5 GND

CD MODBUS RTU


Supported Series : REVO-CL / REVO-M / REVO E / CD3000E / MULTIDRIVE / REVO-TC / REVO-PC

Website : http://www.cdautomation.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CD MODBUS RTU		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	1	0-255	

Online simulator	YES	**Broadcast**	YES
Extend address mode	YES		

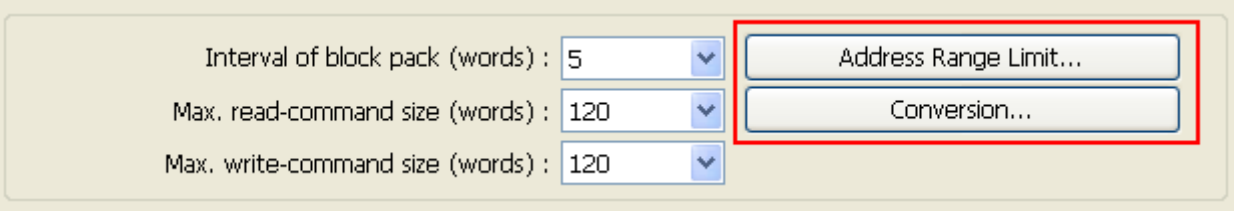

[Address Range Limit]

The address range of 0x, 1x, and 0x_multi_coils device types can be set.

[Conversion]


The 3x_Double and 4x_Double address types are added. If [ABCD ->CDAB] check box is selected, please select 3x_Double and 4x_Double address types.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output bit
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input Register bit (read
B	4x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	6x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	1 ~ 65535	Write multiple coils
W	3x	DDDDD	1 ~ 65535	Input Register (read only)
W	3x_MAX1W	DDDDD	1 ~ 65535	Display 32 bits *Note1
DW	3x_MAX2W	DDDDD	1 ~ 65535	*Note1
W	4x	DDDDD	1 ~ 65535	Output Register
W	4x_MAX1W	DDDDD	1 ~ 65535	Display 32 bits *Note1
DW	4x_MAX2W	DDDDD	1 ~ 65535	*Note1
DW	5x	DDDDD	1 ~ 65535	4x double word swap
W	6x	DDDDD	1 ~ 65535	4x single word write
W	3x_Double	DDDDD	1 ~ 65535	*Note2
W	4x_Double	DDDDD	1 ~ 65535	*Note2
W	4x_32Bit	DDDDD	1 ~ 65535	Output Registerv *Note1
W	0x_single_coil	DDDDD	1 ~ 65535	

Note1: MAX1W and 4X_32Bit read/write 1 word for each package and display a 32-bits value, whereas MAX2W reads/write 2 words for each package.

Note2: Go the [System Parameter Settings] -> [Device Properties] and click [Conversion] to set the data format of device types 3x, 4x, 6x, 3x_double, 4x double.

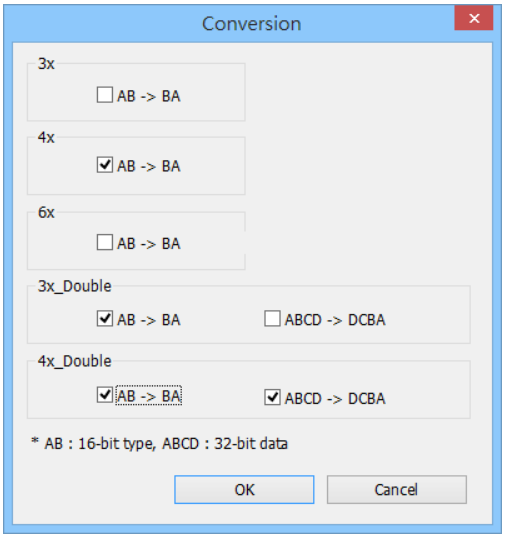

NOTE:

Address type “5x” is mapping to Hold Reg. The communication protocol of 5x is almost the same as “4x” except that “5x” swaps double word.

If 4x contains the following information:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x20001		0x40003		0x60005		

For 5x, it will be:

Address	1	2	3	4	5	6	...
Data in word	0x2	0x1	0x4	0x3	0x6	0x5	
Data	0x10002		0x30004		0x50006		

Modbus RTU function code:

0x 0x01 Read coil 0x05 write single coil

0x_multi_coils 0x01 Read coil 0x0f write multiple coils

1x 0x02 Read discrete input N/A for write operation

3x 0x04 Read input register N/A for write operation

4x 0x03 Read holding register 0x10 write multiple registers

5x 0x03 Read holding register 0x10 write multiple registers

(Note: reverse word order in double word format)

3xbit is equivalent to 3x

4xbit is equivalent to 4x

6x 0x03 Read holding register 0x06 write single register

(Note: 6x is limited to device of one word only)

Wiring Diagram:

RS-485 2W 9P D-Sub (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	Data-
Data+	2	9	⟷	Data+
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	Data-
Data+	6	1	⟷	Data+
GND	5	5	⟷	GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	Data-
Data+	2	8	⟷	Data+
GND	5	9	⟷	GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	Data-
Data+	2	9	⟷	Data+
GND	5	5	⟷	GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	Data-
Data+	2	8	⟷	Data+
GND	5	5	⟷	GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	Data-
Data+	2	⟷	Data+
GND	5	⟷	GND

CD MODBUS TCP/IP

Supported Series: REVO-CL / REVO-M / REVO E / CD3000E / MULTIDRIVE / REVO-TC / REVO-PC

Website : http://www.cdautomation.com/


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CD MODBUS TCP/IP		
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.	1	0~255	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output bit
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	3x_bit	DDDDDdd	100 ~ 6553515	Input Register bit(read
B	4x_bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	6x_bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	1 ~ 65535	Write multiple coils
W	3x	DDDDD	1 ~ 65535	Input Register
W	4x	DDDDD	1 ~ 65535	Output Register
DW	5x	DDDDD	1 ~ 65535	4x double word swap
W	6x	DDDDD	1 ~ 65535	4x single word write
DW	3x_Double	DDDDD	1 ~ 65535	*Note1
DW	4X_Double	DDDDD	1 ~ 65535	*Note1
W	4x string central europe	DDDDD	1 ~ 65535	Convert the Central Europe ASCII to Unicode.
W	4x string central europe (rev)	DDDDD	1 ~ 65535	


Note1: Go the [System Parameter Settings] -> [Device Properties] and click [Conversion] to set the data format of device types 3x, 4x, 6x, 3x_double, 4x double.

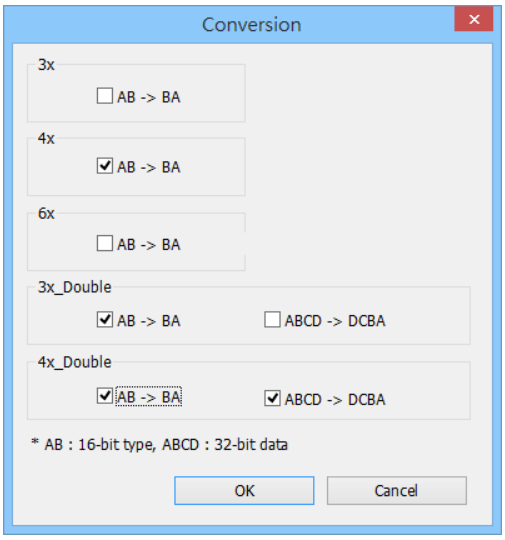

Wiring Diagram:

Diagram 1

Ethernet cable:

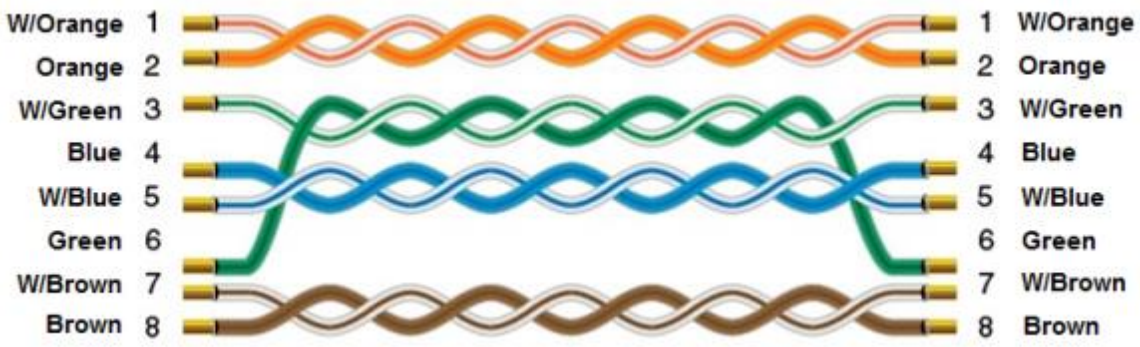

Change

Supported Series: Compressor controller
Website: http://www.sh-changjia.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Change		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1	1~6	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CTL	DDD	0 ~ 5, 128, 150	Write only
DW	SET	DDD	0 ~ 57, 128	
DW	STATUS	DD	1 ~ 20	Read only

Wiring Diagram:

RS-485 2W Terminal (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		Change RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	15 Data-
Data+	2	9	⟷	16 Data+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		Change RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	15 Data-
Data+	6	1	⟷	16 Data+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		Change RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	15 Data-
Data+	2	8	⟷	16 Data+
GND	5	9	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	Change RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male	
Data-	1	6	15 Data-
Data+	2	9	16 Data+
GND	5	5	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	Change RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	15 Data-
Data+	2	8	16 Data+
GND	5	5	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	Change RS485 2W Terminal
	RS485 2W 9P Female	
Data-	1	15 Data-
Data+	2	16 Data+
GND	5	

Cimon CM1-CP4A/ECO1A

Supported Series: Cimon CM1 series, CP4A module
Website: http://www.kdtsys.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Cimon CM1-CP4A/ECO1A		
PLC I/F	RS232		
Baud rate	38400		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDh	0 ~ 23f	0-1F Read Only
B	Y	DDh	0 ~ 23f	
B	M	DDDh	0 ~ 511f	
B	K	DDDh	0 ~ 127f	
B	L	DDDh	0 ~ 127f	
B	F	DDDh	0 ~ 127f	Read Only
B	T	DDDh	0 ~ 102f	
B	C	DDDh	0 ~ 102f	
W	D	DDDD	0 ~ 4999	
W	S	DD	0 ~ 99	Max. Range: 99
W	TS	DDDD	0 ~ 1023	
W	TC	DDDD	0 ~ 1023	
W	CS	DDDD	0 ~ 1023	
W	CC	DDDD	0 ~ 1023	

Wiring Diagram:

CM1-CP4A: RS-232 6P RJ11 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P RJ11
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 TX
Tx	3	7	⟷	3 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


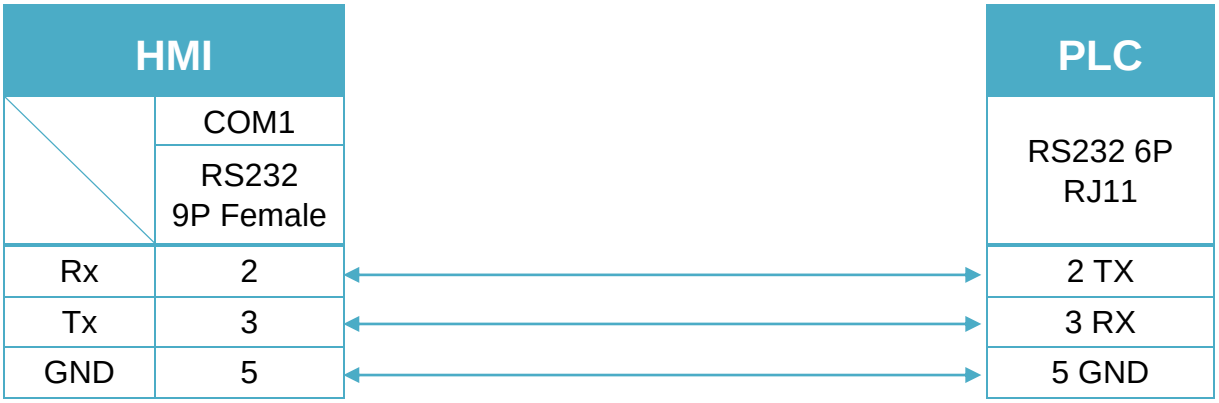


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

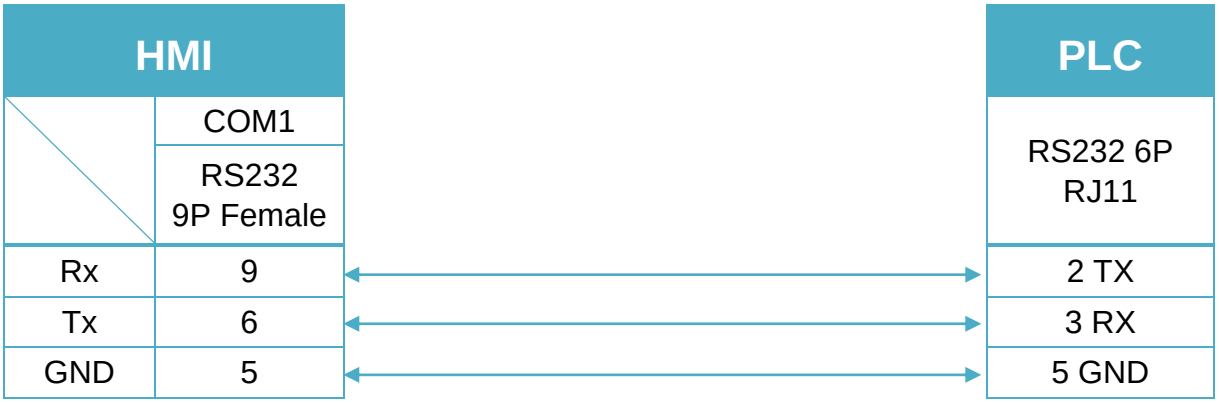

Cimon CM1-SC02A

Supported Series: Cimon CM series, SC02A module
Website: http://www.kdtsys.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Cimon CM1-SC02A		
PLC I/F	RS232		
Baud rate	38400		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDh	0 ~ 23f	0-1F Read Only
B	Y	DDh	0 ~ 23f	0-F Read Only
B	M	DDDh	0 ~ 511f	
B	K	DDDh	0 ~ 127f	
B	L	DDDh	0 ~ 127f	
B	F	DDDh	0 ~ 127f	Read Only
B	T	DDDh	0 ~ 102f	
B	C	DDDh	0 ~ 102f	
W	D	DDDD	0 ~ 4999	
W	S	DD	0 ~ 99	Max. Range: 99
W	TS	DDDD	0 ~ 1023	
W	TC	DDDD	0 ~ 1023	
W	CS	DDDD	0 ~ 1023	
W	CC	DDDD	0 ~ 1023	

Wiring Diagram:

CM1-SC02A: RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	3 TX
Tx	3	⟷	2 RX
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	3 TX
Tx	6	⟷	2 RX
GND	5	⟷	5 GND

CoDeSys Automation Alliance

Supported Version: CoDeSys V2.2

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CoDeSys Automation Alliance		
PLC I/F	Ethernet		
Port no.	1200		
PLC sta. no.	No need to set station no.		


Device Address:

Bit/Word	Device	Format	Range	Memo
B	IX	DDDDDdd	0 ~ 6553515	
B	QX	DDDDDdd	0 ~ 6553515	
B	MX	DDDDDdd	0 ~ 6553515	
W	IW	OOOOOO	0 ~ 65535	
W	QW	DDDDD	0 ~ 65535	
W	MW	DDDDD	0 ~ 65535	
W	ID	DDDDD	0 ~ 65535	
W	QD	DDDDD	0 ~ 65535	
W	MD	DDDDD	0 ~ 65535	

Wiring Diagram:

Diagram 1

Ethernet cable:

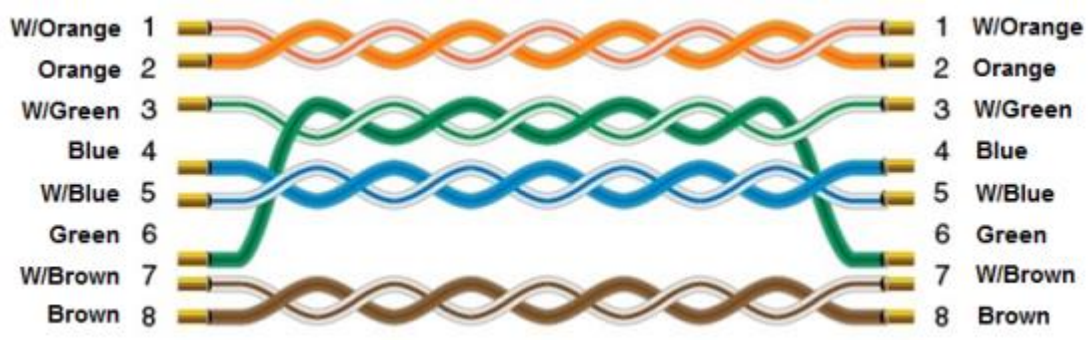

CoDeSys V2 (Symbolic Addressing) (Ethernet)


Supported series: CoDeSys V2

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	CoDeSys V2 (Symbolic Addressing) (Ethernet)		
PLC I/F	Ethernet		
Port no.	1200		

How to Import Tags:


1. Click **[New]** to add **[CoDeSys V2 (Symbolic Addressing) (Ethernet)]** driver, and then click **[Tag Manager]**.

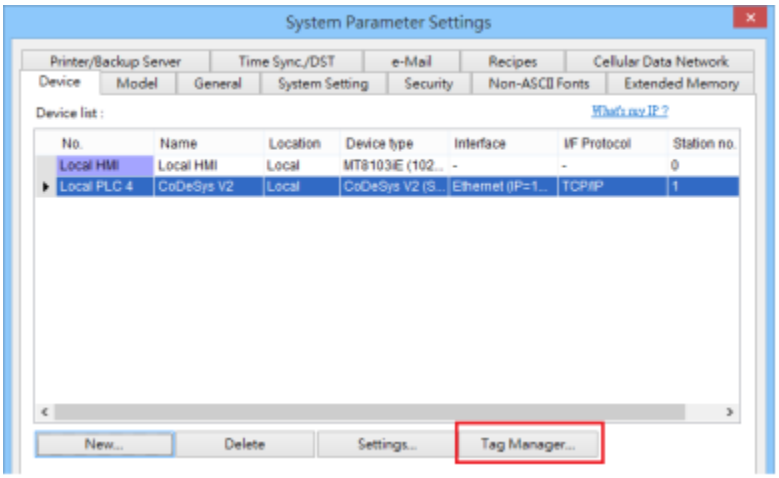

2. Select **[Get Tags] » [Import Tags]**, and then select the Tag **(.SYM_XML)** to be imported.

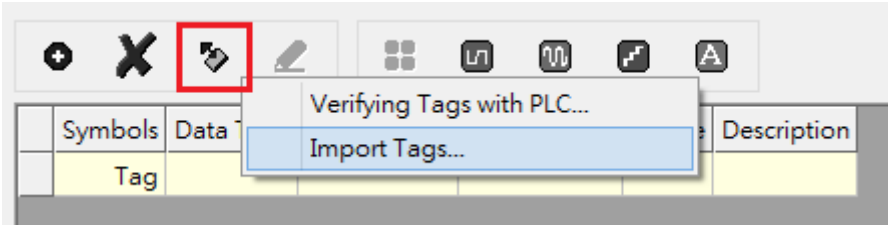


3. The successfully imported tags will be listed in a table. If any unsupported data type exists, a warning message will show in **[Import Status]** field.

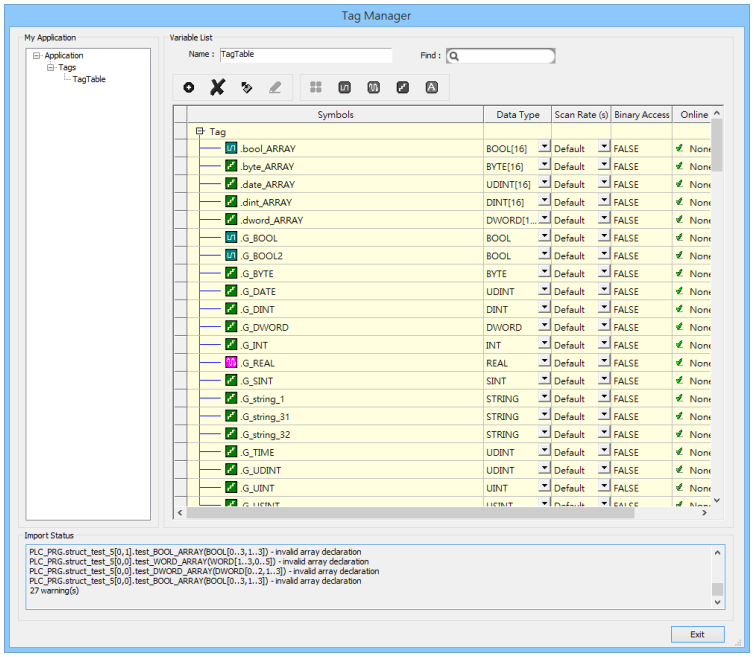

Note: Generate *.SYM_XML


1. [Project] -> [Options] -> [Symbol configuration] , select [Dump symbol entries] and [Dump XML symbol table].
2. Open [Configure symbol file], select [Export data entries]

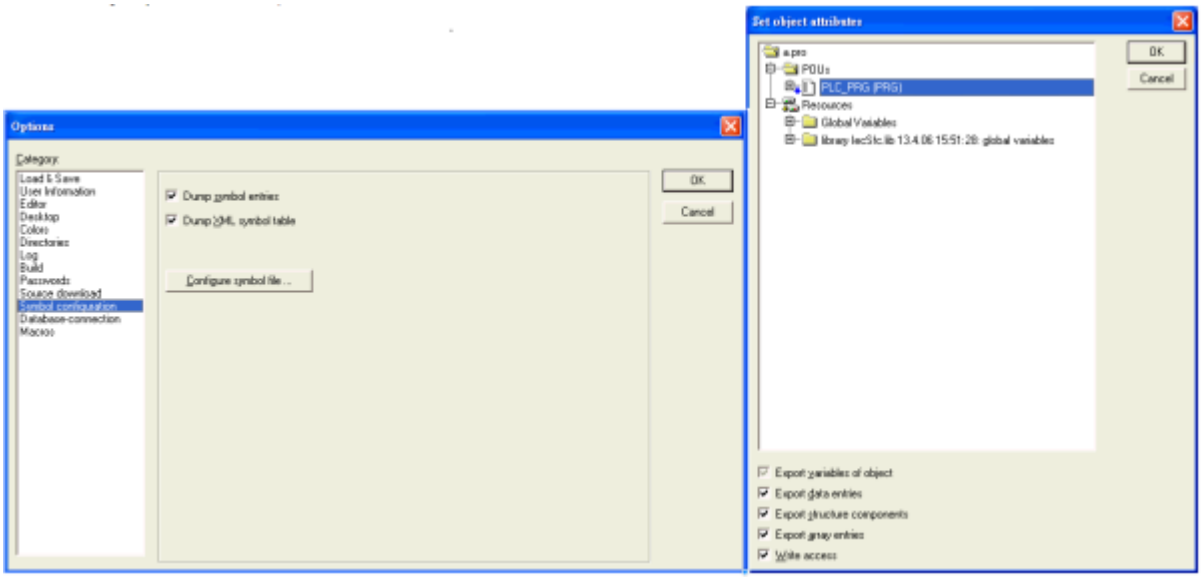

Wiring Diagram:

Diagram 1

Ethernet cable:

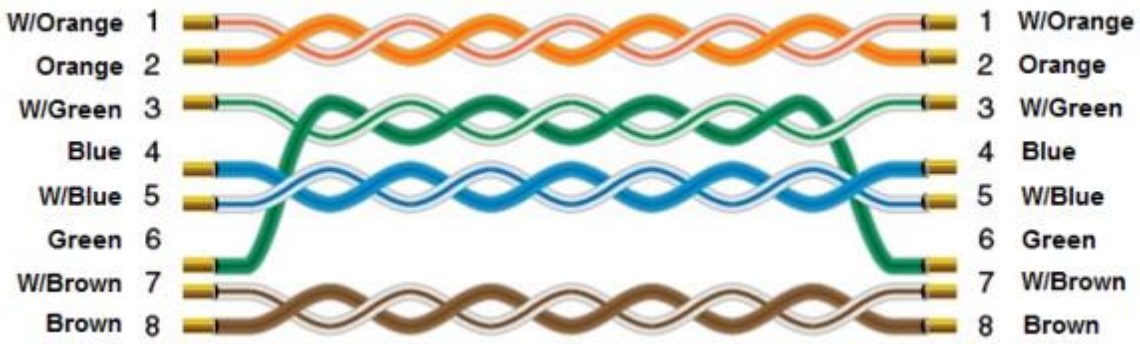

CoDeSys V3 (Ethernet)

Supported series: LTI MOTION MO CM-3, MO CM-6


Website: http://www.lti-motion.com/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	CoDeSys V3 (Ethernet)		
PLC I/F	Ethernet		Use UDP
Port no.	1740		
Source port	1742		

How to Import Tags:


1. Under “MainTask” set POU PLC_PRG.

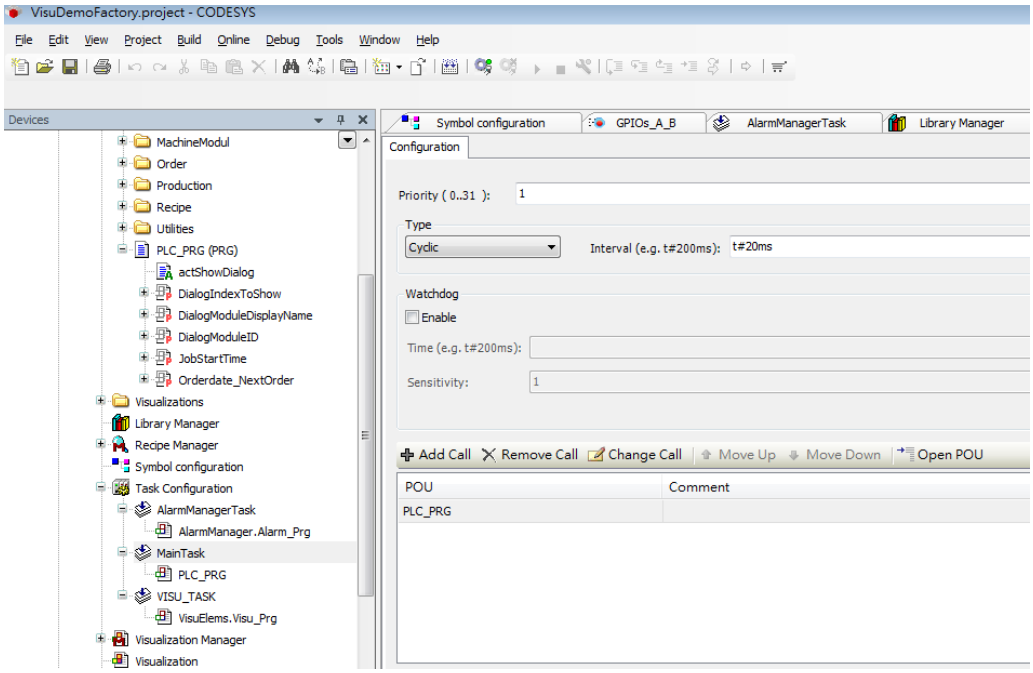


2. Add “Symbol configuration” into Devices list.

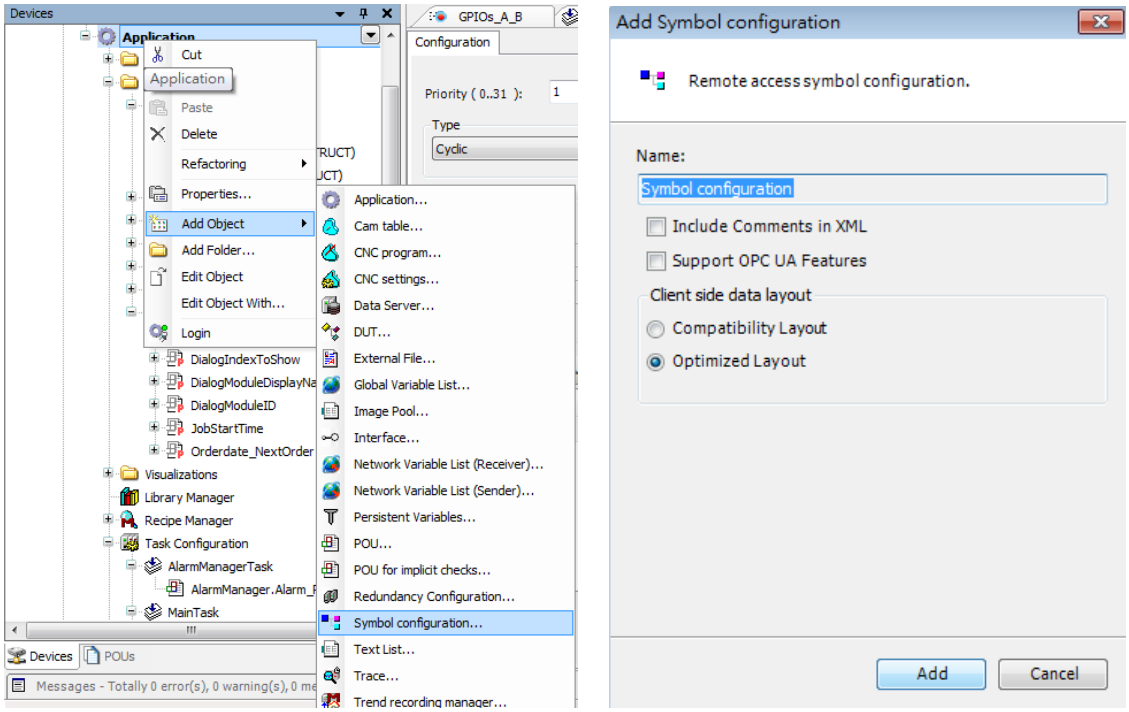


3. Select PLC_RPG and its tag information is shown, build the project.
   [build] -> **[Generate Code]**

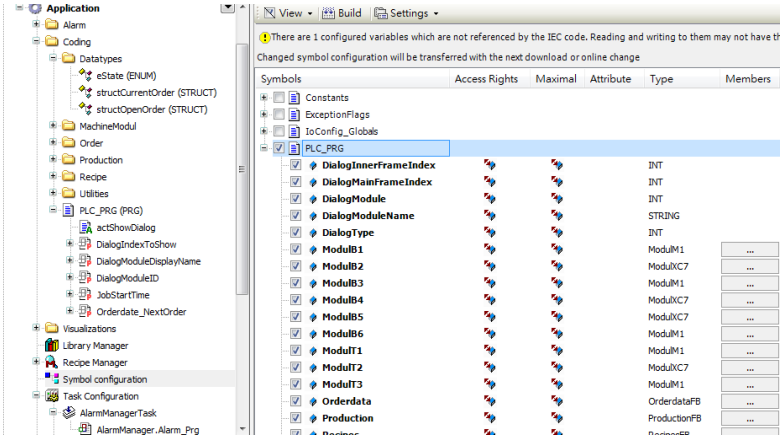


4. A *.xml file is generated in the directory of the project.

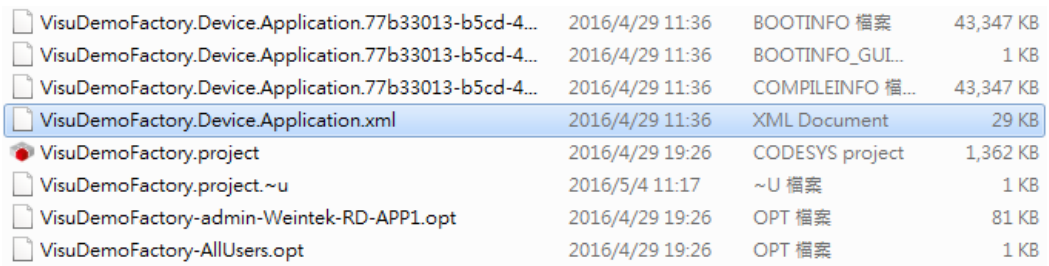


5. In System Parameter Settings click **[New]** to add CoDeSys V3 (Ethernet) driver into the device list and then click **[Tag Manager]**.

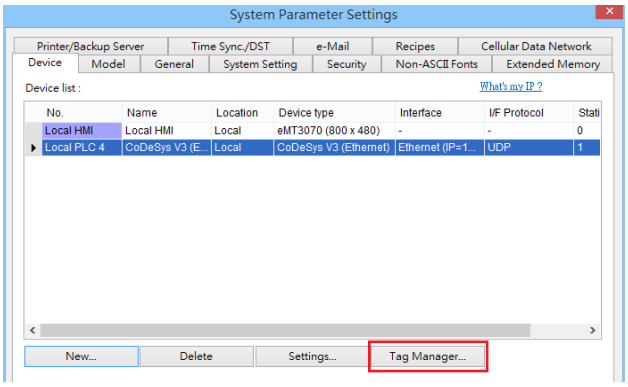

6. In Tag Manager click **Get tag** -> **Import Tag**, and then select the tag file (.xml) generated by the PLC software.

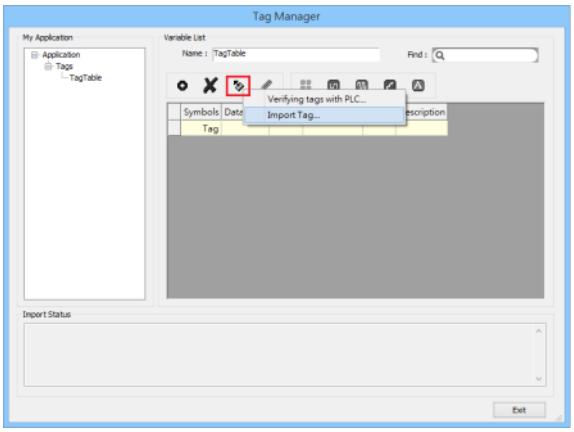


7. When the tags are imported successfully, click **[Exit]** to leave.

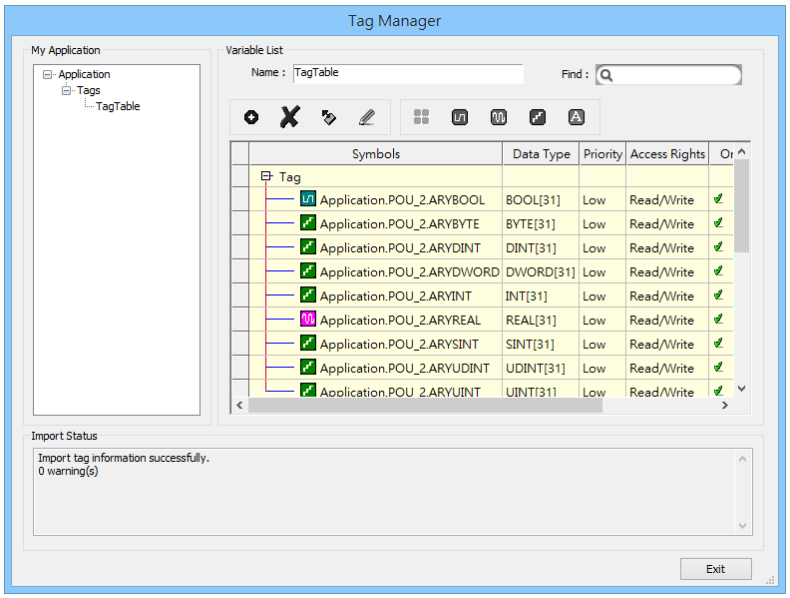

Wiring Diagram:

Diagram 1

Ethernet cable:

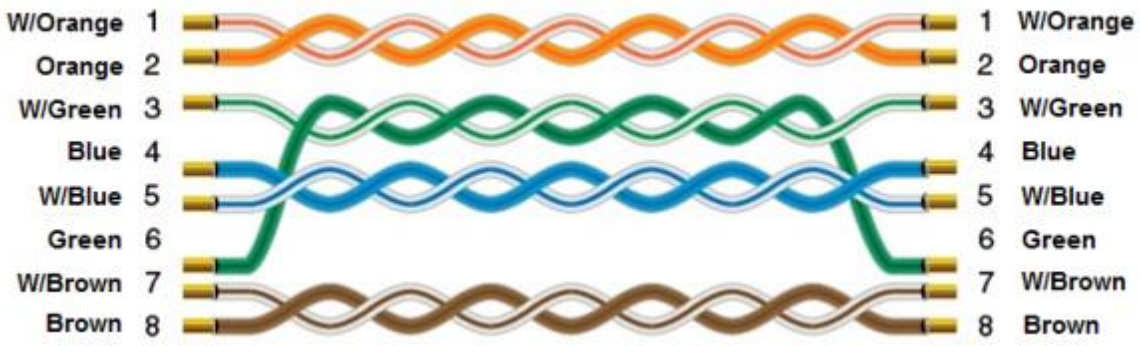

Control Technology 2500 Series

Supported Series: CTI 2500 Series PLCs (Classic and Compact): C100, C200, C300 and C400.
Website: http://www.controltechnology.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Control Technology 2500 Series		NITP protocol
PLC I/F	RS232	RS232, rRRS485 4W	
Baud rate	19200	19200	
Data bits	7	7	
Parity	Odd	Odd	
Stop bits	1	1	
PLC sta. no.	0	Does not apply	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CR	DDDDD	1 ~ 65535	Internal Relay
B	X	DDDDD	1 ~ 65535	Discrete Input Coils
B	Y	DDDDD	1 ~ 65535	Discrete Output Coils
B	V_Bit	DDDDDdd	101 ~ 6553616	User Data Register Bits
W	V	DDDDD	1 ~ 65535	User Data Registers
DW	VD	DDDDD	1 ~ 65536	User Data Registers (32bit)
W	STW	DDDDD	1 ~ 65535	Status Word Registers
W	TCP	DDDDD	1 ~ 65535	Timer/Counter Preset Values
W	TCC	DDDDD	1 ~ 65535	Timer/Counter Current Values
W	WX	DDDDD	1 ~ 65535	Word Discrete Inputs
W	WY	DDDDD	1 ~ 65535	Word Discrete Outputs

Wiring Diagram:

RS232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	3 TX
Tx	3	⟷	2 RX
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	3 TX
Tx	6	⟷	2 RX
GND	5	⟷	5 GND

RS485 4W 9P D-Sub (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 9P D-Sub Male
Rx-	1	⟷	8
Rx+	2	⟷	3
Tx-	3	⟷	2
TX+	4	⟷	9
GND	5		5

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 9P D-Sub Male
Rx-	7	⟷	8
Rx+	6	⟷	3
Tx-	9	⟷	2
TX+	8	⟷	9
GND	5		5

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 9P D-Sub Male
Rx-	1	⟷	8
Rx+	2	⟷	3
Tx-	3	⟷	2
TX+	4	⟷	9
GND	5		5

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 9P D-Sub Male
Rx-	1	⟷	8
Rx+	2	⟷	3
Tx-	3	⟷	2
TX+	4	⟷	9
GND	5		5

Control Technology 2500 Series (Ethernet)

Supported Series: CTI 2500 Series PLCs (Classic and Compact): C100, C200, C300 and C400

Website: http://www.controltechnology.com/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Control Technology 2500 Series (Ethernet)		
PLC I/F	Ethernet		
Port no.	1505		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CR	DDDDD	1 ~ 65536	Internal Relay
B	X	DDDDD	1 ~ 65536	Discrete Input Coils
B	Y	DDDDD	1 ~ 65536	Discrete Output Coils
B	V_Bit	DDDDDdd	101 ~ 6553616	User Data Register Bits
W	V	DDDDD	1 ~ 65536	User Data Registers
DW	VD	DDDDD	1 ~ 65535	User Data Registers (32bit)
W	STW	DDDDD	1 ~ 65536	Status Word Registers
W	TCP	DDDDD	1 ~ 65536	Timer/Counter Preset Values
W	TCC	DDDDD	1 ~ 65536	Timer/Counter Current
W	WX	DDDDD	1 ~ 65536	Word Discrete Inputs
W	WY	DDDDD	1 ~ 65536	Word Discrete Outputs

Wiring Diagram:

Ethernet cable:

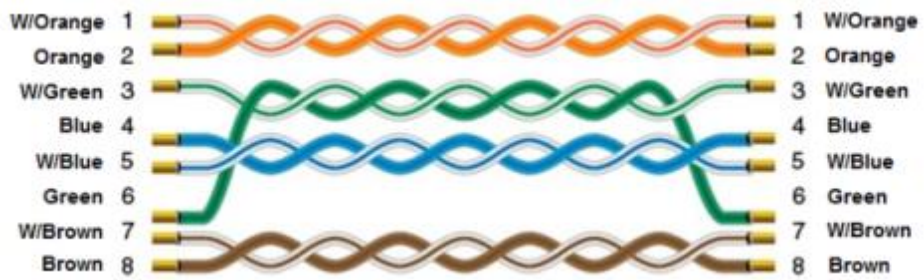

Copley Digital Drives

Supported Series: Digital Servo Driver & Controllers, Xenus, Xenus Micro, Accelnet, Accelnet Micro, Stepnet series.
Website: http://www.copleycontrols.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Copley Digital Drives		
PLC I/F	RS232		
Baud rate	9600	9600~115200	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
HMI sta. no.	0		
PLC sta. no.	0	0-127	

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Flash INT 16	HHH	0 ~ 999	For Register is INT16 or U16
W	RAM INT 16	HHH	0 ~ 999	For Register is INT16 or U16
W	Flash INT 32	HHH	0 ~ 999	For Register is INT32 or U32
W	RAM INT 32	HHH	0 ~ 999	For Register is INT32 or U32
W	Register	DDDD	0 ~ 2457	
W	T_command	H	0	
W	Reset	H	0	

Wiring Diagram:

Xenus, Xenus Micro, Accelnet, Stepnet: RS-232 6P RJ11 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P RJ11
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	5 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	3,4 GND

Diagram 2


cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P RJ11
Rx	2	⟷	5 TX
Tx	3	⟷	2 RX
GND	5	⟷	3,4 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P RJ11
Rx	9	⟷	5 TX
Tx	6	⟷	2 RX
GND	5	⟷	3,4 GND

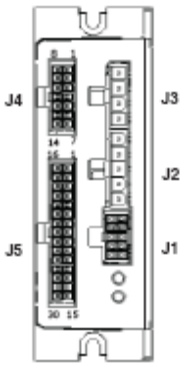

Accelnet Micro: RS-232 J5 Cable Connector (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 J5 Cable Connector
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	29 TX
Tx	3	7	⟷	14 RX
GND	5	5	⟷	15 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 J5 Cable Connector
Rx	2	⟷	29 TX
Tx	3	⟷	14 RX
GND	5	⟷	15 GND

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 J5 Cable Connector
Rx	9	⟷	29 TX
Tx	6	⟷	14 RX
GND	5	⟷	15 GND

CO-TRUST CTH300-H (Ethernet)

Supported Series: CO-TRUST CTH300-H35

Website: http://www.co-trust.com/cn/index.php

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CO-TRUST CTH300-H (Ethernet)		Use UDP
PLC I/F	Ethernet		
Port no.	1024		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
B	S	DDDDo	0 ~ 40957	SCR
B	SM	DDDDo	0 ~ 40957	Special Memory
B	T_Bit	DDDD	0 ~ 1023	Timer
B	C_Bit	DDDD	0 ~ 1023	Counter
B	DBnBit	FFFDDDDDo	0 ~ 255655357	
Byte	VB	DDDDD	0 ~ 10239	
W	VW	DDDDD	0 ~ 10239	V Memory
W	VW_Odd	DDDDD	0 ~ 10239	V Memory
W	VW_String	DDDDD	0 ~ 10239	String
W	VW_String_Odd	DDDDD	0 ~ 10239	String
DW	VD	DDDDD	0 ~ 10239	V Memory Double
DW	VD_Odd	DDDDD	0 ~ 10239	V Memory Double
DW	VD_String	DDDDD	0 ~ 10239	String
DW	VD_String_Odd	DDDDD	0 ~ 10239	String
Byte	MB	DDDDD	0 ~ 10239	Byte Memory
W	MW	DDDDD	0 ~ 10239	Word Memory
W	MW_Odd	DDDDD	0 ~ 10239	Word Memory
DW	MD	DDDDD	0 ~ 10239	Word Memory


Bit/Word	Device type	Format	Range	Memo
Byte	SB	DDDDD	0 ~ 10239	SCR
W	SW	DDDDD	0 ~ 10239	SCR
DW	SD	DDDDD	0 ~ 10239	SCR
Byte	SMB	DDDDD	0 ~ 10239	Special Memory
W	SMW	DDDDD	0 ~ 10239	Special Memory
DW	SMD	DDDDD	0 ~ 10239	Special Memory
W	T	DDD	0 ~ 1023	Timer
W	C	DDD	0 ~ 1023	Counter
Byte	DBBn	FFFDDDDD	0 ~ 65535	
W	DBn	FFFDDDDD	0 ~ 65535	
DW	DBDn	FFFDDDDD	0 ~ 65535	
D	DBn_STRINGCHAR	FFFDDDDD	0 ~ 65535	

- Double Word and floating point value must use VD device type.

Wiring Diagram:

Diagram 1

Ethernet cable:

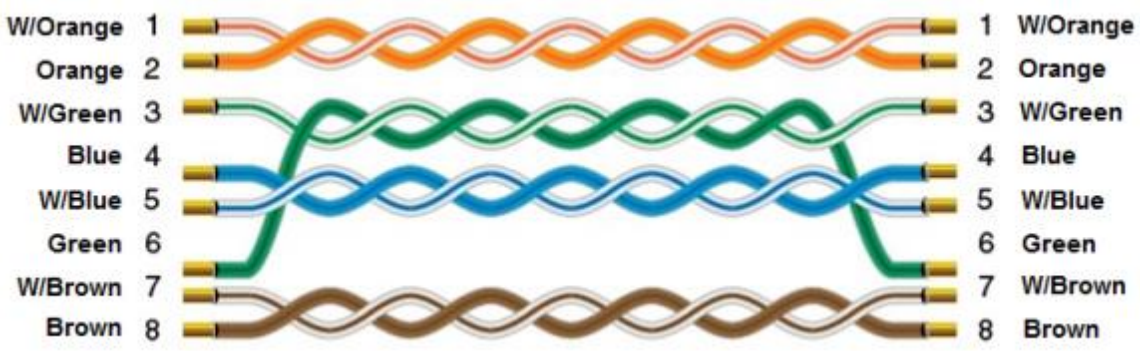

CO-TRUST CTH300-H PPI

Supported Series: CO-TRUST CTH300-H35
Website: http://www.co-trust.com/cn/index.php

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CO-TRUST CTH300-H PPI		
PLC I/F	RS485 2W	RS485 2W	
Baud rate	9600	9600, 19200, 187.5K	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
Turn around delay	5		
ACK delay time (ms)	30		
PLC sta. no.	2	1 ~ 126	

Online simulator	YES	**Extend address mode**	YES
Broadcast	NO		

PLC Setting:

PLC setting	PLC sta. no. can not be the same as HMI sta. no.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
B	S	DDDDo	0 ~ 40957	SCR
B	SM	DDDDo	0 ~ 40957	Special Memory
B	T_Bit	DDDD	0 ~ 1023	Timer
B	C_Bit	DDDD	0 ~ 1023	Counter
B	DBnBit	FFFDDDDDo	0 ~ 255655357	
Byte	VB	DDDDD	0 ~ 10239	

Bit/Word	Device type	Format	Range	Memo
W	VW	DDDDD	0 ~ 10239	V Memory
W	VW_Odd	DDDDD	0 ~ 10239	V Memory
W	VW_String	DDDDD	0 ~ 10239	String
W	VW_String_Odd	DDDDD	0 ~ 10239	String
DW	VD	DDDDD	0 ~ 10239	V Memory Double
DW	VD_Odd	DDDDD	0 ~ 10239	V Memory Double
DW	VD_String	DDDDD	0 ~ 10239	String
DW	VD_String_Odd	DDDDD	0 ~ 10239	String
Byte	MB	DDDDD	0 ~ 10239	Byte Memory
W	MW	DDDDD	0 ~ 10239	Word Memory
W	MW_Odd	DDDDD	0 ~ 10239	Word Memory
DW	MD	DDDDD	0 ~ 10239	Word Memory
Byte	SB	DDDDD	0 ~ 10239	SCR
W	SW	DDDDD	0 ~ 10239	SCR
DW	SD	DDDDD	0 ~ 10239	SCR
Byte	SMB	DDDDD	0 ~ 10239	Special Memory
W	SMW	DDDDD	0 ~ 10239	Special Memory
DW	SMD	DDDDD	0 ~ 10239	Special Memory
W	T	DDD	0 ~ 1023	Timer
W	C	DDD	0 ~ 1023	Counter
Byte	DBBn	FFFDDDDD	0 ~ 65535	
W	DBn	FFFDDDDD	0 ~ 65535	
DW	DBDn	FFFDDDDD	0 ~ 65535	
D	DBn_STRINGCHAR	FFFDDDDD	0 ~ 65535	


- Double Word and floating point value must use VD device type.

Multi-HMIs-Multi-PLCs Communication Setting:



For S7-200 PLC, Multi-HMIs-Multi-PLCs communication can be achieved using S7/200 PPI driver, please refer to the settings below.

IN EasyBuilder COM Port Settings, two important parameters must be set:

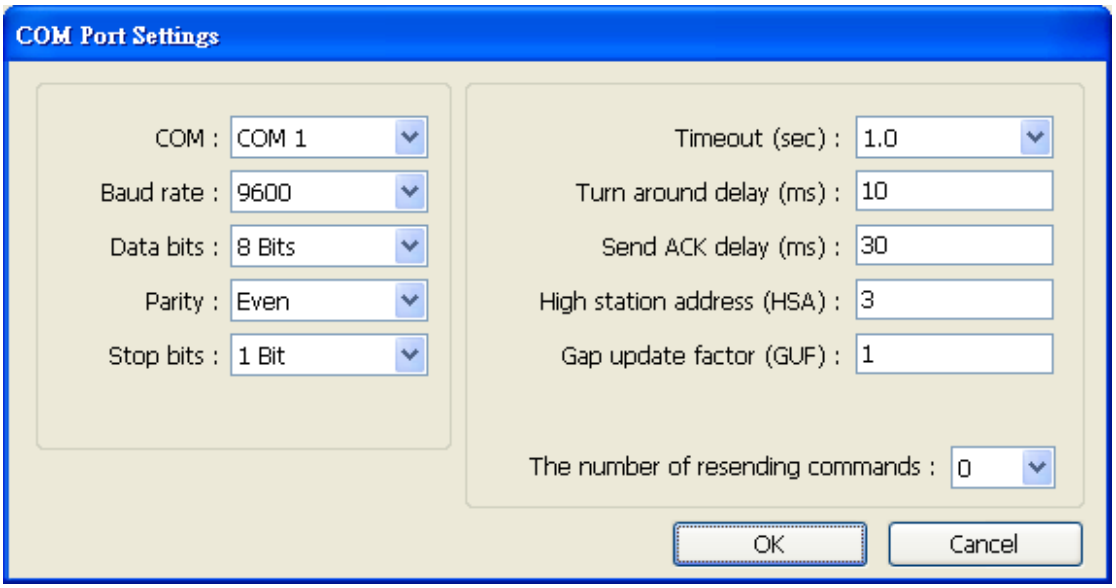


1. [High station address (HSA)]:

Setting Max. Station Number of HMI in PPI network.

For the effectiveness of system operation, it is highly recommended that the HMI station number starts from zero and go on sequentially. If there are 4 HMI in PPI network, set station no. from 0~3, and [High station address (HSA)] to 3.

Set HMI station number in [System Parameters] / [Model] / [HMI station no.]:

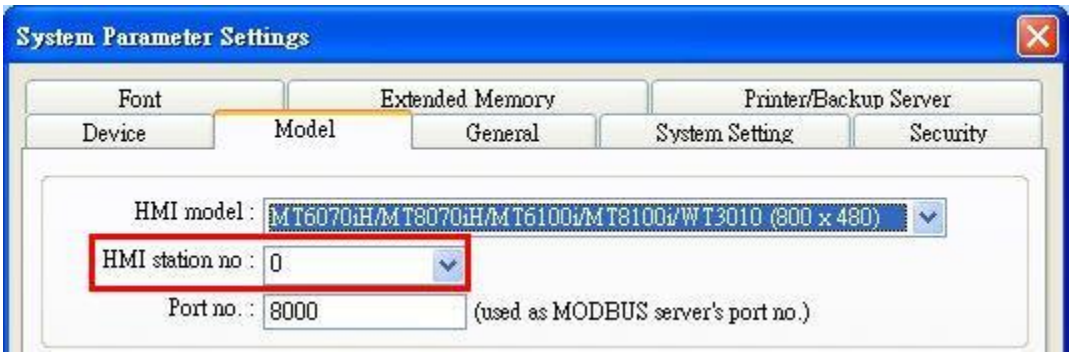

2. [Gap update factor(GUF)]:

The condition to pass a Token. In PPI network only HMI can hold a Token, PLC can only be controlled.

When the HMI that holds Token communicates with PLC for a number of times that equals to the value set here, HMI will pass the Token (control of PLC) to the next HMI. For example, if GUF is set to “1”, HMI will pass the control of PLC to the next HMI when read or write the value in an address.

If GUF is set to a bigger value, the HMI that holds Token will control the PLC for a longer time and therefore the Token won’t be passed to another HMI and cause failure in communicating with PLC.

A complete communication means HMI reads / writes PLC value for one time.

Note:

- HMI sta. no. can not be the same as PLC sta. no.
- Highly recommended that HMI sta. no. starts from 0 and go on sequentially for the effectiveness of operation.
- Available for EasyBuilder8000 V4.50 and later.

Wiring Diagram:

RS-485 2W 9P D-Sub (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8 Data-
Data+	2	9	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8 Data-
Data+	6	1	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	3 Data+
GND	5	9	⟷	5 GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8 Data-
Data+	2	9	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	8 Data-
Data+	2	⟷	3 Data+
GND	5	⟷	5 GND

CROUZET M3 (FBD)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CROUZET M3 (FBD)		
PLC I/F	RS232		
Baud rate	115200		
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

*Support communications between HMI and PLC in pass-through mode

*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DD	1 ~ 99	Input
B	SLI_Bit	DDh	10 ~ 24f	Serial link input
B	SLO_Bit	DDh	250 ~ 48f	Serial link output (read only)
B	State	D	1	State in PLC (read only)
W	AI	DD	1 ~ 99	Analogy input (default: 1 ~ 4)
W	SL_IN	DD	1 ~ 24	Serial link input
W	SL_OUT	DD	25 ~ 48	Serial link output (read only)
W	Time	D	1 ~ 6	Time & Day*
W	Order	D	1	Command** (write only)

* address 1: second, address 2 : minute, address 3 : hour , address 4 : day, address 5 : month, address 6 : year. The value range for “Year” is 0~99, entering “0” represents year 2000, entering “99” represents year 2099.

** run mode write 2, stop mode write 1.

Wiring Diagram:

CROUZET M3: RS-232 9P D-Sub (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1		RS232 9P D-Sub (Extension cable)
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND
RTS	7	⟷	4 DTR

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM1		RS232 9P D-Sub (Extension cable)
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND
0V External Power Supply		⟷	
+5V External Power supply		⟷	4 DTR

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1		RS232 9P D-Sub (Extension cable)
	RS232 9P Female		
Rx	9	⟷	2 TX
Tx	6	⟷	3 RX
GND	5	⟷	5 GND
TX+	4	⟷	4 DTR


Diagram 4

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM1		RS232 9P D-Sub (Extension cable)
	RS232 9P Female		
Rx	9	⟷	2 TX
Tx	6	⟷	3 RX
GND	5	⟷	5 GND
RTS	7	⟷	4 DTR



(3m serial link cable)
Note: Please use 3m serial link cable (Accessories from Millenium 3) and extension cable (as shown) to communicate with HMI series.

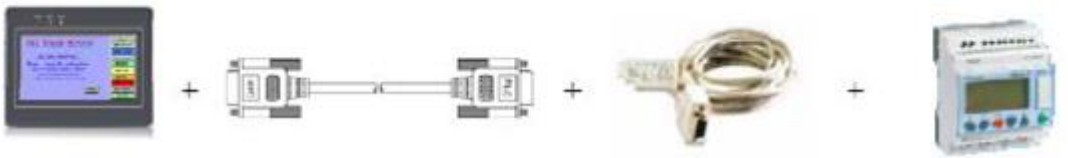

HMI + User's cable + 88970102 + Millenium 3

CROUZET M3 (LAD)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	CROUZET M3 (LAD)		
PLC I/F	RS232		
Baud rate	115200		
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

*Support communications between HMI and PLC in pass-through mode

*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DD	1 ~ 99	Input (default: 1 ~ 4)
B	O	DD	1 ~ 99	Output (default: 1 ~ 4)
B	M	DD	1 ~ 28	Relay
B	SLI_Bit	DDh	10 ~ 24f	Serial link input
B	SLO_Bit	DDh	250 ~ 48f	Serial link output (read only)
B	State	D	1	State in PLC (read only)
W	T	DD	1 ~ 12	Timer
W	C	DD	1 ~ 16	Counter
W	AI	DD	1 ~ 99	Analogy input (default: 1 ~ 4)
W	SL_IN	DD	1 ~ 24	Serial link input
W	SL_OUT	DD	25 ~ 48	Serial link output (read only)
W	Time	D	1 ~ 6	Time & Day *
W	Order	D	1	Command (write only) **

* address 1: second, address 2 : minute, address 3 : hour , address 4 : day, address 5 : month, address 6 : year .The value range for “Year” is 0~99, entering “0” represents year 2000, entering “99” represents year 2099.

** run mode write 2, stop mode write 1.

Wiring Diagram:

CROUZET M3: RS-232 9P D-Sub (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1		RS232 9P D-Sub (Extension cable)
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND
RTS	7	⟷	4 DTR

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM1		RS232 9P D-Sub (Extension cable)
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND
0V External Power Supply		⟷	
+5V External Power supply		⟷	4 DTR

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1		RS232 9P D-Sub (Extension cable)
	RS232 9P Female		
Rx	9	⟷	2 TX
Tx	6	⟷	3 RX
GND	5	⟷	5 GND
TX+	4	⟷	4 DTR


Diagram 4

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM1		RS232 9P D-Sub (Extension cable)
	RS232 9P Female		
Rx	9	⟷	2 TX
Tx	6	⟷	3 RX
GND	5	⟷	5 GND
RTS	7	⟷	4 DTR



(3m serial link cable)
Note: Please use 3m serial link cable (Accessories from Millenium 3) and extension cable (as shown) to communicate with HMI series.

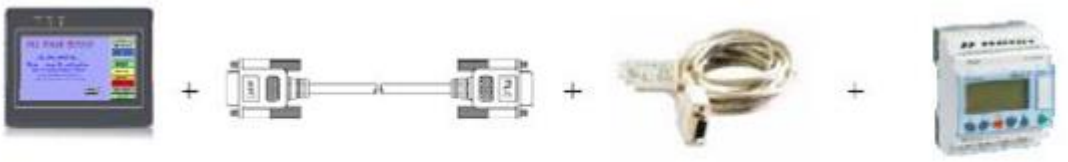

HMI + User's cable + 88970102 + Millenium 3

Danfoss ECL Apex20

Website: http://www.danfoss.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Danfoss ECL Apex20		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Flag	DDDD	0 ~ 8191	
B	Output	DDDD	0 ~ 1023	
B	Input	DDDD	0 ~ 1023	
B	Reg_Bit	DDDDDdd	0 ~ 1638331	dd: Bit no. (00 ~ 31)
DW	Register	DDDDD	0 ~ 16383	
DW	Counter	DDDD	0 ~ 1599	
DW	Timer	DDDD	0 ~ 1599	
DW	Reg_Float	DDDDD	0 ~ 16383	Support 32-bit float format

EasyBuilder device address range may differ from PLC extended mode, please refer to EasyBuilder address range as above.

Wiring Diagram:

ECL Apex20 Controller: RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	5 GND
			⟷	7 RTS
			⟷	8 CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


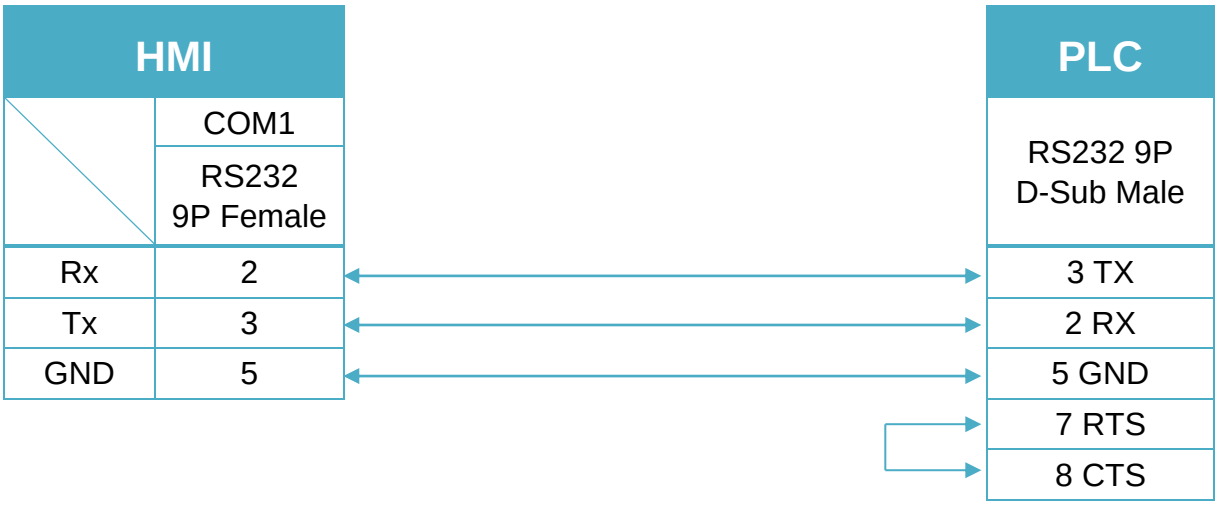


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

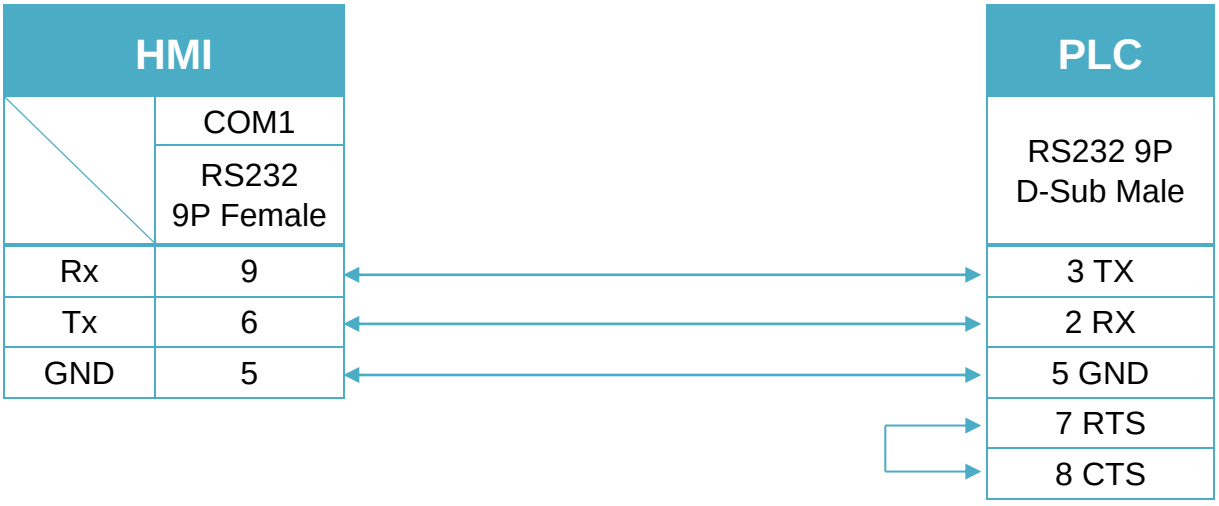

ECL Apex20 Controller: RS-485 2W Terminal (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		ECL Apex20 Controller Port#1 / Port#0
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	11 / 29
Data+	2	9	⟷	12 / 28
GND	5	5	⟷	

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		ECL Apex20 Controller Port#1 / Port#0
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	11 / 29
Data+	6	1	⟷	12 / 28
GND	5	5	⟷	

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		ECL Apex20 Controller Port#1 / Port#0
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	11 / 29
Data+	2	8	⟷	12 / 28
GND	5	9	⟷	

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		ECL Apex20 Controller Port#1 / Port#0
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	11 / 29
Data+	2	9	⟷	12 / 28
GND	5	5	⟷	

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		ECL Apex20 Controller Port#1 / Port#0
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	11 / 29
Data+	2	8	⟷	12 / 28
GND	5	5	⟷	

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		ECL Apex20 Controller Port#1 / Port#0
	RS485 2W 9P Female		
Data-	1	⟷	11 / 29
Data+	2	⟷	12 / 28
GND	5	⟷	

Danfoss ECL Apex20 (Ethernet)

Website: http://www.danfoss.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Danfoss ECL Apex20 (Ethernet)		
PLC I/F	Ethernet		
Port no.	5050		
PLC sta. no.	0		


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Flag	DDDD	0 ~ 8191	
B	Output	DDDD	0 ~ 1023	
B	Input	DDDD	0 ~ 1023	
B	Reg_Bit	DDDDDdd	0 ~ 1638331	dd: Bit no. (00 ~ 31)
W	Register	DDDDD	0 ~ 16383	
W	Counter	DDDD	0 ~ 1599	
W	Timer	DDDD	0 ~ 1599	
W	Reg_Float	DDDDD	0 ~ 16383	Support 32-bit float format

EasyBuilder device address range may differ from PLC extended mode, please refer to EasyBuilder address range as above.

Wiring Diagram:

Ethernet cable:

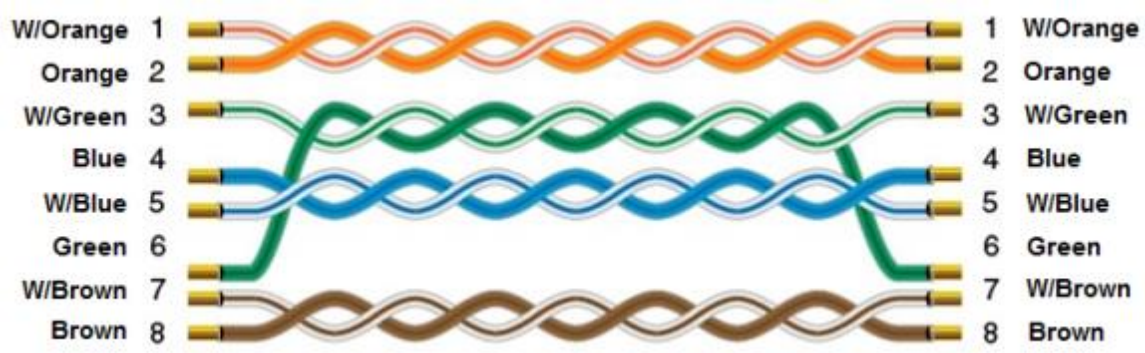

Danfoss FC Series

Supported Series: FC051, FC100, FC200, FC300, VLT Micro Driver.
Website: http://www.danfoss.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Danfoss FC Series		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Wor	Device type		Format	Range	Memo
W	Parameter	09	DDDD	0 ~ 9999	Set Parameter
DW	Reference	10	D	0 ~ 1	Control Bus Reference
DW	Para_Index	11	DDDDDD	0 ~ 999999	Set Parameter(Index)

Para_Index 310.1=31001, Para_Index310.0=31000

Wiring Diagram:

RS-485 2W Terminal (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		FC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	69 Data-
Data+	2	9	⟷	68 Data+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		FC RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	69 Data-
Data+	6	1	⟷	68 Data+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		FC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	69 Data-
Data+	2	8	⟷	68 Data+
GND	5	9	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		FC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	69 Data-
Data+	2	9	⟷	68 Data+
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		FC RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	69 Data-
Data+	2	8	⟷	68 Data+
GND	5	5	⟷	

Diagram 6

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM2 RS485 2W 9P Female		FC RS485 2W Terminal
Data-	1	⟷	69 Data-
Data+	2	⟷	68 Data+
GND	5	⟷	

*RW100 set PCD1 Control Word of station 1
*RW101 read PCD1 Status Word of station 1
*RW102 set PCD2 Control Word of station 2
*RW103 read PCD2 Status Word of station 2
*RW104 set PCD3 Control Word of station 3
*RW105 read PCD3 Status Word of station 3
*RW106 set PCD4 Control Word of station 4
*RW107 read PCD4 Status Word of station 4

Danfoss VLT2800 Series

Supported Series: VLT2800 series
Website: http://www.danfoss.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Danfoss VLT2800 Series		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1	0-126	According to PLC

PLC Setting:

Communication mode	9600, Even, 8, 1 (default)

Device Address:

Bit/Word	Device type	Format	Range	Memo
DW	Parameter	DDDD	0 ~ 2000	Set Parameter
W	Reference	D	0 ~ 1	Control Bus Reference

The control word register is set according to the station number.
If the station number is 1, the control word will be RW100 and RW101; if the station number is 2, the control word will be RW102 and RW103, and so on.

Wiring Diagram:

RS-485 2W Terminal (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	69 Data-
Data+	2	9	⟷	68 Data+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	69 Data-
Data+	6	1	⟷	68 Data+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	69 Data-
Data+	2	8	⟷	68 Data+
GND	5	9	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	69 Data-
Data+	2	9	⟷	68 Data+
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	↔	69 Data-
Data+	2	8	↔	68 Data+
GND	5	5	↔	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	↔	69 Data-
Data+	2	↔	68 Data+
GND	5	↔	

DELTA DVP

Supported Series: DELTA DVP series
Website: http://www.deltadriver.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	DELTA DVP		
PLC I/F	RS232	RS232, RS485	
Baud rate	9600	9600, 19200	
Data bits	7	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	0-255	

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOOOO	0 ~ 23417 (octal)	Input
B	Y	OOOOO	0 ~ 23417 (octal)	Output
B	M	DDDDD	0 ~ 65536	Auxiliary Relay
B	S	DDDD	0 ~ 9999	Step Relay
B	T	DDDD	0 ~ 9999	Timer
B	C	DDDD	0 ~ 9999	Counter
B	TV_Bit	DDDDdd	0 ~ 999915	Timer
W	TV	DDDD	0 ~ 9999	Timer
W	CV	DDD	0 ~ 127	Counter
W	CV2	DDD	200 ~ 254	Double Word Counter
W	D	DDDD	0 ~ 9999	Data Register

Wiring Diagram:

The following is the view from the soldering point of a connector.



RS-232 8P Mini-DIN (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P Mini-Din Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	5 TX
Tx	3	7	⟷	4 RX
GND	5	5	⟷	3/8 GND

Diagram 2


cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-Din Male
Rx	2	⟷	5 TX
Tx	3	⟷	4 RX
GND	5	⟷	3/8 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-Din Male
Rx	9	⟷	5 TX
Tx	6	⟷	4 RX
GND	5	⟷	3/8 GND



RS-485 2W (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Port
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Port
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2 Data-
Data+	6	1	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Port
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2 Data-
Data+	2	8	⟷	1 Data+
GND	5	9	⟷	3 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Port
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Port
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2 Data-
Data+	2	8	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W Port
	RS485 2W 9P Female		
Data-	1	⟷	2 Data-
Data+	2	⟷	1 Data+
GND	5	⟷	3 GND

DELTA DVPEN01-SL (Ethernet)

Website: http://www.deltadriver.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	DELTA DVPEN01-SL (Ethernet)		
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.	0		


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	C_Bit	DDD	0 ~ 255	
B	M	DDDD	0 ~ 4095	
B	S	DDDD	0 ~ 1023	
B	T_Bit	DDD	0 ~ 255	
B	X	OOO	0 ~ 571	
B	Y	OOO	0 ~ 571	
W	C	DDD	0 ~ 199	
DW	C_32Bit	DDD	200 ~ 255	
W	D	DDDDD	0 ~ 11999	
W	T	DDD	0 ~ 255	

PLC Setting:


1. Communication Setting

Add a new program, click **File** > **New**, enter the **Program Title** and **File Name**, and select the correct controller type. Click **Setting** to configure the communication parameters. Click **OK** to confirm the setting. The communication with PLC starts.

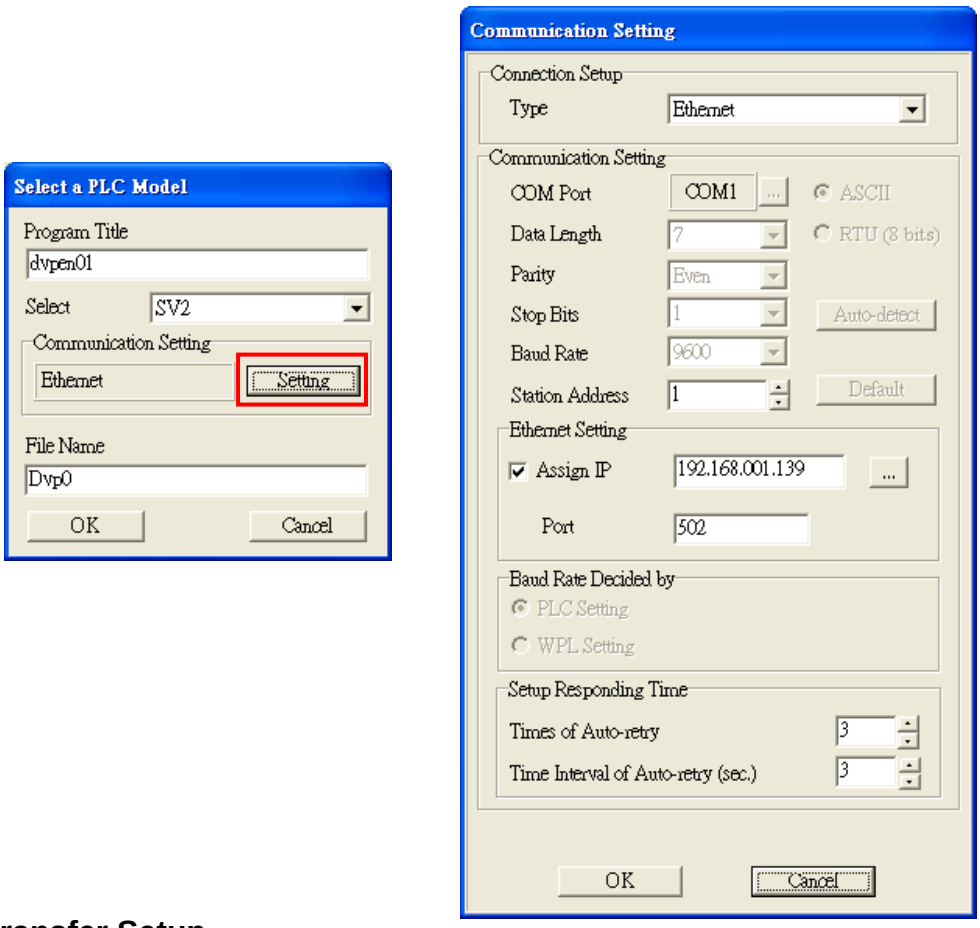


2. Transfer Setup

Click **Communication** and select **PC<=>(PLC | HPP)**, on **Transfer Setup** dialog box, select the needed parameters for upload or download, and click **OK** to start the action.

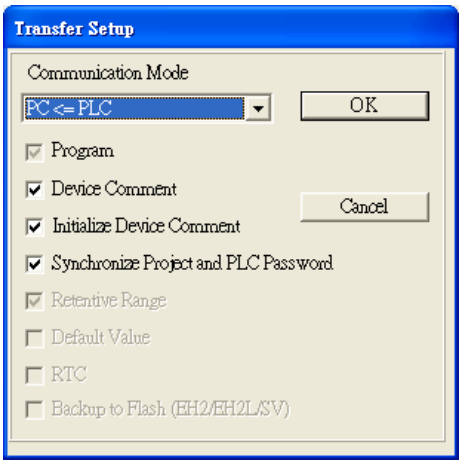

3. Auto-Search Ethernet Module


Click **Auto-Search Ethernet Module** to find the PLC modules on the same network. As shown in the following figure, DVPEN01-SL, IP address 192.168.1.139 is found.

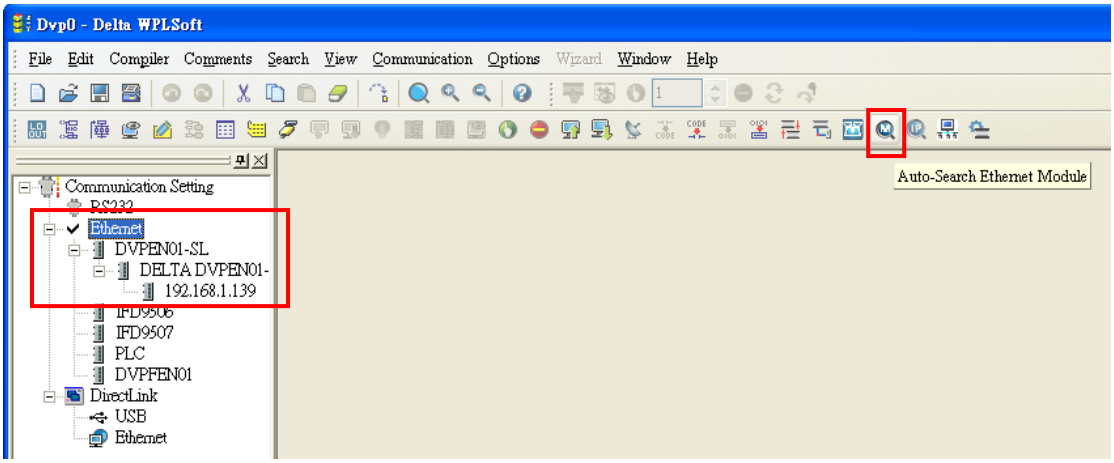

Wiring Diagram:

Diagram 1

Ethernet cable:

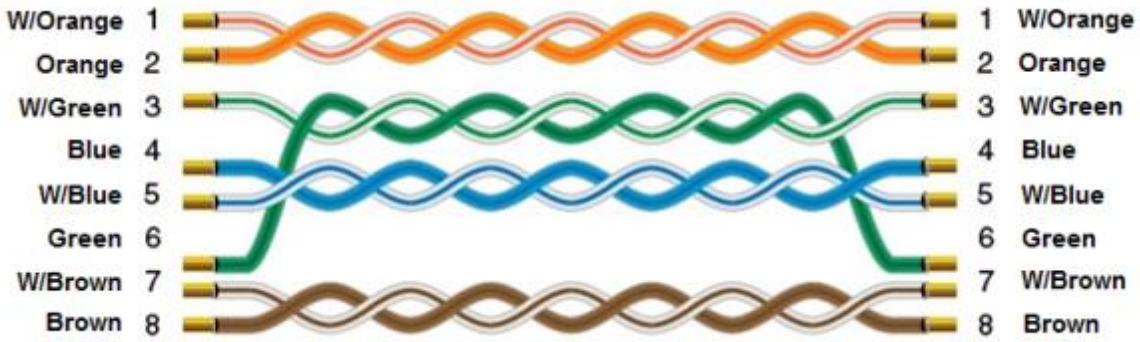

DELTA Ethernet/IP (AS Series)

Supported Series: Delta AS332T
Website: http://www.deltadriver.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	DELTA Ethernet/IP (AS Series)		
PLC I/F	Ethernet		
Port no.	44818		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X_Bit	DDdd	0 ~ 6315	
B	Y_Bit	DDdd	0 ~ 6315	
B	D_Bit	DDDDDdd	0 ~ 2999915	
B	M	DDDD	0 ~ 8191	
B	S	DDDD	0 ~ 2047	
B	T_Flag	DDD	0 ~ 511	
B	C_Flag	DDD	0 ~ 511	
B	HC_Flag	DDD	0 ~ 255	
B	SM	DDDD	0 ~ 4095	
W	X	DD	0 ~ 63	
W	Y	DD	0 ~ 63	
W	D	DDDDD	0 ~ 29999	
W	T	DDD	0 ~ 511	
W	C	DDD	0 ~ 511	
DW	HC	DDD	0 ~ 255	
W	SR	DDD	0 ~ 2047	
W	E	D	0 ~ 8	

Wiring Diagram:

Ethernet cable

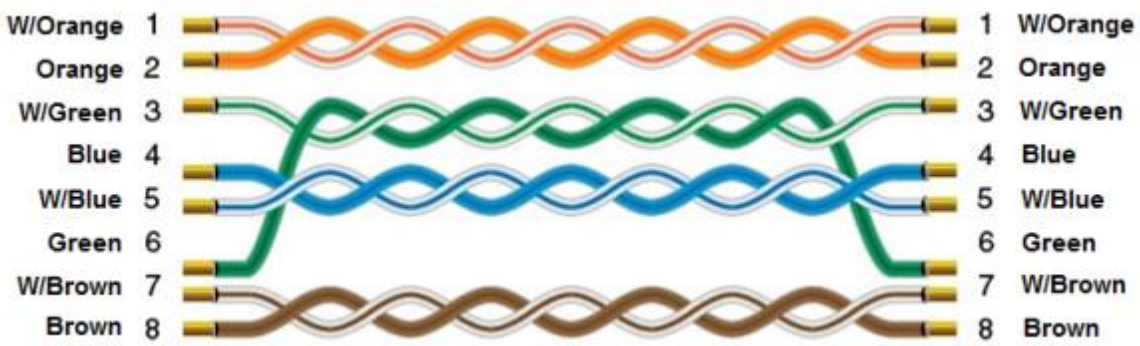

DL-BCM Server

Website: http://www.hzdelin.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	DL-BCM Server		
PLC I/F	RS232	RS232, RS485	
Baud rate	9600	9600~115200	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0	0-31	

Device Address:


Bit/Word	Device type	Format	Range	Memo
B	LB	dddd	0 ~ 9998	
W	LW	dddd	0 ~ 9998	
W	RW	ddddd	0 ~ 55536	

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1


cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

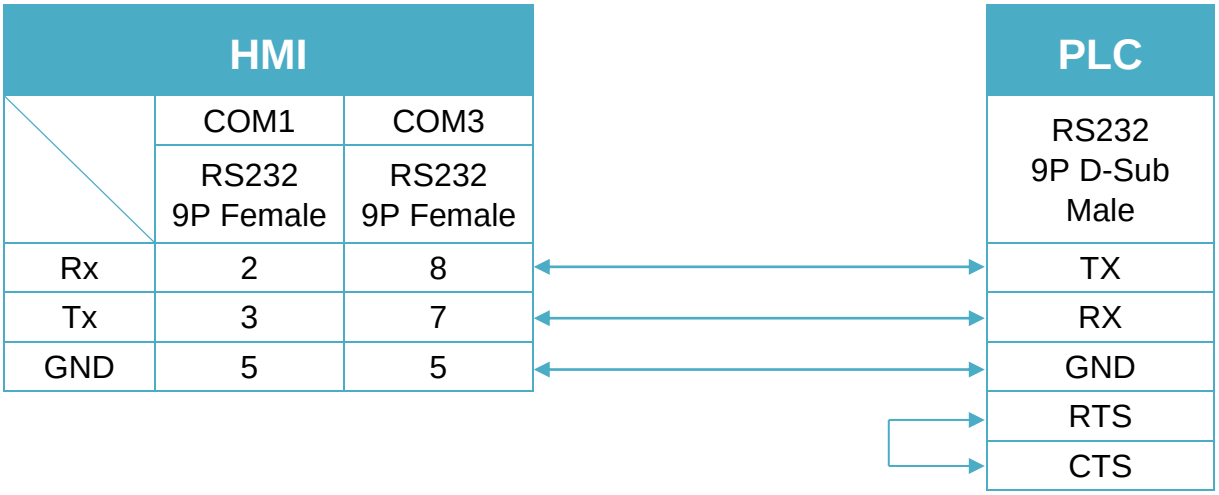

HMI			PLC
	COM1	COM3	RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female	
Rx	2	8	TX
Tx	3	7	RX
GND	5	5	GND
			RTS
			CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

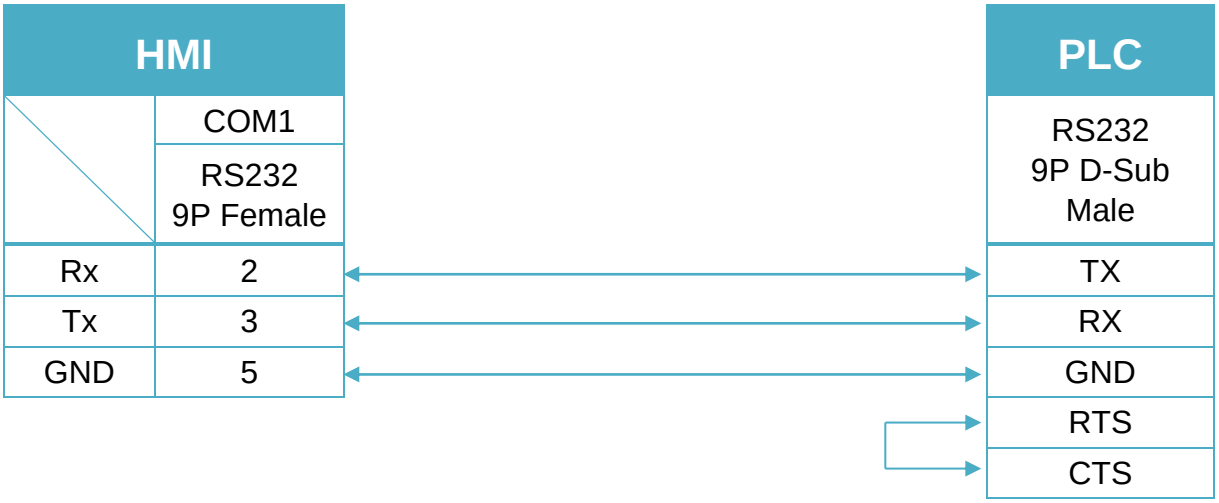

HMI		PLC
	COM1	RS232 9P D-Sub Male
	RS232 9P Female	
Rx	2	TX
Tx	3	RX
GND	5	GND
		RTS
		CTS

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	9	TX
Tx	6	RX
GND	5	GND
		RTS
		CTS

RS-485 2W 9P D-Sub (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI			PLC
	COM1 RS485 2W 9P Male	COM3 RS485 2W 9P Male	RS485 2W 9P D-Sub Male
Data-	1	6	8 Data-
Data+	2	9	3 Data+
GND	5	5	5 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8 Data-
Data+	6	1	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	3 Data+
GND	5	9	⟷	5 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8 Data-
Data+	2	9	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	3 Data+
GND	5	5	⟷	5 GND

Diagram 9

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM2 RS485 2W 9P Female		RS485 2W 9P D-Sub Male
Data-	1	↔	8 Data-
Data+	2	↔	3 Data+
GND	5	↔	5 GND

DL/T645 CHUANG HONG

Website: http://www.cw180.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	DL/T645 CHUANG HONG		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	B621	D	0 ~ 1	
W	B622	D	0 ~ 1	
W	B623	D	0 ~ 1	
W	zero phase	D	0 ~ 1	
W	B611	D	0 ~ 1	
W	B612	D	0 ~ 1	
W	B613	D	0 ~ 1	
W	B631	D	0 ~ 1	
W	B632	D	0 ~ 1	
W	B633	D	0 ~ 1	
W	B630	D	0 ~ 1	
W	B641	D	0 ~ 1	
W	B642	D	0 ~ 1	
W	B643	D	0 ~ 1	
W	B640	D	0 ~ 1	
W	A-apparentT	D	0 ~ 1	
W	B-apparentT	D	0 ~ 1	
W	C-apparentT	D	0 ~ 1	
W	T-apparentT	D	0 ~ 1	
W	B650	D	0 ~ 1	
W	B651	D	0 ~ 1	
W	B652	D	0 ~ 1	

Bit/Word	Device type	Format	Range	Memo
W	B653	D	0 ~ 1	
W	9010	D	0 ~ 1	
W	9020	D	0 ~ 1	
W	9110	D	0 ~ 1	
W	9120	D	0 ~ 1	
W	9130	D	0 ~ 1	
W	9140	D	0 ~ 1	
W	9150	D	0 ~ 1	
W	9160	D	0 ~ 1	
W	9410	D	0 ~ 1	
W	9420	D	0 ~ 1	
W	9510	D	0 ~ 1	
W	9520	D	0 ~ 1	
W	9530	D	0 ~ 1	
W	9540	D	0 ~ 1	
W	9550	D	0 ~ 1	
W	9560	D	0 ~ 1	
W	9810	D	0 ~ 1	
W	9820	D	0 ~ 1	
W	9910	D	0 ~ 1	
W	9920	D	0 ~ 1	
W	9930	D	0 ~ 1	
W	9940	D	0 ~ 1	
W	9950	D	0 ~ 1	
W	9960	D	0 ~ 1	
W	A010	D	0 ~ 1	
W	A020	D	0 ~ 1	
W	A110	D	0 ~ 1	
W	A120	D	0 ~ 1	
W	A130	D	0 ~ 1	
W	A140	D	0 ~ 1	
W	A150	D	0 ~ 1	
W	A160	D	0 ~ 1	
W	A410	D	0 ~ 1	
W	A420	D	0 ~ 1	
W	A510	D	0 ~ 1	
W	A520	D	0 ~ 1	
W	A530	D	0 ~ 1	
W	A540	D	0 ~ 1	
W	A550	D	0 ~ 1	

Bit/Word	Device type	Format	Range	Memo
W	A560	D	0 ~ 1	
W	A810	D	0 ~ 1	
W	A820	D	0 ~ 1	
W	A910	D	0 ~ 1	
W	A920	D	0 ~ 1	
W	A930	D	0 ~ 1	
W	A940	D	0 ~ 1	
W	A950	D	0 ~ 1	
W	A960	D	0 ~ 1	
W	B010	D	0 ~ 1	
W	B020	D	0 ~ 1	
W	B110	D	0 ~ 1	
W	B120	D	0 ~ 1	
W	B130	D	0 ~ 1	
W	B140	D	0 ~ 1	
W	B150	D	0 ~ 1	
W	B160	D	0 ~ 1	
W	B410	D	0 ~ 1	
W	B420	D	0 ~ 1	
W	B510	D	0 ~ 1	
W	B520	D	0 ~ 1	
W	B530	D	0 ~ 1	
W	B540	D	0 ~ 1	
W	B550	D	0 ~ 1	
W	B560	D	0 ~ 1	
W	B810	D	0 ~ 1	
W	B820	D	0 ~ 1	
W	B910	D	0 ~ 1	
W	B920	D	0 ~ 1	
W	B930	D	0 ~ 1	
W	B940	D	0 ~ 1	
W	B950	D	0 ~ 1	
W	B960	D	0 ~ 1	
W	B210	D	0 ~ 1	
W	B211	D	0 ~ 1	
W	B212	D	0 ~ 1	
W	B213	D	0 ~ 1	
W	B214	D	0 ~ 1	
W	B310	D	0 ~ 1	
W	B311	D	0 ~ 1	

Bit/Word	Device type	Format	Range	Memo
W	B312	D	0 ~ 1	
W	B313	D	0 ~ 1	
W	B320	D	0 ~ 1	
W	B321	D	0 ~ 1	
W	B322	D	0 ~ 1	
W	B323	D	0 ~ 1	
W	B330	D	0 ~ 1	
W	B331	D	0 ~ 1	
W	B332	D	0 ~ 1	
W	B333	D	0 ~ 1	
W	B340	D	0 ~ 1	
W	B341	D	0 ~ 1	
W	B342	D	0 ~ 1	
W	B343	D	0 ~ 1	
W	C010	D	0 ~ 1	
W	C011	D	0 ~ 1	
W	C020	D	0 ~ 1	
W	C021	D	0 ~ 1	
W	C022	D	0 ~ 1	
W	C030	D	0 ~ 1	
W	C031	D	0 ~ 1	
W	C032	D	0 ~ 1	
W	C033	D	0 ~ 1	
W	C034	D	0 ~ 1	
W	C111	D	0 ~ 1	
W	C112	D	0 ~ 1	
W	C113	D	0 ~ 1	
W	C114	D	0 ~ 1	
W	C115	D	0 ~ 1	
W	C116	D	0 ~ 1	
W	C117	D	0 ~ 1	
W	C118	D	0 ~ 1	
W	C119	D	0 ~ 1	
W	C11A	D	0 ~ 1	
W	C211	D	0 ~ 1	
W	C212	D	0 ~ 1	
W	C310	D	0 ~ 1	
W	C311	D	0 ~ 1	
W	C312	D	0 ~ 1	
W	C313	D	0 ~ 1	

Bit/Word	Device type	Format	Range	Memo
W	C314	D	0 ~ 1	
W	C320	D	0 ~ 1	
W	C321	D	0 ~ 1	
W	C322	D	0 ~ 1	
W	C330	D	0 ~ 1	
W	C331	D	0 ~ 1	
W	C332	D	0 ~ 1	
W	C340	D	0 ~ 1	
W	C341	D	0 ~ 1	
W	C342	D	0 ~ 1	
W	C3A0	D	0 ~ 1	
W	C3A1	D	0 ~ 1	
W	C3A2	D	0 ~ 1	
W	C410	D	0 ~ 1	
W	C411	D	0 ~ 1	
W	C41E	D	0 ~ 1	
W	C510	D	0 ~ 1	
W	C511	D	0 ~ 1	
W	B634	D	0 ~ 1	
W	B635	D	0 ~ 1	

Wiring Diagram:

RS-485 2W Terminal (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	13 RS485B1
Data+	2	9	⟷	12 RS485A1
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	13 RS485B1
Data+	6	1	⟷	12 RS485A1
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	13 RS485B1
Data+	2	8	⟷	12 RS485A1
GND	5	9	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	13 RS485B1
Data+	2	9	⟷	12 RS485A1
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	13 RS485B1
Data+	2	8	⟷	12 RS485A1
GND	5	5	⟷	

Diagram 6

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM2 RS485 2W 9P Female		RS485 2W Terminal
Data-	1	⟷	13 RS485B1
Data+	2	⟷	12 RS485A1
GND	5	⟷	

DL/T645 Standard


Website: http://www.cw180.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	DL/T645 Standard		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

PLC Setting:



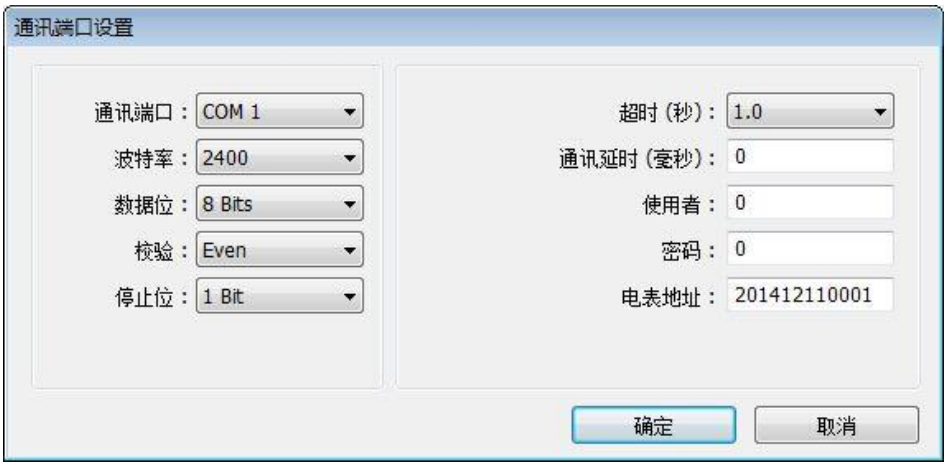

System Tag:

LW-10700 (4 words)	DLT_645 operator (COM 1)
LW-10704 (4 words)	DLT_645 password (COM 1)
LW-10708 (6 words)	DLT_645 address (COM 1)
LW-10715 (4 words)	DLT_645 operator (COM 2)
LW-10719 (4 words)	DLT_645 password (COM 2)
LW-10723 (6 words)	DLT_645 address (COM 2)
LW-10730 (4 words)	DLT_645 operator (COM 3)
LW-10734 (4 words)	DLT_645 password (COM 3)
LW-10738 (6 words)	DLT_645 address (COM 3)

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Data	HHHHHHHH	0 ~ 6FFFFFF	

Wiring Diagram:

RS-485 2W Terminal (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

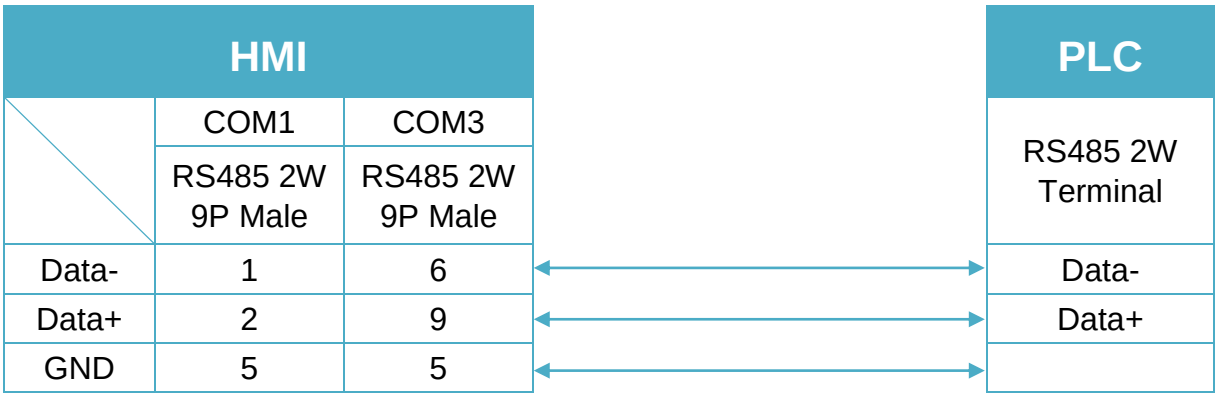


Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	Data-
Data+	6	1	⟷	Data+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	Data-
Data+	2	8	⟷	Data+
GND	5	9	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male	
Data-	1	6	Data-
Data+	2	9	Data+
GND	5	5	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	Data-
Data+	2	8	Data+
GND	5	5	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	RS485 2W Terminal
	RS485 2W 9P Female	
Data-	1	Data-
Data+	2	Data+
GND	5	

DL/T645-2007 Standard


Website: http://www.cw180.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	DL/T645-2007 Standard		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

PLC Setting:



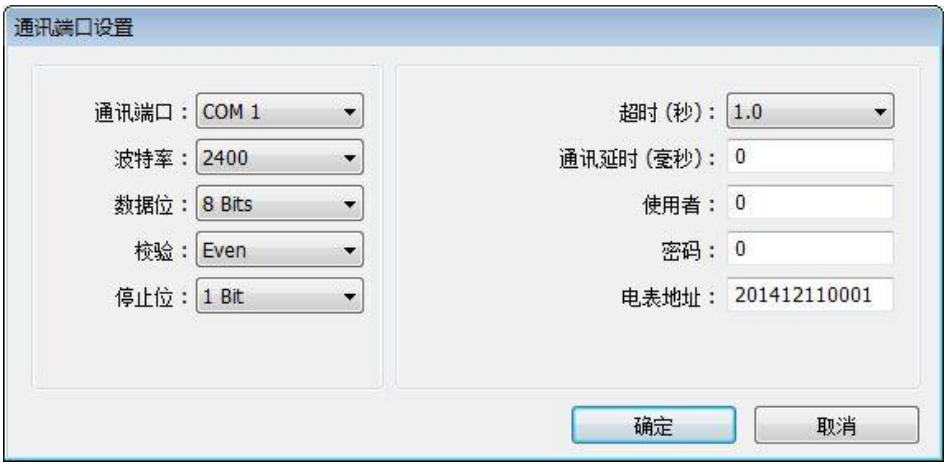

System Tag:

LW-10700 (4 words)	DLT_645 operator (COM 1)
LW-10704 (4 words)	DLT_645 password (COM 1)
LW-10708 (6 words)	DLT_645 address (COM 1)
LW-10715 (4 words)	DLT_645 operator (COM 2)
LW-10719 (4 words)	DLT_645 password (COM 2)
LW-10723 (6 words)	DLT_645 address (COM 2)
LW-10730 (4 words)	DLT_645 operator (COM 3)
LW-10734 (4 words)	DLT_645 password (COM 3)
LW-10738 (6 words)	DLT_645 address (COM 3)

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Data	HHHHHHHH	0 ~ 6FFFFFF	

Wiring Diagram:

RS-485 2W Terminal (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	Data-
Data+	2	9	⟷	Data+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	Data-
Data+	6	1	⟷	Data+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	Data-
Data+	2	8	⟷	Data+
GND	5	9	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male	
Data-	1	6	Data-
Data+	2	9	Data+
GND	5	5	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	Data-
Data+	2	8	Data+
GND	5	5	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	RS485 2W Terminal
	RS485 2W 9P Female	
Data-	1	Data-
Data+	2	Data+
GND	5	

ELSIST MODBUS ASCII

Supported Series: SlimLine & Netsyst controllers RS232/485
Website: http://www.elsist.it

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	ELSIST MODBUS ASCII		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	1	0-255	

PLC Setting:

Communication mode	Modbus ASCII protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	%MX	DDDDD	1 ~ 65535	0x01 read coil 0x05 write single coil
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input register bit (read only)
B	%MW_Bit	DDDDDdd	100 ~ 6553515	0x03 read holding register 0x06 write single register
W	3x	DDDDD	1 ~ 65535	Input register (read only)
W	%MW	DDDDD	1 ~ 65535	0x03 read holding register 0x10 write multiple register
W	6x	DDDDD	1 ~ 65535	

Wiring Diagram:

RS-232 8P RJ45 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		COMx RS232 8P RJ45
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	6 TX
Tx	3	7	⟷	5 RX
GND	5	5	⟷	4 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		COMx RS232 8P RJ45
Rx	2	⟷	6 TX
Tx	3	⟷	5 RX
GND	5	⟷	4 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		COMx RS232 8P RJ45
Rx	9	⟷	6 TX
Tx	6	⟷	5 RX
GND	5	⟷	4 GND



RS-485 2W 3-Way TB (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2 Data-
Data+	6	1	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2 Data-
Data+	2	8	⟷	1 Data+
GND	5	9	⟷	3 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2 Data-
Data+	2	8	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 3-Way TB
	RS485 2W 9P Female		
Data-	1	⟷	2 Data-
Data+	2	⟷	1 Data+
GND	5	⟷	3 GND

ELSIST MODBUS RTU

Supported Series : SlimLine & Netsyst controllers RS232/485
Website : http://www.elsist.it

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	ELSIST MODBUS ASCII		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	1	0-255	

Online simulator	YES	**Broadcast**	YES
Extend address mode	YES		

PLC Setting:

Communication mode	Modbus RTU protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	%MX	DDDDD	0 ~ 65535	0x01 Read coil 0x05 write single coil
B	%MX_Bit	DDDDDdd	0 ~ 6553515	0x03 Read holding register 0x06 write single register
B	%MW	DDDDD	0 ~ 6553515	0x03 Read holding register 0x10 write multiple registers
B	%MWD	DDDDD	0 ~ 6553515	0x03 Read holding register 0x10 write multiple registers

Wiring Diagram:

RS-232 8P RJ45 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		COMx RS232 8P RJ45
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	6 TX
Tx	3	7	⟷	5 RX
GND	5	5	⟷	4 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		COMx RS232 8P RJ45
Rx	2	⟷	6 TX
Tx	3	⟷	5 RX
GND	5	⟷	4 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		COMx RS232 8P RJ45
Rx	9	⟷	6 TX
Tx	6	⟷	5 RX
GND	5	⟷	4 GND



RS-485 2W 3-Way TB (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2 Data-
Data+	6	1	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2 Data-
Data+	2	8	⟷	1 Data+
GND	5	9	⟷	3 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2 Data-
Data+	2	9	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 3-Way TB
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2 Data-
Data+	2	8	⟷	1 Data+
GND	5	5	⟷	3 GND

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 3-Way TB
	RS485 2W 9P Female		
Data-	1	⟷	2 Data-
Data+	2	⟷	1 Data+
GND	5	⟷	3 GND

ELSIST MODBUS TCP/IP

Supported Series: SlimLine & Netsyst controllers Ethernet TCP/IP
Website: http://www.elsist.it

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	ELSIST MODBUS TCP/IP		
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.	1	0~255	

PLC Setting:


Communication mode	Modbus TCP/IP

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	%MX	DDDDD	0 ~ 65535	0x01 Read coil 0x05 write single coil
B	%MW_Bit	DDDDDdd	0 ~ 6553515	0x03 Read holding register 0x06 write single register
W	%MW	DDDDD	0 ~ 65535	0x03 Read holding register 0x10 write multiple registers
DW	%MWD	DDDDD	0 ~ 65535	0x03 Read holding register 0x10 write multiple registers

Wiring Diagram:

Ethernet cable:

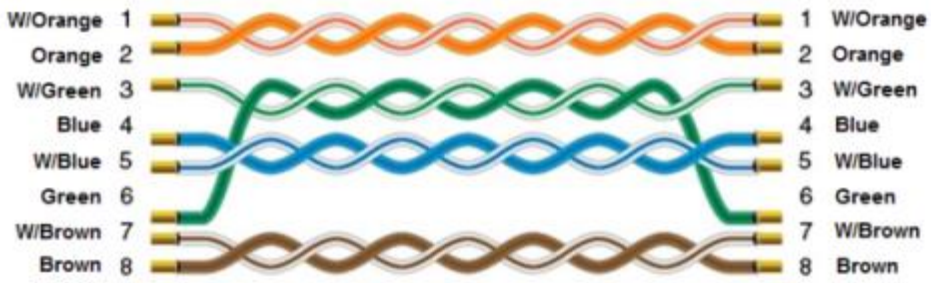

EMERSON Charge Module

Website: http://www.emersonnetworkpower.com.cn/Pages/Default.aspx

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	EMERSON Charge Module		
PLC I/F	RS-232		
Baud rate	9600		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Float_Point_Forced	D	0 ~ 1	
B	Average_Point_Forced	D	0 ~ 1	
W	Switch_Status	D	0 ~ 1	
W	Manual_Status	D	0 ~ 1	
W	Protect_Status	D	0 ~ 1	
W	Failure_Status	D	0 ~ 1	
W	Preset_Voltage	D	0 ~ 1	
W	Preset_Percent	D	0 ~ 1	
W	Output_Voltage	D	0 ~ 1	
W	Output_Current	D	0 ~ 1	
W	High_Limit	D	0 ~ 1	
W	Low_Limit	D	0 ~ 1	
W	Float_Point_Setting	D	0 ~ 1	
W	Average_Point_Setting	D	0 ~ 1	

Wiring Diagram:

RS-232 Terminal (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TX
Tx	3	7	⟷	RX
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	2	⟷	TX
Tx	3	⟷	RX
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***


HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	9	⟷	TX
Tx	6	⟷	RX
GND	5	⟷	GND

EMERSON ControlWave (Ethernet) – Free Tag Names

Supported Series: EMERSON ControlWave MICRO
Website: http://www2.emersonprocess.com/en-US/Pages/Home.aspx

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	EMERSON ControlWave (Ethernet) – Free Tag Names		Use UDP
PLC I/F	Ethernet		
Port no.	1234		
Source port no.	1234		

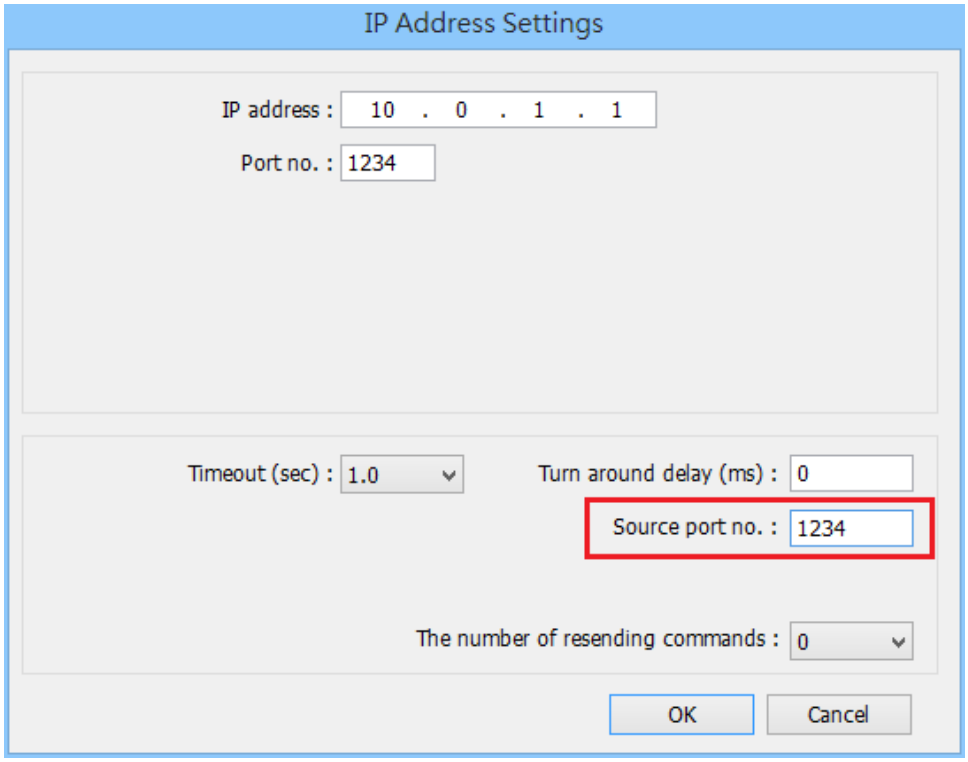


Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit


* For device types: **DWord** / **DINT** / **UDINT** / **Real** , error may occur if the value exceeds 7 digits (million).

PLC Setting:


1. Under **Global Variables** create the tags, a tag name with over 20 words can affect communicaiton, please avoid it.

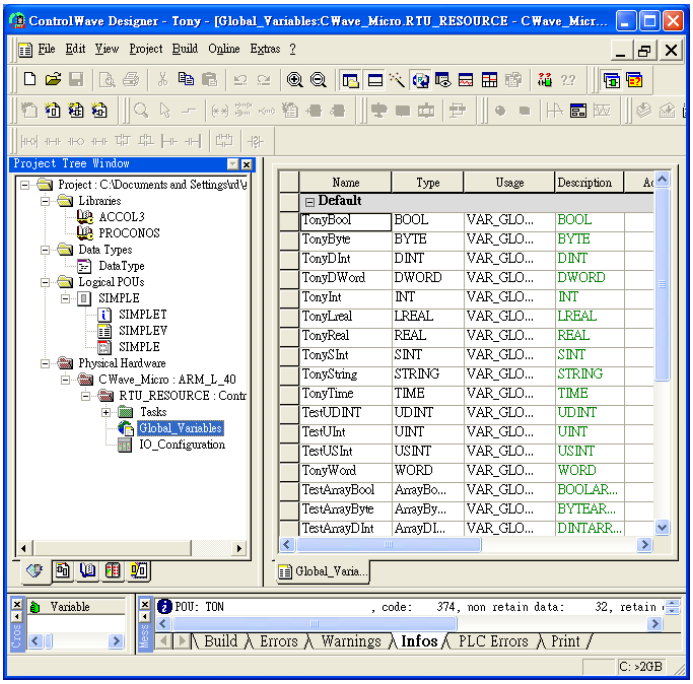


2. Open the program from **Programs** -> **OpenBSI Tool** -> **Common Tools** -> **Signal Extractor**.

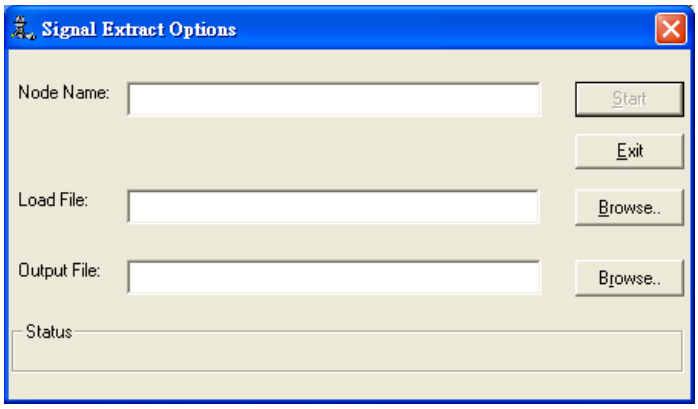

3. Browse for the file name in **Load File** field, and then the **Output File** field will automatically generate the SIG file name. In **IEC-61131 Options** group box, deselect **Datatype conversion enable** and **Output MSD Values** check boxes, and then click **Start** to generate the file for tag import.

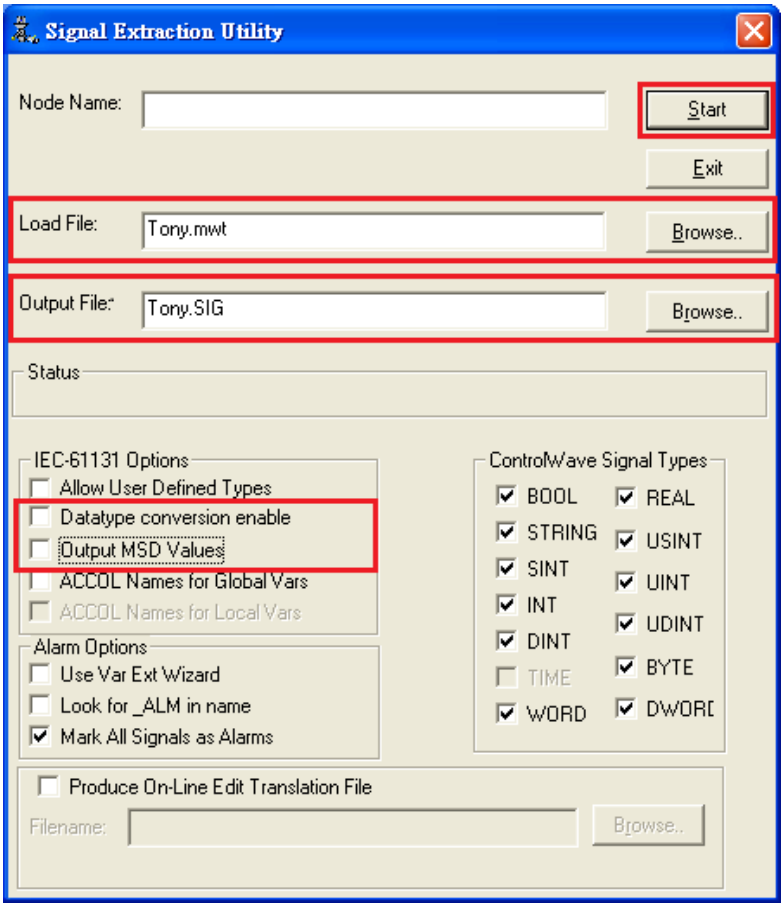

4. Import the tags after adding the driver in EasyBuilder.

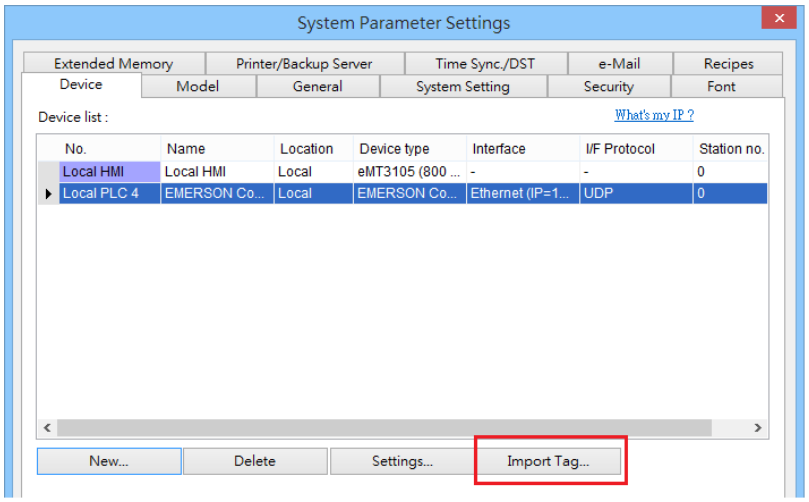

Wiring Diagram:

Diagram 1

Ethernet cable:



EMERSON PLC EC20

Supported Series: Emerson PLC EC20 Series. (Modbus RTU Protocol)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	EMERSON PLC EC20		
PLC I/F	RS232		
Baud rate	9600	9600, 19200, 115200	
Data bits	8	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	0	0-255	

PLC Setting:

Communication mode	Modbus RTU protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Y	OOO	0 ~ 377	0000-02550
B	X	OOO	0 ~ 377	1200-01455 0000-0255
B	M	DDDD	0 ~ 1999	2000-3999
B	SM	DDD	0~ 255	4400-4655
B	S	DDD	0 ~ 991	6000-6991
B	T	DDD	0 ~ 255	8000-8255
B	C	DDD	0 ~ 255	9200-9455
W	D	DDDD	0 ~ 7999	0000-7999
W	SD	DDD	0 ~ 255	8000-8255
W	Z	DD	0 ~ 15	8500-8515
W	T	DDD	0 ~ 255	9000-9255
W	C	DDD	0 ~ 199	9500-9699
DW	C_Double	DDD	200 ~ 255	9700-9811
DW	D_Double	DDDD	0 ~ 7998	0000-7999

Wiring Diagram:

Emerson EC 20 COM1: RS-232 Terminal (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TX
Tx	3	7	⟷	RX
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	2	⟷	TX
Tx	3	⟷	RX
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	9	⟷	TX
Tx	6	⟷	RX
GND	5	⟷	GND

Emotiontek MCU Controller

Supported Series: Emotiontek MCU-XP/XP2 Controller
Website: http://emotiontek.com/sub/index.php

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Emotiontek MCU Controller		
PLC I/F	RS232	RS232/RS485 2W	
Baud rate	38400	9600 ~ 115200	
Data bits	8	7,8	
Parity	None	None,Odd,Even	
Stop bits	1	1,2	
PLC sta. no.	0	0-255	

PLC Setting:

Protocol type	1,4

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X_Bit	Hh	0 ~ 5f	
B	Y_Bit	Hh	0 ~ 4f	
B	F_Bit	Dh	0 ~ 9f	
B	M_Bit	DDDh	0 ~ 199f	
B	T_Bit	Dh	0 ~ 0f	
B	C_Bit	Dh	0 ~ 0f	
W	X	D	0 ~ 5	
W	Y	D	0 ~ 4	
W	F	D	0 ~ 9	
W	M	DDD	0 ~ 199	
W	T	D	0	
W	C	D	0	
W	TP	DD	0 ~ 15	
W	TC	DD	0 ~ 15	
W	CP	DD	0 ~ 15	

Bit/Word	Device type	Format	Range	Memo
W	CC	DD	0 ~ 15	
DW	PD_X	DD	0 ~ 99	
DW	PD_Y	DD	0 ~ 99	
DW	FD	D	0 ~ 9	
DW	DD	D	0 ~ 9	
DW	LD	DDDD	0 ~ 1999	

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	3 TX
Tx	3	2 RX
GND	5	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	9	3 TX
Tx	6	2 RX
GND	5	5 GND

RS-485 2W 9P D-Sub (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI			PLC
	COM1 RS485 2W 9P Male	COM3 RS485 2W 9P Male	RS485 2W 9P D-Sub Male
Data-	1	6	8 Data-
Data+	2	9	7 Data+
GND	5	5	5 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8 Data-
Data+	6	1	⟷	7 Data+
GND	5	5	⟷	5 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8 Data-
Data+	2	8	⟷	7 Data+
GND	5	9	⟷	5 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	
	RS485 2W 9P Male	RS485 2W 9P Male	RS485 2W 9P D-Sub Male
Data-	1	6	8 Data-
Data+	2	9	7 Data+
GND	5	5	5 GND

Diagram 8

MT-iE ***MT8050iE***

MT-iP ***MT6051iP***

HMI			PLC
	COM1	COM3	
	RS485 2W 9P Female	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	7	8 Data-
Data+	2	8	7 Data+
GND	5	5	5 GND

Diagram 9

MT-iP ***MT6071iP / MT8071iP***

HMI		PLC
	COM2	
	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	8 Data-
Data+	2	7 Data+
GND	5	5 GND

FATEK FB/FBs/B1/B1z Series

Supported Series: FATEK FB/FBs/B1/B1z series, FB MC series, and FB MA series need FB-DTBR converter.
Website: http://www.fatek.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	FATEK FB/FBs/B1/B1z Series		
PLC I/F	RS232	RS232/RS485/Ethernet	
Baud rate	9600		
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	1	0-255	Must match PLC port setting.
Port no.	500		Ethernet only.

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDD	0 ~ 9999	Input
B	Y	DDDD	0 ~ 9999	Output
B	M	DDDD	0 ~ 9999	Internal Relay
B	S	DDDD	0 ~ 9999	Step Relay
B	T	DDDD	0 ~ 9999	Timer
B	C	DDDD	0 ~ 9999	Counter
B	PLC_MODE	D	0	PLC mode
B	R_Bit	DDDDdd	0 ~ 999915	
B	D_Bit	DDDDdd	0 ~ 999915	
W	RT	DDDD	0 ~ 9999	Timer Register
W	RC	DDDD	0 ~ 9999	Counter Register
W	R	DDDD	0 ~ 9999	Data Register
W	D	DDDD	0 ~ 9999	Data Register
W	DRT	DDDD	0 ~ 9999	Double Word Timer Register
W	DRC	DDD	200 ~ 255	Double Word Counter Register

Bit/Word	Device type	Format	Range	Memo
W	WX	DDDD	0 ~ 9999	Input Word
W	WY	DDDD	0 ~ 9999	Output Word
W	WM	DDDD	0 ~ 9999	Internal Relay Word
W	WS	DDDD	0 ~ 9999	
W	FR	DDDD	0 ~ 9999	

Wiring Diagram:

The following is the view from the soldering point of a connector.

FBs Port0: RS-232 4P Mini-DIN (Diagram 1 ~ Diagram 3)



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		FBs RS232 4P Mini-Din Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	4 RX
GND	5	5	⟷	2 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		FBs RS232 4P Mini-Din Male
Rx	2	⟷	3 TX
Tx	3	⟷	4 RX
GND	5	⟷	2 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		FBs RS232 4P Mini-Din Male
Rx	9	⟷	3 TX
Tx	6	⟷	4 RX
GND	5	⟷	2 GND

FBs communication module: RS-232 9P D-Sub (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		FBs Communication module RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 TX
Tx	3	7	⟷	3 RX
GND	5	5	⟷	5 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		FBs Communication module RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1		FBs Communication module RS232 9P D-Sub Male
	RS232 9P Female		
Rx	9	⟷	2 TX
Tx	6	⟷	3 RX
GND	5	⟷	5 GND

FBs communication module 3P Terminal Block: RS-485 2W Terminal (Diagram 7 ~ Diagram 12)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		FBs Communication module 3P Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	Data-
Data+	2	9	⟷	Data+
GND	5	5	⟷	

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		FBs Communication module 3P Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	Data-
Data+	6	1	⟷	Data+
GND	5	5	⟷	

Diagram 9

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		FBs Communication module 3P Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	Data-
Data+	2	8	⟷	Data+
GND	5	9	⟷	

Diagram 10

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		FBs Communication module 3P Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	Data-
Data+	2	9	⟷	Data+
GND	5	5	⟷	


Diagram 11

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		FBs Communication module 3P Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	Data-
Data+	2	8	⟷	Data+
GND	5	5	⟷	

Diagram 12

MT-iP	***MT6071iP / MT8071iP***

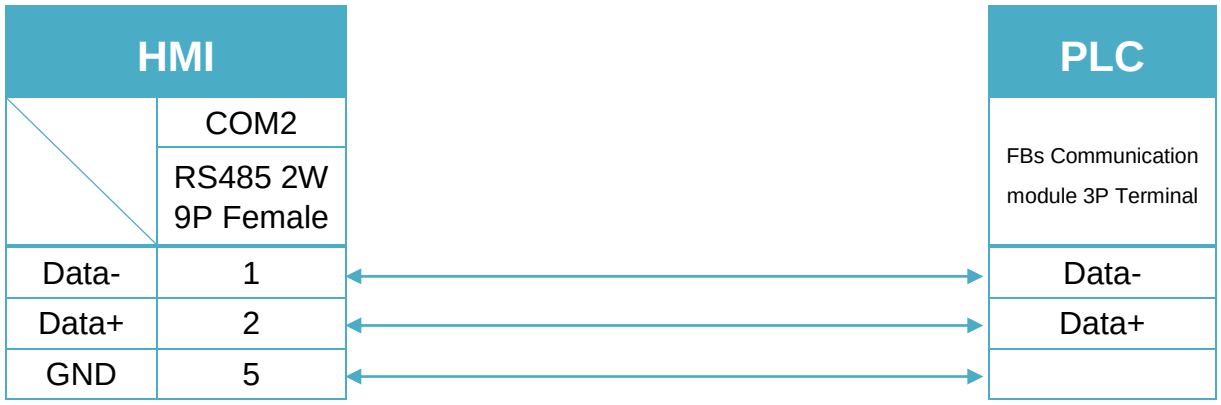

CPU Port: RS-232 15P D-Sub (Diagram 13 ~ Diagram 15)

Diagram 13

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

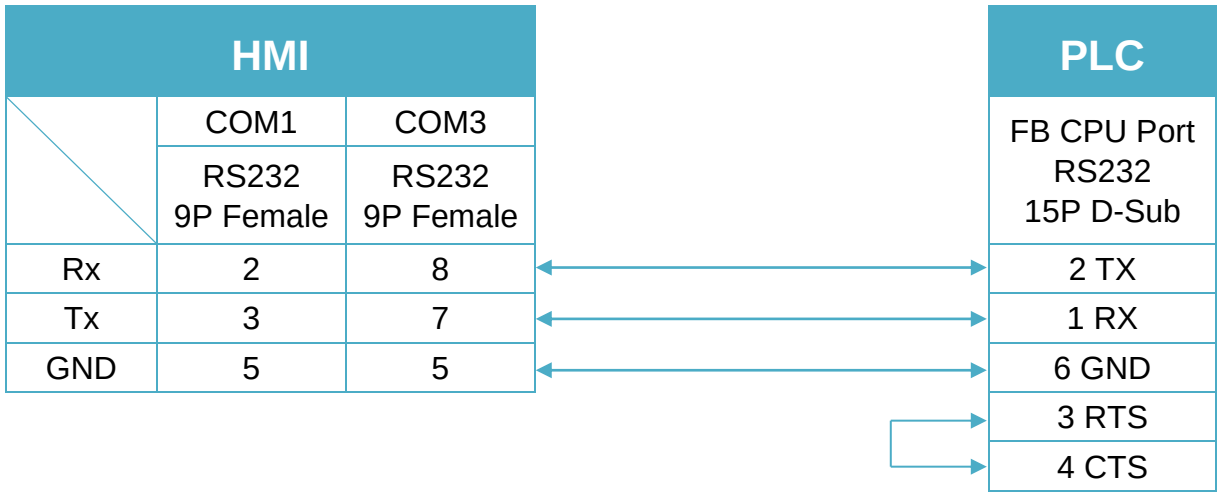


Diagram 14

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	FB CPU Port RS232 15P D-Sub
Rx	2	2 TX
Tx	3	1 RX
GND	5	6 GND
		3 RTS
		4 CTS

Diagram 15

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	FB CPU Port RS232 15P D-Sub
Rx	9	2 TX
Tx	6	1 RX
GND	5	6 GND
		3 RTS
		4 CTS

CPU Port: RS-485 2W 15P D-Sub (Diagram 16 ~ Diagram 21)

Diagram 16

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		FB CPU Port RS485 2W 15P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	7 Data-
Data+	2	9	⟷	5 Data+
GND	5	5	⟷	

Diagram 17

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		FB CPU Port RS485 2W 15P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	7 Data-
Data+	6	1	⟷	5 Data+
GND	5	5	⟷	

Diagram 18

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		FB CPU Port RS485 2W 15P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	7 Data-
Data+	2	8	⟷	5 Data+
GND	5	9	⟷	

Diagram 19

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		FB CPU Port RS485 2W 15P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	7 Data-
Data+	2	9	⟷	5 Data+
GND	5	5	⟷	

Diagram 20

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		FB CPU Port RS485 2W 15P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	7 Data-
Data+	2	8	⟷	5 Data+
GND	5	5	⟷	


Diagram 21

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		FB CPU Port RS485 2W 15P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	7 Data-
Data+	2	⟷	5 Data+
GND	5	⟷	

Diagram 22

Ethernet cable:

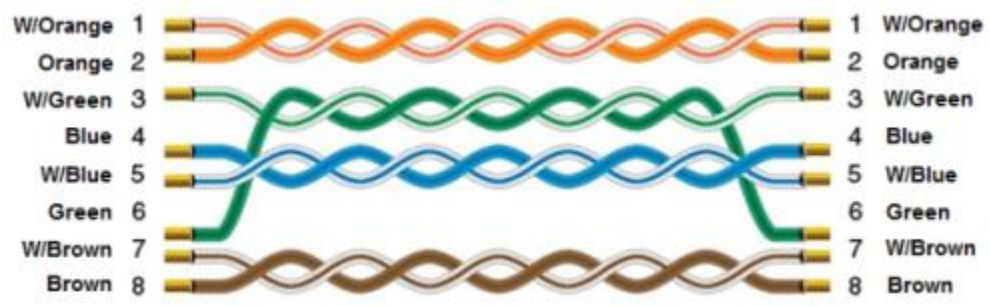

Fuji NB Series

Website: http://www.fujielectric.com/fcs/index.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Fuji NB Series		
PLC I/F	RS485 4W		
Baud rate	19200		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		

PLC Setting:

Communication mode	NITP Protocol / PLC Password (default is 0)

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Y	HHH	0 ~ 7ff	Output Relay
B	X	HHH	0 ~ 3ff	Input Relay
B	M	HHH	0 ~ fff	Internal Relay
B	L	HHH	0 ~ fff	Latch Relay
B	C	HH	0 - ff	Counter
B	M_Spe	HHHH	0 ~ 81ff	Special Relay
B	T	HHH	0 ~ 1ff	Timer
W	TV	HHH	0 ~ 3ff	Timer value
W	CV	HHH	0 ~ 3ff	Counter value
W	D	HHHH	0 ~ 1fff	Data Register
W	D_Spe	HHHH	0 ~ 81ff	Special Register

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		Fuji NB Series RS422 8P RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	3
Tx-	3	⟷	6
TX+	4	⟷	5
GND	5		

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		Fuji NB Series RS422 8P RJ45 Male
Rx-	7	⟷	4
Rx+	6	⟷	3
Tx-	9	⟷	6
TX+	8	⟷	5
GND	5		

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		Fuji NB Series RS422 8P RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	3
Tx-	3	⟷	6
TX+	4	⟷	5
GND	5		

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		Fuji NB Series RS422 8P RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	3
Tx-	3	⟷	6
TX+	4	⟷	5
GND	5		


Fuji SPH2000 (Ethernet)

Supported Series:Fuji SPH2000 series PLC.
Website: http://www.fujielectric.com/fcs/index.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Fuji SPH2000 (Ethernet)		
PLC I/F	Ethernet		
Port no.	507	251 ~ 65531	

When setting port number, please add the offset 251. As shown below, the value in the software is 1024, then the port number should be: 1024+251=1275.

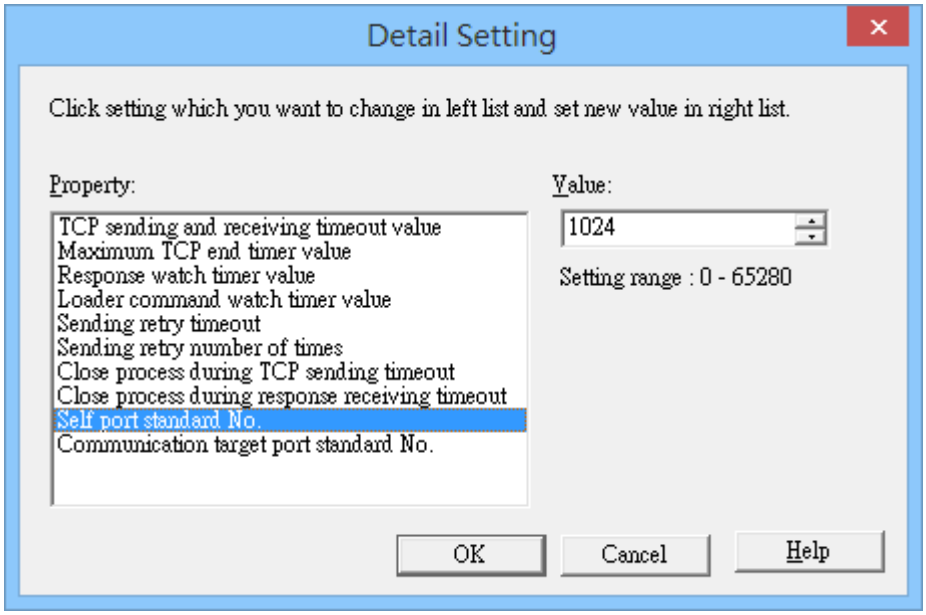


Device Address:

Bit/Word	Device	Format	Range	Memo
B	X	DDDDDDh	10 ~ 238511f	DDD(Slot) / DDD(word) / h(bit)
B	Y	DDDDDDh	10 ~ 238511f	DDD(Slot) / DDD(word) / h(bit)
B	M	DDDDh	0 ~ 8191f	
B	L	DDDDh	0 ~ 4095f	
B	SM	DDDh	0 ~ 511f	
B	S	DD.DD	0 ~ 99.99	
W	WX	DDDDDD	1 ~ 238511	DDD(Slot) / DDD(word)
W	WY	DDDDDD	1 ~ 238511	DDD(Slot) / DDD(word)
W	WM	DDDD	0 ~ 8191	
DW	DM	DDDDD	0 ~ 16382	
W	WL	DDDD	0 ~ 4095	
DW	DL	DDDD	0 ~ 8190	
W	WSM	DDD	0 ~ 511	
DW	DSM	DDD	0 ~ 510	
W	WS	DD	0 ~ 99	
DW	DX	DDDDDD	1000 ~ 238511	DDD(Slot) / DDD(word)
DW	DY	DDDDDD	1000 ~ 238511	DDD(Slot) / DDD(word)

Wiring Diagram:

Diagram 1

Ethernet cable:

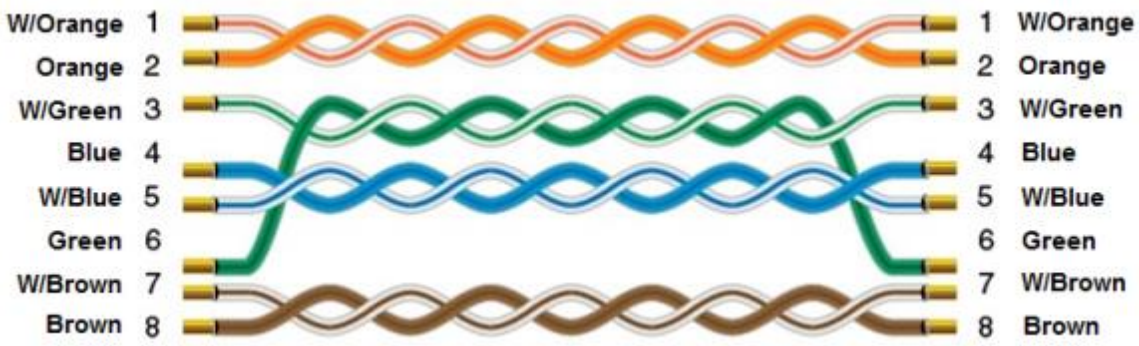

GE Fanuc 0i MD

Website: http://www.fanucfa.com/welcome_worldwide/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	GE Fanuc 0i MD		
PLC I/F	RS232		
Baud rate	19200		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		

On-line simulation	YES

PLC Setting:

Reader/Puncher interface (2ch.) is used for touch panel interface.
External touch panel interface, S/N: A02B-0320-J685, for Power Mate Series.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDDo	0 ~ 11277	
B	Y	DDDDo	0 ~ 11277	
B	K	DDDo	0 ~ 9997	
B	E	DDDDo	0 ~ 99997	
B	D_Bit	DDDDo	0 ~ 99997	
B	R_Bit	DDDDo	0 ~ 94997	
W	T	DDDD	0 ~ 9499	Must be a multiple of 2
W	C	DDDD	0 ~ 5199	Must be a multiple of 4
W	D_Byte	DDDD	0 ~ 9999	
W	R_Byte	DDDD	0 ~ 9499	
W	D	DDDD	0 ~ 9999	Must be a multiple of 2
W	R	DDDD	0 ~ 9499	Must be a multiple of 2

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 20P JD36B or JD54 Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	11
Tx	3	7	⟷	1
GND	5	5	⟷	8(JD36)/4(JD54)
			→	15
			→	5
			→	3
			→	7
			→	13

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


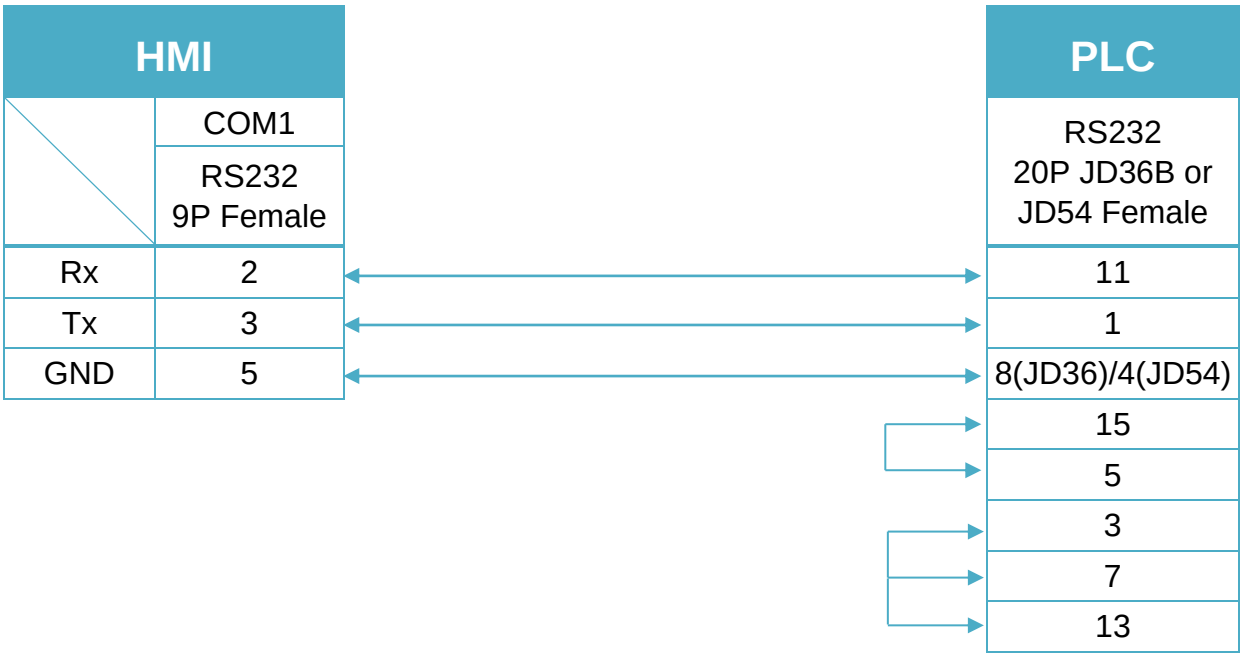


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

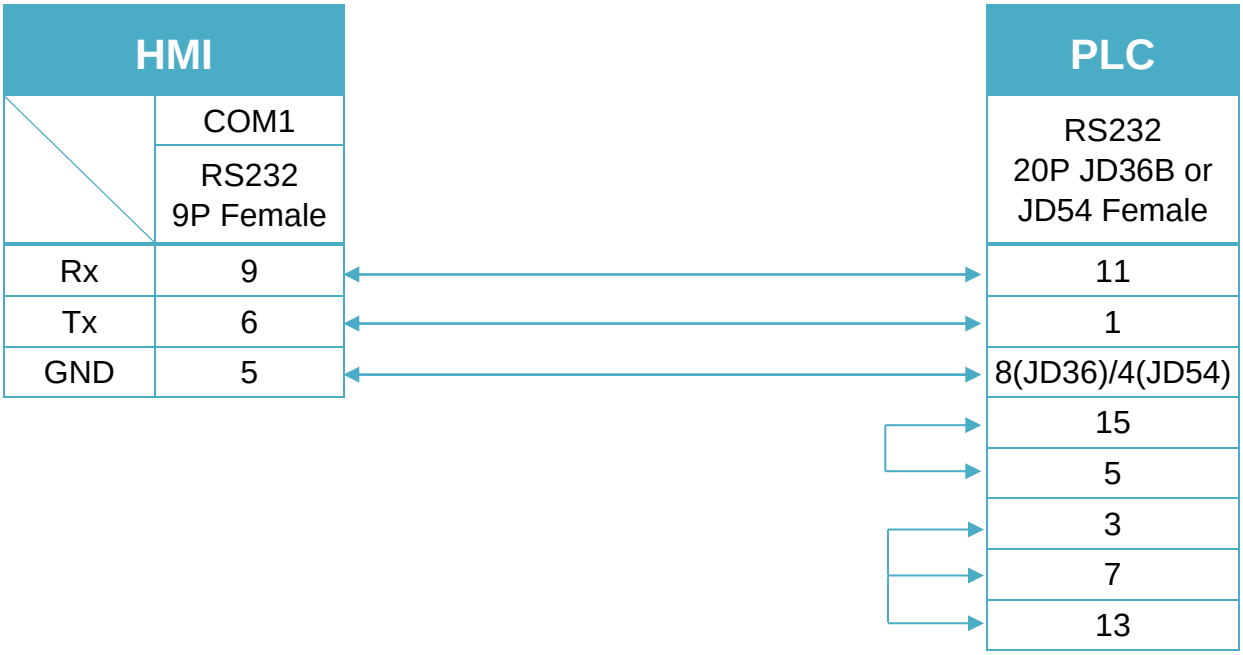

GE Fanuc CMM

Website: http://www.ge.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	GE Fanuc CMM		
PLC I/F	RS232	RS232/RS485	
Baud rate	19200	9600,19200,38400,57600,115200	
Data bits	8	7,8	Must set to 8 for this protocol
Parity	Odd	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	0	0-255	Does not apply to this protocol

PLC Setting:

Refer to the related PLC manual.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDD	1 ~ 10000	Input relay
B	Q	DDDDD	1 ~ 10000	Output relay
B	M	DDDDD	1 ~ 10000	Auxiliary relay
B	G	DDDD	1 ~ 7680	
B	T	DDD	1 ~ 256	
B	SA	DDD	1 ~ 128	
B	SB	DDD	1 ~ 128	
B	SC	DDD	1 ~ 128	
B	S	DDD	1 ~ 128	
W	AI	DDDDD	1 ~ 10000	Analog input register
W	AQ	DDDDD	1 ~ 10000	Analog output register
W	R	DDDDD	1 ~ 32640	Data register

Wiring Diagram:

CPU Port 90-30/VersaMax (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

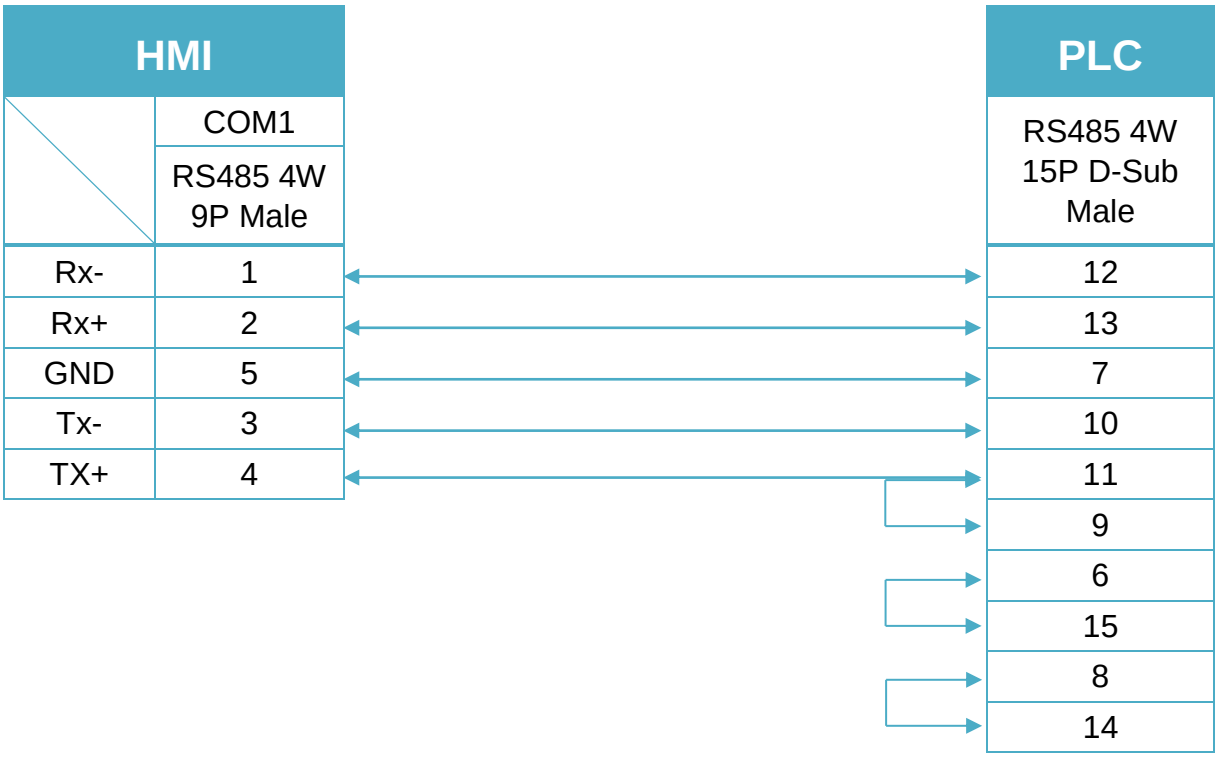


Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

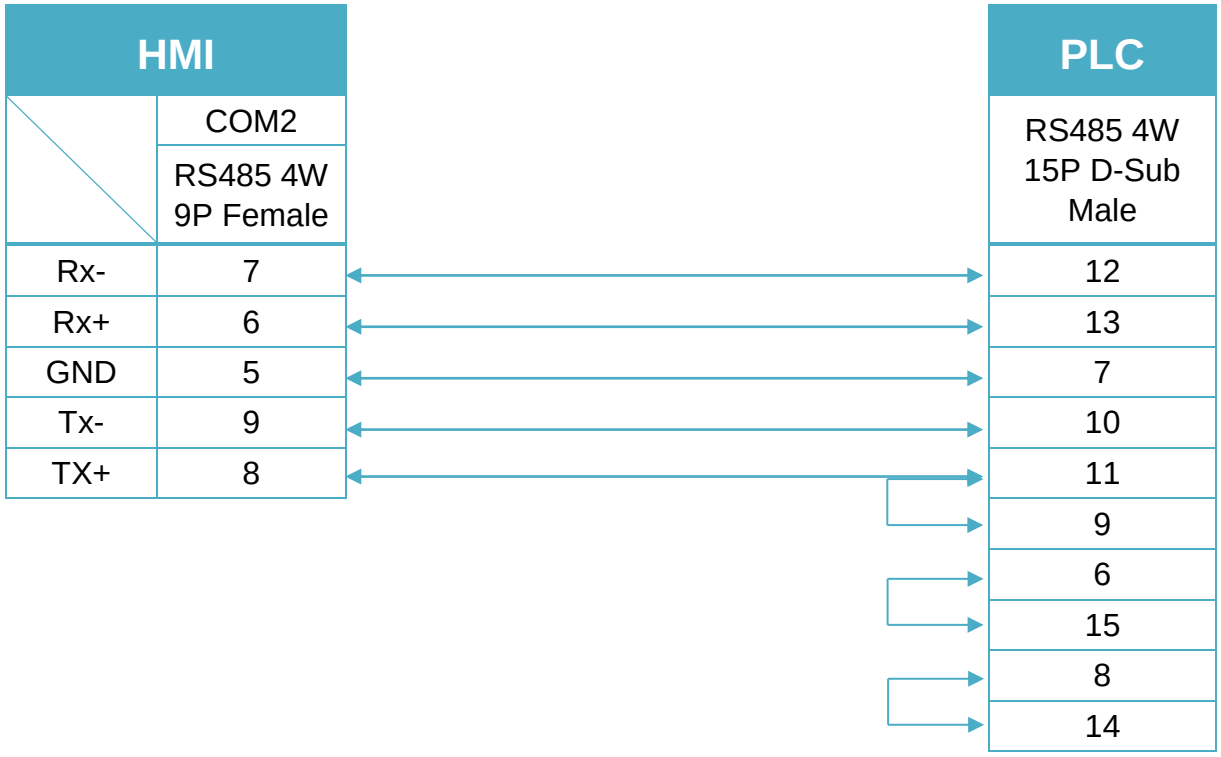


Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

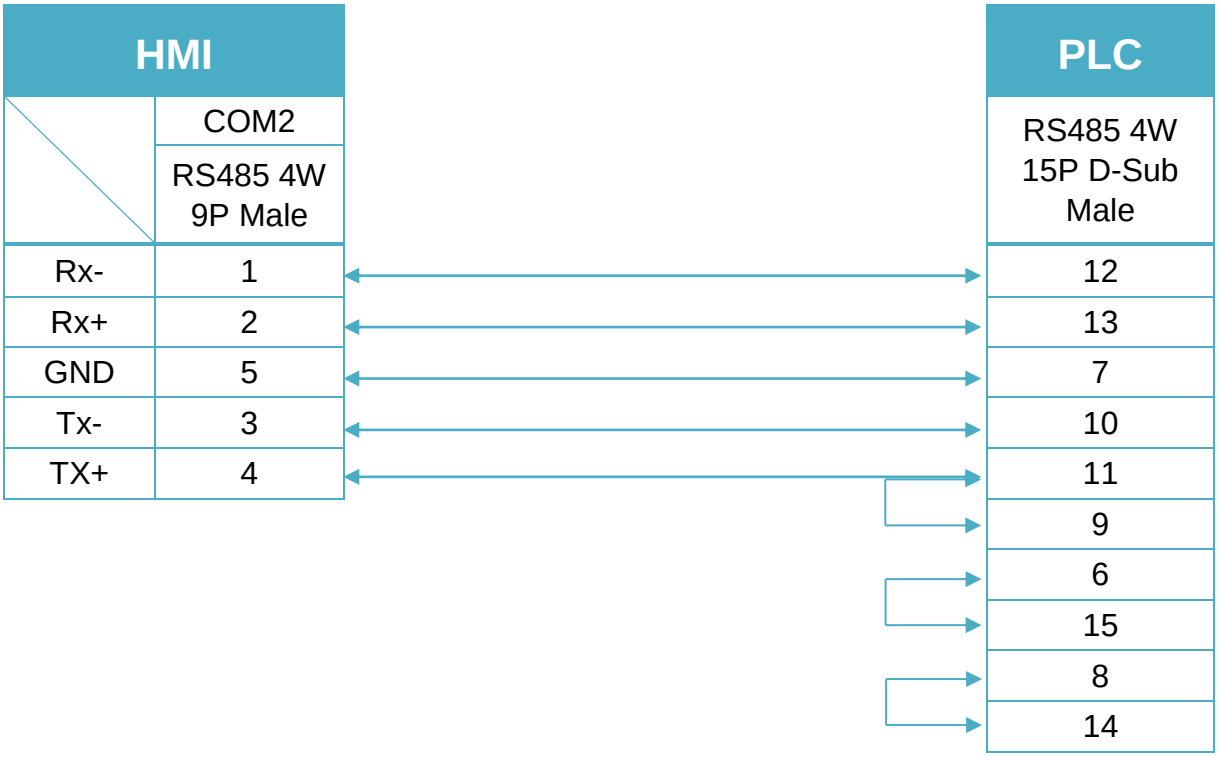


Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI		PLC
	COM1 RS485 4W 9P Female	RS485 4W 15P D-Sub Male
Rx-	1	12
Rx+	2	13
GND	5	7
Tx-	3	10
TX+	4	11
		9
		6
		15
		8
		14

CPU Port (90-30 series CPU351/352/363/364) (Diagram 5 ~ Diagram 7)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P RJ11 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	2
Tx	3	7	↔	5
GND	5	5	↔	3

Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 6P RJ11 Male
	RS232 9P Female		
Rx	2	↔	2
Tx	3	↔	5
GND	5	↔	3

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 6P RJ11 Male
Rx	9	2
Tx	6	5
GND	5	3

CPU Port (VersaMax series CPU001/002/005/E05) (Diagram 8 ~ Diagram 10)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female	COM3 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	8	2
Tx	3	7	3
GND	5	5	5

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5

Diagram 10

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5

GE Fanuc RX3i

Website: http://www.ge.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	GE Fanuc RX3i		
PLC I/F	RS232	RS232, RS485	
Baud rate	19200	1200~115200	
Data bits	8		
Parity	Odd	None, Even, Odd	
Stop bits	1	1 or 2	
SNP ID	1	0~255 (None)	

PLC Setting:

Port Mode	SNP Slave

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDD	1 ~ 32768	
B	Q	DDDDD	1 ~ 32768	
B	M	DDDDD	1 ~ 32768	
B	G	DDDDD	1 ~ 32768	
B	T	DDDDD	1 ~ 32768	
B	SA	DDDDD	1 ~ 32768	
B	SB	DDDDD	1 ~ 32768	
B	SC	DDDDD	1 ~ 32768	
B	S	DDDDD	1 ~ 32768	
W	AI	DDDDD	1 ~ 32768	
W	AQ	DDDDD	1 ~ 32768	
W	R	DDDDD	1 ~ 32768	

Wiring Diagram:

GE Fanuc RX3i COM1 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5

GE Fanuc RX3i COM2 RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI		PLC
	COM1 RS485 4W 9P Male	RS485 4W 15P D-Sub Male
Rx-	1	12
Rx+	2	13
GND	5	7
Tx-	3	10
TX+	4	11
		9
		6
		15
		8
		14

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI		PLC
	COM2 RS485 4W 9P Female	RS485 4W 15P D-Sub Male
Rx-	7	12
Rx+	6	13
GND	5	7
Tx-	9	10
TX+	8	11
		9
		6
		15
		8
		14

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***


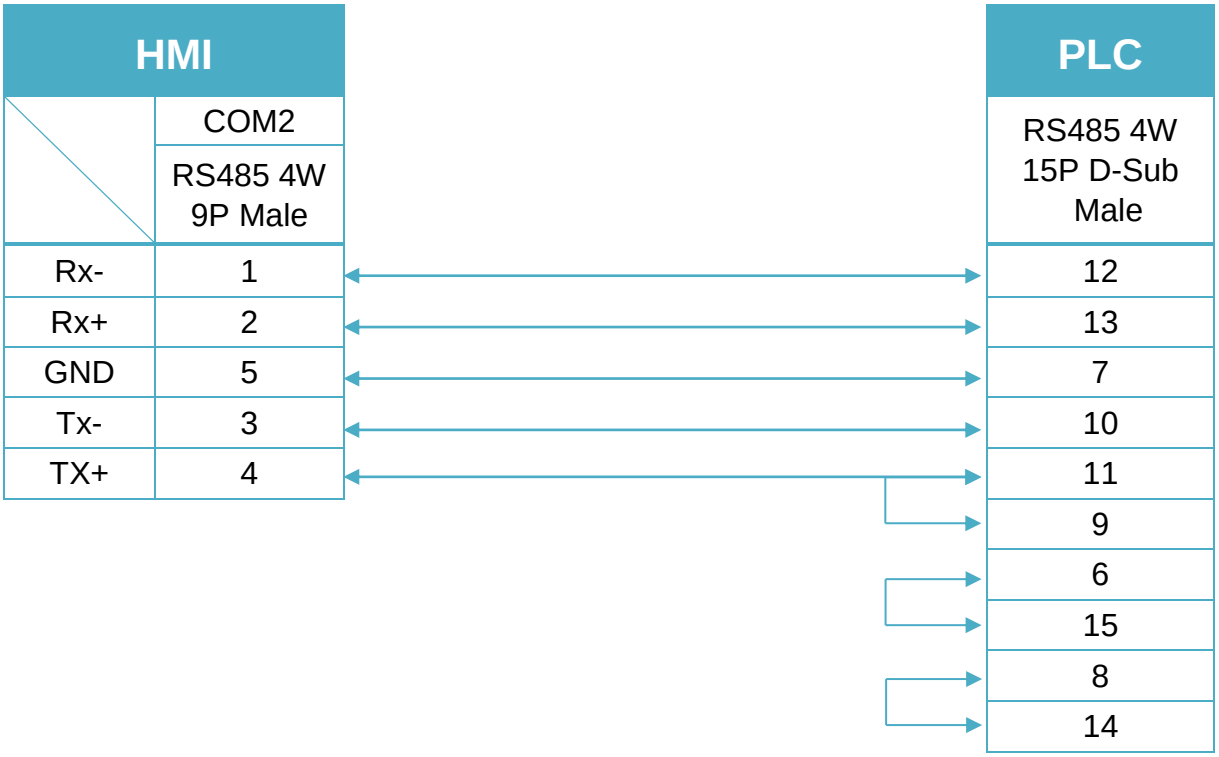


Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

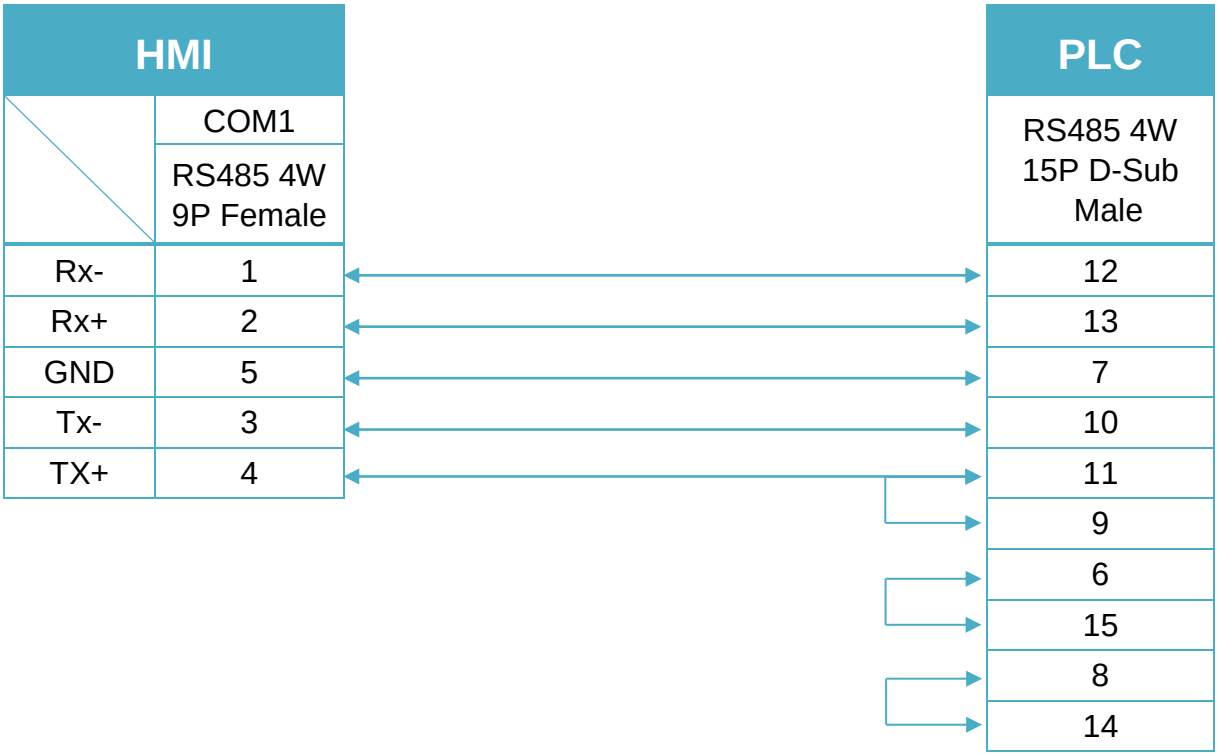

GE Fanuc RX3i (Ethernet)

Website: http://www.ge.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	GE Fanuc RX3i (Ethernet)		
PLC I/F	Ethernet		
Port no.	18245		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDD	1 ~ 32768	
B	Q	DDDDD	1 ~ 32768	
B	M	DDDDD	1 ~ 32768	
B	G	DDDD	1 ~ 7680	
B	T	DDDD	1 ~ 1024	
B	SA	DDD	1 ~ 128	
B	SB	DDD	1 ~ 128	
B	SC	DDD	1 ~ 128	
B	S	DDD	1 ~ 128	
W	AI	DDDDD	1 ~ 32640	
W	AQ	DDDDD	1 ~ 32640	
W	R	DDDDD	1 ~ 32640	

Wiring Diagram:

Ethernet cable:

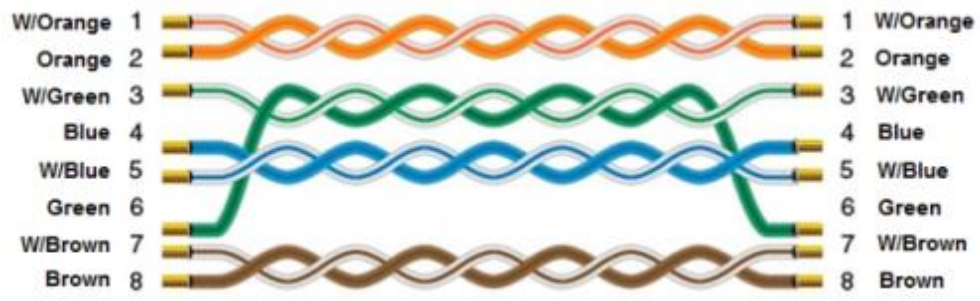

GE Fanuc Series 90-30 (Ethernet)

Supported Series: GE 90-30 series, CPU model 374plus.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	GE Fanuc Series 90-30 (Ethernet)		
PLC I/F	Ethernet		
Port no.	18245		
PLC sta. no.	1	1~99	

Device Address:


Bit/Word	Device type	Format	Range	Memo
B	I_bit	DDDDD	1 ~ 32768	
B	Q_bit	DDDDD	1 ~ 32768	
B	M_bit	DDDDD	1 ~ 32768	
B	G_bit	DDDDD	1 ~ 32768	
B	T_bit	DDDDD	1 ~ 32768	
B	SA_bit	DDDDD	1 ~ 32768	Read Only
B	SB_bit	DDDDD	1 ~ 32768	Read Only
B	SC_bit	DDDDD	1 ~ 32768	Read Only
B	S_bit	DDDDD	1 ~ 32768	Read Only
B	R_bit	DDDDD	1 ~ 32768	
W	I	DDDDD	1 ~ 32753	Address increment by 8 words, ex: I1, I9, I17, I25…..
W	Q	DDDDD	1 ~ 32753	The rule is same as above, ex:Q1, Q9, Q17…
W	M	DDDDD	1 ~ 32753	The rule is same as above, ex:M1, M9, M17..
W	G	DDDDD	1 ~ 32753	The rule is same as above, ex:G1, G9, G17…
W	T	DDDD	1 ~ 1024	The rule is same as above, ex:T1, T9, T17….
W	SA	DDDDD	1 ~ 32753	Read only, the rule is same as above
W	SB	DDDDD	1 ~ 32753	Read only, the rule is same as above
W	SC	DDDDD	1 ~ 32753	Read only, the rule is same as above

Bit/Word	Device type	Format	Range	Memo
W	S	DDDDD	1 ~ 32753	Read only, the rule is same as above
W	R	DDDDD	1 ~ 32768	
W	AI	DDDDD	1 ~ 32768	
W	AQ	DDDDD	1 ~ 32768	
W	W	DDDDDDD	1 ~ 5000000	

Wiring Diagram:

Diagram 1

Ethernet cable:

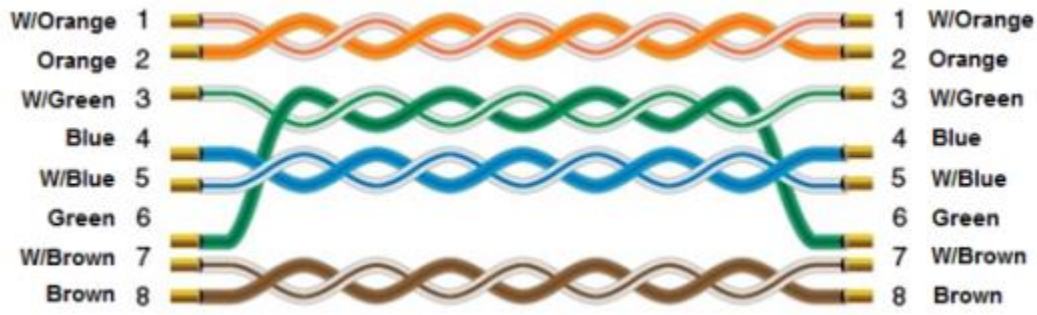

GE Fanuc SNP-X

Supported Series: GE Fanuc 90-30 , 90 micro and VersaMax series PLC , 90-70 series with CMM711 module.
Website: http://www.ge.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	GE Fanuc SNP-X		
PLC I/F	RS485 4W	RS232/RS485	
Baud rate	19200	9600 ~ 115200	
Data bits	8	7, 8	Must set to 8 for this protocol
Parity	Odd	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	0	0-255	Does not apply to this protocol

PLC Setting:

Refer to the related PLC manual.

Device Address:

Bit/Word	Device	Format	Range	Memo
B	I	DDDDD	1 ~ 10000	Input relay
B	Q	DDDDD	1 ~ 10000	Output relay
B	M	DDDDD	1 ~ 10000	Auxiliary relay
B	G	DDDD	1 ~ 7680	
B	T	DDD	1 ~ 256	
B	SA	DDD	1 ~ 128	
B	SB	DDD	1 ~ 128	
B	SC	DDD	1 ~ 128	
B	S	DDD	1 ~ 128	
B	R_bit	DDDDDdd	1 ~ 3264015	Data register bit
W	AI	DDDDD	1 ~ 10000	Analog input register
W	AQ	DDDDD	1 ~ 10000	Analog output register
W	R	DDDDD	1 ~ 32640	Data register

Wiring Diagram:

CPU Port 90-30/VersaMax (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

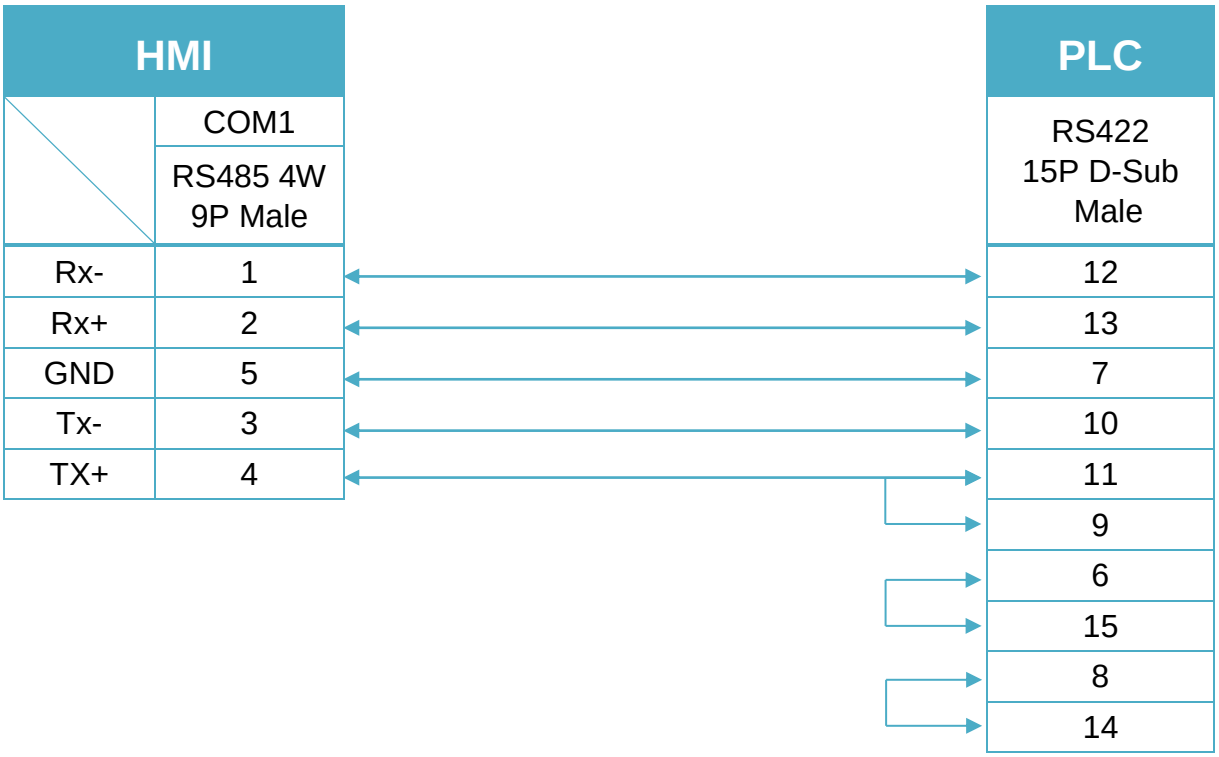


Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

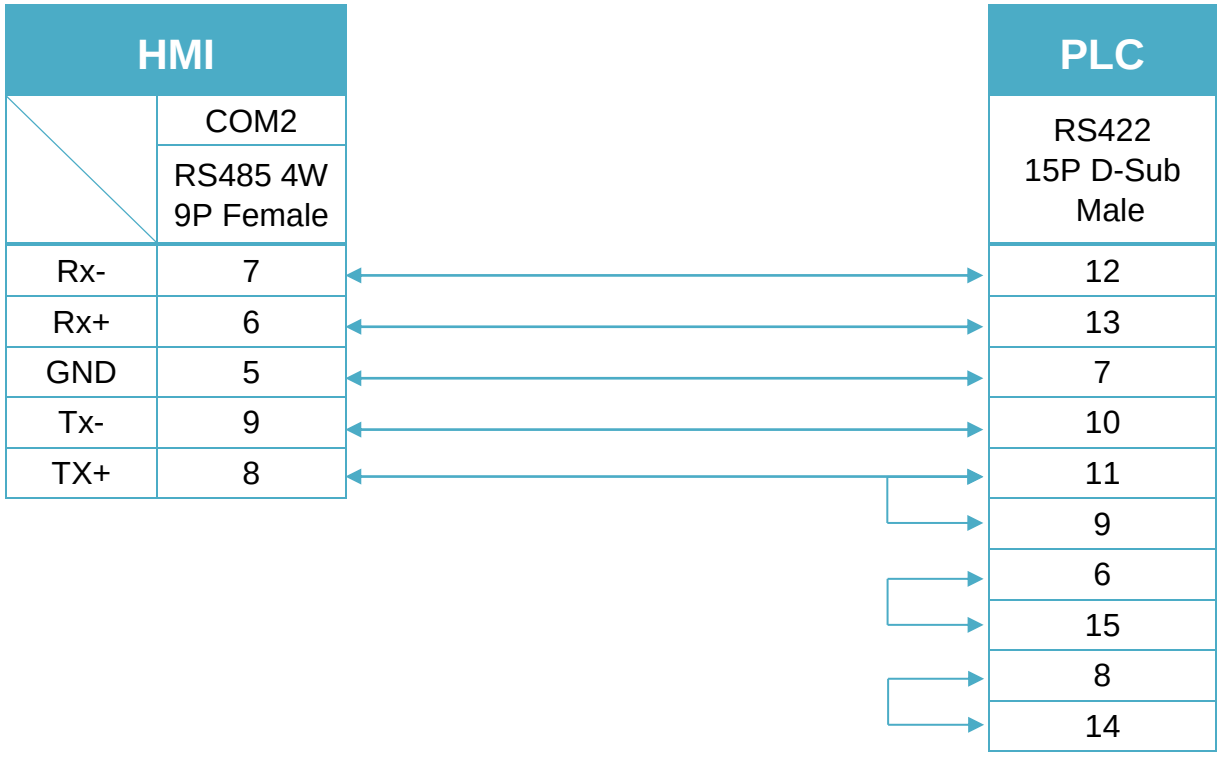


Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***


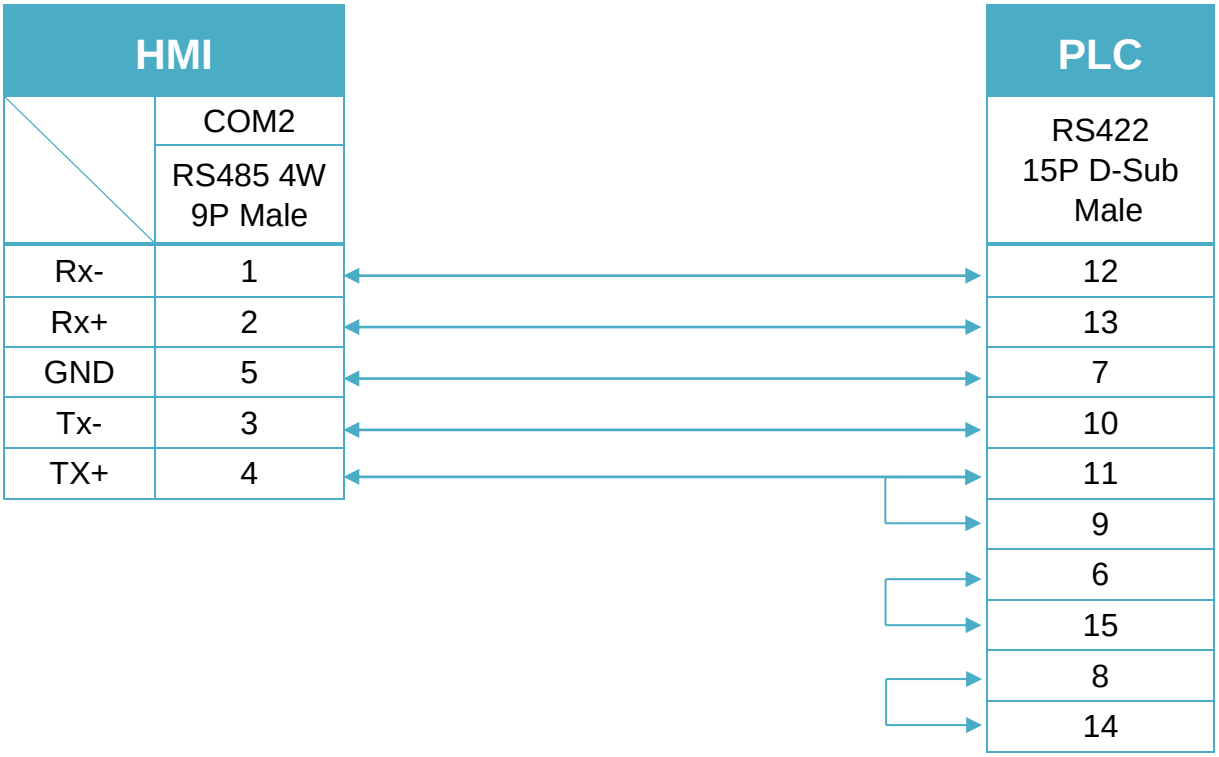


Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

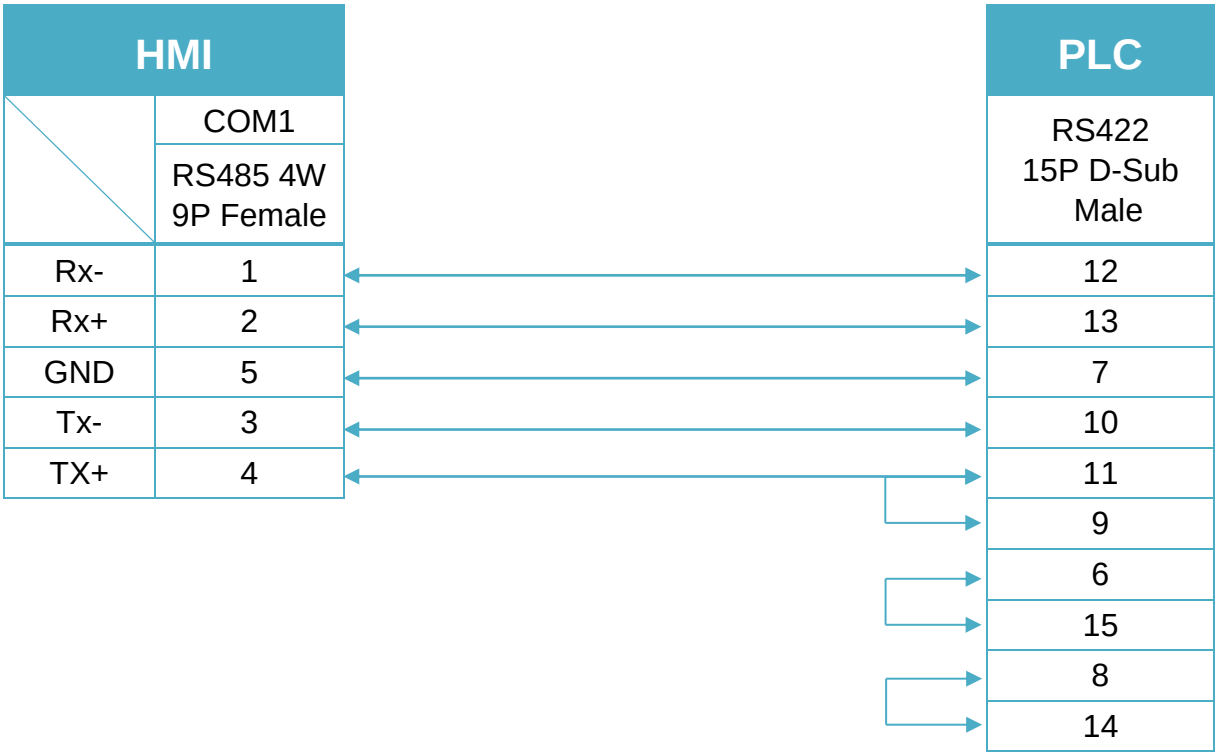

CPU Port (90-30 series CPU351/352/363/364) (Diagram 5 ~ Diagram 7)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P RJ11 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	5
GND	5	5	⟷	3

Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P RJ11 Male
Rx	2	⟷	2
Tx	3	⟷	5
GND	5	⟷	3

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P RJ11 Male
Rx	9	⟷	2
Tx	6	⟷	5
GND	5	⟷	3

CPU Port (VersaMax series CPU001/002/005/E05) (Diagram 8 ~ Diagram 10)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P RJ45 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	4
Tx	3	7	⟷	3
GND	5	5	⟷	8

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	4
Tx	3	⟷	3
GND	5	⟷	8

Diagram 10

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	4
Tx	6	⟷	3
GND	5	⟷	8

GE Fanuc VersaMax (Ethernet)

Supported Series: GE Fanuc VersaMax controllers
Website: http://www.ge.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	GE Fanuc VersaMax (Ethernet)		
PLC I/F	Ethernet		
Port no.	18245		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDD	1 ~ 32768	
B	Q	DDDDD	1 ~ 32768	
B	M	DDDDD	1 ~ 32768	
B	G	DDDDD	1 ~ 7680	
B	T	DDDDD	1 ~ 1024	
B	SA	DDDDD	1 ~ 128	
B	SB	DDDDD	1 ~ 128	
B	SC	DDDDD	1 ~ 128	
B	S	DDDDD	1 ~ 128	
W	AI	DDDDD	1 ~ 32640	
W	AQ	DDDDD	1 ~ 32640	
W	R	DDDDD	1 ~ 32640	
W	IW	DDDD	1 ~ 2048	
W	QW	DDDD	1 ~ 2048	
W	MW	DDDD	1 ~ 2048	
W	GW	DDD	1 ~ 480	
W	TW	DD	1 ~ 64	
W	SW	D	1 ~ 8	

Wiring Diagram:

Diagram 1

Ethernet cable:



Haiwell PLC

Support Series: Haiwell C series, T Series, H Series, N Series, S Series PLC
Web: http://www.haiwell.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Haiwell PLC		
PLC I/F	RS232	RS232,RS485 2W	
Baud rate	19200	19200	
Data bits	8	8	
Parity	None	None	
Stop bits	2	2	
PLC sta. no.	1	1~247	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDD	0 ~ 1023	Input Switch
B	Y	DDDD	0 ~ 1023	Output Switch
B	M	DDDDD	0 ~ 12287	Internal Relay
B	T	DDDD	0 ~ 1023	Timer (Output Coil State)
B	C	DDD	0 ~ 255	Timer (Output Coil State)
B	SM	DDD	0 ~ 215	System Status Bit
B	S	DDDD	0 ~ 2047	Step Bit
W	CR	DD	0 ~ 79	Special Module Parameter Register
W	AI	DDD	0 ~ 255	Analog Input Register
W	AQ	DDD	0 ~ 255	Analog Output Register
W	V	DDDDD	0 ~ 14847	Data Register
W	TCV	DDDD	0 ~ 1023	Timer (current value register)
W	CCV	DDD	0 ~ 255	Timer (current value register)
W	SV	DDD	0 ~ 154	System Register

Wiring Diagram:

The following is the view from the soldering point of a connector.



RS232 4P Mini-Din (Diagram 1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 4P Mini-Din Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	1
GND	5	5	⟷	3

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 4P Mini-Din Male
Rx	2	⟷	2
Tx	3	⟷	1
GND	5	⟷	3

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 4P Mini-Din Male
Rx	9	⟷	2
Tx	6	⟷	1
GND	5	⟷	3

RS485 2W Terminal (Diagram 4 ~ Diagram9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	B-
Data+	2	9	⟷	A+
GND	5	5	⟷	

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	B-
Data+	6	1	⟷	A+
GND	5	5	⟷	

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	B-
Data+	2	8	⟷	A+
GND	**5**	**9**	⟷	

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	B-
Data+	2	9	⟷	A+
GND	5	5	⟷	

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	B-
Data+	2	8	⟷	A+
GND	5	5	⟷	

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	⟷	B-
Data+	2	⟷	A+
GND	5	⟷	

Haiwell PLC (Ethernet)

Support Series: Haiwell C series, T Series, H Series, N Series, S Series PLC
Web: http://www.haiwell.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Haiwell PLC (Ethernet)		
PLC I/F	Ethernet		
Port no.	502		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDD	0 ~ 1023	Input Switch
B	Y	DDDD	0 ~ 1023	Output Switch
B	M	DDDDD	0 ~ 12287	Internal Relay
B	T	DDDD	0 ~ 1023	Timer (Output Coil State)
B	C	DDD	0 ~ 255	Timer (Output Coil State)
B	SM	DDD	0 ~ 215	System Status Bit
B	S	DDDD	0 ~ 2047	Step Bit
W	CR	DD	0 ~ 79	Special Module Parameter Register
W	AI	DDD	0 ~ 255	Analog Input Register
W	AQ	DDD	0 ~ 255	Analog Output Register
W	V	DDDDD	0 ~ 14847	Data Register
W	TCV	DDDD	0 ~ 1023	Timer (current value register)
W	CCV	DDD	0 ~ 255	Timer (current value register)
W	SV	DDD	0 ~ 154	System Register

Wiring Diagram:

Diagram 1

Ethernet cable:



Hangzhou Maiou MO-TECH

Support Series: LS GLOFA series GM3, GM4, GM6, GM7 CPU Port.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Hangzhou Maiou MO-TECH		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MWX	DDDdd	0 ~ 25515	
B	MWX_NO_RPS	DDDdd	0 ~ 25515	
W	MW	DDD	0 ~ 255	
W	MW_NO_RPS	DDD	0 ~ 255	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TD
Tx	3	7	⟷	RD
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 Terminal
	RS232 9P Female		
Rx	2	⟷	TD
Tx	3	⟷	RD
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	9	⟷	TD
Tx	6	⟷	RD
GND	5	⟷	GND


Hanyoung Controller

Supported Series: Temperature Controller.
Website: http://hynux.com/kor/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Hanyoung Controller		
PLC I/F	RS485 4W		
Baud rate	9600		
Data bits	8	7 or 8	
Parity	None	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	1	0-255	

*In System Parameter Settings / Device Settings / COM Settings, set Parameter 1 to “1” to support Check Sum Mode.

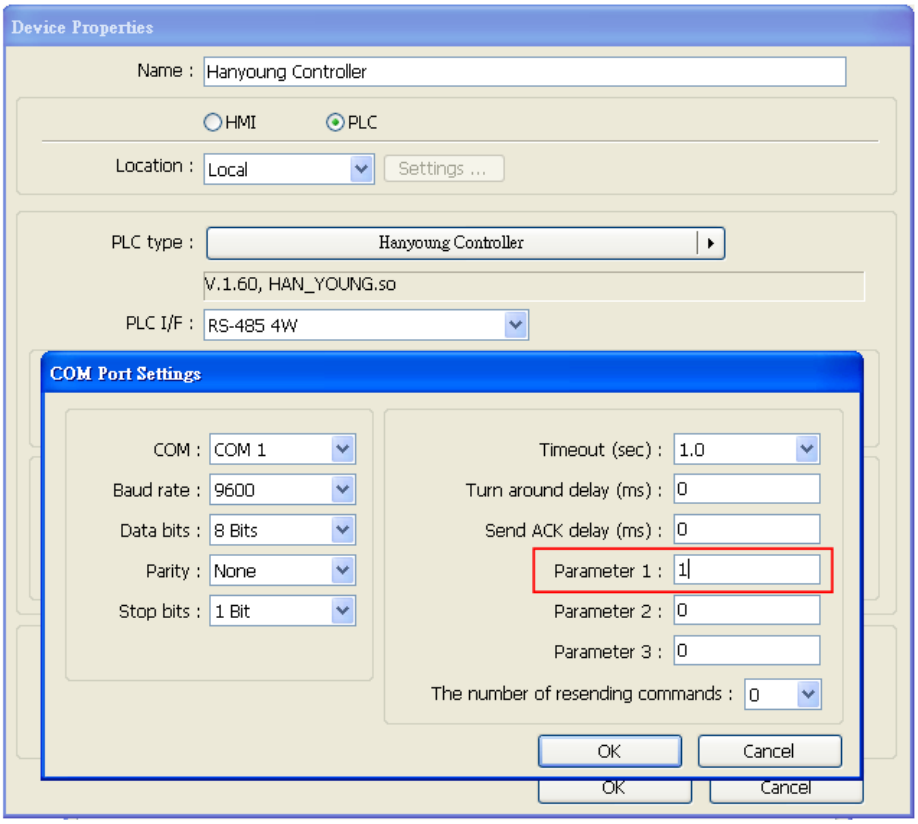

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDD	1 ~ 9999	
W	D	DDDD	1 ~ 9999	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		Han Young RS422 terminal
Rx-	1	⟷	32
Rx+	2	⟷	31
Tx-	3	⟷	34
TX+	4	⟷	33
GND	5		

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		Han Young RS422 terminal
Rx-	7	⟷	32
Rx+	6	⟷	31
Tx-	9	⟷	34
TX+	8	⟷	33
GND	5		

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		Han Young RS422 terminal
Rx-	1	⟷	32
Rx+	2	⟷	31
Tx-	3	⟷	34
TX+	4	⟷	33
GND	5		

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		Han Young RS422 terminal
Rx-	1	⟷	32
Rx+	2	⟷	31
Tx-	3	⟷	34
TX+	4	⟷	33
GND	5		

HAWE PLVC

Supported Series: HAWE PLVC
Website: http://www.hawe.de/de/home/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	HAWE PLVC		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ ffff	Input Bits
B	Y	HHHH	0 ~ ffff	Output Bits
B	M	DDDDD	0 ~ 65535	Internal Relays
B	T	DDDDD	0 ~ 65535	
B	C	DDDDD	0 ~ 65535	
B	B	HHHH	0 ~ ffff	
B	F	DDDDD	0 ~ 65535	
W	TV	DDDDD	0 ~ 65535	Timer Preset Value
W	CV	DDDDD	0 ~ 65535	Counter Preset Value
W	D	DDDDD	0 ~ 65535	Data Registers
W	W	HHHH	0 ~ ffff	
W	R	DDDDD	0 ~ 65535	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	2	⟷	TXD
Tx	3	⟷	RXD
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	9	⟷	TXD
Tx	6	⟷	RXD
GND	5	⟷	GND

HeFei ShenNong Motor

Website: http://www.ahsngd.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	HeFei ShenNong Motor		
PLC I/F	RS485 4W		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	ADDR00	H	1 ~ D	
W	ADDR01	H	1 ~ D	
W	ADDR02	H	1 ~ D	
W	ADDR03	H	1 ~ D	
W	ADDR04	H	1 ~ D	
W	ADDR05	H	1 ~ D	
W	ADDR06	H	1 ~ D	
W	ADDR07	H	1 ~ D	
W	ADDR08	H	1 ~ D	
W	ADDR09	H	1 ~ D	
W	ADDR0a	H	1 ~ D	
W	ADDR0b	H	1 ~ D	
W	ADDR0c	H	1 ~ D	
W	ADDR0d	H	1 ~ D	
W	ADDR0e	H	1 ~ D	
W	ADDR0f	H	1 ~ D	
W	ADDR3f	H	0 ~ b	
W	DATAn	D	0 ~ 5	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS422 terminal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS422 terminal
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS422 terminal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS422 terminal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Heng Yuan EU series

Supported Series: EU sereis, EU5 series, EU10 series.
Website: http://www.tjhysensor.cn/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Heng Yuan EU series		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	2	1-31	

Online simulator	YES
Extend address mode	YES

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Parameter	DDDD	0 ~ 2000	

Wiring Diagram:

The following is the view from the soldering point of a connector.

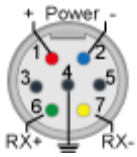


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		Heng Yuan Sensor RS485
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	7(Yellow)
Data+	2	9	⟷	6(Green)
GND	5	5	⟷	4(Black)

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		Heng Yuan Sensor RS485
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	7(Yellow)
Data+	6	1	⟷	6(Green)
GND	5	5	⟷	4(Black)

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		Heng Yuan Sensor RS485
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	7(Yellow)
Data+	2	8	⟷	6(Green)
GND	**5**	**9**	⟷	4(Black)

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		Heng Yuan Sensor RS485
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	7(Yellow)
Data+	2	9	⟷	6(Green)
GND	5	5	⟷	4(Black)

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		Heng Yuan Sensor RS485
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	7(Yellow)
Data+	2	8	⟷	6(Green)
GND	5	5	⟷	4(Black)

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		Heng Yuan Sensor RS485
	RS485 2W 9P Female		
Data-	1	⟷	7(Yellow)
Data+	2	⟷	6(Green)
GND	5	⟷	4(Black)

Hitachi EH-SIO

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Hitachi EH-SIO		
PLC I/F	RS232	RS232, RS485	
Baud rate	19200	9600, 19200, 38400	
Data bits	7	7	
Parity	Even	Even	
Stop bits	1	1	
PLC sta. no.	0		

PLC Setting:

Communication mode	19200, E, 7, 1 (default)

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHHh	0 ~ fffff	External input-bit (X)
B	Y	HHHHh	0 ~ fffff	External output-bit (Y)
B	M	HHHHh	0 ~ fffff	Data area-bit (M)
B	T	HHHHh	0 ~ fffff	Timer (T)
B	R	HHHHh	0 ~ fffff	Internal output (R)
B	L	HHHHh	0 ~ fffff	Link area-bit (L)
W	TC	HH	0 ~ ff	Timer/Counter current value
W	WM	HHHH	0 ~ 270f	Data area-word (M)
W	WX	HHHH	0 ~ 270f	External input-word (X)
W	WY	HHHH	0 ~ 270f	External output-word (Y)
W	WR	HHHH	0 ~ 270f	Internal output-word (R)
W	WL	HHHH	0 ~ 270f	Link area-word (L)

Wiring Diagram:

EH-SIO port1/port 2 RS232

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1	COM3	RS232 8P RJ45 Male
	RS232 9P Female	RS232 9P Female	
Rx	2	8	5
Tx	3	7	6
GND	5	5	1
CTS	8		8
			4
			7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


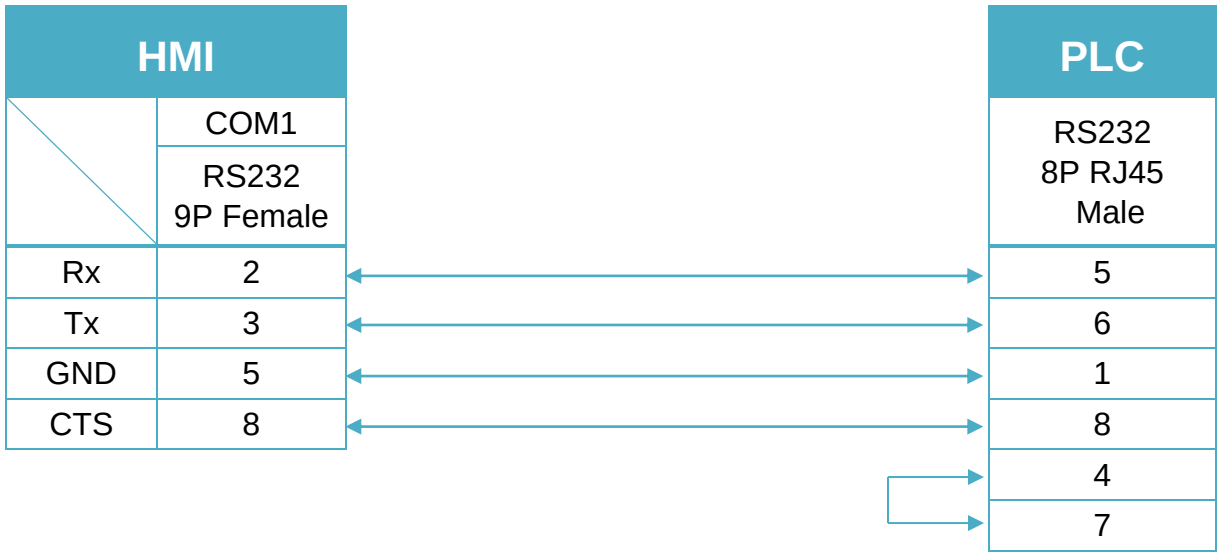


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

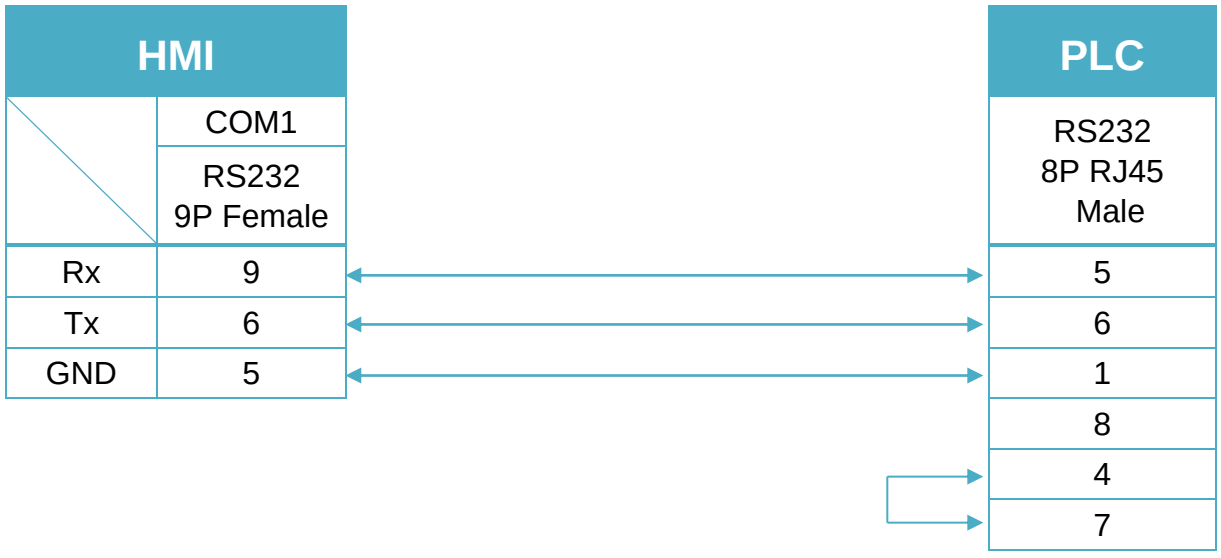

The following is the view from the soldering point of a connector.



Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		HitachiEH-SIO port2
Rx-	1	⟷	2
Rx+	2	⟷	1
Tx-	3	⟷	4
TX+	4	⟷	3
GND	5	⟷	6

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		HitachiEH-SIO port2
Rx-	7	⟷	2
Rx+	6	⟷	1
Tx-	9	⟷	4
TX+	8	⟷	3
GND	5	⟷	6

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		HitachiEH-SIO port2
Rx-	1	⟷	2
Rx+	2	⟷	1
Tx-	3	⟷	4
TX+	4	⟷	3
GND	5	⟷	6

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		HitachiEH-SIO port2
Rx-	1	⟷	2
Rx+	2	⟷	1
Tx-	3	⟷	4
TX+	4	⟷	3
GND	5	⟷	6

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		HitachiEH-SIO port2
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
			⟷	4
Data+	2	9	⟷	1
			⟷	3
GND	5	5	⟷	6

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		HitachiEH-SIO port2
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2
			⟷	4
Data+	6	1	⟷	1
			⟷	3
GND	5	5	⟷	6

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		HitachiEH-SIO port2
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2
			⟷	4
Data+	2	8	⟷	1
			⟷	3
GND	**5**	**9**	⟷	6

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		HitachiEH-SIO port2
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
			⟷	4
Data+	2	9	⟷	1
			⟷	3
GND	5	5	⟷	6

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		HitachiEH-SIO port2
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2
			⟷	4
Data+	2	8	⟷	1
			⟷	3
GND	5	5	⟷	6

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		HitachiEH-SIO port2
	RS485 2W 9P Male		
Data-	1	⟷	2
		⟷	4
Data+	2	⟷	1
		⟷	3
GND	5	⟷	6

Hitachi EHV Series (Ethernet)

Website: http://www.hitachi-ies.co.jp/english/products/plc/index.htm

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Hitachi EHV Series (Ethernet)		
PLC I/F	Ethernet		
Port no.	3004	3004~3007	

Device Address:

Bit/Wor	Device type	Format	Range	Memo
B	X	HHHHh	0 ~ fffff	External input-bit (X)
B	Y	HHHHh	0 ~ fffff	External output-bit (Y)
B	M	HHHHh	0 ~ fffff	Data area-bit (M)
B	T	DDDDD	0 ~ 65535	Timer (T)
B	R	HHHHh	0 ~ fffff	Internal output (R)
B	L	HHHHh	0 ~ fffff	Link area-bit (L)
W	TC	DDDD	0 ~ 2559	Timer/Counter current value
W	WM	HHHH	0 ~ 7fff	Data area-word (M)
W	WX	HHHH	0 ~ ffff	External Input-word (X)
W	WY	HHHH	0 ~ ffff	External output-word (Y)
W	WR	HHHH	0 ~ ffff	Internal output-word (R)
W	WL	HHHH	0 ~ 73ff	Link area-word (L)

Wiring Diagram:

Ethernet cable:



Hitachi H/EH/EHV Series

Supported Series: Hitachi H series, EH-150, Micro-EH, H20, H40, H64, H200, H250, H252, H300, H302, H700, H702, H1000, H1002, H2000, H4010.
Website: http://www.hitachi-ies.co.jp/english/products/plc/index.htm

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Hitachi H/EH/EHV Series		
PLC I/F	RS232	RS232, RS485	
Baud rate	19200	9600, 19200, 38400	
Data bits	7	7	
Parity	Even	Even	
Stop bits	1	1	
PLC sta. no.	0	0-255	Does not apply to this protocol.


Online simulator	YES	**Broadcast command**	NO
Extend address mode	NO		

Device Address:

Bit/Wor	Device type	Format	Range	Memo
B	X_Dec	HHHdd	0 ~ 4ff95	
B	Y_Dec	HHHdd	0 ~ 4ff95	
B	X	HHHHh	0 ~ fffff	External input-bit (X)
B	Y	HHHHh	0 ~ fffff	External output-bit (Y)
B	M	HHHHh	0 ~ fffff	Data area-bit (M)
B	T	HHHHh	0 ~ fffff	Timer (T)
B	R	HHHHh	0 ~ fffff	Internal output (R)
B	L	HHHHh	0 ~ fffff	Link area-bit (L)
W	TC	HH	0 ~ ff	Timer/Counter current value
W	WM	HHHH	0 ~ 270f	Data area-word (M)
W	WX	HHHH	0 ~ 270f	External input-word (X)
W	WY	HHHH	0 ~ 270f	External output-word (Y)
W	WR	HHHH	0 ~ c3ff	Internal output-word (R)
W	WL	HHHH	0 ~ 270f	Link area-word (L)


Wiring Diagram:

WARNING: If your communication cable is not wired exactly as shown in our cable assembly instructions, damage to the HMI or loss of communications can be caused.


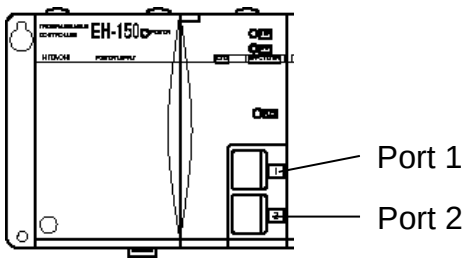


CPU TYPE	Port 1	Port 2
EH-150/CPU 104A	RS-232	RS-232
EH-150/CPU 208A	RS-232	RS-232
EH-150/CPU 308A	RS-232/RS-485	RS-232
EH-150/CPU 316A	RS-232/RS-485	RS-232
EH-150/CPU 448A	RS-232/RS-485	RS-232

Switch Number				
1	OFF	Normal mode		
2	OFF	TRNS0 operation		
3, 4	3	4	Port1 transmission speed	
	ON	ON	4,800 bps	Doesn’t support
	OFF	ON	9,600 bps	
	ON	OFF	19,200 bps	Default
	OFF	OFF	38,400 bps	
5	ON	Dedicated port		
6	6	PHL	Port2 transmission speed	
	ON	Low	9,600 bps	
	ON	High	38,400 bps	
	OFF	Low	4,800 bps	Doesn’t support
	OFF	High	19,200 bps	Default
7	OFF	(System mode)		Do not turn on.
8	OFF	(System mode)		Do not turn on.

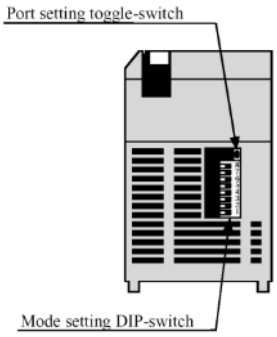

Toggle-Switch

PHL Low	
PHL High	

EH-150 port1/port 2 RS232 / MICRO-EH port1 RS232 (Diagram 1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P RJ45 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	5
Tx	3	7	↔	6
GND	5	5	↔	1
CTS	8		↔	8
				4
				7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


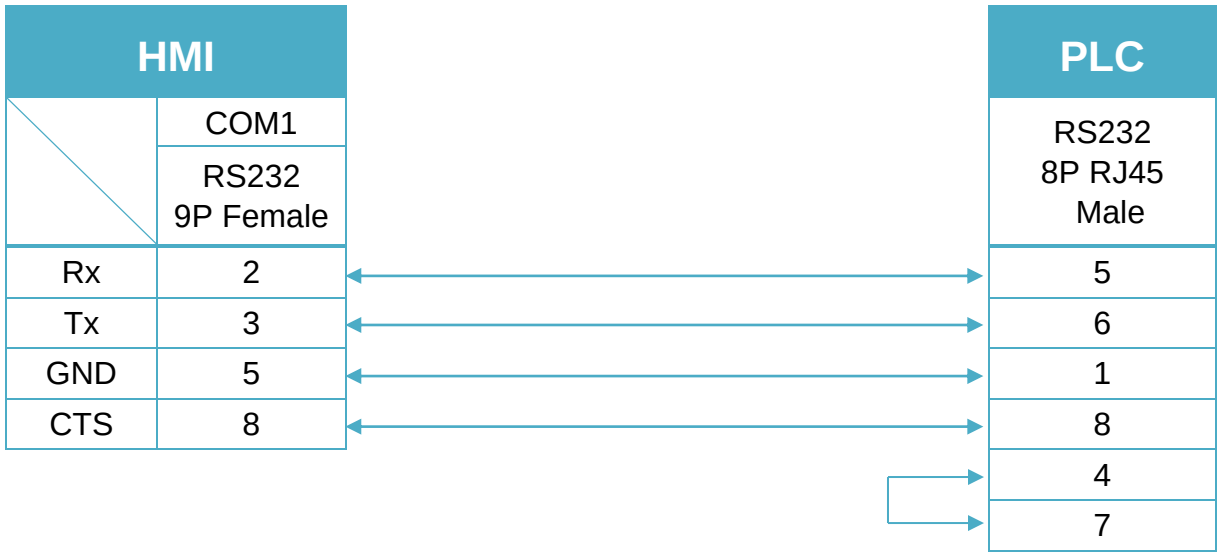


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

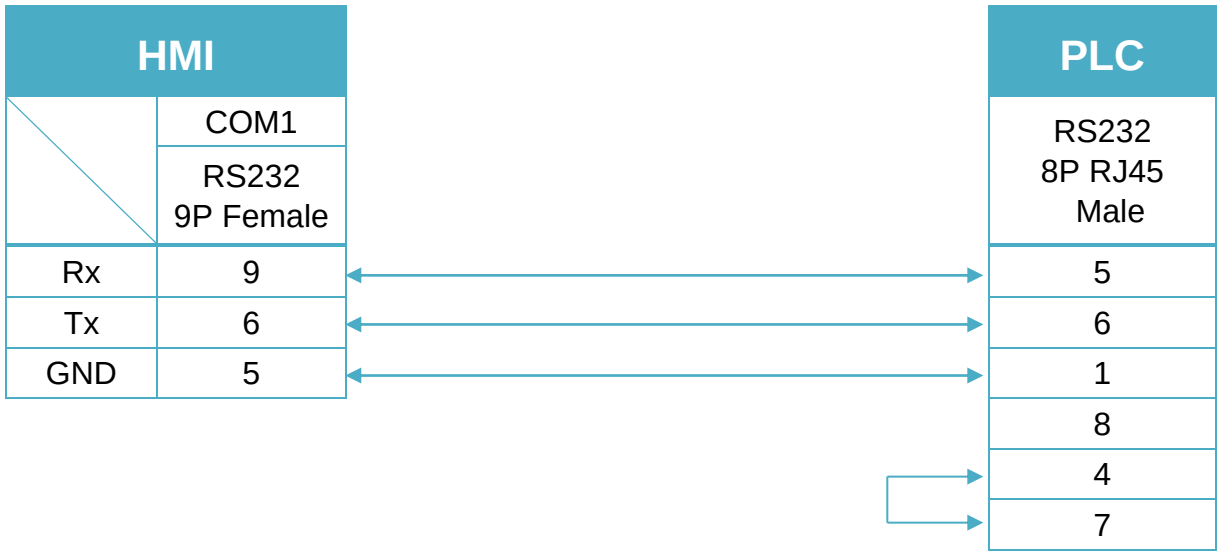

EH-150 port1 RS485 4W (Diagram 4 ~ Diagram7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 8P RJ45 Male
Rx-	1	↔	5
Rx+	2	↔	4
Tx-	3	↔	6
TX+	4	↔	7
GND	5	↔	1

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P RJ45 Male
Rx-	7	↔	5
Rx+	6	↔	4
Tx-	9	↔	6
TX+	8	↔	7
GND	5	↔	1

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P RJ45 Male
Rx-	1	⟷	5
Rx+	2	⟷	4
Tx-	3	⟷	6
TX+	4	⟷	7
GND	5	⟷	1

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P RJ45 Male
Rx-	1	⟷	5
Rx+	2	⟷	4
Tx-	3	⟷	6
TX+	4	⟷	7
GND	5	⟷	1

EH-150 port1 RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	4
			⟷	7
Data+	2	9	⟷	5
			⟷	6
GND	5	5	⟷	1

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P RJ45 Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	4
			⟷	7
Data+	6	1	⟷	5
			⟷	6
GND	5	5	⟷	1

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	↔	4
				7
Data+	2	8	↔	5
				6
GND	**5**	**9**	↔	1

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	↔	4
				7
Data+	2	9	↔	5
				6
GND	5	5	↔	1

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 2W 8P RJ45 Male
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	4
			7
Data+	2	8	5
			6
GND	5	5	1

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	RS485 2W 8P RJ45 Male
	RS485 2W 9P Female	
Data-	1	4
		7
Data+	2	5
		6
GND	5	1

H Series CPU Port RS232 (Diagram 14~ Diagram 16)

Diagram 14

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

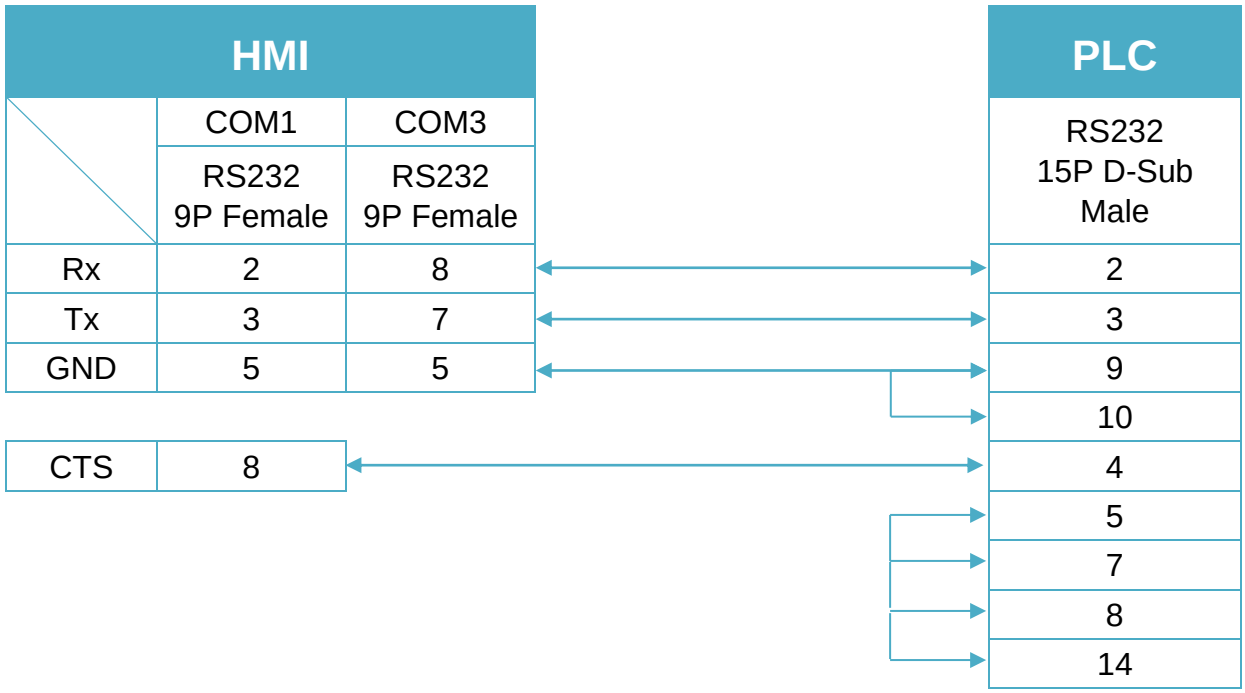


Diagram 15

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


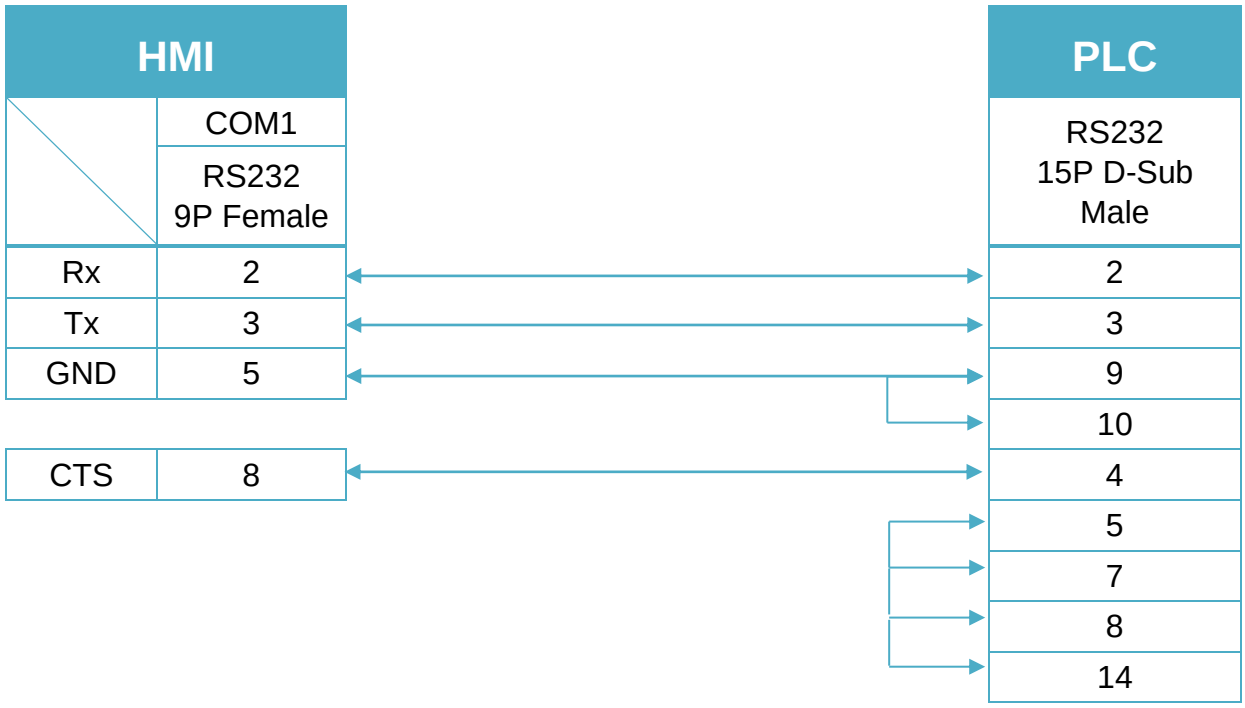


Diagram 16

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

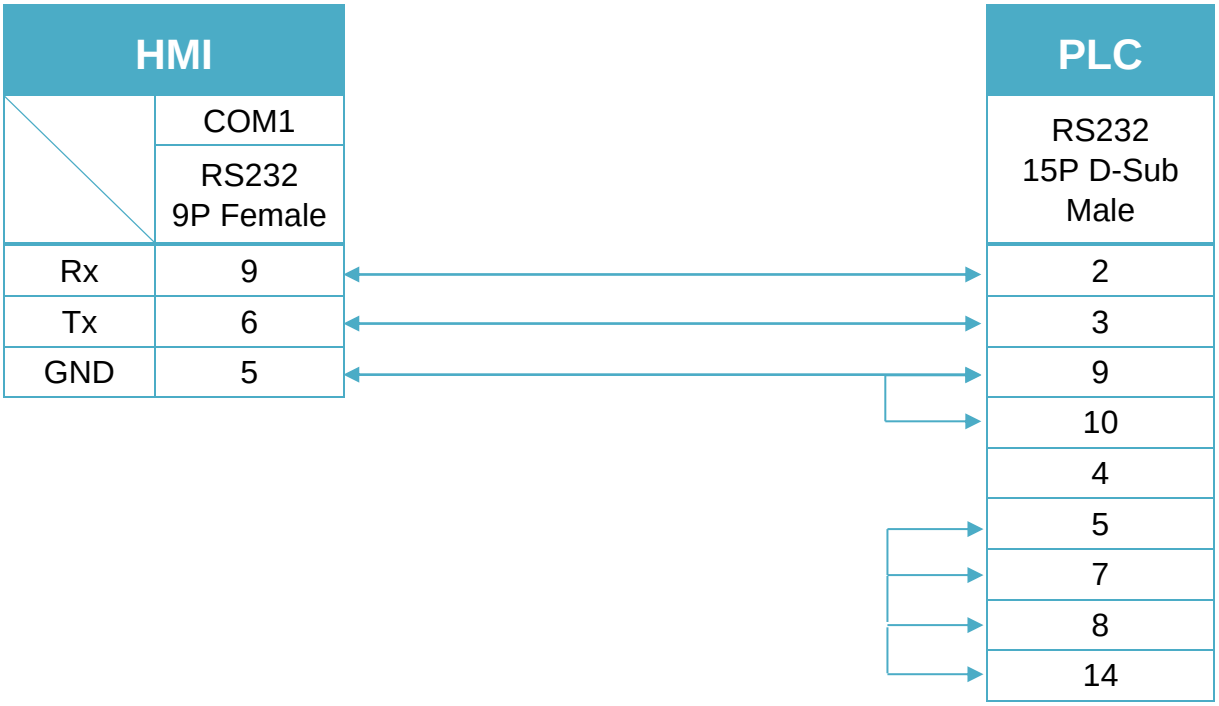

HollySys LE/LM PLC

Supported Series: HollySys LE/LM series PLC
Website: http://www.hollysys.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	HollySys LE/LM PLC		
PLC I/F	RS485 2W		
Baud rate	38400		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	IX	DDDDo	0 ~ 81907	
B	MX	DDDDo	0 ~ 81907	
B	QX	DDDDo	0 ~ 81907	
W	IW	DDDD	0 ~ 8190	
W	QW	DDDD	0 ~ 8190	
W	MW	DDDD	0 ~ 8190	
W	MD	DDDD	0 ~ 8190	
W	MR	DDDD	0 ~ 8190	

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	6
Data+	2	9	⟷	5
GND	5	5	⟷	7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	6
Data+	6	1	⟷	5
GND	5	5	⟷	7

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	6
Data+	2	8	⟷	5
GND	**5**	**9**	⟷	7

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	6
Data+	2	9	⟷	5
GND	5	5	⟷	7

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	6
Data+	2	8	⟷	5
GND	5	5	⟷	7

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Female		
Data-	1	⟷	6
Data+	2	⟷	5
GND	5	⟷	7

HUST H4C

Supported Series: HUST CNC Controller H4C, H6C Series.
Website: http://www.hust.com.tw/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	HUST H4C		
PLC I/F	RS-232		CPU port
Baud rate	38400	9600,19200,38400,57600	
Data bits	7		
Parity	Even		
Stop bits	2		
Turn around	5		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDD	0 ~ 255	Mapping to VM 10800 ~ 10807 (read only)
B	O	DDD	0 ~ 255	Mapping to VM 10808 ~ 10815 (read only)
B	C	DDD	0 ~ 255	Mapping to VM 10816 ~ 10823 (read only)
B	S	DDD	0 ~ 255	Mapping to VM 10824 ~ 10831 (read only)
B	A	DDD	0 ~ 1023	Mapping to VM 10832 ~ 10863 (read only)
B	VM_bit	DDDDDdd	0 ~ 9999931	Bit address (dd): 00 ~ 31
DW	VM	DDDDD	0 ~ 99999	Please refer to the controller specification for register range.
DW	R	DDD	0 ~ 255	Mapping to VM 10000 ~ 10255 (read only)
DW	Cn	DDD	0 ~ 255	Mapping to VM 10256 ~ 10511 (read only)
DW	Tm	DDD	0 ~ 255	Mapping to VM 10512 ~ 10767 (read only)

Wiring Diagram:

HUST CNC Controller

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	2
Tx	3	7	↔	3
GND	5	5	↔	5
				7
				8

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


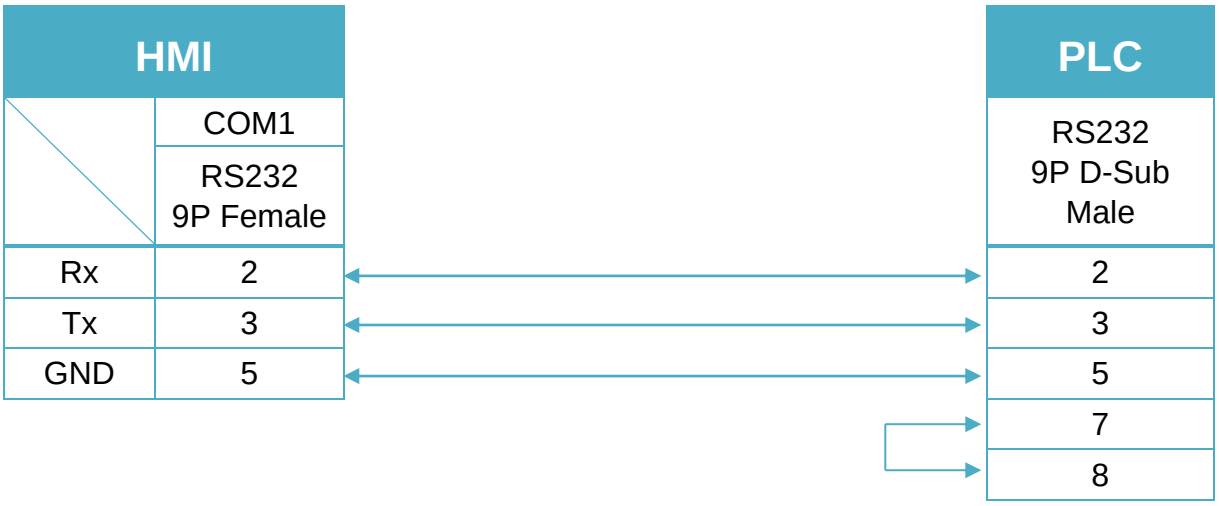


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

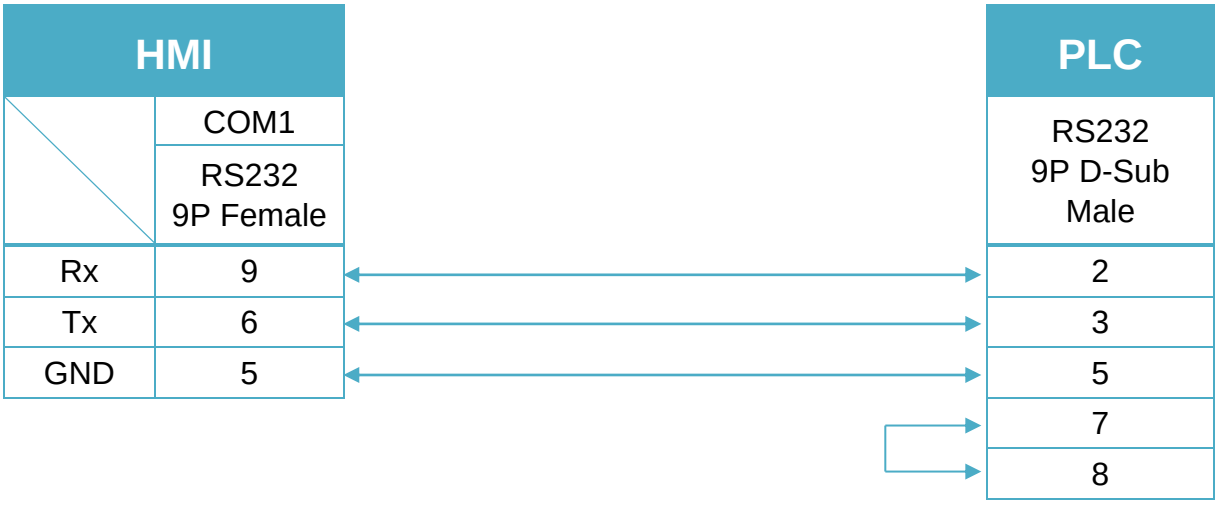

HUST H4X

Supported Series: HUST CNC Controller H4 Series.
Website: http://www.hust.com.tw/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	HUST H4X		
PLC I/F	RS-232		CPU port
Baud rate	38400	9600,19200,38400,57600	
Data bits	7		
Parity	Even		
Stop bits	2		
Turn around	5		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDD	0 ~ 255	Mapping to VM 10800 ~ 10807 (read only)
B	O	DDD	0 ~ 255	Mapping to VM 10808 ~ 10815 (read only)
B	C	DDD	0 ~ 255	Mapping to VM 10816 ~ 10823 (read only)
B	S	DDD	0 ~ 255	Mapping to VM 10824 ~ 10831 (read only)
B	A	DDD	0 ~ 255	Mapping to VM 10832 ~ 10863 (read only)
B	VM_bit	DDDDDdd	100 ~ 9999931	Bit address (dd): 00 ~ 31
DW	VM	DDDDD	1 ~ 99999	Please refer to the controller specification for register range.
DW	R	DDD	0 ~ 255	Mapping to VM 10000 ~ 10255 (read only)
DW	Cn	DDD	0 ~ 255	Mapping to VM 10256 ~ 10511 (read only)
DW	Tm	DDD	0 ~ 255	Mapping to VM 10512 ~ 10767 (read only)

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	5
				7
				8

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5
		↺	7
		↺	8

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5
		↺	7
		↺	8

IAI PCON-C-42PI

Supported Series: PCON Controller for RCP2 Series.
Website: http://www.intelligentactuator.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	IAI PCON-C-42PI		
PLC I/F	RS485 2W		
Baud rate	9600	9600 ~ 115200	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1	1 ~ 16	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SFTY	D	1	
B	SON	D	1	
B	ALRS	D	1	
B	BKRL	D	1	
B	STP	D	1	
B	HOME	D	1	
B	CSTR	D	1	
B	JISL	D	1	
B	MOD	D	1	
B	TEAC	D	1	
B	JOG+	D	1	
B	JOG-	D	1	
B	ST0	D	1	
B	ST1	D	1	
B	ST2	D	1	
B	ST3	D	1	
B	ST4	D	1	
B	ST5	D	1	
B	ST6	D	1	

Bit/Word	Device type	Format	Range	Memo
B	ST7	D	1	
B	PMSL	D	1	
B	STOP	D	1	
B	CLBR	D	1	
B	DSS1_Bit	Ddd	15	EMGS
B	DSS1_Bit	Ddd	14	SFTY
B	DSS1_Bit	Ddd	13	PWR
B	DSS1_Bit	Ddd	12	SV
B	DSS1_Bit	Ddd	11	PSFL
B	DSS1_Bit	Ddd	10	ALMH
B	DSS1_Bit	Ddd	9	ALML
B	DSS1_Bit	Ddd	8	ABER
B	DSS1_Bit	Ddd	7	BKRL
B	DSS1_Bit	Ddd	5	STP
B	DSS1_Bit	Ddd	4	HEND
B	DSS1_Bit	Ddd	3	PEND
B	DSS1_Bit	Ddd	2	CEND
B	DSS1_Bit	Ddd	1	CLBS
B	DSS2_Bit	Ddd	15	ENBS
B	DSS2_Bit	Ddd	13	LOAD
B	DSS2_Bit	Ddd	12	TRQS
B	DSS2_Bit	Ddd	11	MODS
B	DSS2_Bit	Ddd	10	TEAC
B	DSS2_Bit	Ddd	9	JOG+
B	DSS2_Bit	Ddd	8	JOG-
B	DSS2_Bit	Ddd	7	PE7
B	DSS2_Bit	Ddd	6	PE6
B	DSS2_Bit	Ddd	5	PE5
B	DSS2_Bit	Ddd	4	PE4
B	DSS2_Bit	Ddd	3	PE3
B	DSS2_Bit	Ddd	2	PE2
B	DSS2_Bit	Ddd	1	PE1
B	DSS2_Bit	Ddd	0	PE0
B	DSSE_Bit	Ddd	15	EMGP
B	DSSE_Bit	Ddd	14	MPUV
B	DSSE_Bit	Ddd	13	RMDS
B	DSSE_Bit	Ddd	11	GHMS

Bit/Word	Device type	Format	Range	Memo
B	DSSE_Bit	Ddd	10	PUSH
B	DSSE_Bit	Ddd	9	PSNS
B	DSSE_Bit	Ddd	8	PMSS
B	DSSE_Bit	Ddd	5	MOVE
B	POSS_Bit	Ddd	9	PM512
B	POSS_Bit	Ddd	8	PM256
B	POSS_Bit	Ddd	7	PM128
B	POSS_Bit	Ddd	6	PM64
B	POSS_Bit	Ddd	5	PM32
B	POSS_Bit	Ddd	4	PM16
B	POSS_Bit	Ddd	3	PM8
B	POSS_Bit	Ddd	2	PM4
B	POSS_Bit	Ddd	1	PM2
B	POSS_Bit	Ddd	0	PM1
B	ZONS_Bit	Ddd	14	LS2
B	ZONS_Bit	Ddd	13	LS1
B	ZONS_Bit	Ddd	12	LS0
B	ZONS_Bit	Ddd	8	ZP
B	ZONS_Bit	Ddd	1	Z2
B	ZONS_Bit	Ddd	0	Z1
B	DIPM_Bit	Ddd	0 ~ 15	IN0 ~ IN15
B	DOPM_Bit	Ddd	0 ~ 15	OUT0 ~ OUT15
B	SIPM_Bit	Ddd	14	NP
B	SIPM_Bit	Ddd	12	PP
B	SIPM_Bit	Ddd	8	MDSW
B	SIPM_Bit	Ddd	4	BLCT
B	SIPM_Bit	Ddd	3	HMCK
B	SIPM_Bit	Ddd	2	OT
B	SIPM_Bit	Ddd	1	CREP
B	SIPM_Bit	Ddd	0	LS
B	EMG	D	1	
B	POSR_Bit	Ddd	0 ~ 15	
W	PNOW	D	1	
W	ALMC	D	1	
W	DIPM	D	1	
W	DOPM	D	1	
W	DSS1	D	1	

Bit/Word	Device type	Format	Range	Memo
W	DSS2	D	1	
W	DSSE	D	1	
W	STAT	D	1	
W	VNOW	D	1	
W	CNOW	D	1	
W	DEVI	D	1	
W	STIM	D	1	
W	SIPM	D	1	
W	ZONS	D	1	
W	POSS	D	1	
W	DRG1	D	1	
W	DRG2	D	1	
W	POSR_NUM	D	1	
W	PCMD	D	1	
W	INP	D	1	
W	VCMD	D	1	
W	ACMD	D	1	
W	PPOW	D	1	
W	CTLF	D	1	
W	FBFC	D	1	
W	POSR_MOV	D	1	
W	PCMD_T	DDD	0 ~ 768	
W	INP_T	DDD	0 ~ 768	
W	VCMD_T	DDD	0 ~ 768	
W	ZNMP_T	DDD	0 ~ 768	
W	ZNLP_T	DDD	0 ~ 768	
W	ACMD_T	DDD	0 ~ 768	
W	DCMD_T	DDD	0 ~ 768	
W	PPOW_T	DDD	0 ~ 768	
W	LPOW_T	DDD	0 ~ 768	
W	CTLF_T	DDD	0 ~ 768	

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2
Data+	6	1	⟷	1
GND	5	5	⟷	7

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	**5**	**9**	⟷	7

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	7

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	5	5	⟷	7

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 8P Mini-Din Male
	RS485 2W 9P Female		
Data-	1	⟷	2
Data+	2	⟷	1
GND	5	⟷	7

IAI X-SEL CONTROLLER

Website: http://www.iai-robot.co.jp/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	IAI X-SEL CONTROLLER		
PLC I/F	RS232		
Baud rate	9600	9600~19200	
Data bits	8	7 or 8	
Parity	None	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Servo_On_Off	H	1 ~ 8	Address 1~8 represent the corresponding axis. Write 1 means ON and 0 means OFF.
W	Servo_Origin	H	1 ~ 8	Address 1~8 represent the corresponding axis. Back to origin.
W	CurrentAxisPos	H	1 ~ 8	For reading current position. The state of current axis is put in RW axis*100. i.e., for the state of axis 2, 2*100=200, so it is in RW200.
W	RunProgram	H	0	Data written indicates which program to run.
W	EndProgram	H	0	Data written indicates which program to stop.
W	PointMove	H	0 ~ 8	Address 1~8 represent the corresponding axis. The data written indicates which point to reach. Put parameters ACC, DEC, SPEED in axis*100+1, axis*100+2 and axis*100+3 respectively.
W	JoggingMove	H	0 ~ 8	Jogging. Address 1~8 represent the

Bit/Word	Device type	Format	Range	Memo
				corresponding axis. Put parameters ACC, DEC, SPEED and Position in axis*100+11, axis*100+12, axis*100+13 and axis*100+14 respectively.
W	AbsoluteMove	H	0 ~ 8	Jog to the set absolute coordinate. Address 1~8 represent the corresponding axis. Put parameters ACC, DEC, SPEED and Position in axis*100+21, axis*100+22, axis*100+23 and axis*100+24 respectively.
W	PointChange	H	0 ~ 8	To change the value of the point. Address 1~8 represent the corresponding axis. Put parameters ACC, DEC, SPEED and Position in axis*100+31, axis*100+32, axis*100+33 and axis*100+34 respectively.
W	SoftWareReset	H	0	Reset soft ware.

Note: ddd: Decimal, hhh: Hexadecimal, ooo: Octal.

Each model of CPU is different; it is recommended to refer to PLC Manual Device List.

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 D-Sub Female
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 D-Sub Female
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

IAI X-SEL CONTROLLER-SSE

Website: http://www.iai-robot.co.jp/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	IAI X-SEL CONTROLLER-SSE		
PLC I/F	RS232		
Baud rate	9600	9600~19200	
Data bits	8	7 or 8	
Parity	None	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	IP_Bit	DDD	0 ~ 299	
B	OP_Bit	DDD	300 ~ 599	
B	FG_Bit	DDDDDD	0 ~ 128999	
B	AX1Status	D	0 ~ 8	
B	AX2Status	D	0 ~ 8	
B	AX3Status	D	0 ~ 8	
W	IP	DDD	0 ~ 272	
W	OP	DDD	300 ~ 572	
W	FG	DDDDDD	0 ~ 128999	
W	PDT	D	0	
W	INT	DDDDDDD	0 ~ 1281299	
W	RL	DDDDDDD	0 ~ 1281399	
W	STR	DDDDDD	0 ~ 128998	
W	AX1Sensor	D	0	
W	AX2Sensor	D	0	
W	AX3Sensor	D	0	
W	AX1Error	D	0	
W	AX2Error	D	0	
W	AX3Error	D	0	
W	AX1Encode	D	0	

Bit/Word	Device type	Format	Range	Memo
W	AX2Encode	D	0	
W	AX3Encode	D	0	
W	AX1Positio23	D	0	
W	AX2Positio24	D	0	
W	AX3Positio25	D	0	
W	PGStatus	DDD	0 ~ 255	
W	PGStepNo	DDD	0 ~ 255	
W	PGError	DDD	0 ~ 255	
W	PGErrorNo	DDD	0 ~ 255	
W	SYST	D	0 ~ 6	
W	VR	HHH	0 ~ 3FF	
W	ER0	HHHH	0 ~ FFFF	
W	ER1	HHHH	0 ~ FFFF	
W	ER2	HHHH	0 ~ FFFF	
W	ER3	HHHH	0 ~ FFFF	
W	ER4	HHHH	0 ~ FFFF	
W	ER5	HHHH	0 ~ FFFF	
W	ER6	HHHH	0 ~ FFFF	
W	ER7	HHHH	0 ~ FFFF	
W	SV	D	0	
W	RO	D	0 ~ 3	
W	ACM	D	0	
W	RCM	D	0	
W	JIM	D	0	
W	PNM	D	0	
W	PD_Set	D	0	
W	PCLR	DDDDDD	0 ~ 999999	
W	AR0	D	0	
W	PR_253	DDD	0 ~ 128	
W	PR_254	DDD	0 ~ 128	
W	PR_255	DDD	0 ~ 128	
W	PR_256	DDD	0 ~ 128	
W	PR_257	DDD	0 ~ 128	
W	SR0	D	0	
W	OPR0	D	0	
W	ChSpd	D	0	
W	PD2_Value	DDDDD	10 ~ 40960	

Bit/Word	Device type	Format	Range	Memo
W	PD3_Value	DDDDD	10 ~ 40960	
W	Stop_Canl	D	1 ~ 7	
W	PDn1Value	D	0 ~ 7	
W	PDn2Value	D	0 ~ 7	
W	PDn3Value	D	0 ~ 7	
W	PDn4Value	D	0 ~ 7	
W	PDn5Value	D	0 ~ 7	

Note: ddd: Decimal, hhh: Hexadecimal, ooo: Octal.

Each model of CPU is different; it is recommended to refer to PLC Manual Device List.

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 D-Sub Female
Rx	2	3
Tx	3	2
GND	5	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 D-Sub Female
Rx	9	3
Tx	6	2
GND	5	5

IDEC Micro

Supported Series: IDEC Micro3, Micro3C, OpenNet Controller series.
Website: http://www.idec.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	IDEC Micro		
PLC I/F	RS232	RS232, RS485	
Baud rate	9600	9600, 19200	
Data bits	7	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	255 (for 1:1 connect)	0-255	255 or same as the PLC setting

Online simulator	YES
Extend address mode	YES (Do not set the PLC Station No. to 255)

PLC Setting:

Communication mode	9600, E, 7, 1 (default), Use Computer Link Protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDDo	0 ~ 20477	Input (I)
B	Y	DDDDo	0 ~ 20477	Output (Q)
B	M	DDDDo	0 ~ 20477	Internal Relay (M)
W	RT	DDDD	0 ~ 9999	Timer (T)
W	RC	DDDD	0 ~ 9999	Counter (C)
W	D	DDDD	0 ~ 9999	Data Register (D)

Wiring Diagram:

The following is the view from the soldering point of a connector.



Micro3C, MicroSmart, OpenNet Controller CPU Ladder Port (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		Port1 or Port2 8P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	Port1 or Port2 8P Mini-DIN Male
Rx	2	3
Tx	3	4
GND	5	7

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	Port1 or Port2 8P Mini-DIN Male
Rx	9	3
Tx	6	4
GND	5	7

The following is the view from the soldering point of a connector.



Micro3 CPU Port, MicroSmart with FC4A-PC2 RS485 Communication Adapter (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	7

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2
Data+	6	1	⟷	1
GND	5	5	⟷	7

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	**5**	**9**	⟷	7

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	7

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***


HMI				PLC
	COM1	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	5	5	⟷	7

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 8P Mini-DIN Male
	RS485 2W 9P Female		
Data-	1	⟷	2
Data+	2	⟷	1
GND	5	⟷	7

The following is the view from the soldering point of a connector.

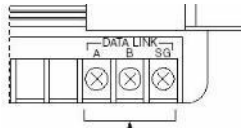

Micro3C, OpenNet Controller Data Link Terminals,MicroSmart with FC4A-PC3 RS485 Communication Adapter (Diagram 10 ~ Diagram 15)

Diagram 10

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		Data Link Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	A
Data+	2	9	⟷	B
GND	5	5	⟷	SG

Diagram 11

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		Data Link Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	A
Data+	6	1	⟷	B
GND	5	5	⟷	SG

Diagram 12

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		Data Link Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	A
Data+	2	8	⟷	B
GND	**5**	**9**	⟷	SG

Diagram 13

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		Data Link Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	A
Data+	2	9	⟷	B
GND	5	5	⟷	SG

Diagram 14

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		Data Link Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	A
Data+	2	8	⟷	B
GND	5	5	⟷	SG

Diagram 15

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		Data Link Terminal
	RS485 2W 9P Female		
Data-	1	⟷	A
Data+	2	⟷	B
GND	5	⟷	SG

IDEC MicroSmart

Supported Series: IDEC MicroSmart , SmartAxis series.
Website: http://www.idec.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	IDEC MicroSmart		
PLC I/F	RS232	RS232, RS485, Ethernet	
Baud rate	9600	9600, 19200	
Data bits	7	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	255 (for 1:1 connect)	0-255	255 or same as the PLC setting

Online simulator	YES	
Extend address mode	YES	Do not set the PLC Station No. to 255

PLC Setting:

Communication mode	9600, E, 7, 1 (default), Use Computer Link Protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 20477	Input (I)
B	Q	DDDDo	0 ~ 20477	Output (Q)
B	M	DDDDo	0 ~ 20477	Internal Relay (M)
B	R	DDDD	0 ~ 2047	Shift Register (R)
B	T	DDDD	0 ~ 2047	Timer (T)
B	C	DDDD	0 ~ 2047	Counter (C)
W	TP	DDDD	0 ~ 9999	Timer Preset
W	CP	DDDD	0 ~ 9999	Counter Preset
W	D	DDDD	0 ~ 9999	Data Register (D)
W	TC	DDDD	0 ~ 9999	Timer Current
W	CC	DDDD	0 ~ 9999	Counter Currnet

Wiring Diagram:

The following is the view from the soldering point of a connector.



MicroSmart , SmartAxis CPU Ladder Port (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		Port1 or Port2 8P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	Port1 or Port2 8P Mini-DIN Male
Rx	2	3
Tx	3	4
GND	5	7

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	Port1 or Port2 8P Mini-DIN Male
Rx	9	3
Tx	6	4
GND	5	7

The following is the view from the soldering point of a connector.



MicroSmart , SmartAxis with FC4A-PC2 RS485 Communication Adapter (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	7

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2
Data+	6	1	⟷	1
GND	5	5	⟷	7

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	**5**	**9**	⟷	7

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	7

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***


HMI				PLC
	COM1	COM3		RS485 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	5	5	⟷	7

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 8P Mini-DIN Male
	RS485 2W 9P Female		
Data-	1	⟷	2
Data+	2	⟷	1
GND	5	⟷	7

The following is the view from the soldering point of a connector.

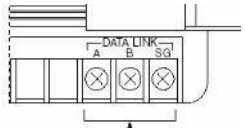

MicroSmart , SmartAxis with FC4A-PC3 RS485 Communication Adapter (Diagram 10 ~ Diagram 15)

Diagram 10

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		Data Link Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	A
Data+	2	9	⟷	B
GND	5	5	⟷	SG

Diagram 11

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		Data Link Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	A
Data+	6	1	⟷	B
GND	5	5	⟷	SG

Diagram 12

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		Data Link Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	A
Data+	2	8	⟷	B
GND	**5**	**9**	⟷	SG

Diagram 13

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		Data Link Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	A
Data+	2	9	⟷	B
GND	5	5	⟷	SG

Diagram 14

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		Data Link Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	A
Data+	2	8	⟷	B
GND	5	5	⟷	SG


Diagram 15

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		Data Link Terminal
	RS485 2W 9P Female		
Data-	1	⟷	A
Data+	2	⟷	B
GND	5	⟷	SG

Diagram 16

Ethernet cable:

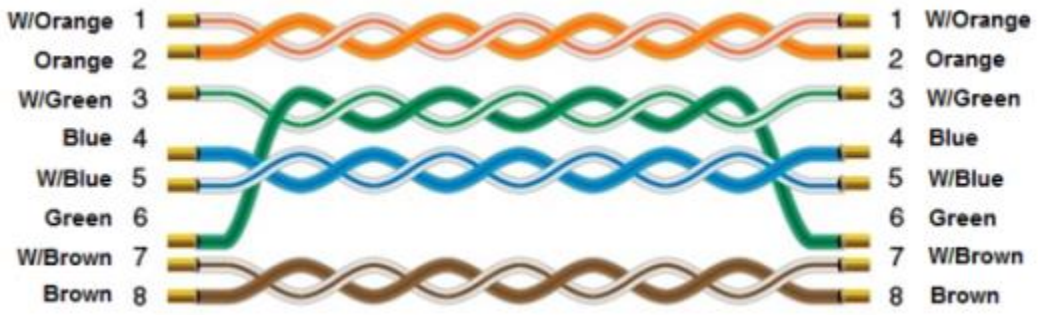

IEC 60870-5-104 IEC 104 Client

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	IEC 60870-5-104 IEC 104 Client		
PLC I/F	Ethernet		
Port no.	2404		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Single Point	DDDDDDDD	0 ~ 16777215	
B	Single Command	DDDDDDDD	0 ~ 16777215	
B	Interrogation Command	Ddd	0 ~ 015	
B	Double Point	DDDDDDDD	0 ~ 16777215	
B	Measured Scaled	DDDDDDDD	0 ~ 16777215	
B	Measured Float	DDDDDDDD	0 ~ 16777215	
B	Integrated Totals	DDDDDDDD	0 ~ 16777215	
B	Step Position	DDDDDDDD	0 ~ 16777215	
B	Bitstring 32bit	DDDDDDDD	0 ~ 16777215	
W	Double Command	DDDDDDDD	0 ~ 16777215	
W	SetPoint Scaled Command	DDDDDDDD	0 ~ 16777215	
W	SetPoint Float Command	DDDDDDDD	0 ~ 16777215	
W	Regulating Step Command	DDDDDDDD	0 ~ 16777215	
W	Bitstring Step Command	DDDDDDDD	0 ~ 16777215	

Wiring Diagram:

Diagram 1

Ethernet cable:



IEC 60870-5-104 IEC 104 Server

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	IEC 60870-5-104 IEC 104 Server		
PLC I/F	Ethernet		
Port no.	2404		
Sector	257	0 ~ 65535	*note1
Timing (T3)	10		*note2
Timing (K)	12	1 ~ 32767	*note3

*Note1: only one client can be connected at a time.

*Note2: When there's no data transfered from server or client, a keep -alive package will be sent in the specified interval of time.

*Note3: Communication will stop when the number of not received APDU reaches 12.

Device Address:


Bit/Word	Device type	Format	Range	Memo
B	Single Point	DDDDDDDD	0 ~ 16777215	
B	Single Command	DDDDDDDD	0 ~ 16777215	
B	Double Point	DDDDDDDD	0 ~ 16777215	
B	Measured Scaled	DDDDDDDD	0 ~ 16777215	
B	Measured Float	DDDDDDDD	0 ~ 16777215	
B	Integrated Totals	DDDDDDDD	0 ~ 16777215	
B	Step Position	DDDDDDDD	0 ~ 16777215	
B	Bitstring 32bit	DDDDDDDD	0 ~ 16777215	
W	Double Command	DDDDDDDD	0 ~ 16777215	
W	SetPoint Scaled Command	DDDDDDDD	0 ~ 16777215	
W	SetPoint Float Command	DDDDDDDD	0 ~ 16777215	
W	Regulating Step Command	DDDDDDDD	0 ~ 16777215	
W	Bitstring Step Command	DDDDDDDD	0 ~ 16777215	

Application:


Upper computer IEC 104 Client------HMI (IEC 104 Server) -------Modbus RTU

Periodically sends interrogation responses:

Select [Periodically sends interrogation responses] checkbox and then click [Interrogation Address Range] to set address ranges of interrogations.

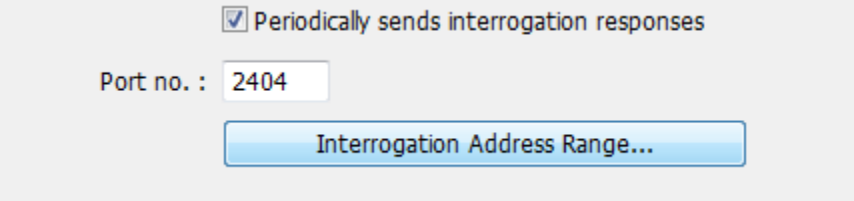


As shown below, Single Point device type in addresses range from 0 to 60 will be sent to the Client.

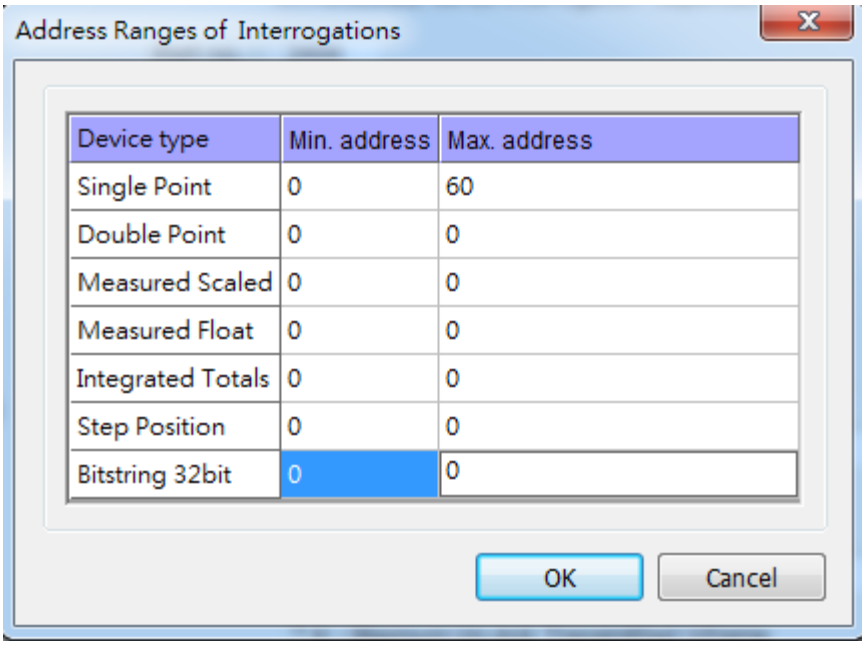


IEC104 Gateway


Set address mapping tables: Select [Enable] checkbox in IEC104 Gateway group box.

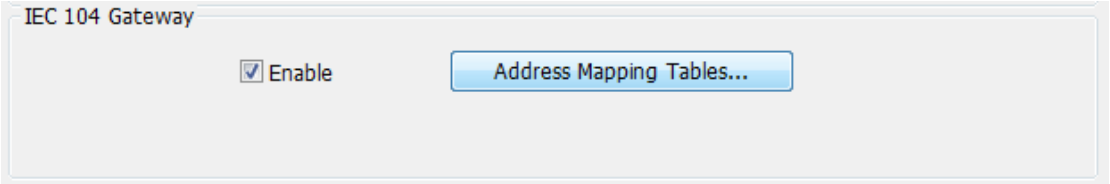


Click [Address Mapping Tables] to open Table Settings window, and map IEC 104 addresses with the ones of other devices. The applicable devices are local or Modbus PLCs.

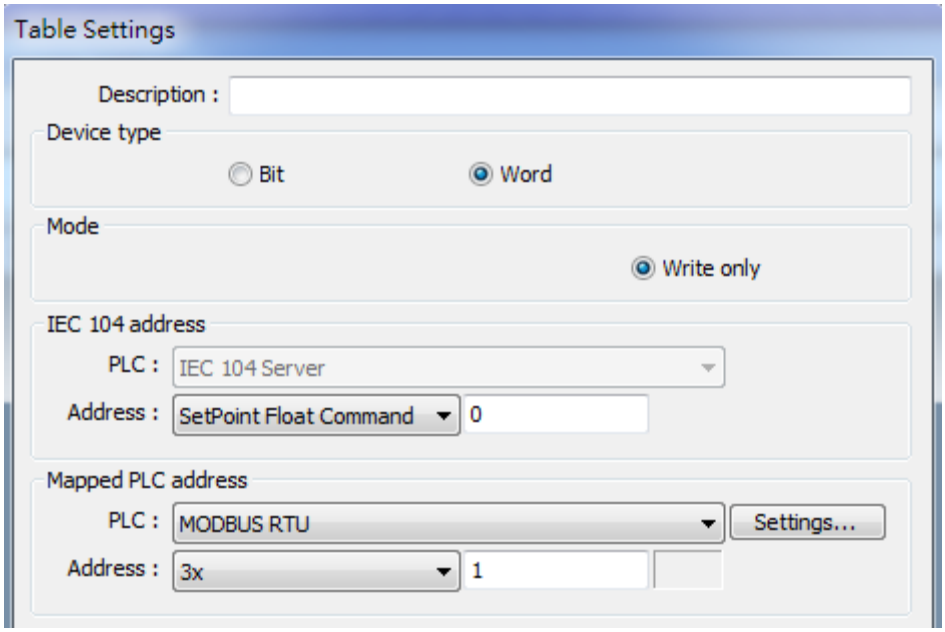

Set scaling:

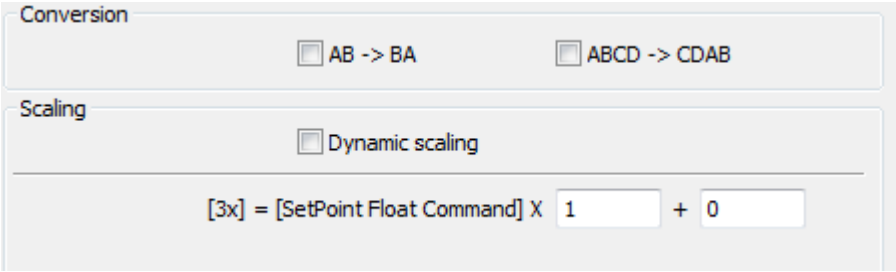

Set table size, as shown below, 12 words will be read at a time.



Wiring Diagram:

Diagram 1

Ethernet cable:



Inovance H2U/H1U

Website: http://www.inovance.cn/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Inovance H2U/H1U		
PLC I/F	RS485 4W		
Baud rate	9600	9600~19200	
Data bits	7	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 377	Input Bits
B	Y	OOO	0 ~ 377	Output Bits
B	M	DDDD	0 ~ 7999	Auxiliary Relay
B	T	DDD	0 ~ 255	Timer Relay
B	C	DDD	0 ~ 255	Counter Relay
B	SM	DDDD	8000 ~ 9999	Special Auxiliary Relay
B	D_Bit	DDDDdd	0 ~ 799915	
B	S	DDDD	0 ~ 4095	
W	TV	DDD	0 ~ 255	Timer Memory
W	CV	DDD	0 ~ 199	Counter Memory
W	D	DDDD	0 ~ 7999	Data Registers
DW	CV2	DDD	200 ~ 255	Counter Memory (32bit)
W	SD	DDDD	8000 ~ 9999	Special Data Register

Note: ddd: Decimal, hhh: Hexadecimal, ooo: Octal.

Each model of CPU is different, it is recommended to refer to PLC Manual Device List.

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		H2U/H1U RS422 8P Mini-DIN Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		H2U/H1U RS422 8P Mini-DIN Male
Rx-	7	⟷	4
Rx+	6	⟷	7
Tx-	9	⟷	1
TX+	8	⟷	2
GND	5	⟷	3

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		H2U/H1U RS422 8P Mini-DIN Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		H2U/H1U RS422 8P Mini-DIN Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3


JTEKT Toyopuc CMP-Link (Ethernt)

Supported series: Toyopuc PC10G
Website: http://www.jtekt.co.jp/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	JTEKT Toyopuc CMP-Link (Ethernt)		
PLC I/F	Ethernet		
Port no.	4096	1024 ~ 65534	

PLC Setting:

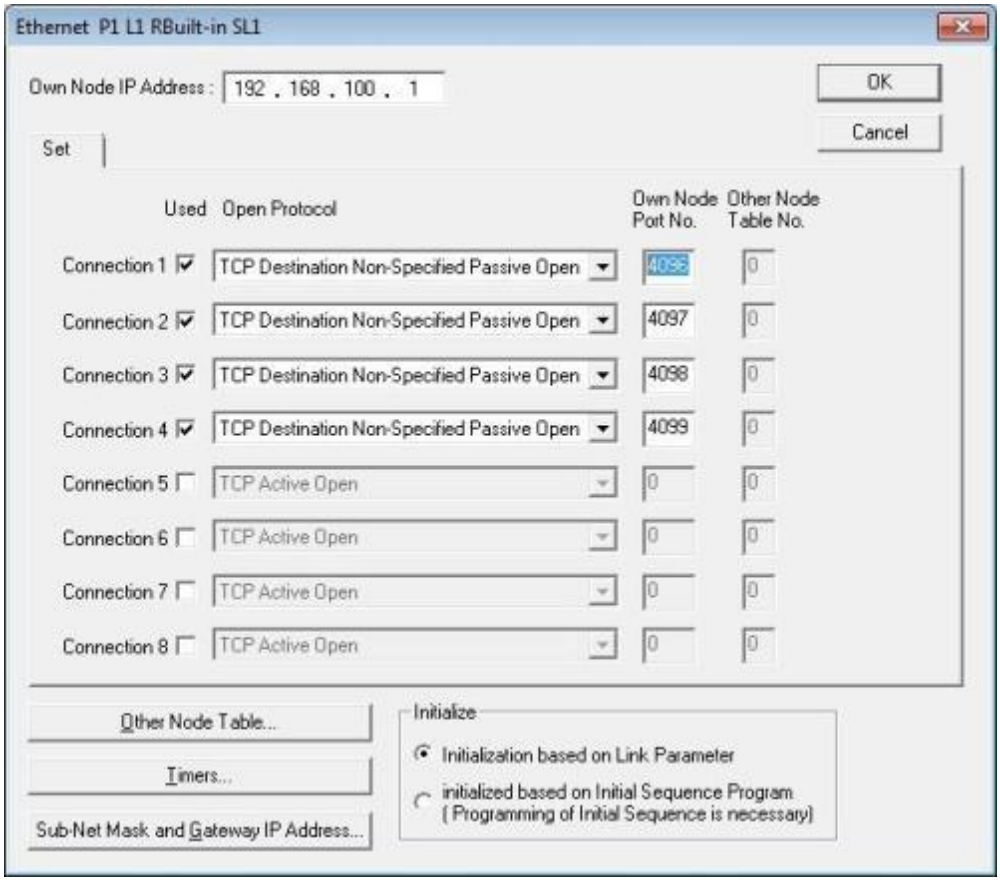

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	1X	HHh	0 ~ 7FF	
B	2X	HHh	0 ~ 7FF	
B	3X	HHh	0 ~ 7FF	
B	1Y	HHh	0 ~ 7FF	
B	2Y	HHh	0 ~ 7FF	
B	3Y	HHh	0 ~ 7FF	
B	1M	HHh	0 ~ 7FF	
B	2M	HHh	0 ~ 7FF	
B	3M	HHh	0 ~ 7FF	
B	1K	HHh	0 ~ 7FF	
B	2K	HHh	0 ~ 7FF	
B	3K	HHh	0 ~ 7FF	
B	1L	HHh	0 ~ 7FF	
B	2L	HHh	0 ~ 7FF	
B	3L	HHh	0 ~ 7FF	
B	1V	Hh	0 ~ FF	
B	2V	Hh	0 ~ FF	
B	3V	Hh	0 ~ FF	
B	1T	HHh	0 ~ 7FF	
B	2T	HHh	0 ~ 7FF	
B	3T	HHh	0 ~ 7FF	
B	1C	HHh	0 ~ 7FF	
B	2C	HHh	0 ~ 7FF	
B	3C	HHh	0 ~ 7FF	
B	1S	HHHh	0 ~ 3FFF	
B	2S	HHHh	0 ~ 3FFF	
B	3S	HHHh	0 ~ 3FFF	
B	1N	HHHh	0 ~ 1FFF	
B	2N	HHHh	0 ~ 1FFF	
B	3N	HHHh	0 ~ 1FFF	
B	1D	HHHHh	0 ~ 2FFFF	
B	2D	HHHHh	0 ~ 2FFFF	
B	3D	HHHHh	0 ~ 2FFFF	
B	1R	HHHh	0 ~ 7FFF	
B	2R	HHHh	0 ~ 7FFF	


Bit/Word	Device type	Format	Range	Memo
B	3R	HHHh	0 ~ 7FFF	
B	B	HHHHh	0 ~ 1FFFF	
B	H	HHHh	0 ~ 7FFF	
B	U	HHHHHh	0 ~ 1FFFFF	
B	EX	HHh	0 ~ 7FF	
B	EY	HHh	0 ~ 7FF	
B	EM	HHHh	0 ~ 1FFF	
B	EK	HHh	0 ~ FFF	
B	EL	HHHh	0 ~ 1FFF	
B	EV	HHHh	0 ~ 1FFF	
B	ET	HHh	0 ~ 7FF	
B	EC	HHh	0 ~ 7FF	
B	ES	HHHh	0 ~ 7FFF	
B	EN	HHHh	0 ~ 7FFF	
B	GX	HHHh	0 ~ FFFF	
B	GY	HHHh	0 ~ FFFF	
B	GM	HHHh	0 ~ FFFF	
B	EB	HHHHHh	0 ~ 3FFFFF	
B	FR	HHHHHh	0 ~ 1FFFFF	
W	1XW	HH	0 ~ 7F	
W	2XW	HH	0 ~ 7F	
W	3XW	HH	0 ~ 7F	
W	1YW	HH	0 ~ 7F	
W	2YW	HH	0 ~ 7F	
W	3YW	HH	0 ~ 7F	
W	1MW	HH	0 ~ 7F	
W	2MW	HH	0 ~ 7F	
W	3MW	HH	0 ~ 7F	
W	1KW	HH	0 ~ 2F	
W	2KW	HH	0 ~ 2F	
W	3KW	HH	0 ~ 2F	
W	1LW	HH	0 ~ 7F	
W	2LW	HH	0 ~ 7F	
W	3LW	HH	0 ~ 7F	
W	1VW	H	0 ~ F	
W	2VW	H	0 ~ F	
W	3VW	H	0 ~ F	

Bit/Word	Device type	Format	Range	Memo
W	1TW	HH	0 ~ 1F	
W	2TW	HH	0 ~ 1F	
W	3TW	HH	0 ~ 1F	
W	1CW	HH	0 ~ 1F	
W	2CW	HH	0 ~ 1F	
W	3CW	HH	0 ~ 1F	
W	1SW	HHH	0 ~ 3FF	
W	2SW	HHH	0 ~ 3FF	
W	3SW	HHH	0 ~ 3FF	
W	1NW	HHH	0 ~ 1FF	
W	2NW	HHH	0 ~ 1FF	
W	3NW	HHH	0 ~ 1FF	
W	1DW	HHHH	0 ~ 2FFF	
W	2DW	HHHH	0 ~ 2FFF	
W	3DW	HHHH	0 ~ 2FFF	
W	1RW	HHH	0 ~ 7FF	
W	2RW	HHH	0 ~ 7FF	
W	3RW	HHH	0 ~ 7FF	
W	BW	HHHH	0 ~ 1FFF	
W	HW	HHH	0 ~ 7FF	
W	UW	HHHHH	0 ~ 1FFFF	
W	EXW	HH	0 ~ 7F	
W	EYW	HH	0 ~ 7F	
W	EMW	HHH	0 ~ 1FF	
W	EKW	HH	0 ~ FF	
W	ELW	HHH	0 ~ 1FF	
W	EVW	HHH	0 ~ 1FF	
W	ETW	HH	0 ~ 7F	
W	ECW	HH	0 ~ 7F	
W	ESW	HHH	0 ~ 7FF	
W	ENW	HHH	0 ~ 7FF	
W	GXW	HHH	0 ~ FFF	
W	GYW	HHH	0 ~ FFF	
W	GMW	HHH	0 ~ FFF	
W	WT	H	0 ~ 6	
W	EBW	HHHHH	0 ~ 3FFFF	
W	FRW	HHHHH	0 ~ 1FFFF	

Wiring Diagram:

Diagram 1

Ethernet cable:

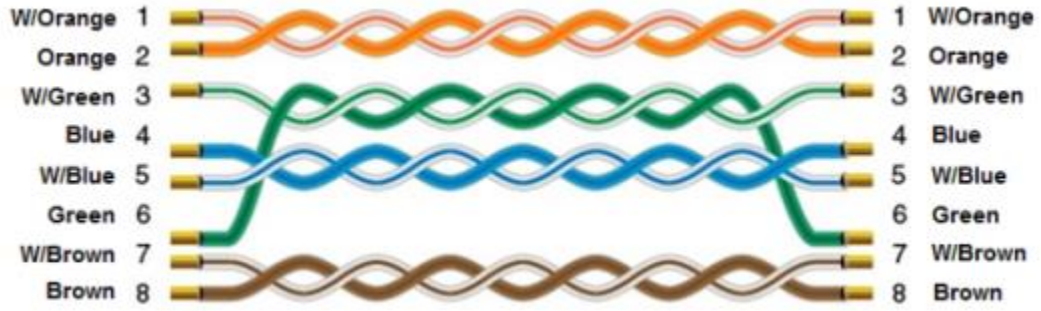

JTEKT Toyopuc PCk05

Supported Series: JTEKT Toyopuc PCk05
Website: http://www.jtekt.co.jp/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	JTEKT Toyopuc PCk05		
PLC I/F	RS232		
Baud rate	9600	9600, 19200, 38400	
Data bits	8		
Parity	Odd	Odd, Even, None	
Stop bits	1	1, 2	
PLC sta. no.	N/A		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	K_Bit	Hh	0 ~ ff	
B	V_Bit	Hh	0 ~ ff	
B	T_Bit	Hh	0 ~ 7f	
B	1C_Bit	Hh	0 ~ 7f	
B	L_Bit	HHh	0 ~ 7ff	
B	X_Bit	Hh	0 ~ ff	
B	4Y_Bit	Hh	0 ~ ff	
B	M_Bit	Hh	0 ~ ff	
B	4M_Bit	Hh	0 ~ ff	
B	S_Bit	HHh	0 ~ 7ff	
B	N_Bit	HHh	0 ~ 7ff	
B	1N_Bit	HHh	0 ~ 7ff	
B	D_Bit	HHHh	0 ~ cfff	
W	K	H	0 ~ f	
W	V	H	0 ~ f	
W	T	H	0 ~ 7	
W	1C	H	0 ~ 7	
W	L	HH	0 ~ 7f	
W	X	H	0 ~ f	
W	4Y	H	0 ~ f	
W	M	H	0 ~ f	

Bit/Word	Device type	Format	Range	Memo
W	4M	H	0 ~ f	
W	S	HH	0 ~ 7f	
W	N	HH	0 ~ 7f	
W	1N	HH	0 ~ 7f	
W	D	HHH	0 ~ cff	

Wiring Diagram:

RS232 CPU Port1 and Port2 (Diagram 1 ~ Diagram 3)

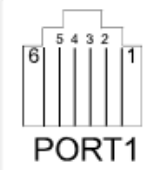


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RJ12 RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	4
Tx	3	7	⟷	3
GND	5	5	⟷	1

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RJ12 RS232
Rx	2	⟷	4
Tx	3	⟷	3
GND	5	⟷	1

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RJ12 RS232
Rx	9	⟷	4
Tx	6	⟷	3
GND	5	⟷	1

JTEKT Toyopuc PCk06

Supported Series: JTEKT Toyopuc PCk06
Website: http://www.jtekt.co.jp/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	JTEKT Toyopuc PCk06		
PLC I/F	RS232	RS232	
Baud rate	9600	9600, 19200, 38400	
Data bits	8		
Parity	Odd	Odd, Even, None	
Stop bits	1	1, 2	
PLC sta. no.	N/A		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	K_Bit	Hh	0 ~ ff	
B	1K_Bit	Hh	0 ~ ff	
B	V_Bit	Hh	0 ~ ff	
B	T_Bit	Hh	0 ~ ff	
B	1C_Bit	Hh	0 ~ 7f	
B	L_Bit	HHh	0 ~ 7ff	
B	X_Bit	Hh	0 ~ ff	
B	1X_Bit	Hh	0 ~ ff	
B	4Y_Bit	Hh	0 ~ ff	
B	5Y_Bit	Hh	0 ~ ff	
B	M_Bit	Hh	0 ~ ff	
B	1M_Bit	Hh	0 ~ ff	
B	4M_Bit	Hh	0 ~ ff	
B	S_Bit	HHHh	0 ~ 3fff	
B	N_Bit	HHh	0 ~ fff	
B	1N_Bit	HHh	0 ~ 7ff	
B	D_Bit	HHHh	0 ~ cfff	
B	1D_Bit	HHHh	0 ~ ffff	
W	K	H	0 ~ f	
W	1K	H	0 ~ f	
W	V	H	0 ~ f	

Bit/Word	Device type	Format	Range	Memo
W	T	H	0 ~ f	
W	1C	H	0 ~ 7	
W	L	HH	0 ~ 7f	
W	X	H	0 ~ f	
W	1X	H	0 ~ f	
W	4Y	H	0 ~ f	
W	5Y	H	0 ~ f	
W	M	H	0 ~ f	
W	1M	H	0 ~ f	
W	4M	H	0 ~ f	
W	S	HHH	0 ~ 3ff	
W	N	HH	0 ~ ff	
W	1N	HH	0 ~ 7f	
W	D	HHH	0 ~ cff	
W	1D	HHH	0 ~ fff	

Wiring Diagram:

RS232 CPU Port1 (Diagram 1 ~ Diagram 3)

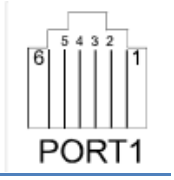


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RJ12 RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	4
Tx	3	7	⟷	3
GND	5	5	⟷	1

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RJ12 RS232
Rx	2	⟷	4
Tx	3	⟷	3
GND	5	⟷	1

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RJ12 RS232
Rx	9	⟷	4
Tx	6	⟷	3
GND	5	⟷	1

RS232 CPU Port2 (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 15P D-SUB Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	7

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 15P D-SUB Male
	RS232 9P Female		
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	7

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 15P D-SUB Male
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	7

Justfi Controller

Supported Series: Justfi weighing instruments, Industrial Batching Controller supports XK31CB4, XK31CB6.
Website: http://www.justfi.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Justfi controller		
PLC I/F	RS232		
Baud rate	9600	9600, 19200	
Data bits	7	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Func	DD	0 ~ 99	Read / Write
DW	Func_DW	DD	0 ~ 99	Read / Write
W	RW	H	0	Weight (read only)
W	RF	H	0	Read result (read only)
W	RT	H	0	Read total (read only)
W	RG	H	0	Read prescription group
W	RC	H	0	Circle
W	RB	H	0	Read status (read only)
W	MZ	H	0	Zero (write only)
W	MT	H	0	Tare (write only)
W	CT	H	0	Clear tare (write only)
W	DT	H	0	Clear total (write only)
W	BB	H	0	Start (write only)
W	HB	H	0	Stop (write only)
W	BD	H	0	Discharge (write only)
W	RP1t …. RP6F	H	0	Read/Write recipe

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		CB4 RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TD
Tx	3	7	⟷	RD
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		CB4 RS232
	RS232 9P Female		
Rx	2	⟷	TD
Tx	3	⟷	RD
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		CB4 RS232
Rx	9	⟷	TD
Tx	6	⟷	RD
GND	5	⟷	GND

Kernel sistemi DMX Series

Supported Series: Kernel systemi DMX 30
Website: http://www.kernelgroup.it/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Kernel sistemi DMX Series		
PLC I/F	RS232	RS485	
Baud rate	19200	9600	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		Must match the PLC port setting

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	D	HHHH	0 ~ ffff	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		DMX30 RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		DMX30 RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		DMX30 RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

KEYENCE KV-10/16/24/40/80/Visual KV Series

Supported Series: KEYENCE KV series, KV16~80
Website: http://www.keyence.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KEYENCE KV-10/16/24/40/80/Visual KV Series		
PLC I/F	RS232	RS232	
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	RLY	DDDdd0*	0 ~ 655150*	dd:0 ~ 15
B	DM_Bit	DDDDDh	0 ~ 65535f	
W	DM	DDDDD	0 ~ 65535	
W	TM	DDDD	0 ~ 8999	
W	T	DDDD	0 ~ 9999	
W	T_Curr	DDDD	0 ~ 9999	Timer_Current
W	T_Preset	DDDD	0 ~ 9999	
W	C	DDDD	0 ~ 9999	
W	C_Curr	DDDD	0 ~ 9999	Counter_Current
W	C_Preset	DDDD	0 ~ 9999	

Note:*
If Relay (bit) register is used, please place a zero at the end of the address.
For example, to read Relay (bit) 100, the address is written as “1000”.

Wiring Diagram:

RS232 CPU Port (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		OP-26486 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	OP-26486 9P D-Sub Male
Rx	2	3
Tx	3	2
GND	5	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	OP-26486 9P D-Sub Male
Rx	9	3
Tx	6	2
GND	5	5

9P D-Sub to 6P RJ11 (Diagram 4 ~ Diagram 6)



Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P RJ11 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	4
GND	5	5	⟷	3

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P RJ11 Male
Rx	2	⟷	2
Tx	3	⟷	4
GND	5	⟷	3

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P RJ11 Male
Rx	9	⟷	2
Tx	6	⟷	4
GND	5	⟷	3

KEYENCE KV-3000

Supported Series: KEYENCE KV-3000
Website: http://www.keyence.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KEYENCE KV-3000		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

PLC Setting:

Communication mode	KV STUDIO mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MR	DDDdd	0 ~ 99915	Intenal auxiliary relay
B	LR	DDDdd	0 ~ 99915	Latch relay
B	CR	DDDdd	0 ~ 99915	Control relay
B	R	DDDdd	0 ~ 99915	Relay
B	B	HHHh	0 ~ 3FFF	Link Relay
B	T	DDDD	0 ~ 9999	Timer
B	C	DDDD	0 ~ 9999	Counter
B	DM_Bit	DDDDDdd	0 ~ 6553515	
B	TM_Bit	DDDDdd	0 ~ 999915	
B	CM_Bit	DDDDDdd	0 ~ 6553515	
B	EM_Bit	DDDDDdd	0 ~ 6553515	
B	FM_Bit	DDDDDdd	0 ~ 6553515	

Bit/Word	Device type	Format	Range	Memo
W	DM	DDDDD	0 ~ 65535	Data memory
W	TM	DDDD	0 ~ 9999	Temp data momory
W	CM	DDDDD	0 ~ 65535	Control memory
W	EM	DDDDD	0 ~ 65535	Data memory
W	FM	DDDDD	0 ~ 65535	File register
W	MR_Word	DDD	0 ~ 999	
W	LR_Word	DDD	0 ~ 999	
W	CR_Word	DDD	0 ~ 999	
W	W	HHHH	0 ~ 3FFF	Link register
W	ZF	DDDDDD	0 ~ 131071	File register
DW	TC	DDDD	0 ~ 9999	Timer current value
DW	TS	DDDD	0 ~ 9999	Timer set value
DW	CC	DDDD	0 ~ 9999	Counter current value
DW	CS	DDDD	0 ~ 9999	Counter set value
DW	Z	DD	1 ~ 12	
DW	TRM	D	0 ~ 7	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 4P RJ11 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	1
Tx	3	7	↔	3
GND	5	5	↔	2

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 4P RJ11 Male
Rx	2	1
Tx	3	3
GND	5	2

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 4P RJ11 Male
Rx	9	1
Tx	6	3
GND	5	2

KEYENCE KV-L20V/700/1000/3000/5000/Nano Series

Supported series: KV-L20V,700,1000,3000,5000 series, KV Nano series
Website: http://www.keyence.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KEYENCE KV-L20V/700/1000/3000/5000/Nano Series		
PLC I/F	RS232	RS232,RS485 2W,RS485 4W	
Baud rate	115200	9600 ~ 115200	
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		

Online simulator	YES	**Extend address mode**	NO

PLC Setting:

Communication mode	KV mode (host link)

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MR	DDDDdd	0 ~ 399915	Intenal auxiliary relay
B	LR	DDDdd	0 ~ 99915	Latch relay
B	CR	DDDdd	0 ~ 99915	Control relay
B	RLY	DDDdd	0 ~ 99915	Relay
B	B	HHHh	0 ~ 7FFF	Link relay
B	T_Bit	DDDD	0 ~ 9999	Timer
B	C_Bit	DDDD	0 ~ 9999	Counter
B	DM_Bit	DDDDDdd	0 ~	Data memory bit
B	TM_Bit	DDDDdd	0 ~ 999915	Temporary data memory bit
B	CM_Bit	DDDDDdd	0 ~	Control memory bit
B	EM_Bit	DDDDDdd	0 ~	Data memory
B	FM_Bit	DDDDDdd	0 ~	File register bit

Bit/Word	Device type	Format	Range	Memo
B	CTC_Bit	D	0 ~ 7	
B	ZF_Bit	DDDDDDdd	0 ~	File register (SQ)
B	W_Bit	HHHHh	0 ~ 7FFFF	Link register bit
B	VM_Bit	DDDDDdd	0 ~	
B	VB_Bit	HHHHh	0 ~ F9FF	
'W	DM	DDDDD	0 ~ 65535	Data memory
W	TM	DDDD	0 ~ 9999	Temporary data memory
W	W	HHHH	0 ~ 7FFF	Link register
W	VM	DDDDD	0 ~ 65535	
W	CM	DDDDD	0 ~ 65535	Control memory
W	EM	DDDDD	0 ~ 65535	Data memory
W	FM	DDDDD	0 ~ 65535	File register
W	MR_Word	DDDD	0 ~ 3999	Intenal auxiliary relay
W	LR_Word	DDD	0 ~ 999	Latch relay
W	CR_Word	DDD	0 ~ 999	Control relay
W	ZF	DDDDDD	0 ~ 524287	File register (SQ)
W	VB	HHH	0 ~ F9F	
W	RLY_Word	DDD	0 ~ 999	Relay
W	B_Word	HHH	0 ~ 7FF	Link relay
W	T	DDDD	0 ~ 9999	Timer
W	C	DDDD	0 ~ 9999	Counter
W	T_Curr	DDDD	0 ~ 9999	Timer current
W	T_Preset	DDDD	0 ~ 9999	Timer preset
W	C_Curr	DDDD	0 ~ 9999	Counter current
W	C_Preset	DDDD	0 ~ 9999	Counter preset
W	TRM	D	0 ~ 7	
W	Z	DD	1 ~ 12	
W	CTH	D	0 ~ 3	
W	CTC	D	0 ~ 7	

Wiring Diagram:

OP-26486 RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		OP-26486 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	OP-26486 9P D-Sub Male
Rx	2	3
Tx	3	2
GND	5	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	OP-26486 9P D-Sub Male
Rx	9	3
Tx	6	2
GND	5	5

KV-L20V Port2 RS232 terminal (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		KV-L20V Port2 RS232 terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	5
GND	5	5	⟷	1

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		KV-L20V Port2 RS232 terminal
	RS232 9P Female		
Rx	2	⟷	3
Tx	3	⟷	5
GND	5	⟷	1

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	KV-L20V Port2 RS232 terminal
Rx	9	3
Tx	6	5
GND	5	1

KV-L20V Port2 RS485 2W terminal (Diagram 7 ~ Diagram 12)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI			PLC
	COM1 RS485 2W 9P Male	COM3 RS485 2W 9P Male	KV-L20V Port2 RS485 2W terminal
Data-	1	6	3
Data+	2	9	5
GND	5	5	1

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	3
Data+	6	1	⟷	5
GND	5	5	⟷	1

Diagram 9

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	3
Data+	2	8	⟷	5
GND	**5**	**9**	⟷	1

Diagram 10

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	3
Data+	2	9	⟷	5
GND	5	5	⟷	1

Diagram 11

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	3
Data+	2	8	⟷	5
GND	5	5	⟷	1

Diagram 12

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2 RS485 2W 9P Female		KV-L20V Port2 RS485 2W terminal
Data-	1	⟷	3
Data+	2	⟷	5
GND	5	⟷	1

KV-L20V Port2 RS485 4W terminal (Diagram 13 ~ Diagram 16)

Diagram 13

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		KV-L20V Port2 RS485 4W terminal
Rx-	1	⟷	3
Rx+	2	⟷	5
Tx-	3	⟷	2
TX+	4	⟷	4
GND	5	⟷	1

Diagram 14

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		KV-L20V Port2 RS485 4W terminal
Rx-	7	⟷	3
Rx+	6	⟷	5
Tx-	9	⟷	2
TX+	8	⟷	4
GND	5	⟷	1

Diagram 15

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		KV-L20V Port2 RS485 4W terminal
Rx-	1	⟷	3
Rx+	2	⟷	5
Tx-	3	⟷	2
TX+	4	⟷	4
GND	5	⟷	1

Diagram 16

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		KV-L20V Port2 RS485 4W terminal
Rx-	1	⟷	3
Rx+	2	⟷	5
Tx-	3	⟷	2
TX+	4	⟷	4
GND	5	⟷	1

KEYENCE KV-L20V/700/1000/3000/5000/7500/Nano Series (Ethernet)

Supported series: KV-L20V,700,1000,3000,5000 series, KV Nano series
Website: http://www.keyence.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KEYENCE KV-L20V/700/1000/3000/5000/7500/Nano		
PLC I/F	Ethernet		
Port no.	8501		
PLC sta. no.	0		

Device Address:


Bit/Word	Device type	Format	Range	Memo
B	MR	DDDDdd	0 ~ 399915	Intenal auxiliary relay
B	LR	DDDdd	0 ~ 99915	Latch relay
B	CR	DDDdd	0 ~ 99915	Control relay
B	RLY	DDDdd	0 ~ 99915	Relay
B	B	HHHh	0 ~ 7FFF	Link relay
B	T_Bit	DDDD	0 ~ 9999	Timer
B	C_Bit	DDDD	0 ~ 9999	Counter
B	DM_Bit	DDDDDdd	0 ~ 6553515	Data memory bit
B	TM_Bit	DDDDdd	0 ~ 999915	Temporary data memory bit
B	CM_Bit	DDDDDdd	0 ~ 6553515	Control memory bit
B	EM_Bit	DDDDDdd	0 ~ 6553515	Data memory
B	FM_Bit	DDDDDdd	0 ~ 6553515	File register bit
B	CTC_Bit	D	0 ~ 7	
B	ZF_Bit	DDDDDDdd	0 ~ 52428715	File register (SQ)
B	W_Bit	HHHHh	0 ~ 7FFFF	Link register bit
B	VM_Bit	DDDDDdd	0 ~ 6553515	
B	VB_Bit	HHHHh	0 ~ F9FF	
'W	DM	DDDDD	0 ~ 65535	Data memory
W	TM	DDDD	0 ~ 9999	Temporary data memory

Bit/Word	Device type	Format	Range	Memo
W	W	HHHH	0 ~ 7FFF	Link register
W	VM	DDDDD	0 ~ 65535	
W	CM	DDDDD	0 ~ 65535	Control memory
W	EM	DDDDD	0 ~ 65535	Data memory
W	FM	DDDDD	0 ~ 65535	File register
W	MR_Word	DDDD	0 ~ 3999	Intenal auxiliary relay
W	LR_Word	DDD	0 ~ 999	Latch relay
W	CR_Word	DDD	0 ~ 999	Control relay
W	ZF	DDDDDD	0 ~ 524287	File register (SQ)
W	VB	HHH	0 ~ F9F	
W	RLY_Word	DDD	0 ~ 999	Relay
W	B_Word	HHH	0 ~ 7FF	Link relay
W	T	DDDD	0 ~ 9999	Timer
W	C	DDDD	0 ~ 9999	Counter
W	T_Curr	DDDD	0 ~ 9999	Timer current
W	T_Preset	DDDD	0 ~ 9999	Timer preset
W	C_Curr	DDDD	0 ~ 9999	Counter current
W	C_Preset	DDDD	0 ~ 9999	Counter preset
W	TRM	D	0 ~ 7	
W	Z	DD	1 ~ 12	
W	CTH	D	0 ~ 3	
W	CTC	D	0 ~ 7	

Wiring Diagram:

Diagram 1

Ethernet cable:

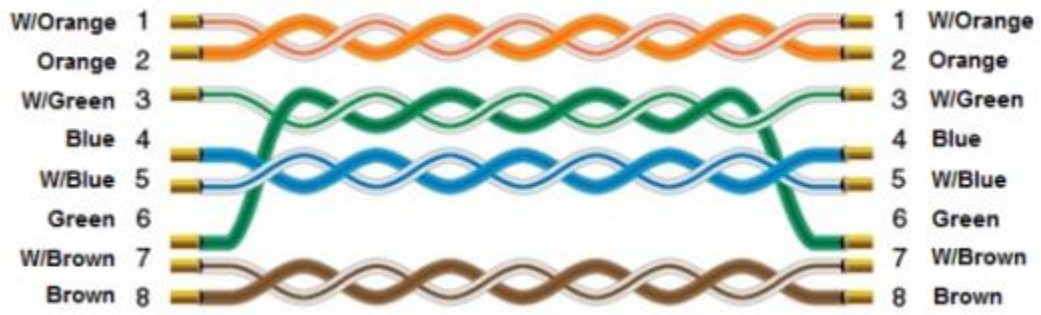

KEYENCE KV-L20V/700/1000/3000/5000/Nano Series (KV Studio Mode)

Supported series: KV-L20V,700,1000,3000,5000 series, KV Nano series
Website: http://www.keyence.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KEYENCE KV-L20V/700/1000/3000/5000/Nano Series (KV Studio Mode)		
PLC I/F	RS232	RS232,RS485 2W,RS485 4W	
Baud rate	115200	9600 ~ 115200	
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		

Online simulator	YES	**Extend address mode**	NO

PLC Setting:

Communication mode	KV STUDIO mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MR	DDDdd	0 ~ 99915	
B	LR	DDDdd	0 ~ 99915	
B	CR	DDDdd	0 ~ 99915	
B	R	DDDdd	0 ~ 99915	
B	B	HHHh	0 ~ 3FFF	
B	T	DDDD	0 ~ 9999	
B	C	DDDD	0 ~ 9999	
B	DM_Bit	DDDDDdd	0 ~ 6553515	
B	TM_Bit	DDDDdd	0 ~ 999915	
B	CM_Bit	DDDDDdd	0 ~ 6553515	
B	CTC_Bit	Ddd	0 ~ 315	

Bit/Word	Device type	Format	Range	Memo
B	W_Bit	HHHHh	0 ~ 3FFFF	
B	VM_Bit	DDDDDdd	0 ~ 6553515	
B	VB_Bit	HHHh	0 ~ 3FFF	
W	DM	DDDDD	0 ~ 65535	
W	TM	DDDD	0 ~ 9999	
W	CM	DDDDD	0 ~ 65535	
W	EM	DDDDD	0 ~ 65535	
W	FM	DDDDD	0 ~ 65535	
W	MR_Word	DDD	0 ~ 999	
W	LR_Word	DDD	0 ~ 999	
W	CR_Word	DDD	0 ~ 999	
W	W	HHHH	0 ~ 3FFF	
W	VM	DDDDD	0 ~ 65535	
W	VB	HHH	0 ~ 3FFF	
W	R_Word	DDD	0 ~ 999	
W	B_Word	HHH	0 ~ 3FF	
W	TC	DDDD	0 ~ 9999	
W	TS	DDDD	0 ~ 9999	
W	CC	DDDD	0 ~ 9999	
W	CS	DDDD	0 ~ 9999	
DW	CTH	D	0 ~ 1	
DW	CTC	D	0 ~ 3	
DW	Z_DWORD	DD	1 ~ 12	

Wiring Diagram:

OP-26486 9P RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		OP-26486 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		OP-26486 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1		OP-26486 9P D-Sub Male
	RS232 9P Female		
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

KV-L20V Port2 RS232 terminal (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		KV-L20V Port2 RS232 terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	5
GND	5	5	⟷	1

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		KV-L20V Port2 RS232 terminal
Rx	2	⟷	3
Tx	3	⟷	5
GND	5	⟷	1

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		KV-L20V Port2 RS232 terminal
Rx	9	⟷	3
Tx	6	⟷	5
GND	5	⟷	1

KV-L20V Port2 RS485 2W (Diagram 7 ~ Diagram 12)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	3
Data+	2	9	⟷	5
GND	5	5	⟷	1

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	3
Data+	6	1	⟷	5
GND	5	5	⟷	1

Diagram 9

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	3
Data+	2	8	⟷	5
GND	**5**	**9**	⟷	1

Diagram 10

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	3
Data+	2	9	⟷	5
GND	5	5	⟷	1

Diagram 11

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	3
Data+	2	8	⟷	5
GND	5	5	⟷	1

Diagram 12

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		KV-L20V Port2 RS485 2W terminal
	RS485 2W 9P Female		
Data-	1	⟷	3
Data+	2	⟷	5
GND	5	⟷	1

KV-L20V Port2 RS485 4W (Diagram 13 ~ Diagram 16)

Diagram 13

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		KV-L20V Port2 RS485 4W terminal
Rx-	1	↔	3
Rx+	2	↔	5
Tx-	3	↔	2
TX+	4	↔	4
GND	5	↔	1

Diagram 14

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		KV-L20V Port2 RS485 4W terminal
Rx-	7	↔	3
Rx+	6	↔	5
Tx-	9	↔	2
TX+	8	↔	4
GND	5	↔	1

Diagram 15

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		KV-L20V Port2 RS485 4W terminal
Rx-	1	⟷	3
Rx+	2	⟷	5
Tx-	3	⟷	2
TX+	4	⟷	4
GND	5	⟷	1

Diagram 16

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		KV-L20V Port2 RS485 4W terminal
Rx-	1	⟷	3
Rx+	2	⟷	5
Tx-	3	⟷	2
TX+	4	⟷	4
GND	5	⟷	1

KONNEX KNXnet/IP

Supported series: WAGO 750-849

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	KONNEX KNXnet/IP		
PLC I/F	Ethernet		USE UDP
Multi. Cast IP address	224.0.23.12		
Port no.	3671		

Support Device Type:


Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
Array	String	

PLC Setting:


1. Export Tag file using ETS3 software.

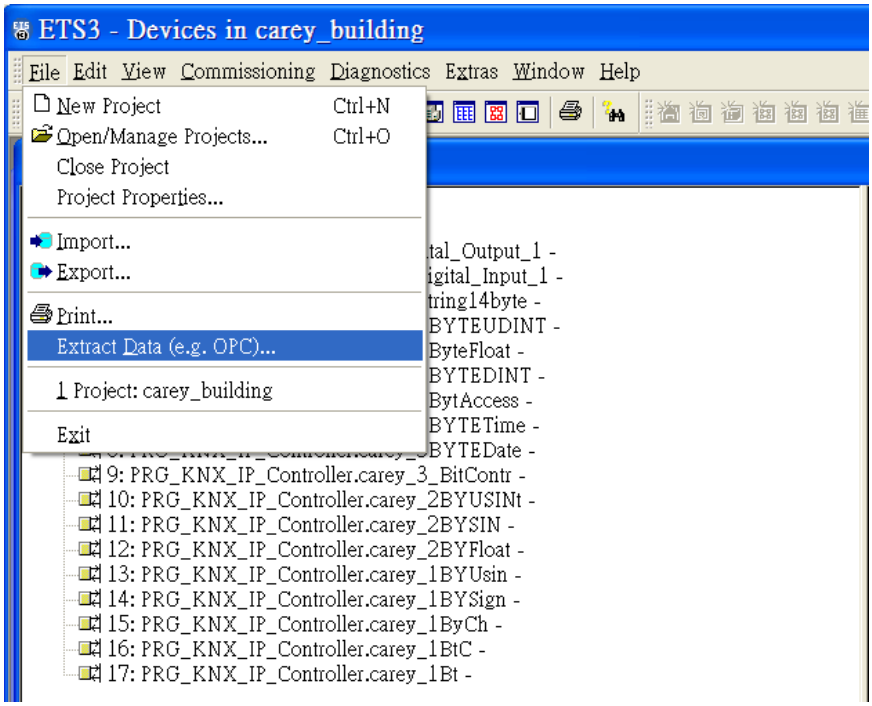


2. In EasyBuilder open System Parameter Settings, add **KONNEX KNXnet/IP** and then click [Import Tag…].

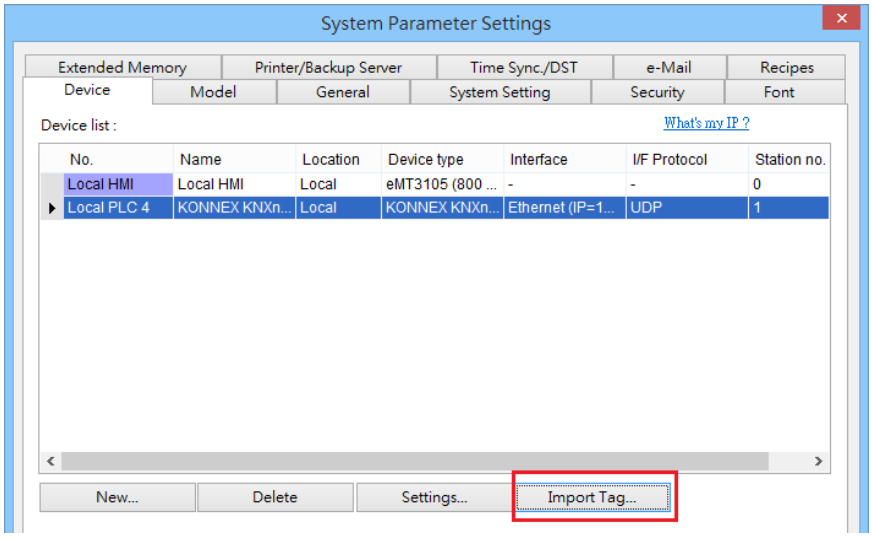

3. In Tag Manager dialog box click [Import…].

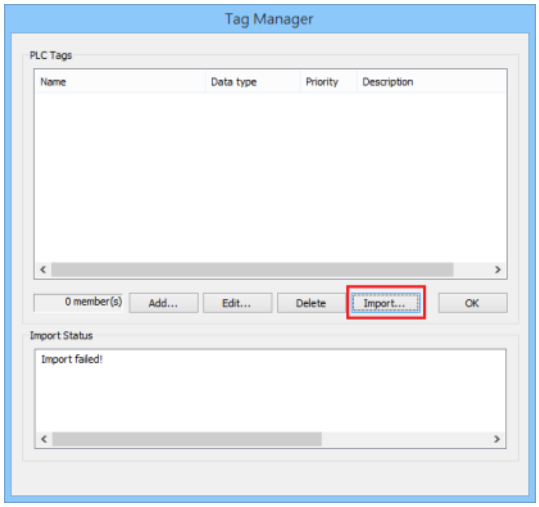

4. Select .esf file and then click [OK] to finish importing tags.

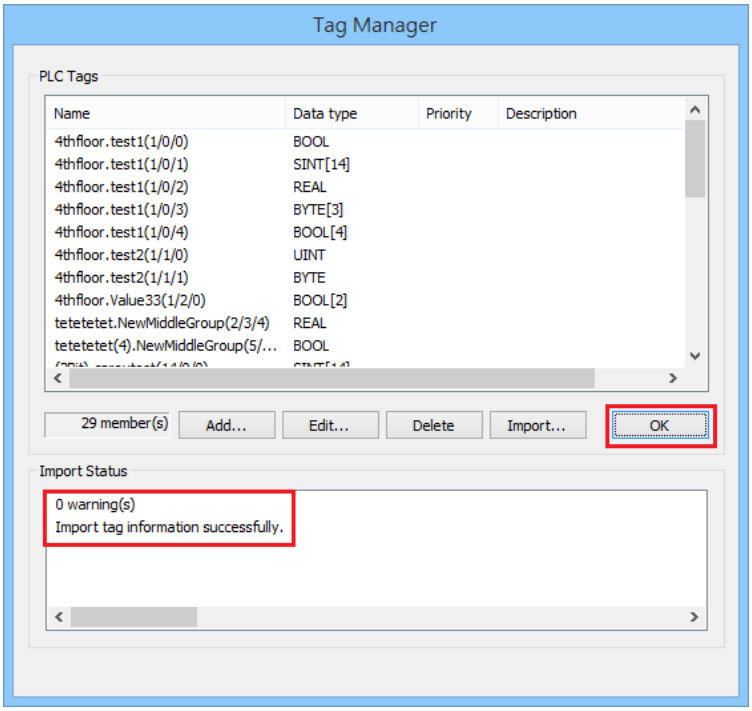

Wiring Diagram:

Ethernet cable:



Korenix 6550

Website: http://www.korenix.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Korenix 6550		Modbus protocol
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.		0	


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	1x	DDDDD	1 ~ 65535	
B	0x	DDDDD	1 ~ 65535	
B	3x_Bit	DDDDDdd	100 ~ 6553515	
B	4x_Bit	DDDDDdd	100 ~ 6553515	
B	6x_Bit	DDDDDdd	100 ~ 6553515	
W	3x	DDDDD	1 ~ 65535	
W	4x	DDDDD	1 ~ 65535	
W	5x	DDDDD	1 ~ 65535	
W	6x	DDDDD	1 ~ 65535	

Wiring Diagram:

Diagram 1

Ethernet cable:

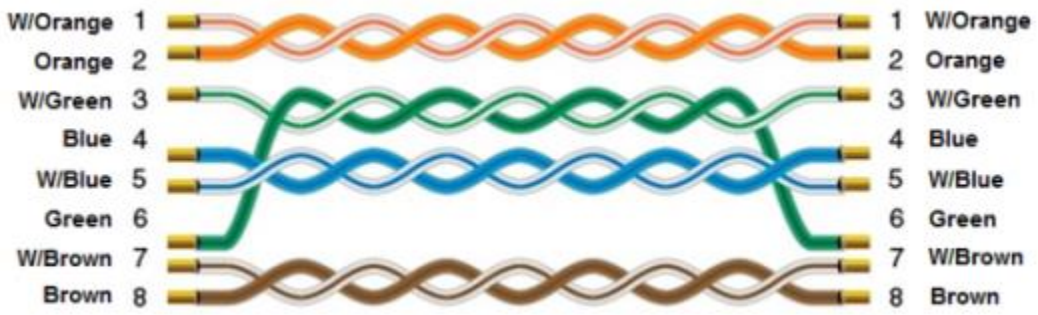

KOYO CLICK

Supported Series: KOYO CLICK PLC series
Website: http://www.automationdirect.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KOYO CLICK		
PLC I/F	RS232		
Baud rate	38400	1200~115200	
Data bits	8		
Parity	Odd	Odd,Even,None	
Stop bits	1	1,2	
PLC sta. no.	1	1~247	


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	Ddd	001 ~ 816	Input Status (Read Only)
B	Y	Ddd	001 ~ 816	Output Status
B	C	DDDD	1 ~ 2000	Control Bit
B	T	DDD	1 ~ 500	Timer Status (Read Only)
B	CT	DDD	1 ~ 250	Counter Status (Read Only)
B	SC	DDDD	1 ~ 1000	System Control Bit (Read Only)
W	DS	DDDD	1 ~ 4500	Data Registers
W	DD	DDDD	1 ~ 1000	Data Registers (Double Word)
W	DH	DDD	1 ~ 500	Data Registers
W	DF	DDD	1 ~ 500	Data Registers (Double Word)
W	XD	D	0 ~ 8	Input Status Registers (Read
W	YD	D	0 ~ 8	Output Status Registers
W	TD	DDD	1 ~ 500	Timer Current Values (Read Only)
W	CTD	DDD	1 ~ 250	Counter Current Values (Double Word/Read Only)
W	SD	DDDD	1 ~ 1000	System Data Registers (Read Only)
W	TXT	DDDD	1 ~ 1000	Text Data Registers

Wiring Diagram:

KOYO CLICK PLC Com Port:

6 pin RJ12 Phone Type Jack – both ports

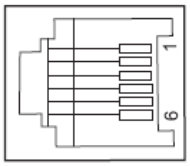

Port 1 Pin Descriptions		
1	0V	Power (-) connection (GND)
2	5V	Power (+) connection
3	RXD	Receive data (RS-232)
4	TXD	Transmit data (RS-232)
5	NC	No connection
6	0V	Power (-) connection (GND)

Port 2 Pin Descriptions		
1	0V	Power (-) connection (GND)
2	5V	Power (+) connection
3	RXD	Receive data (RS-232)
4	TXD	Transmit data (RS-232)
5	RTS	Request to send
6	0V	Power (-) connection (GND)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P RJ12 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	4
Tx	3	7	⟷	3
GND	5	5	⟷	1

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 6P RJ12 Male
Rx	2	4
Tx	3	3
GND	5	1

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 6P RJ12 Male
Rx	9	4
Tx	6	3
GND	5	1

KOYO CLICK (Ethernet)

Supported Series: KOYO CLICK PLC series
Website: http://www.automationdirect.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KOYO CLICK (Ethernet)		
PLC I/F	Ethernet		USE UDP
Port no.	25425		
Turn around delay	0	100~	*Note
PLC sta. no.	No need to set station no.		

*Note：When the communication is not stable, please adjust the parameter of [turn around delay] till the communication is normal.


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	Ddd	1 ~ 816	
B	Y	Ddd	1 ~ 816	
B	C	DDDD	1 ~ 2000	
B	T	DDD	1 ~ 500	
B	CT	DDD	1 ~ 250	
B	SC	DDDD	1 ~ 1000	
W	DS	DDDD	1 ~ 4500	
DW	DD	DDDD	1 ~ 1000	
W	DH	DDD	1 ~ 500	
DW	DF	DDD	1 ~ 500	
W	XD	D	0 ~ 8	
W	YD	D	0 ~ 8	
W	TD	DDD	1 ~ 500	
DW	CTD	DDD	1 ~ 250	
W	SD	DDDD	1 ~ 1000	
W	TXT	DDDD	1 ~ 1000	

Wiring Diagram:

Diagram 1

Ethernet cable:

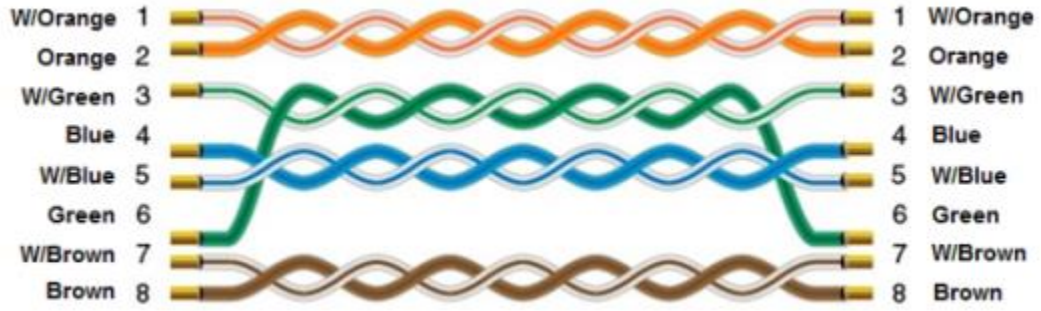

KOYO DIRECT

Supported Series: KOYO DirectLogic series PLC DL05, DL06, DL105, DL205, DL305, and DL405 series.
Website: http://www.automationdirect.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KOYO DIRECT		
PLC I/F	RS232	RS232, RS485	
Baud rate	9600	9600, 19200, 38400	
Data bits	8	7, 8	
Parity	Odd	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	1-90	

PLC Setting:

	1. The PLC must not have a password. 2. PLC must be set for Full Duplex operation. 3. PLC must be set for No Hardware Handshaking. 4. The PLC must be set to use the 'K' Sequence Protocol. 5. Set the mode switch to the TERM mode. 6. When using the D4-440 CPU, the station number must be set to 1.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOOO	0 ~ 4000	Input Bits
B	Y	OOOO	0 ~ 4000	Output Bits
B	C	OOOOO	0 ~ 10000	Control Relays
B	T	OOOO	0 ~ 1000	Timer Status Bits
B	CT	OOOO	0 ~ 1000	Counter Status Bits
B	S	OOOO	0 ~ 2000	
B	SP	OOOO	0 ~ 2000	
B	GX	OOOOO	0 ~ 10000	
B	GY	OOOOO	0 ~ 10000	

Bit/Word	Device type	Format	Range	Memo
W	V	OOOOO	0 ~ 77777	V Memory
W	Timer	OOOO	0 ~ 1000	
W	Counter	OOOO	0 ~ 1000	

Wiring Diagram:

DL05/DL06/DL105/DL230/DL240/DL250/DL350/DL450 RS232 port (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P RJ12 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	4
Tx	3	7	⟷	3
GND	5	5	⟷	1

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P RJ12 Male
Rx	2	⟷	4
Tx	3	⟷	3
GND	5	⟷	1

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P RJ12 Male
Rx	9	⟷	4
Tx	6	⟷	3
GND	5	⟷	1

CPU unit: DL06/DL250 CPU Port2 RS232 (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Port2 15P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	7
			⟷	4
			⟷	5

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


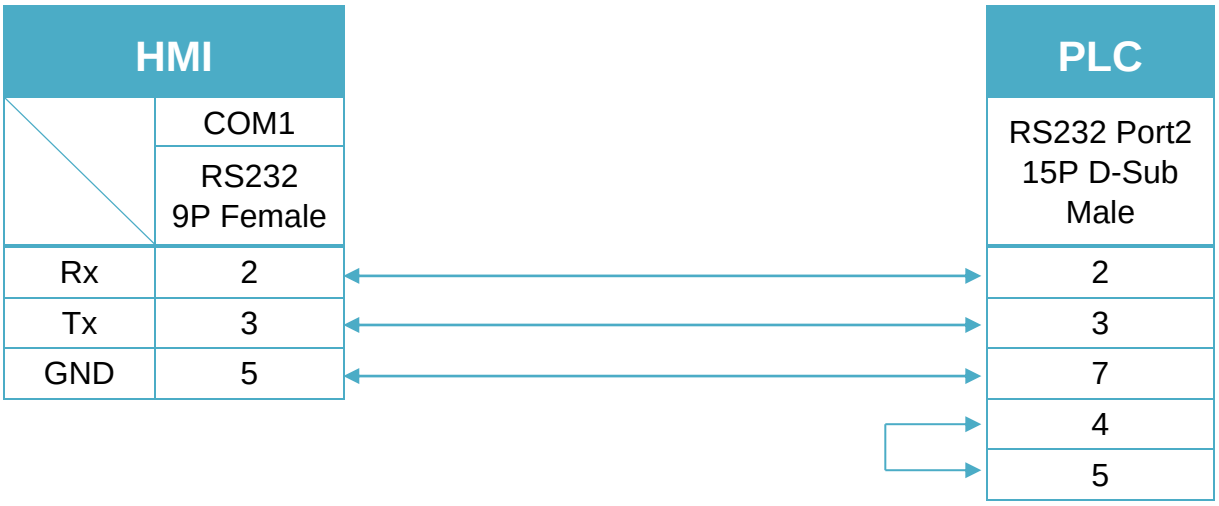


Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

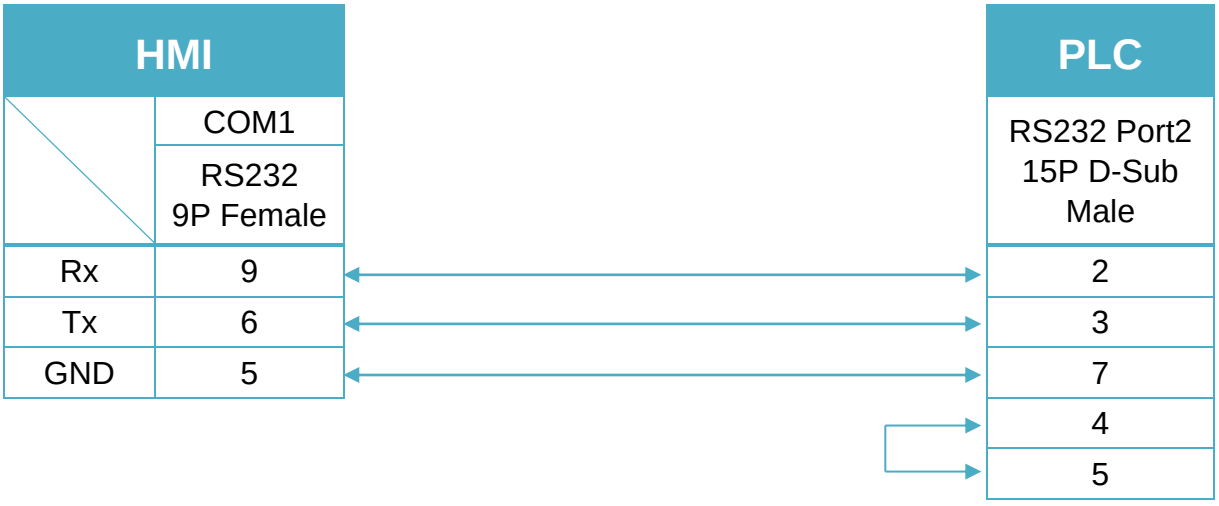

CPU unit: DL06/DL250 CPU Port2 RS422 (Diagram 7 ~ Diagram 10)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI	COM1 RS485 4W 9P Male	PLC RS422 Port2 15P D-Sub Male
Rx-	1	10
Rx+	2	9
Tx-	3	6
TX+	4	13
GND	5	7
		11
		14
		12
		15

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

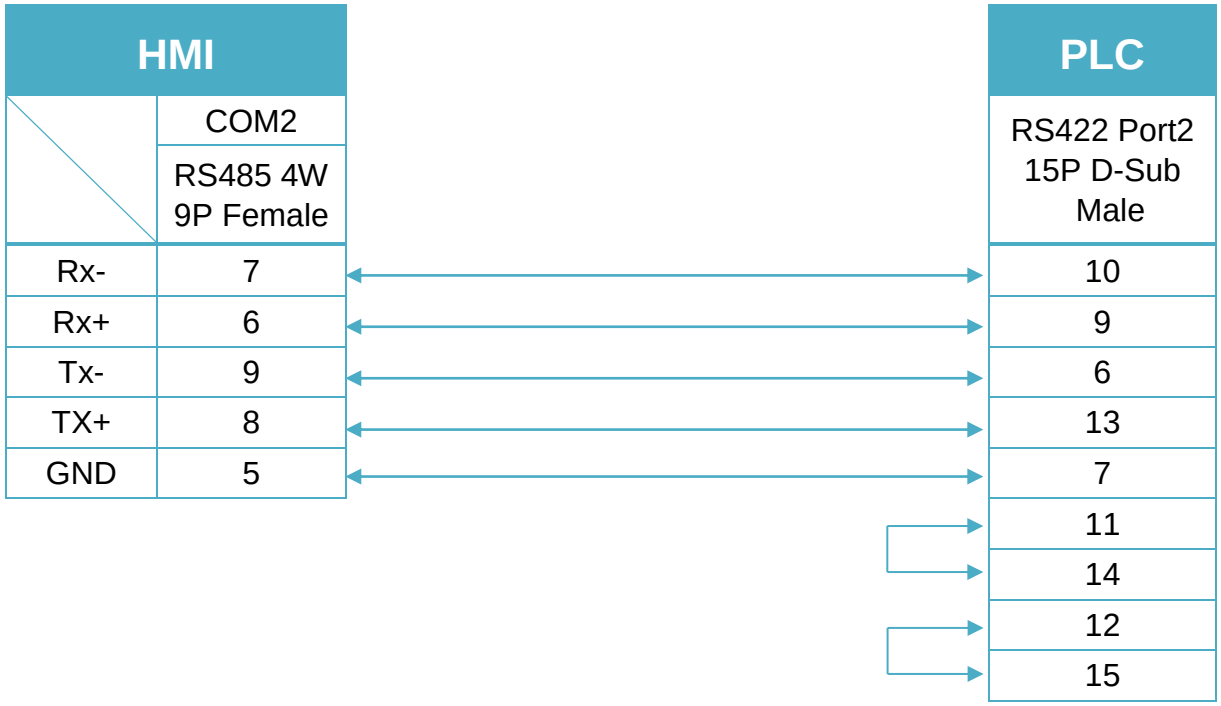


Diagram 9

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***


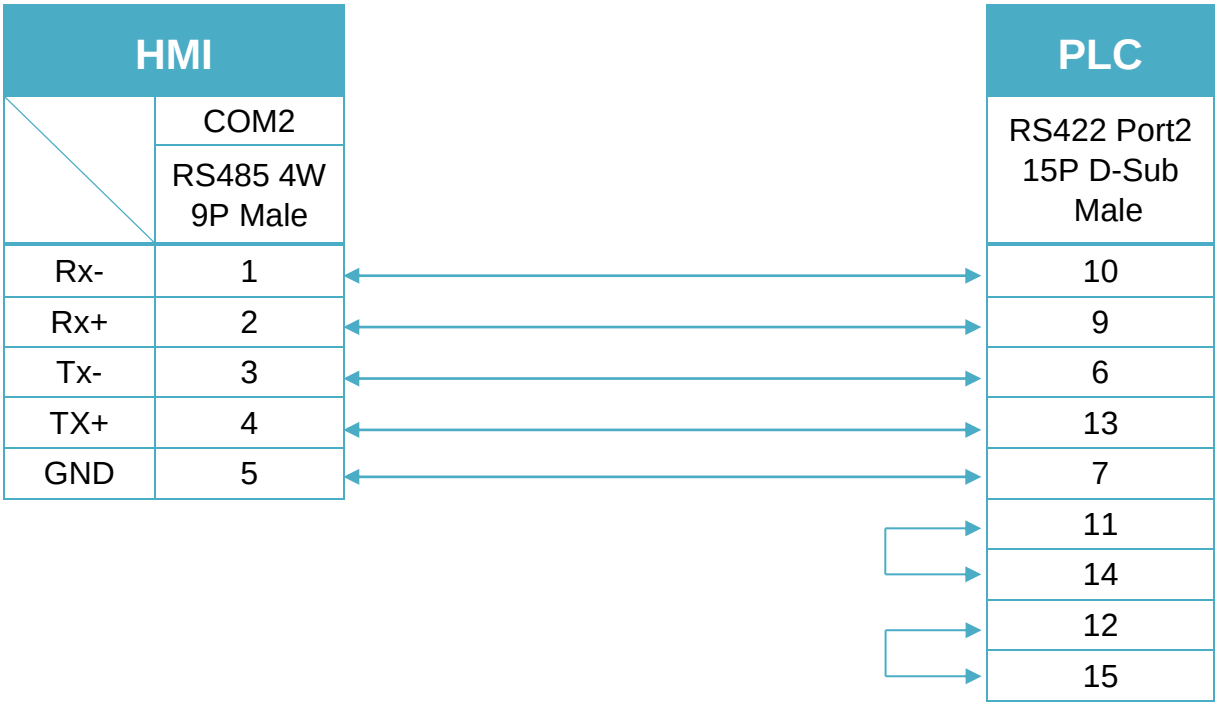



Diagram 10


MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

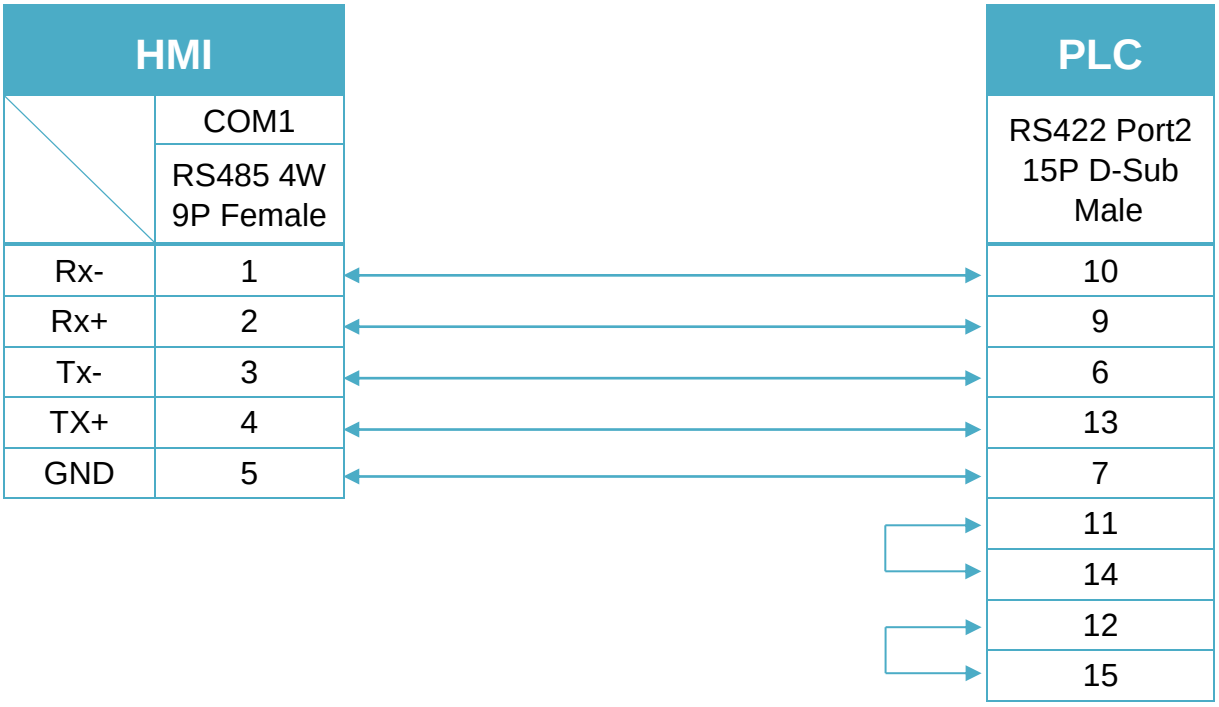

Note: DL06/DL250 CPU Port2 include RS232 and RS422

The following is the view from the soldering point of a connector.

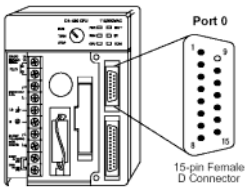



DL430/DL440/DL450 CPU unit Port0 RS232
(Diagram 11 ~ Diagram 13)

Diagram 11

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Port0 15P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	13
			⟶	1
			⟶	7
			⟶	2
			⟶	4
			⟶	14

Diagram 12

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***



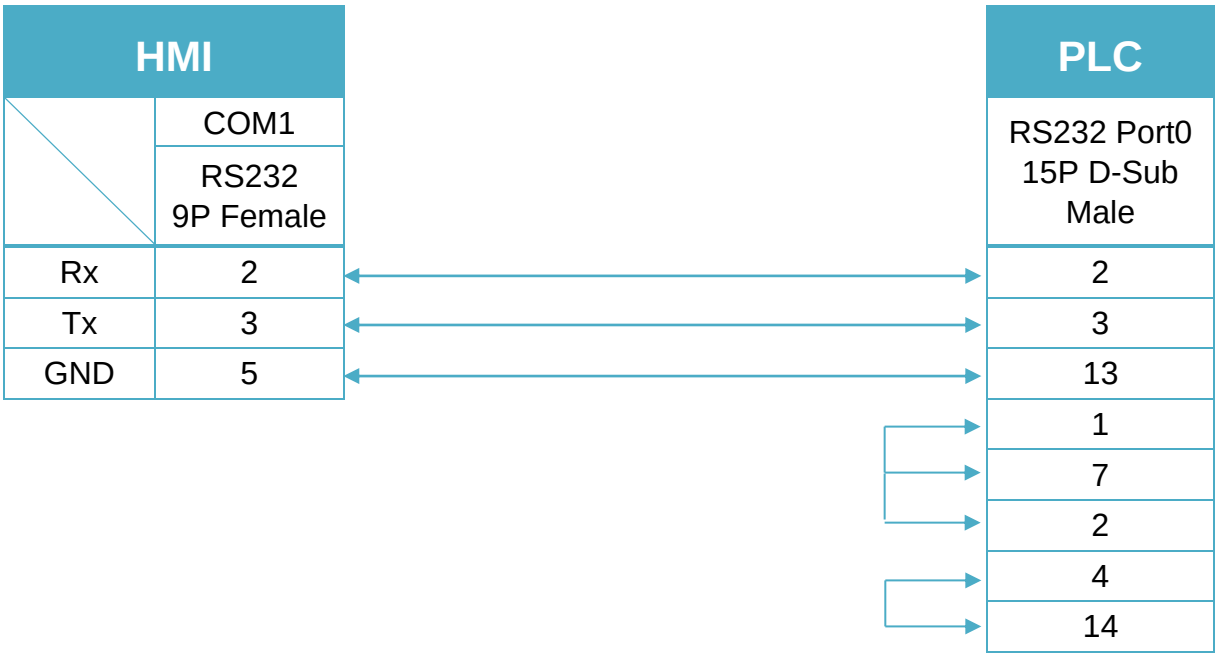


Diagram 13

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

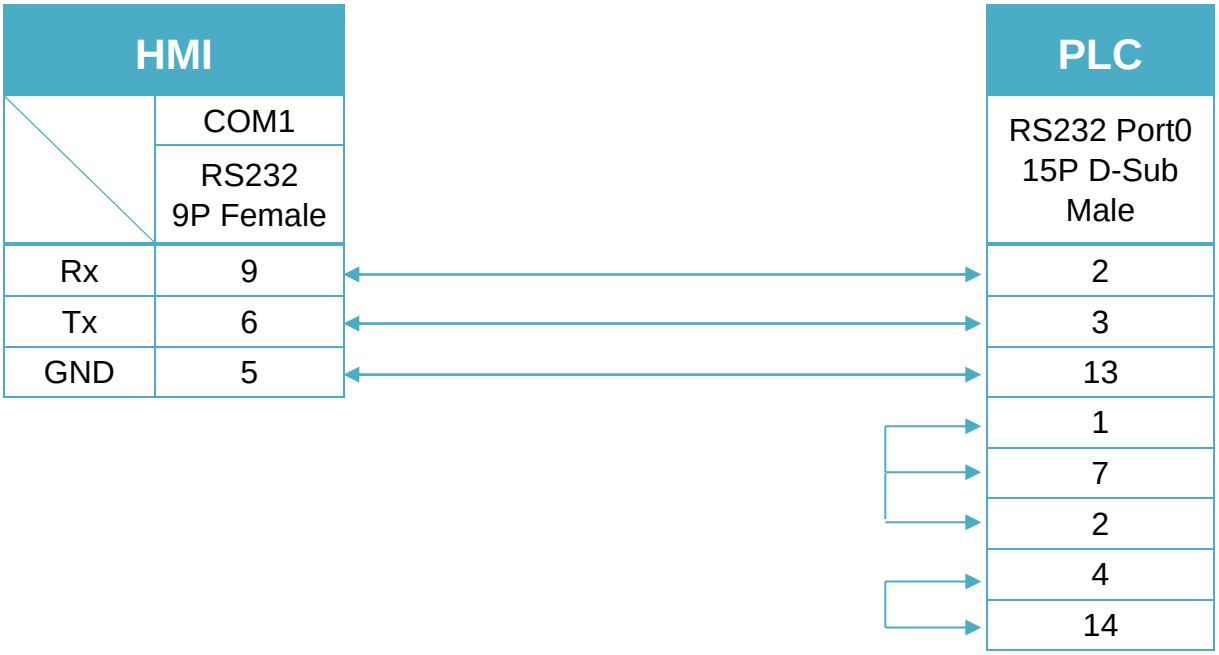

The following is the view from the soldering point of a connector.

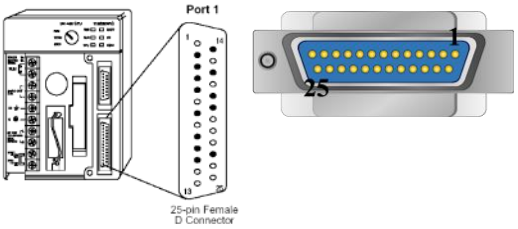

CPU unit: DL430/DL440/DL450 CPU unit Port1 & DL350 CPU unit Port2 RS232 (Diagram 14 ~ Diagram 16)

Diagram 14

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Port1 25P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	7
			⟷	4
			⟷	5

Diagram 15

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


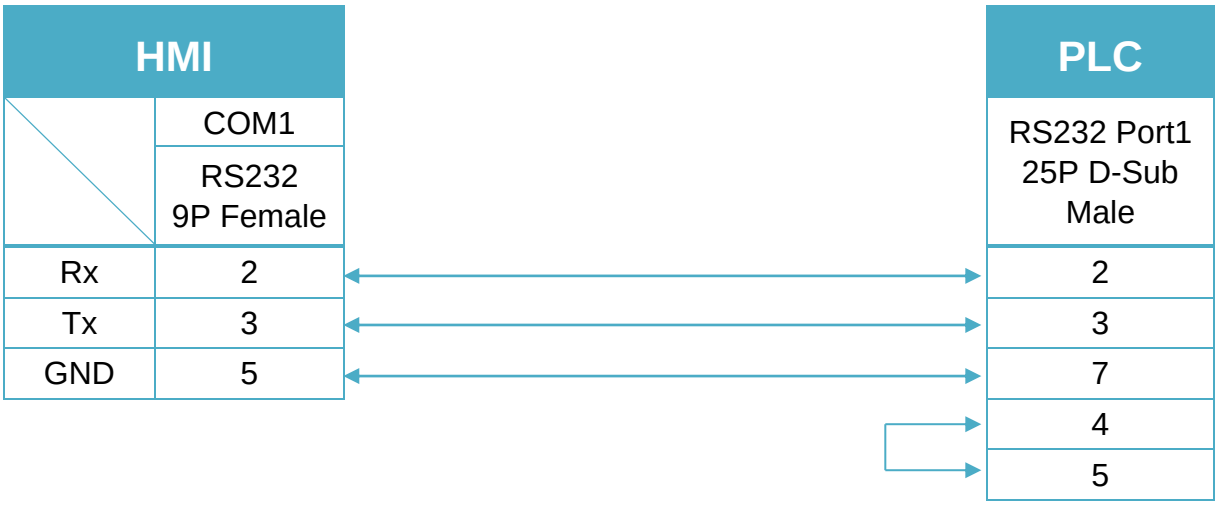


Diagram 16

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

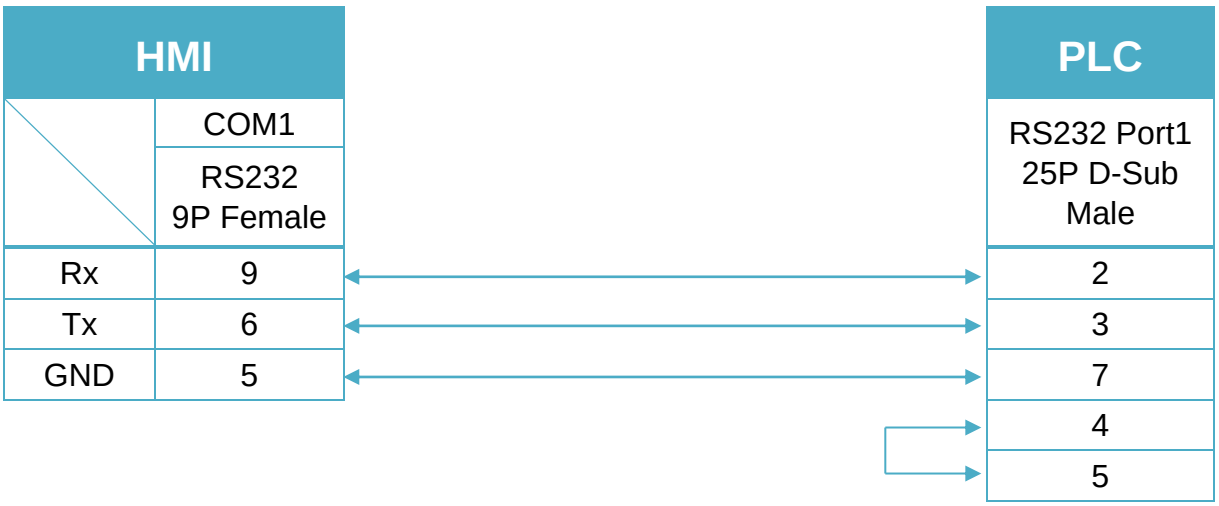

CPU unit: DL430/DL440/DL450 CPU unit Port1 & DL350 CPU unit Port2 RS422 (Diagram 17 ~ Diagram 20)

Diagram 17

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI		PLC
	COM1 RS485 4W 9P Male	RS422 Port 25P D-Sub Male
Rx-	1	16
Rx+	2	14
Tx-	3	10
TX+	4	9
GND	5	7
		19
		11
		18
		23

Diagram 18

cMT Series	***cMT-SVR***
mTV	***mTV***

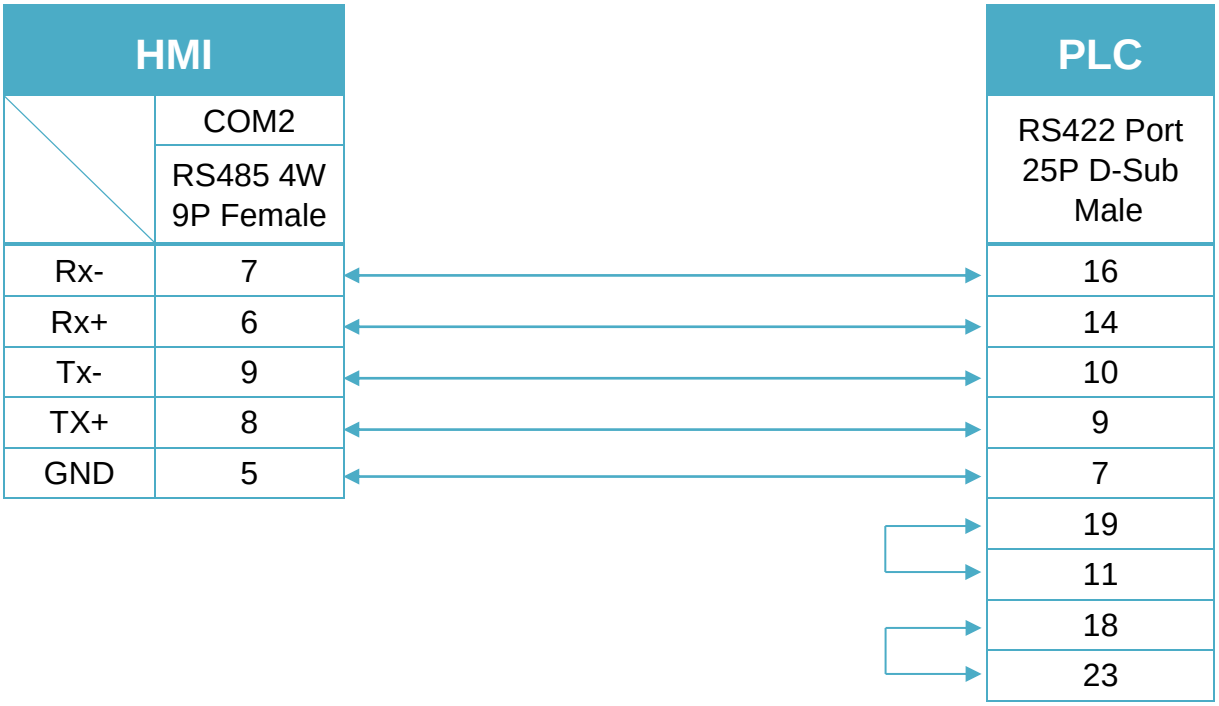


Diagram 19

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***


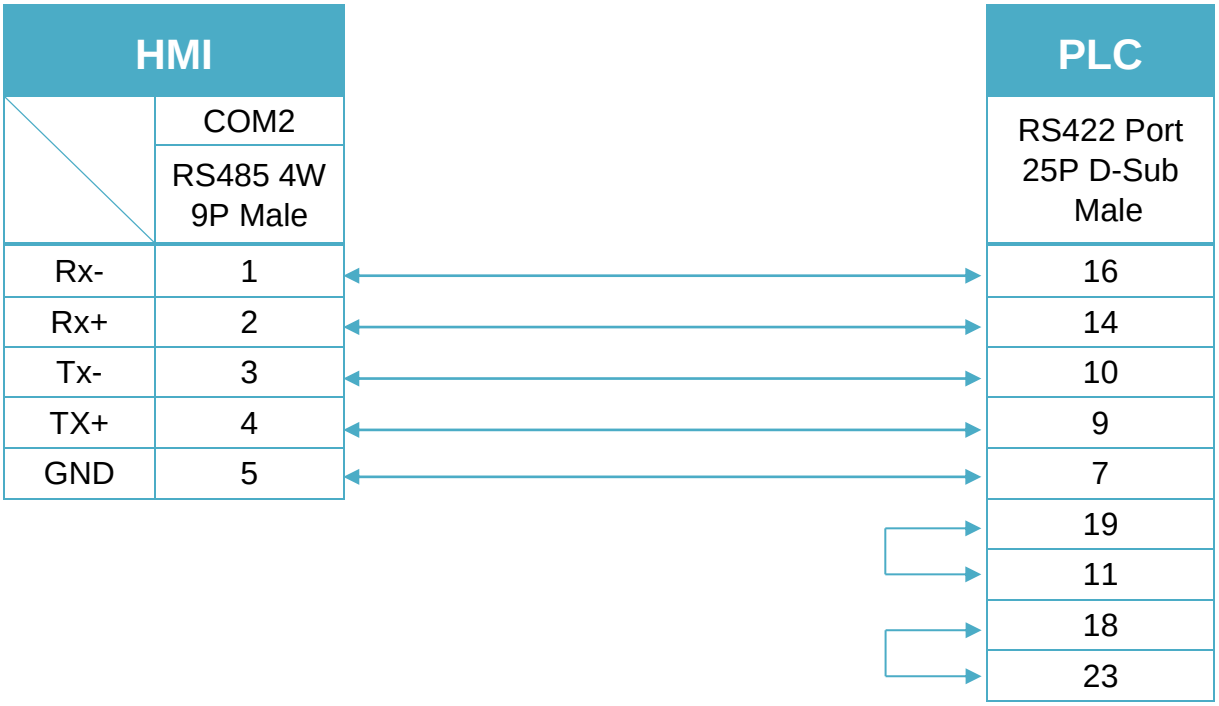


Diagram 20

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

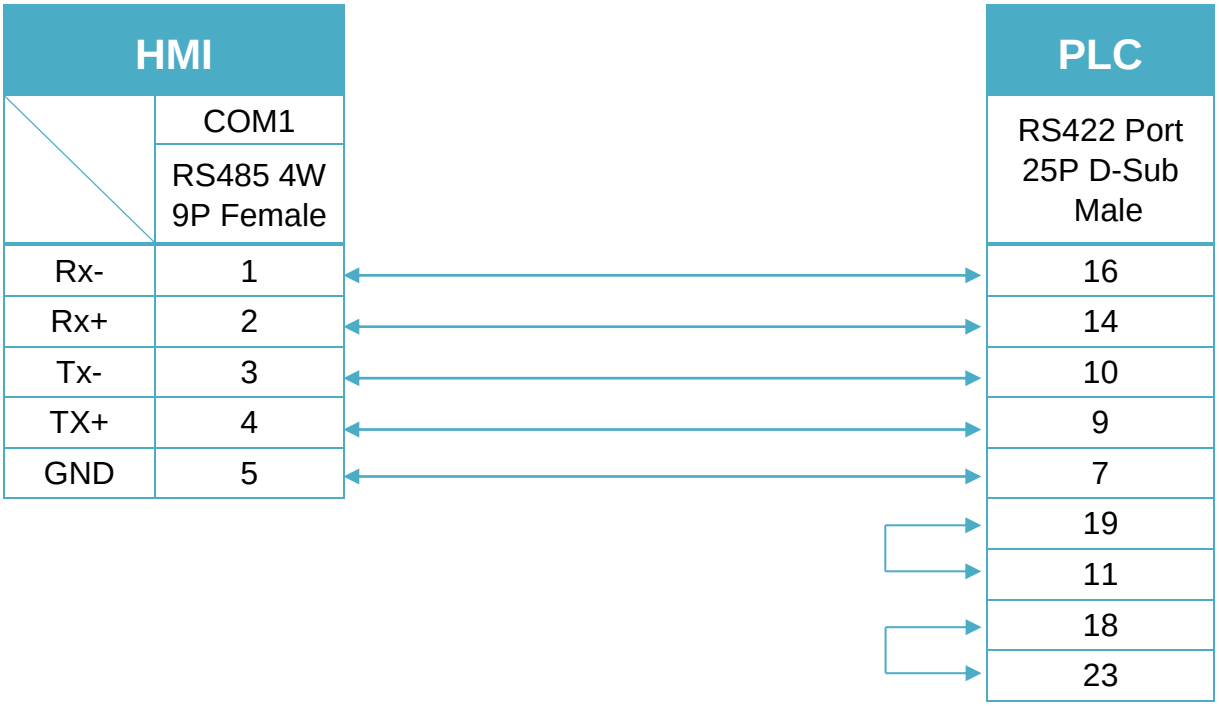

CPU unit: DL450 CPU unit Port3 RS422 (Diagram 21 ~ Diagram 24)

Diagram 21

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS422 Port3 25P D-Sub Male
Rx-	1	⟷	13
Rx+	2	⟷	15
Tx-	3	⟷	25
TX+	4	⟷	24
GND	5	⟷	7

Diagram 22

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS422 Port3 25P D-Sub Male
Rx-	7	⟷	13
Rx+	6	⟷	15
Tx-	9	⟷	25
TX+	8	⟷	24
GND	5	⟷	7

Diagram 23

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS422 Port3 25P D-Sub Male
Rx-	1	⟷	13
Rx+	2	⟷	15
Tx-	3	⟷	25
TX+	4	⟷	24
GND	5	⟷	7

Diagram 24

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS422 Port3 25P D-Sub Male
Rx-	1	⟷	13
Rx+	2	⟷	15
Tx-	3	⟷	25
TX+	4	⟷	24
GND	5	⟷	7

Communication unit: DL205 series D2-DCM and DL405 series D4-DCM RS232 (Diagram 25 ~ Diagram 27)

Diagram 25

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Port 25P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	7
			⟷	4
			⟷	5

Diagram 26

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


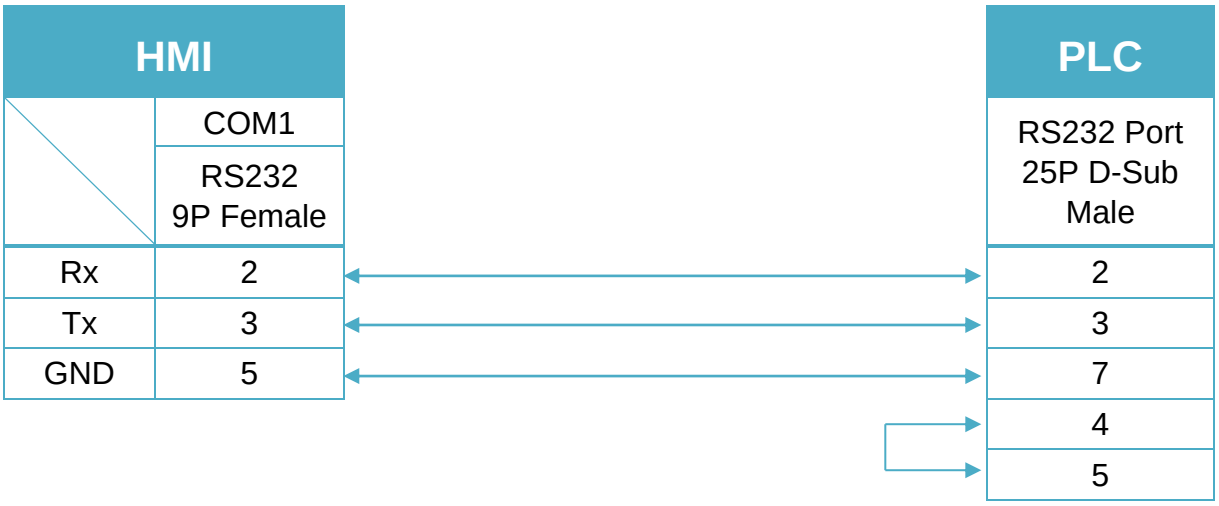


Diagram 27

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

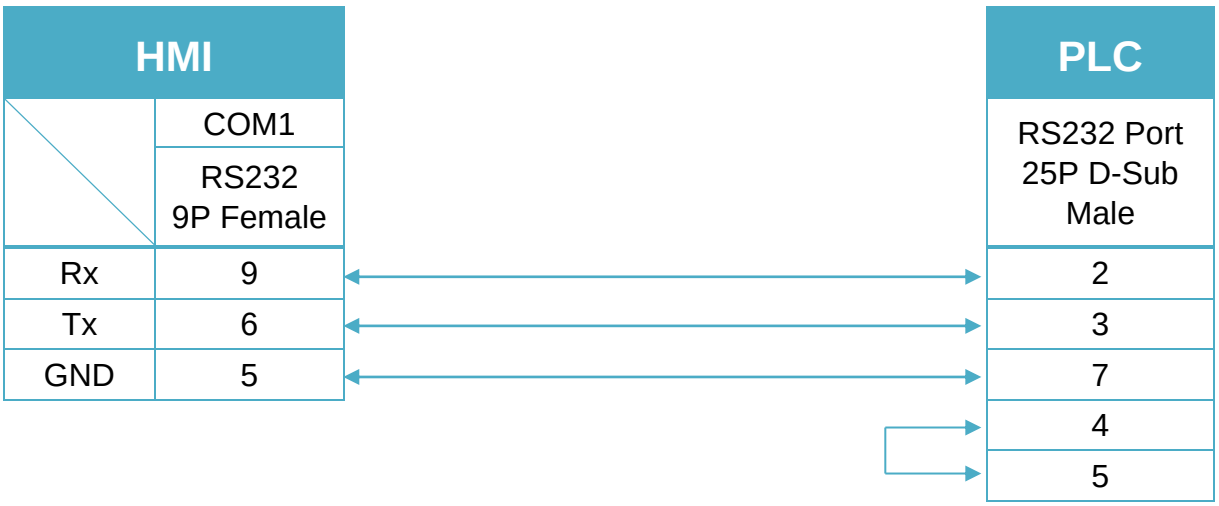

KOYO Do-more

Supported Series: Do-more H2 Series PLC
Website: http://www.automationdirect.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KOYO Do-more		
PLC I/F	RS232		
Baud rate	115200	9600 ~ 115200	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Online simulation	YES	**Extend address mode**	NO

PLC Setting:

Serial Port Mode	Do-more programming

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	ST	DDDD	0 ~ 1023	
B	X	DDDDD	0 ~ 65535	
B	Y	DDDDD	0 ~ 65535	
B	C	DDDDD	0 ~ 65535	
B	MI	DDDDD	0 ~ 65535	
B	MC	DDDDD	0 ~ 65535	
B	T.Done	DDDDD	0 ~ 32766	Read only
B	CT.Done	DDDDD	0 ~ 32766	Read only
B	DLX	OOOOOO	0 ~ 177777	
B	DLY	OOOOOO	0 ~ 177777	
B	DLC	OOOOOO	0 ~ 177777	
W	DLV	OOOOOO	0 ~ 177777	
W	SDT	D.D	0 ~ 7.6	*Note 1

Bit/Word	Device type	Format	Range	Memo
W	WX	DDDDD	0 ~ 65535	
W	WY	DDDDD	0 ~ 65535	
W	V	DDDDD	0 ~ 65535	
W	N	DDDDD	0 ~ 65535	
W	SS	DDDD.DD	0 ~ 3854.34	Read only *Note 2
W	SL	DDDD.DDD	0 ~ 1007.130	Read only *Note 2
W	UDT	DDDDD.D	0 ~ 32767.6	*Note 1
W	PL	DDD	0 ~ 255	
W	MIR	DDDDD	0 ~ 65535	
W	MHR	DDDDD	0 ~ 65535	
W	DST	DDD	0 ~ 511	
W	D	DDDDD	0 ~ 65534	
W	R	DDDDD	0 ~ 65534	Real Number (float)
W	T.ACC	DDDDD	0 ~ 32766	
W	CT.ACC	DDDDD	0 ~ 32766	

*Note 1：SDT , UDT: xxx.0 = Year, xxx.1 = Month, xxx.2 = Day, xxx.3 = DayOfWeek, xxx.4 = Hour, xxx.5 = Minute, xxx.6 = Second.

*Note 2：SS , SL: xxx.0 = MaxLen, xxx.1 = Length, xxx.2 ~ 34 = String(SS) xxx.2 ~ 130 = String (SL)

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1	COM3	Koyo DL205 RS232 6P RJ12
	RS232 9P Female	RS232 9P Female	
Rx	2	8	4
Tx	3	7	3
GND	5	5	1
RTS	7		6
CTS	8		5

Diagram 2

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI		PLC
	COM1	Koyo DL205 RS232 6P RJ12
	RS232 9P Female	
Rx	2	4
Tx	3	3
GND	5	1
RTS	7	6
CTS	8	5

Diagram 3

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM1 RS232 9P Female		Koyo DL205 RS232 6P RJ12
Rx	2	⟷	4
Tx	3	⟷	3
GND	5	⟷	1

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		Koyo DL205 RS232 6P RJ12
Rx	9	⟷	4
Tx	6	⟷	3
GND	5	⟷	1

KOYO Do-more (Ethernet)

Supported Series: Do-more H2 Series PLC Ethernet port
Website: http://www.automationdirect.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KOYO Do-more (Ethernet)		
PLC I/F	Ethernet		USE UDP
Port no.	28784		
PLC sta. no.	No need to set station no.		

PLC Setting:

Serial Port Mode	Do-more programming

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	ST	DDDD	0 ~ 1023	
B	X	DDDDD	0 ~ 65535	
B	Y	DDDDD	0 ~ 65535	
B	C	DDDDD	0 ~ 65535	
B	MI	DDDDD	0 ~ 65535	
B	MC	DDDDD	0 ~ 65535	
B	T.Done	DDDDD	0 ~ 32766	Read only
B	CT.Done	DDDDD	0 ~ 32766	Read only
B	DLX	OOOOOO	0 ~ 177777	
B	DLY	OOOOOO	0 ~ 177777	
B	DLC	OOOOOO	0 ~ 177777	
W	DLV	OOOOOO	0 ~ 177777	
W	SDT	D.D	0 ~ 7.6	*Note 1
W	WX	DDDDD	0 ~ 65535	
W	WY	DDDDD	0 ~ 65535	
W	V	DDDDD	0 ~ 65535	
W	N	DDDDD	0 ~ 65535	
W	SS	DDDD.DD	0 ~ 3854.34	Read only *Note 2

Bit/Word	Device type	Format	Range	Memo
W	SL	DDDD.DDD	0 ~ 1007.130	Read only *Note 2
W	UDT	DDDDD.D	0 ~ 32767.6	*Note 1
W	PL	DDD	0 ~ 255	
W	MIR	DDDDD	0 ~ 65535	
W	MHR	DDDDD	0 ~ 65535	
W	DST	DDD	0 ~ 511	
W	D	DDDDD	0 ~ 65534	
W	R	DDDDD	0 ~ 65534	Real Number (float)
W	T.ACC	DDDDD	0 ~ 32766	
W	CT.ACC	DDDDD	0 ~ 32766	

*Note 1：SDT , UDT: xxx.0 = Year, xxx.1 = Month, xxx.2 = Day, xxx.3 = DayOfWeek, xxx.4 = Hour, xxx.5 = Minute, xxx.6 = Second.

*Note 2：SS , SL: xxx.0 = MaxLen, xxx.1 = Length, xxx.2 ~ 34 = String(SS) xxx.2 ~ 130 =String (SL)

Wiring Diagram:

Diagram 1

Ethernet cable:



KOYO Ethernet

Supported Series: KOYO DirectLogic series, model H0-ECOM100, H2-ECOM100.
Website: http://www.automationdirect.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	KOYO Ethernet		
PLC I/F	Ethernet		UDP/IP
Port no.	28784		
PLC sta. no.	No need to set station no.	0	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	GX	OOOO	0 ~ 3777	Global I/O
B	X	OOOO	0 ~ 1777	Real Word Inputs
B	SP	OOOO	0 ~ 1777	Special Purpose Relays
B	GY	OOOO	0 ~ 3777	More Global I/O
B	Y	OOOO	0 ~ 1777	Real Word Outputs
B	C	OOOO	0 ~ 3777	Control Relays
B	S	OOOO	0 ~ 1777	Stage Status Bits
B	T	OOO	0 ~ 377	Timer Status Bits
B	CT	OOO	0 ~ 377	Counter Status Bits
W	V	OOOOO	0 ~ 41237	V-memory
W	CCM_32	HHH	1 ~ 200	GX, X, SP
W	CCM_33	HHH	1 ~ 340	GY,Y,C,S,T,CT
W	CCM_31	HHHH	1 ~ 42a0	V

ddd:Decimal, hhh:Hexadecimal, ooo:Octal


The mapping of CCM32, CCM33, and CCM31 with other addresses.

Device type	Range	Device type	Range
CCM_31	1~42A0	V	0~41237
CCM_32	1~FF	GX	0~3777
CCM_32	101~17F	X	0~1777
CCM_32	181~1FF	SP	0~1777
CCM_33	1~FF	GY	0~3777
CCM_33	101~17F	Y	0~1777
CCM_33	181~27F	C	0~3777
CCM_33	281~2FF	S	0~1777
CCM_33	301~31F	T	0~377
CCM_33	321~33F	CT	0~377

Wiring Diagram:

Diagram 1

Ethernet cable:

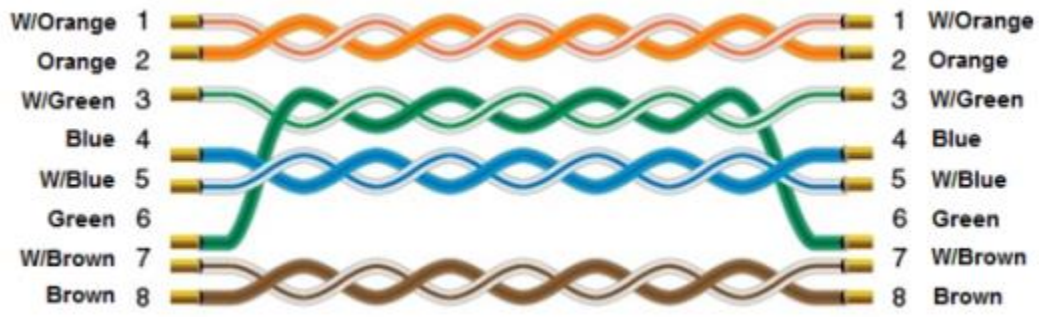

KW ProConOS


Supported Series: KW ProConOS
Website: http://www.kw-software.com/zh/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	KW ProConOS		
PLC I/F	Ethernet		
Port no.	41101		

Import Tags:


1. **Export tags**: Launch **MULTIPROG** software, select **File** -> **Export** -> **Export PLCopen xml file**.

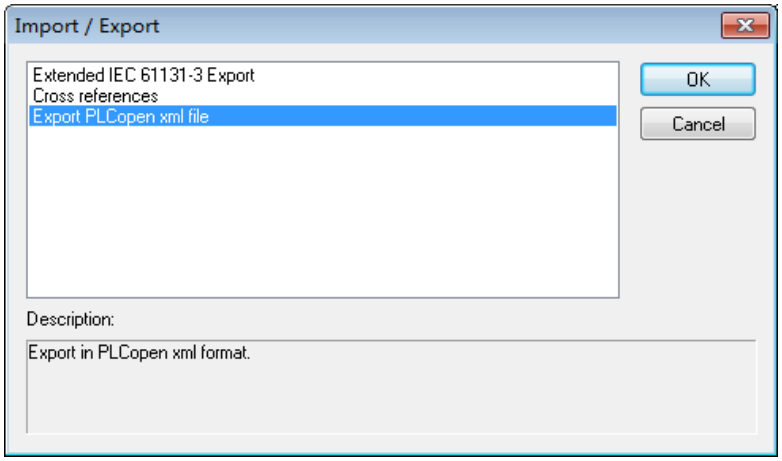


2. Launch **EasyBuilder Pro**, select **KW ProConOS** driver, set communication parameters, and then click **[Import Tags]**.

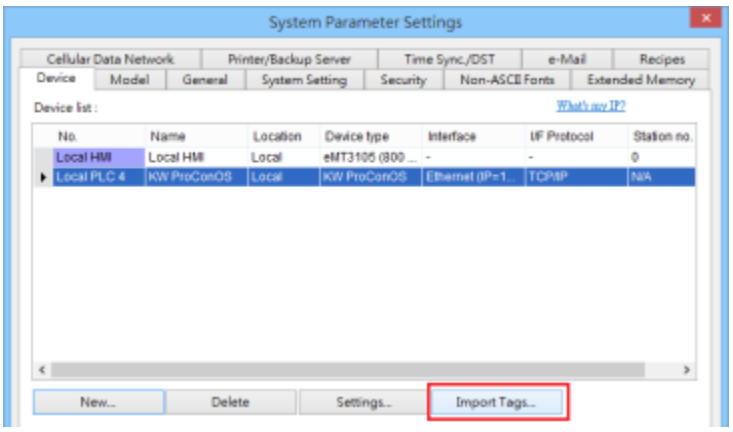


3. Select the imported **.xml** file, select the tags and then enter **task name** manually. Entering incorrect name can result in communication failure.

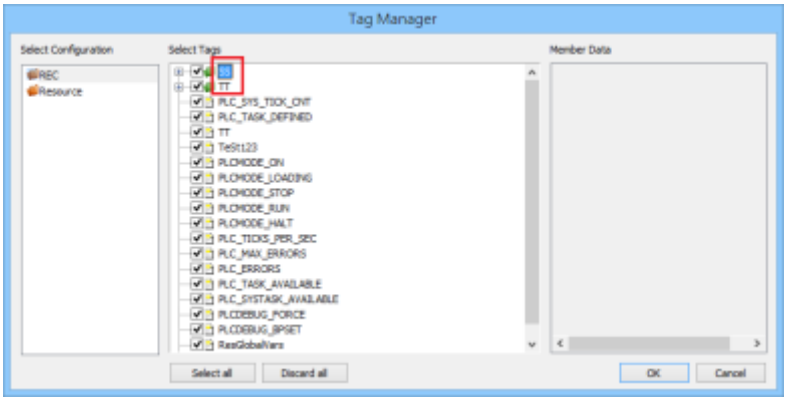

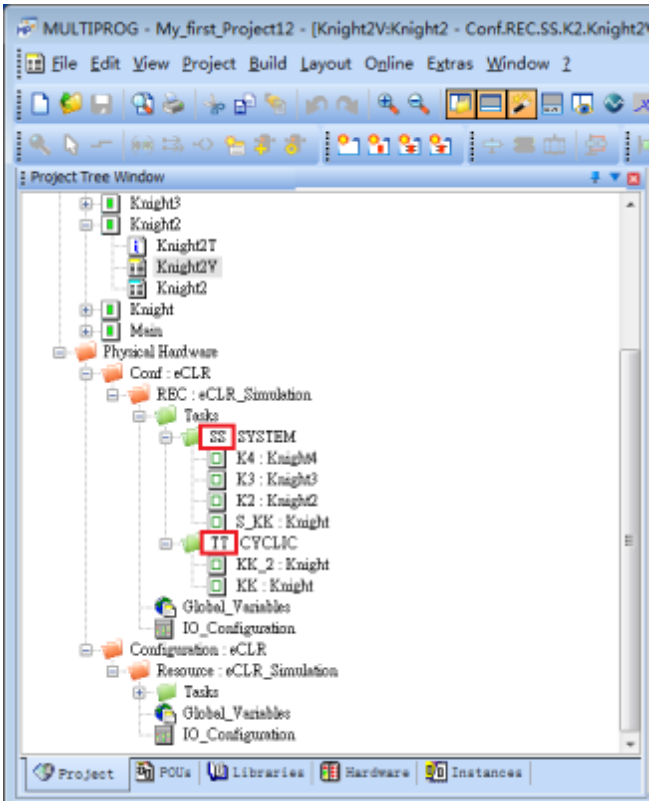

4. Click OK, the “Import tag information successfully.” message shows.

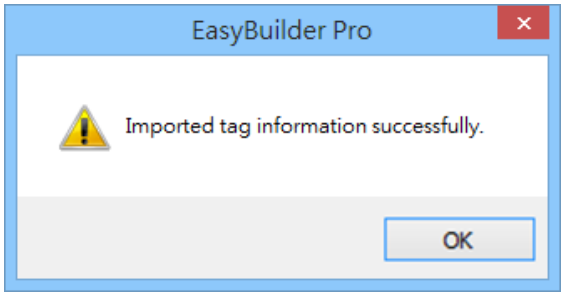


Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit

Wiring Diagram:

Diagram 1

Ethernet cable:

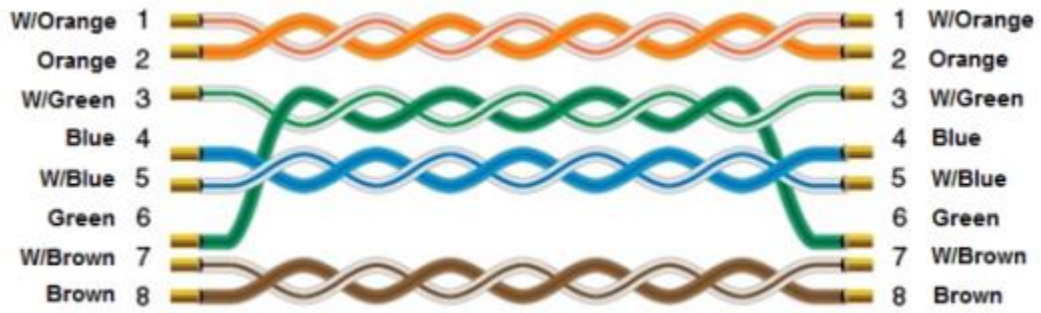

Lenze

Supported Series: PLC Model No.: 9300/8200 series, and EPL10200
Pass-through 2102IB fieldbus module: RS485 (LECOM B)
Website: http://www.lenze.de

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Lenze		
PLC I/F	RS232		
Baud rate	9600	9600, 19200	
Data bits	7	7,8	
Parity	None	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	1	0-255	

PLC Setting:

Communication mode	Same as the MT500 setting

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CNB	DDDDdd	0 ~ 999915	Subcode not supported. Can only read/write CNI Word Type.
B	CB	DDDDddxx	0 ~ 81920015	Subcode supported. Can only read/write CI Word Type.
W	CI	DDDDdd	0 ~ 819200	Subcode supported. Integer
W	CD	DDDDdd	0 ~ 819200	Subcode supported. DWord
W	CF	DDDDdd	0 ~ 819200	Subcode supported. DWord (float point)
W	CNI	DDDD	0 ~ 9999	Subcode not supported. Integer
W	CND	DDDD	0 ~ 9999	Subcode not supported. DWord
W	CNF	DDDD	0 ~ 9999	Subcode not supported. DWord (float point)

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		Lenze 2102IB LECOM-B RS485 plug-in terminal 4-pole
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	72 T/R (A)
Data+	2	9	⟷	71 T/R (B)
GND	5	5		

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		Lenze 2102IB LECOM-B RS485 plug-in terminal 4-pole
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	72 T/R (A)
Data+	6	1	⟷	71 T/R (B)
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		Lenze 2102IB LECOM-B RS485 plug-in terminal 4-pole
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	72 T/R (A)
Data+	2	8	⟷	71 T/R (B)
GND	**5**	**9**		

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		Lenze 2102IB LECOM-B RS485 plug-in terminal 4-pole
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	72 T/R (A)
Data+	2	9	⟷	71 T/R (B)
GND	5	5		

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		Lenze 2102IB LECOM-B RS485 plug-in terminal 4-pole
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	72 T/R (A)
Data+	2	8	⟷	71 T/R (B)
GND	5	5		

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		Lenze 2102IB LECOM-B RS485 plug-in terminal 4-pole
	RS485 2W 9P Female		
Data-	1	⟷	72 T/R (A)
Data+	2	⟷	71 T/R (B)
GND	5		

LingYan BMS

Website: http://www.lyeda.com/Project_file/bms01.htm

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LingYan BMS		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Battery_Unit	D	0	
W	Insulator_Unit	D	0	
W	Switch_Unit	D	0	

Wiring Diagram:

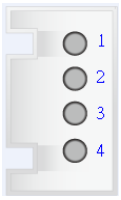


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 4P Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	1
Tx	3	7	⟷	3
GND	5	5	⟷	4

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 4P Terminal
Rx	2	⟷	1
Tx	3	⟷	3
GND	5	⟷	4

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 4P Terminal
Rx	9	⟷	1
Tx	6	⟷	3
GND	5	⟷	4

LIYAN EX series

Supported Series: LIYAN PLC Ex/Ex1s/Ex1n/Ex2n series
Website: http://www.liyanplc.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX0s/FX0n/FX1s/FX1n/FX2		
PLC I/F	RS232	RS232	
Baud rate	9600	9600~115200	
Data bits	7	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	0	0-255	Must match the PLC port setting.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	ooo	0 ~ 377	Input Relay
B	Y	ooo	0 ~ 377	Output Relay
B	M	ddd	0 ~ 9999	Internal Bit Memory
B	T	ddd	0 ~ 255	Timer Bit Memory
B	C	ddd	0 ~ 255	Counter Bit Memory
W	TV	ddd	0 ~ 255	Timer Register
W	CV	ddd	0 ~ 199	Counter Register
W	D	ddd	0 ~ 9999	Data Register
W	CV2	ddd	200 ~ 255	Counter Register (Double Word)
W	SD	ddd	8000 ~ 9999	Special Data Register

Wiring Diagram:

The following is the view from the soldering point of a connector.



9P D-Sub to 8P Mini-DIN: Ex, Ex1s, Ex1n, Ex2n series

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	7
GND	5	5	⟷	6

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 8P Mini-DIN Male
Rx	2	2
Tx	3	7
GND	5	6

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 8P Mini-DIN Male
Rx	9	2
Tx	6	7
GND	5	6

LoXin

Website: http://www.loxin-china.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LoXin		
PLC I/F	RS-485 2W		
Baud rate	9600		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Battery_Unit	D	0	
W	Insulator_Unit	D	0	
W	Switch_Unit	D	0	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	↔	D-
Data+	2	9	↔	D+
GND	5	5		

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5		

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**		

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5		

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5		

Diagram 6

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM2 RS485 2W 9P Female		RS485 terminal
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5		

LS GLOFA Cnet

Supported Series: LS GLOFA GM6/GM7 CPU port. G7L-CUEB / G6L-CUEB / G4L-CUEA / G3L-CUEA Cnet module
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS GLOFA Cnet		
PLC I/F	RS232	RS232/RS485 2W/4W	
Baud rate	9600	9600~115200	
Data bits	8	7, 8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0	0~31	

PLC Setting:


Communication mode	9600,N,8,1 (default), Cnet protocol
Communication module	Applicable mode: 1 dedicated communication

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MX	DDDDD	0 ~ 32767	Internal Relay
B	IX	ddDdd	0 ~ 63763	Input
B	QX	ddDdd	0 ~ 63763	Output
W	MW	DDDDD	0 ~ 32767	Data Register
DW	MD	DDDDD	0 ~ 16383	Double Word

Device explanation:

IX and QX format: dd D dd

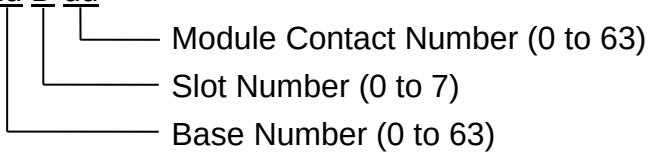

Wiring Diagram:

9P D-Sub to 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	7
Tx	3	7	⟷	4
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	7
Tx	3	⟷	4
GND	5	⟷	5

Diagram 3


MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	7
Tx	6	⟷	4
GND	5	⟷	5

9P D-Sub to 9P D-Sub: Communication Module (G7L-CUEB / G6L-CUEB / G4L-CUEA / G3L-CUEA Cnet RS232)
(Diagram 4 ~ Diagram 6)

Diagram 4


cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

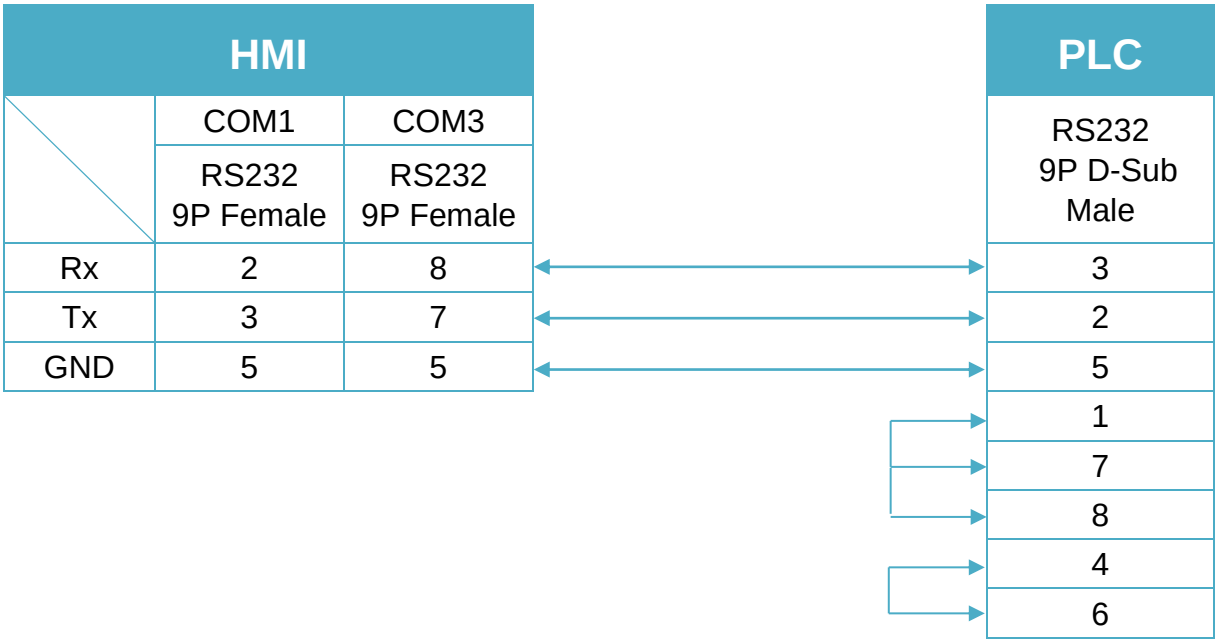

HMI			PLC
	COM1	COM3	RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female	
Rx	2	8	3
Tx	3	7	2
GND	5	5	5
			1
			7
			8
			4
			6

Diagram 5


cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

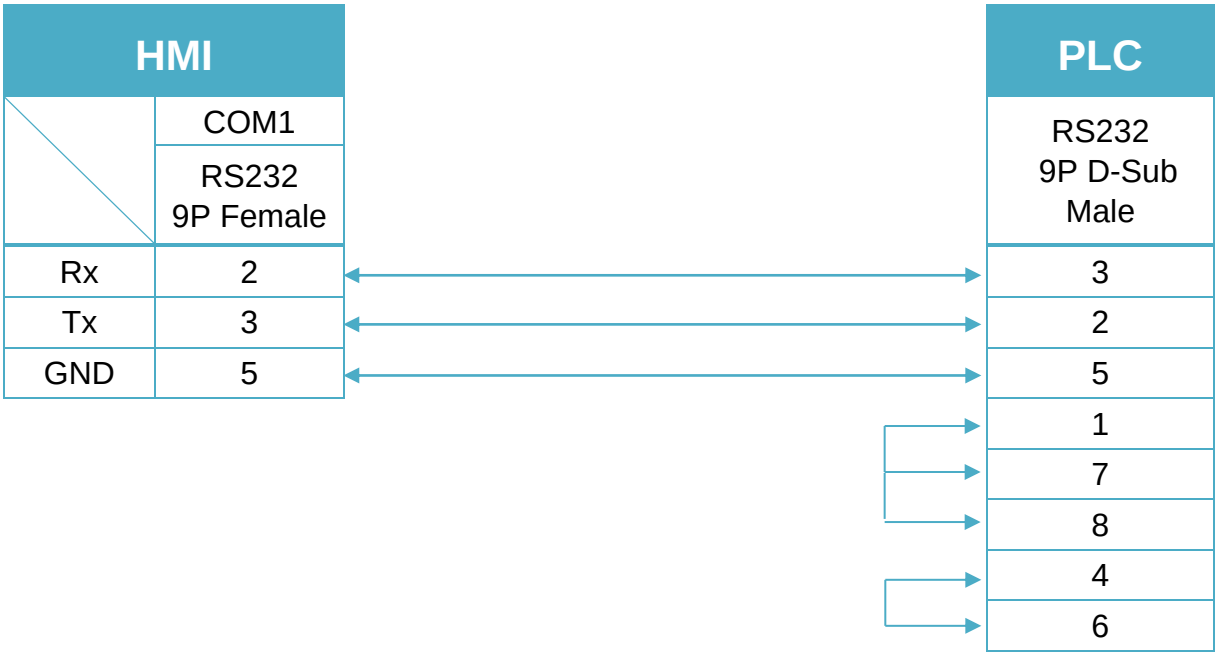

HMI		PLC
	COM1	RS232 9P D-Sub Male
	RS232 9P Female	
Rx	2	3
Tx	3	2
GND	5	5
		1
		7
		8
		4
		6

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

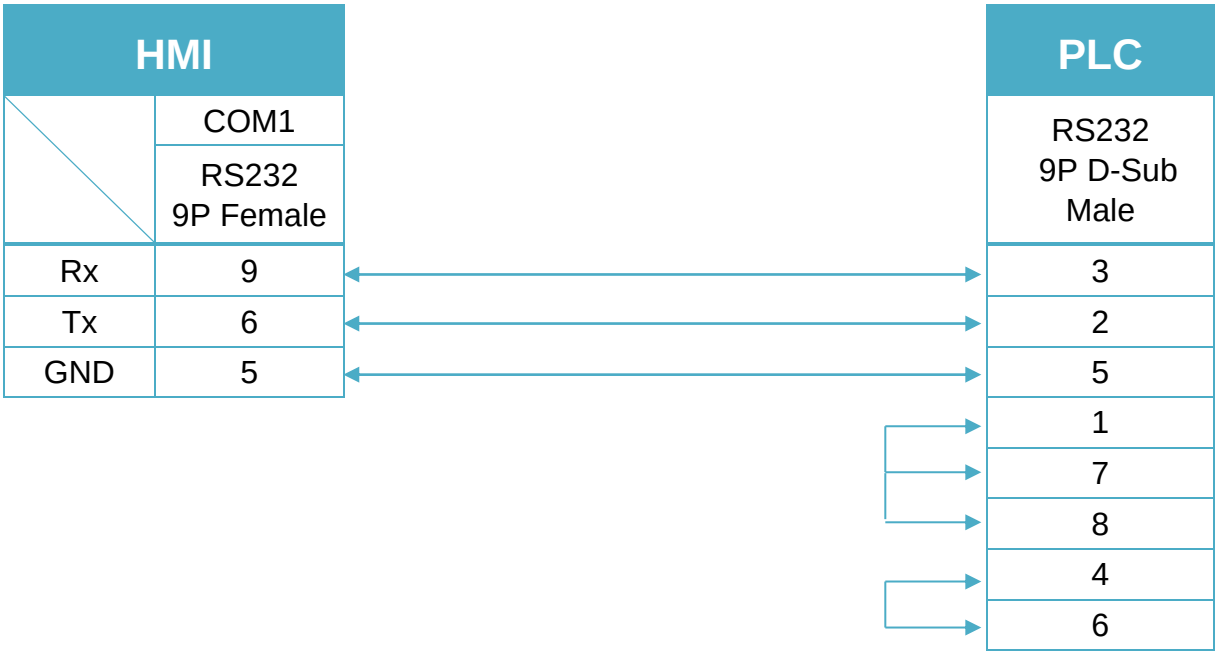

Communication Module (G7L-CUEC / G6L-CUEC / G4L-CUEA / G3L-CUEA Cnet RS422) (Diagram 7 ~ Diagram 10)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS422 terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS422 terminal
Rx-	7	⟷	SDB
Rx+	6	⟷	SDA
Tx-	9	⟷	RDB
TX+	8	⟷	RDA
GND	5	⟷	GND

Diagram 9

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS422 terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 10

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS422 terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

LS GLOFA FEnet (Ethernet)

Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS GLOFA FEnet (Ethernet)		
PLC I/F	Ethernet		
Port no.	2004		
PLC sta. no.	0	0~31	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MX	DDDDDD	0 ~ 131056	Internal Relay
B	IX	ddDdd	0 ~ 63763	Input
B	QX	ddDdd	0 ~ 63763	Output
W	MW	DDDD	0 ~ 8191	Data Register
DW	MD	DDDD	0 ~ 4095	Double Word

Wiring Diagram:

Diagram 1

Ethernet cable:



LS GLOFA GM3467 (LOADER)

Supported Series: LS GLOFA series GM3, GM4, GM6, GM7 CPU port.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS GLOFA GM3467 (LOADER)		
PLC I/F	RS232		
Baud rate	38400		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MX	DDDDDD	0 ~ 524272	
B	IX	ddDdd	0 ~ 63763	00.0.0 ~ 63.7.63 (dd.D.dd)
B	QX	ddDdd	0 ~ 63763	00.0.0 ~ 63.7.63 (dd.D.dd)
W	IW	HHH	0 ~ 273	
W	QW	HHH	0 ~ 273	
W	MW	DDDDD	0 ~ 32767	
W	MD	DDDDD	0 ~ 16383	

Wiring Diagram:

LS GLOFA series:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	3
Tx	3	2
GND	5	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	9	3
Tx	6	2
GND	5	5

LS MASTER-K Cnet

Supported Series: LS MASTER-K series: K80S, K200S, K300S, and K1000S
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS MASTER-K Cnet		
PLC I/F	RS232	RS232/RS485	
Baud rate	38400	9600, 19200, 38400	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0	0-31	

Online simulator	YES

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	PW_Bit	DDDh	0 ~ 255f	I/O Relay (P)
B	KW_Bit	DDDh	0 ~ 255f	Keep Relay (K)
B	MW_Bit	DDDh	0 ~ 255f	Auxiliary Relay (M)
B	LW_Bit	DDDh	0 ~ 255f	Link Relay (L)
B	FW_Bit	DDDh	0 ~ 255f	Special Relay (F)
B	TX	DDDh	0 ~ 255	
B	CX	DDDh	0 ~ 255	
B	DW_bit	DDDDh	0 ~ 9999f	D_bit
B	SX	DD.DD	0 ~ 99.99	
W	MW	DDD	0 ~ 255	Word type for M
W	LW	DDD	0 ~ 255	Word type for L
W	FW	DDD	0 ~ 255	Word type for F
W	PW	DD	0 ~ 63	
W	KW	DD	0 ~ 63	
W	TW	DDD	0 ~ 255	Timer Present Value
W	CW	DDD	0 ~ 255	Counter Present Value
W	DW	DDDD	0 ~ 9999	Data Register (D)

Wiring Diagram:

CPU Port Cnet I/F:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	7
Tx	3	7	⟷	4
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	7
Tx	3	⟷	4
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	7
Tx	6	⟷	4
GND	5	⟷	5

If connected with Cnet module, please refer to Cnet module document.

LS MASTER-K CPU Direct

Supported Series: LS MASTER-K series: K80S, K120S, K200S, K300S, K1000S, K7M.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LG MASTER-K CPU Direct		
PLC I/F	RS232	RS232/RS485	
Baud rate	38400	9600, 19200, 38400	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0	0-31	

Online simulator	YES

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	PW_Bit	DDDh	0 ~ 255f	I/O Relay (P)
B	KW_Bit	DDDh	0 ~ 255f	Keep Relay (K)
B	MW_Bit	DDDh	0 ~ 255f	Auxiliary Relay (M)
B	LW_Bit	DDDh	0 ~ 255f	Link Relay (L)
B	FW_Bit	DDDh	0 ~ 255f	Special Relay (F)
B	TX	DDD	0 ~ 255	
B	CX	DDD	0 ~ 255	
B	SX	DD.DD	0 ~ 99.99	
B	DW_bit	DDDDh	0 ~ 9999f	D_bit
W	MW	DDD	0 ~ 255	Word type for M
W	LW	DDD	0 ~ 255	Word type for L
W	FW	DDD	0 ~ 255	Word type for F
W	PW	DD	0 ~ 63	
W	KW	DD	0 ~ 31	
W	TW	DDD	0 ~ 255	Timer Present Value
W	CW	DDD	0 ~ 255	Counter Present Value
W	DW	DDDD	0 ~ 9999	Data Register (D)

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

LS MASTER-K MODBUS RTU

Supported Series: LS MASTER-K MODBUS RTU
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS MASTER-K MODBUS RTU		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8	8	
Parity	Even	Even	
Stop bits	1	1	
PLC sta. no.	1		

Device Address:

Bit/Word	Device	Format	Range	Memo
B	PW_Bit	DDDDh	0 ~ 9999f	I/O Relay (P)
B	KW_Bit	DDDDh	0 ~ 9999f	Keep Relay (K)
B	MW_Bit	DDDDh	0 ~ 9999f	Auxiliary Relay (M)
B	LW_Bit	DDDDh	0 ~ 9999f	Link Relay (L)
B	FW_Bit	DDDDh	0 ~ 9999f	Special Relay (F)
B	DW_Bit	DDDDh	0 ~ 9999f	
W	MW	DDDD	0 ~ 9999	
W	LW	DDDD	0 ~ 9999	
W	FW	DDDD	0 ~ 9999	
W	TW	DDDD	0 ~ 9999	Timer (T)
W	CW	DDDD	0 ~ 9999	Counter (C)
W	SW	DDDD	0 ~ 9999	
W	DW	DDDD	0 ~ 9999	Data Register (D)
DW	TD	DDDD	0 ~ 9999	
DW	CD	DDDD	0 ~ 9999	
DW	SD	DDDD	0 ~ 9999	
DW	DD	DDDD	0 ~ 9999	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

LS MASTER-K10S1

Supported Series: LS MASTER-K10S1
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS MASTER-K10S1		
PLC I/F	RS232	RS232/RS485	
Baud rate	9600		
Data bits	8	8	
Parity	None	None	
Stop bits	1	1	
PLC sta. no.	0		

Device Address:

Bit/Word	Device	Format	Range	Memo
B	PW_Bit	DDDh	0 ~ 255f	I/O Relay (P)
B	KW_Bit	DDDh	0 ~ 255f	Keep Relay (K)
B	MW_Bit	DDDh	0 ~ 255f	Auxiliary Relay (M)
B	LW_Bit	DDDh	0 ~ 255f	Link Relay (L)
B	FW_Bit	DDDh	0 ~ 255f	Special Relay (F)
B	TX	DDD	0 ~ 255	Timer (T)
B	CX	DDD	0 ~ 255	Counter (C)
W	TW	DDD	0 ~ 255	Timer Present Value
W	CW	DDD	0 ~ 255	Counter Present Value
W	DW	DDDD	0 ~ 9999	Data Register (D)

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	3
Tx	3	2
GND	5	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	9	3
Tx	6	2
GND	5	5

LS XBM/XBC Cnet

Supported Series: LS XGB Series XBM/XBC CPU with communication module XGL-CH2A.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XBM/XBC Cnet		
PLC I/F	RS232	RS232/RS485	
Baud rate	115200	9600~115200	
Data bits	8	7, 8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	0-31	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	PW_Bit	DDDDh	0 ~ 2047f	I/O device Bit
B	MW_Bit	DDDDh	0 ~ 2047f	Internal device Bit
B	LW_Bit	DDDDDh	0 ~ 11263f	Communication device Bit
B	KW_Bit	DDDDh	0 ~ 2559f	Preservation device Bit
B	FW_Bit	DDDDh	0 ~ 2047f	Special device Bit(write available from 1025)
B	DW_Bit	DDDDDh	0 ~ 32767f	Data register_Bit expression (D0000.0)
B	UW_Bit	DH.DDh	0 ~ 7f.31f	XGK-CPUE : hh(0~1f)
B	RW_Bit	DDDDDh	0 ~ 32767f	
B	SX	DDDDD	0 ~ 12799	Relay for step control Bit
B	TX	DDDD	0 ~ 2047	Timer device Bit
B	CX	DDDD	0 ~ 2047	Counter device Bit
W	PW	DDDD	0 ~ 2047	I/O device_2,048 points
W	MW	DDDD	0 ~ 2047	Internal device_4,096 points
W	LW	DDDDD	0 ~ 11263	Communication device_20,480 points

Bit/Word	Device type	Format	Range	Memo
W	KW	DDDD	0 ~ 2559	Preservation device_4,096 points
W	FW	DDDD	0 ~ 2047	Special device_4,096 point
W	DW	DDDDD	0 ~ 32767	Data register_5120 words
W	UW	DH.DD	0.00 ~ 7f.31	Analog data register_256 words
W	RW	DDDDD	0 ~ 32767	
W	SW	DDDDD	0 ~ 127	Relay for step control
W	TW	DDDD	0 ~ 2047	Timer current value register_256 words
W	CW	DDDD	0 ~ 2047	Counter current value register_256 words
W	NW	DDDDD	0 ~ 21503	Communication data register_3,936 words
W	ZW	DDD	0 ~ 127	Index register_128 words

Wiring Diagram:

RS232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

RS485 2W Terminal (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	485-
Data+	2	9	⟷	485+
GND	5	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	485-
Data+	6	1	⟷	485+
GND	5	5	⟷	GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	485-
Data+	2	8	⟷	485+
GND	**5**	**9**	⟷	GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	485-
Data+	2	9	⟷	485+
GND	5	5	⟷	GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	485-
Data+	2	8	⟷	485+
GND	5	5	⟷	GND

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	⟷	485-
Data+	2	⟷	485+
GND	5	⟷	GND

LS XBM/XBC FEnet (Ethernet)

Supported Series: LS XGB series XBM/XBC CPU with XBL-EFMT ethernet module.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XBM/XBC FEnet (Ethernet)		
PLC I/F	Ethernet		
Port no.	2004		
PLC sta. no.	0	0~255	

PLC Setting:

Communication mode	FEnet Protocol


Device Address:

Bit/Word	Device	Format	Range	Memo
B	PW_Bit	DDDDh	0 ~ 2047f	I/O device Bit
B	MW_Bit	DDDDh	0 ~ 2047f	Internal device Bit
B	LW_Bit	DDDDDh	0 ~ 11263f	Communication device Bit
B	KW_Bit	DDDDh	0 ~ 2559f	Preservation device Bit
B	FW_Bit	DDDDh	0 ~ 2047f	Special device Bit(write available from 1025)
B	DW_Bit	DDDDDh	0 ~ 32767f	Data register_Bit expression
B	UW_Bit	DH.DDh	0 ~ 7f.31f	XGK-CPUE : hh(0~1f)
B	RW_Bit	DDDDDf	0 ~32767f	
B	SX	DDDDD	0 ~ 12799	Relay for step control Bit
B	TX	DDDD	0 ~ 2047	Timer device Bit
B	CX	DDDD	0 ~ 2047	Counter device Bit
W	PW	DDDD	0 ~ 2047	I/O device_2,048 points
W	MW	DDDD	0 ~ 2047	Internal device_4,096 points
W	LW	DDDDD	0 ~ 11263	Communication device_20,480
W	KW	DDDD	0 ~ 2559	Preservation device_4,096 points
W	FW	DDDD	0 ~ 2047	Special device_4,096 point
W	DW	DDDDD	0 ~ 32767	Data register_5120 words
W	UW	DH.DD	0.00 ~ 7f.31	Analog data register_256 words
W	RW	DDDDD	0 ~ 32767	

Bit/Word	Device	Format	Range	Memo
W	SW	DDDDD	0 ~ 127	Relay for step control
W	TW	DDDD	0 ~ 2047	Timer current value register_256 words
W	CW	DDDD	0 ~ 2047	Counter current value register_256 words
W	NW	DDDDD	0 ~ 21503	Communication data register_3,936 words
W	ZW	DDD	0 ~ 127	Index register_128 words

Wiring Diagram:

Ethernet cable:

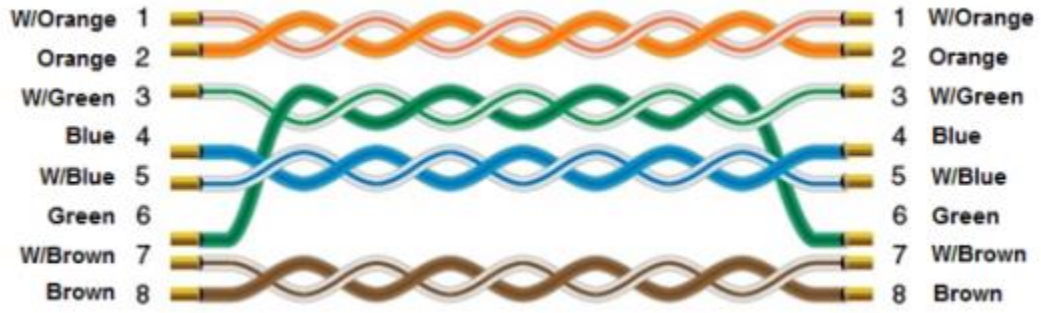

LS XBM/XBC/XGK CPU DIRECT

Supported Series: LS XBM/XBC/XGK CPU RS232 port.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XBM/XBC/XGK CPU DIRECT		
PLC I/F	RS232	RS232	
Baud rate	115200	9600~115200	
Data bits	8	7, 8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	1	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	PW_Bit	DDDDh	0 ~ 2047f	I/O device Bit
B	MW_Bit	DDDDh	0 ~ 2047f	Internal device Bit
B	LW_Bit	DDDDDh	0 ~ 11263f	Communication device Bit
B	KW_Bit	DDDDh	0 ~ 2559f	Preservation device Bit
B	FW_Bit	DDDDh	0 ~ 2047f	Special device Bit(write available from
B	DW_Bit	DDDDDh	0 ~ 32767f	Data register_Bit expression
B	UW_Bit	DH.DDh	0 ~ 3f.31f	XGK-CPUE : hh(0~1f)
B	RW_Bit	DDDDDh	0 ~ 32767f	
B	SX	DDDDD	0 ~ 12799	Relay for step control Bit
B	TX	DDDD	0 ~ 2047	Timer device Bit
B	CX	DDDD	0 ~ 2047	Counter device Bit
W	PW	DDDD	0 ~ 2047	I/O device
W	MW	DDDD	0 ~ 2047	Internal device
W	LW	DDDDD	0 ~ 11263	Communication device
W	KW	DDDD	0 ~ 2559	Preservation device
W	FW	DDDD	0 ~ 2047	Special device(write available
W	SW	DDDDD	0 ~ 127	Relay for step control
W	DW	DDDDD	0 ~ 32767	Data register
W	UW	DH.DD	0.00 ~ 3f.31	Analog data register XGK-CPUE : hh(0~1f)

Bit/Word	Device type	Format	Range	Memo
W	NW	DDDDD	0 ~ 21503	Communication data register
W	ZW	DDD	0 ~ 127	Index register_128 words
W	TW	DDDD	0 ~ 2047	Timer current value register
W	CW	DDDD	0 ~ 2047	Counter current value register
W	RW	DDDDD	0 ~ 32767	
W	ZRW	DDDDD	0 ~ 32767	
W	TSW	DDDD	0 ~ 2047	Setup value
W	CSW	DDDD	0 ~ 2047	Setup value

Wiring Diagram:

XGB RS232 6P Mini-DIN (Diagram 1 ~ Diagram 3)

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		XGB RS232 6P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	6
Tx	3	7	⟷	2
GND	5	5	⟷	3

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		XGB RS232 6P Mini-DIN Male
Rx	2	⟷	6
Tx	3	⟷	2
GND	5	⟷	3

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		XGB RS232 6P Mini-DIN Male
Rx	9	⟷	6
Tx	6	⟷	2
GND	5	⟷	3

XGK RS232 9P D-Sub Male (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		XGK RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1		XGK RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		XGK RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

LS XEC Cnet

Supported Series: LS XGB Series XEC CPU with communication module XGL-CH2A.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XEC Cnet		
PLC I/F	RS232	RS232/RS485	
Baud rate	115200	9600 ~ 115200	
Data bits	8	7, 8	
Parity	None	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	0	0 ~ 32	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	AW_Bit	DDDDDDh	0 ~ 262143f	Automatic variable bit
B	IW_Bit	DDD.DD.Dh	0 ~ 127.15.3f	Input device bit
B	QW_Bit	DDD.DD.Dh	0 ~ 127.15.3f	Output device bit
B	MW_Bit	DDDDDDh	0 ~ 131071f	Direct variable bit
B	RW_Bit	DDDDDh	0 ~ 32767f	Direct variable bit
B	WW_Bit	DDDDDh	0 ~ 65535f	Direct variable bit
B	FW_Bit	DDDDh	0 ~ 2047f	System flag bit
B	KW_Bit	DDDDh	0 ~ 8399f	Built-in special flag bit
B	LW_Bit	DDDDDh	0 ~ 11263f	High speed link flag bit
B	NW_Bit	DDDDDh	0 ~ 25087f	P2P flag bit
B	UW_Bit	DD.DD.DDh	0 ~ 31.15.31f	Analog flag bit
B	AX	DDDDDDD	0 ~ 4194303	
B	IX	DDD.DD.DD	0 ~ 127.15.63	
B	QX	DDD.DD.DD	0 ~ 127.15.63	
B	MX	DDDDDDD	0 ~ 2097151	
B	RX	DDDDDD	0 ~ 524287	
B	WX	DDDDDDD	0 ~ 1048575	
B	FX	DDDDD	0 ~ 32767	
B	KX	DDDDDD	0 ~ 134399	

Bit/Word	Device type	Format	Range	Memo
B	LX	DDDDDDD	0 ~ 1880223	
B	NX	DDDDDD	0 ~ 401407	
B	UX	DD.DD.DDD	31.15.511	
W	AW	DDDDDD	0 ~ 262143	Automatic variable
W	IW	DDD.DD.D	0 ~ 127.15.3	Input device
W	QW	DDD.DD.D	0 ~ 127.15.3	Output device
W	MW	DDDDDD	0 ~ 131071	Direct variable
W	RW	DDDDD	0 ~ 32767	Direct variable
W	WW	DDDDD	0 ~ 65535	Direct variable
W	FW	DDDD	0 ~ 2047	System flag
W	KW	DDDD	0 ~ 8399	Built-in special flag
W	LW	DDDDD	0 ~ 11263	High speed link flag
W	NW	DDDDD	0 ~ 25087	P2P flag
W	UW	DD.DD.DD	0 ~ 31.15.31	Analog flag
DW	MD	DDDDD	0 ~ 65535	

Wiring Diagram:

RS232 Terminal (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	Tx
Tx	3	7	⟷	Rx
GND	5	5	⟷	SG

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1		RS232 Terminal
	RS232 9P Female		
Rx	2	⟷	Tx
Tx	3	⟷	Rx
GND	5	⟷	SG

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1		RS232 Terminal
	RS232 9P Female		
Rx	9	⟷	Tx
Tx	6	⟷	Rx
GND	5	⟷	SG

RS485 2W Terminal (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	485-
Data+	2	9	⟷	485+
GND	5	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	485-
Data+	6	1	⟷	485+
GND	5	5	⟷	GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	485-
Data+	2	8	⟷	485+
GND	**5**	**9**	⟷	GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		
	RS485 2W 9P Male	RS485 2W 9P Male		RS485 2W Terminal
Data-	1	6	⟷	485-
Data+	2	9	⟷	485+
GND	5	5	⟷	GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		
	RS485 2W 9P Female	RS485 2W 9P Female		RS485 2W Terminal
Data-	1	7	⟷	485-
Data+	2	8	⟷	485+
GND	5	5	⟷	GND

Diagram 9

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM2 RS485 2W 9P Female		RS485 2W Terminal
Data-	1	⟷	485-
Data+	2	⟷	485+
GND	5	⟷	GND

LS XEC FEnet (Ethernet)

Supported Series: LS XGB Series XEC CPU with XGL-EFMT ethernet module.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XEC FEnet (Ethernet)		
PLC I/F	Ethernet		
Port no.	2004		

Device Address:

Bit/Word	Device	Format	Range	Memo
B	AW_Bit	DDDDDh	0 ~ 16383f	Automatic variable bit
B	IW_Bit	DD.DD.Df	0 ~ 15.15.3f	Input device bit
B	QW_Bit	DD.DD.Df	0 ~ 15.15.3f	Output device bit
B	MW_Bit	DDDDh	0 ~ 8191f	Direct variable bit
B	RW_Bit	DDDDDh	0 ~ 10239f	Direct variable bit
B	WW_Bit	DDDDDh	0 ~ 10239f	Direct variable bit
B	FW_Bit	DDDDh	0 ~ 1023f	System flag bit
B	KW_Bit	DDDDh	0 ~ 4095f	Built-in special flag bit
B	LW_Bit	DDDDh	0 ~ 2047f	High speed link flag bit
B	NW_Bit	DDDDh	0 ~ 5119f	P2P flag bit
B	UW_Bit	DD.DD.DDf	0 ~ 31.15.31f	Analog flag bit
B	AX	DDDDDD	0 ~ 262143	
B	IX	DDD.DD.DD	0 ~ 127.15.63	
B	QX	DDD.DD.DD	0 ~ 127.15.63	
B	MX	DDDDDD	0 ~ 131071	
B	RX	DDDDDD	0 ~ 163839	
B	WX	DDDDDD	0 ~ 163839	
B	FX	DDDDD	0 ~ 16383	
B	KX	DDDDD	0 ~ 65535	
B	LX	DDDDD	0 ~ 32767	
B	NX	DDDDD	0 ~ 81919	
B	UX	DD.DD.DDD	0 ~ 31.15.511	
W	AW	DDDDD	0 ~ 16383	Automatic variable

Bit/Word	Device	Format	Range	Memo
W	IW	DDD.DD.D	0 ~ 15.15.3	Input device
W	QW	DDD.DD.D	0 ~ 15.15.3	Output device
W	MW	DDDD	0 ~ 8191	Direct variable
W	RW	DDDDD	0 ~ 10239	Direct variable
W	WW	DDDDD	0 ~ 10239	Direct variable
W	FW	DDDD	0 ~ 1023	System flag
W	KW	DDDD	0 ~ 4095	Built-in special flag
W	LW	DDDD	0 ~ 2047	High speed link flag
W	NW	DDDD	0 ~ 5119	P2P flag
W	UW	DD.DD.DD	0 ~ 31.15.31	Analog flag
DW	MD	DDDD	0 ~ 4095	

Wiring Diagram:

Ethernet cable:



LS XEC/XGI CPU DIRECT

Supported Series: LS XEC/XGI CPU RS232 port.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XEC/XGI CPU DIRECT		
PLC I/F	RS232	RS232	
Baud rate	115200	9600~115200	
Data bits	8	7, 8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	1	

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	AW_Bit	DDDDDDh	0 ~ 262143f	
B	IW_Bit	DDD.DD.Dh	0 ~ 127.15.3f	
B	QW_Bit	DDD.DD.Dh	0 ~ 127.15.3f	
B	MW_Bit	DDDDDDh	0 ~ 131071f	
B	RW_Bit	DDDDDh	0 ~ 32767f	
B	WW_Bit	DDDDDh	0 ~ 65535f	
B	FW_Bit	DDDDh	0 ~ 2047f	
B	KW_Bit	DDDDh	0 ~ 8399f	
B	LW_Bit	DDDDDh	0 ~ 11263f	
B	NW_Bit	DDDDDh	0 ~ 25087f	
B	UW_Bit	DD.DD.DDh	0 ~ 31.15.31f	
B	AX	DDDDDDD	0 ~ 4194303	
B	IX	DDD.DD.DD	0 ~ 127.15.63	
B	QX	DDD.DD.DD	0 ~ 127.15.63	
B	MX	DDDDDDD	0 ~ 2097151	
B	RX	DDDDDD	0 ~ 524287	

Bit/Word	Device type	Format	Range	Memo
B	WX	DDDDDDD	0 ~ 1048575	
B	FX	DDDDD	0 ~ 32767	
B	KX	DDDDDD	0 ~ 134399	
B	LX	DDDDDDD	0 ~ 1880223	
B	NX	DDDDDD	0 ~ 401407	
B	UX	DD.DD.DDD	0 ~ 31.15.511	
W	AW	DDDDDD	0 ~ 262143	
W	IW	DDD.DD.D	0 ~ 127.15.3	
W	QW	DDD.DD.D	0 ~ 127.15.3	
W	MW	DDDDDD	0 ~ 131071	
W	RW	DDDDD	0 ~ 32767	
W	WW	DDDDD	0 ~ 65535	
W	FW	DDDD	0 ~ 2047	
W	KW	DDDD	0 ~ 8399	
W	LW	DDDDD	0 ~ 11263	
W	NW	DDDDD	0 ~ 25087	
W	UW	DD.DD.DD	0 ~ 31.15.31	
DW	MD	DDDDD	0 ~ 65535	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		XGI CPU RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1		XGI CPU RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		XGI CPU RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

LS XGI Cnet

Supported Series: LS XGT series XGI CPU series with communication module XGL-CH2A
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XGI Cnet		
PLC I/F	RS232	RS232/RS485 4W	
Baud rate	115200	9600~115200	
Data bits	8	7, 8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0	0~32	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	AW_Bit	DDDDDDh	0 ~ 262143f	
B	IW_Bit	DDD.DD.Dh	0 ~ 127.15.3f	
B	QW_Bit	DDD.DD.Dh	0 ~ 127.15.3f	
B	MW_Bit	DDDDDDh	0 ~ 131071f	
B	RW_Bit	DDDDDh	0 ~ 32767f	
B	WW_Bit	DDDDDh	0 ~ 65535f	
B	FW_Bit	DDDDh	0 ~ 2047f	
B	KW_Bit	DDDDh	0 ~ 8399f	
B	LW_Bit	DDDDDh	0 ~ 11263f	
B	NW_Bit	DDDDDh	0 ~ 25087f	
B	UW_Bit	DD.DD.DDh	0 ~ 31.15.31f	
B	AX	DDDDDDD	0 ~ 4194303	
B	IX	DDD.DD.DD	0 ~ 127.15.63	
B	QX	DDD.DD.DD	0 ~ 127.15.63	
B	MX	DDDDDDD	0 ~ 2097151	
B	RX	DDDDDD	0 ~ 524287	
B	WX	DDDDDDD	0 ~ 1048575	
B	FX	DDDDD	0 ~ 32767	
B	KX	DDDDDD	0 ~ 134399	

Bit/Word	Device type	Format	Range	Memo
B	LX	DDDDDDD	0 ~ 1880223	
B	NX	DDDDDD	0 ~ 401407	
B	UX	DD.DD.DDD	0 ~ 31.15.511	
W	AW	DDDDDD	0 ~ 262143	
W	IW	DDD.DD.D	0 ~ 127.15.3	
W	QW	DDD.DD.D	0 ~ 127.15.3	
W	MW	DDDDDD	0 ~ 131071	
W	RW	DDDDD	0 ~ 32767	
W	WW	DDDDD	0 ~ 65535	
W	FW	DDDD	0 ~ 2047	
W	KW	DDDD	0 ~ 8399	
W	LW	DDDDD	0 ~ 11263	
W	NW	DDDDD	0 ~ 25087	
W	UW	DD.DD.DD	0 ~ 31.15.31	
DW	MD	DDDDD	0 ~ 65535	

Wiring Diagram:

XGL-CH2A CH1 RS232 9P D-Sub Male (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		XGL-CH2A CH1 RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		XGL-CH2A CH1 RS232 9P D-Sub Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		XGL-CH2A CH1 RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

XGL-CH2A CH2 5P Terminal (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		XGL-CH2A CH2 5P Terminal
Rx-	1	↔	TXD-
Rx+	2	↔	TXD+
Tx-	3	↔	RXD-
TX+	4	↔	RXD+
GND	5	↔	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		XGL-CH2A CH2 5P Terminal
Rx-	7	↔	TXD-
Rx+	6	↔	TXD+
Tx-	9	↔	RXD-
TX+	8	↔	RXD+
GND	5	↔	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		XGL-CH2A CH2 5P Terminal
Rx-	1	⟷	TXD-
Rx+	2	⟷	TXD+
Tx-	3	⟷	RXD-
TX+	4	⟷	RXD+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		XGL-CH2A CH2 5P Terminal
Rx-	1	⟷	TXD-
Rx+	2	⟷	TXD+
Tx-	3	⟷	RXD-
TX+	4	⟷	RXD+
GND	5	⟷	GND

LS XGI FEnet (Ethernet)

Supported Series: LS XGT series XGI CPU with XGL-EFMT ethernet module.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XGI FEnet (Ethernet)		
PLC I/F	Ethernet		
Port no.	2004		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	AW_Bit	DDDDDDh	0 ~ 262143f	
B	IW_Bit	DDD.DD.Dh	0 ~ 127.15.3f	
B	QW_Bit	DDD.DD.Dh	0 ~ 127.15.3f	
B	MW_Bit	DDDDDDh	0 ~ 131071f	
B	RW_Bit	DDDDDh	0 ~ 32767f	
B	WW_Bit	DDDDDh	0 ~ 65535f	
B	FW_Bit	DDDDh	0 ~ 2047f	
B	KW_Bit	DDDDh	0 ~ 8399f	
B	LW_Bit	DDDDDh	0 ~ 11263f	
B	NW_Bit	DDDDDh	0 ~ 25087f	
B	UW_Bit	DD.DD.DDh	0 ~ 31.15.31f	
B	AX	DDDDDDD	0 ~ 4194303	
B	IX	DDD.DD.DD	0 ~ 127.15.63	
B	QX	DDD.DD.DD	0 ~ 127.15.63	
B	MX	DDDDDDD	0 ~ 2097151	
B	RX	DDDDDD	0 ~ 524287	
B	WX	DDDDDDD	0 ~ 1048575	
B	FX	DDDDD	0 ~ 32767	
B	KX	DDDDDD	0 ~ 134399	
B	LX	DDDDDDD	0 ~ 1880223	
B	NX	DDDDDD	0 ~ 401407	
B	UX	DD.DD.DDD	0 ~ 31.15.511	

Bit/Word	Device type	Format	Range	Memo
W	AW	DDDDDD	0 ~ 262143	
W	IW	DDD.DD.D	0 ~ 127.15.3	
W	QW	DDD.DD.D	0 ~ 127.15.3	
W	MW	DDDDDD	0 ~ 131071	
W	RW	DDDDD	0 ~ 32767	
W	WW	DDDDD	0 ~ 65535	
W	FW	DDDD	0 ~ 2047	
W	KW	DDDD	0 ~ 8399	
W	LW	DDDDD	0 ~ 11263	
W	NW	DDDDD	0 ~ 25087	
W	UW	DD.DD.DD	0 ~ 31.15.31	
DW	MD	DDDDD	0 ~ 65535	

Wiring Diagram:

Ethernet cable:



LS XGK Cnet

Supported Series: LS XGT series XGK CPU with communication module XGL-CH2A
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XGK Cnet		
PLC I/F	RS232	RS232/RS485 4W	
Baud rate	115200	9600~115200	
Data bits	8	7, 8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	0~32	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	PW_Bit	DDDDh	0 ~ 2047f	I/O device Bit
B	MW_Bit	DDDDh	0 ~ 2047f	Internal device Bit
B	LW_Bit	DDDDDh	0 ~ 11263f	Communication device Bit
B	KW_Bit	DDDDh	0 ~ 2559f	Preservation device Bit
B	FW_Bit	DDDDh	0 ~ 2047f	Special device Bit(write available from 1025)
B	DW_Bit	DDDDDh	0 ~ 32767f	Data register_Bit expression (D0000.0)
B	UW_Bit	DH.DDh	0 ~ 3f.31f	XGK-CPUE : hh(0~1f)
B	SX	DDDDD	0 ~ 12799	Relay for step control Bit
B	TX	DDDD	0 ~ 2047	Timer device Bit
B	CX	DDDD	0 ~ 2047	Counter device Bit
W	PW	DDDD	0 ~ 2047	I/O device
W	MW	DDDD	0 ~ 2047	Internal device
W	LW	DDDDD	0 ~ 11263	Communication device
W	KW	DDDD	0 ~ 2559	Preservation device
W	FW	DDDD	0 ~ 2047	Special device(write available from 1025)
W	DW	DDDDD	0 ~ 32767	Data register
W	UW	DH.DD	0.00 ~ 3f.31	Analog data register XGK-CPUE : hh(0~1f)
W	RW	DDDDD	0 ~ 32767	

Bit/Word	Device type	Format	Range	Memo
W	ZRW	DDDDD	0 ~ 32767	
W	NW	DDDDD	0 ~ 21503	Communication data register
W	ZW	DDD	0 ~ 127	Index register_128 words
W	SW	DDDDD	0 ~ 127	Relay for step control
W	TW	DDDD	0 ~ 2047	Timer current value register
W	CW	DDDD	0 ~ 2047	Counter current value register

Wiring Diagram:

XGL-CH2A CH1 RS232 9P D-Sub Male (Diagram 1~Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		XGL-CH2A CH1 RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		XGL-CH2A CH1 RS232 9P D-Sub Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		XGL-CH2A CH1 RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

XGL-CH2A CH2 5P Terminal (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		XGL-CH2A CH2 5P Terminal
Rx-	1	↔	TXD-
Rx+	2	↔	TXD+
Tx-	3	↔	RXD-
TX+	4	↔	RXD+
GND	5	↔	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		XGL-CH2A CH2 5P Terminal
Rx-	7	↔	TXD-
Rx+	6	↔	TXD+
Tx-	9	↔	RXD-
TX+	8	↔	RXD+
GND	5	↔	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		XGL-CH2A CH2 5P Terminal
Rx-	1	⟷	TXD-
Rx+	2	⟷	TXD+
Tx-	3	⟷	RXD-
TX+	4	⟷	RXD+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		XGL-CH2A CH2 5P Terminal
Rx-	1	⟷	TXD-
Rx+	2	⟷	TXD+
Tx-	3	⟷	RXD-
TX+	4	⟷	RXD+
GND	5	⟷	GND

LS XGK FEnet (Ethernet)

Supported Series: LS XGT series XGK CPU with XGL-EFMT ethernet module.
Website: http://www.lgis.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS XGK FEnet (Ethernet)		
PLC I/F	Ethernet		
Port no.	2004		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	PW_Bit	DDDDh	0 ~ 2047f	I/O device Bit
B	MW_Bit	DDDDh	0 ~ 2047f	Internal device Bit
B	LW_Bit	DDDDDh	0 ~ 11263f	Communication device Bit
B	KW_Bit	DDDDh	0 ~ 2559f	Preservation device Bit
B	FW_Bit	DDDDh	0 ~ 2047f	Special device Bit(write available from 1025)
B	DW_Bit	DDDDDh	0 ~ 32767f	Data register_Bit expression (D0000.0)
B	UW_Bit	DH.DDh	0 ~ 3f.31f	XGK-CPUE : hh(0~1f)
B	SX	DDDDD	0 ~ 12799	Relay for step control Bit
B	TX	DDDD	0 ~ 2047	Timer device Bit
B	CX	DDDD	0 ~ 2047	Counter device Bit
W	PW	DDDD	0 ~ 2047	I/O device
W	MW	DDDD	0 ~ 2047	Internal device
W	LW	DDDDD	0 ~ 11263	Communication device
W	KW	DDDD	0 ~ 2559	Preservation device
W	FW	DDDD	0 ~ 2047	Special device(write available from 1025)
W	SW	DDDDD	0 ~ 127	Relay for step control
W	DW	DDDDD	0 ~ 32767	Data register
W	UW	DH.DD	0.00 ~ 3f.31	Analog data register XGK-CPUE : hh(0~1f)
W	NW	DDDDD	0 ~ 21503	Communication data register
W	ZW	DDD	0 ~ 127	Index register_128 words
W	TW	DDDD	0 ~ 2047	Timer current value register

Bit/Word	Device type	Format	Range	Memo
W	CW	DDDD	0 ~ 2047	Counter current value register
W	RW	DDDDD	0 ~ 32767	
W	ZRW	DDDDD	0 ~ 32767	

Wiring Diagram:

Ethernet cable:



LS Mecapion Metronix AnyPack

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LS Mecapion Metronix AnyPack		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device Type	Format	Range	Memo
B	MX_L16bit	DDDDDdd	0 ~ 9999915	MD Low 16bit
B	MX_H16bit	DDDDDdd	0 ~ 9999915	MD High 16bit
DW	MD	DDDD	0 ~ 9999	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	6
Tx	3	7	⟷	5
GND	5	5	⟷	GND 11
			⟷	GND 12

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI		PLC
	COM1 RS232 9P Female	RS232 Terminal
Rx	2	6
Tx	3	5
GND	5	GND 11
		GND 12

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 Terminal
Rx	9	6
Tx	6	5
GND	5	GND 11
		GND 12

LTi Motion LustBus

Supported Series: Lust Servo C SC3000 Series

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LTi Motion LustBus		
PLC I/F	RS485 2W		
Baud rate	57600	9600 ~ 115200	
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	1	0 ~ 30	

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	BYTE	DDD	0 ~ 999	
W	WORD	DDD	0 ~ 999	
W	DWORD	DDD	0 ~ 999	
W	FLOAT	DDD	0 ~ 999	
W	FIXPT16	DDD	0 ~ 999	32-bit float
W	INT32Q16	DDD	0 ~ 999	32-bit float
W	STRING	DDDdd	0 ~ 99900	dd:00
W	BYTE_Ary	DDDDDDDD	0 ~ 99965535	
W	WORD_Ary	DDDDDDDD	0 ~ 99965535	
W	DWORD_Ary	DDDDDDDD	0 ~ 99965535	
W	FLOAT_Ary	DDDDDDDD	0 ~ 99965535	
W	FIXPT16_Ary	DDDDDDDD	0 ~ 99965535	
W	INT32Q16_Ary	DDDDDDDD	0 ~ 99965535	
W	PT_MC_ERROR	DDDd	0 ~ 9990	d:0,1,2 *note1

*Note1: 0:error code (Word), 1:error point(Word), 2:work time(Double word)

Wiring Diagram:

RS485 2W Terminal (Diagram 1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	485-
Data+	2	9	⟷	485+
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	485-
Data+	6	1	⟷	485+
GND	5	5	⟷	GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	485-
Data+	2	8	⟷	485+
GND	**5**	**9**	⟷	GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	485-
Data+	2	9	⟷	485+
GND	5	5	⟷	GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	485-
Data+	2	8	⟷	485+
GND	5	5	⟷	GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	⟷	485-
Data+	2	⟷	485+
GND	5	⟷	GND

LTi Motion ServoOne (Ethernet)

Supported Series: Lust Servo One

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	LTi Motion ServoOne (Ethernet)		
PLC I/F	Ethernet		
Port no.	2317		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	BOOL	DDDDD	0 ~ 32767	
B	BOOL_Ary	DDDDDDDD	0 ~ 32767999	
W	INT8	DDDDD	0 ~ 32767	
W	UINT8	DDDDD	0 ~ 32767	
W	WORD	DDDDD	0 ~ 32767	
DW	DWORD	DDDDD	0 ~ 32767	
DW	FLOAT	DDDDD	0 ~ 32767	
W	STRING	DDDDDDD	0 ~ 3276700	
W	INT8_Ary	DDDDDDDD	0 ~ 32767999	
W	UINT8_Ary	DDDDDDDD	0 ~ 32767999	
W	WORD_Ary	DDDDDDDD	0 ~ 32767999	
W	DWORD_Ary	DDDDDDDD	0 ~ 32767999	
W	FLOAT_Ary	DDDDDDDD	0 ~ 32767999	
W	STRING_Ary	DDDDDDDDDD	0 ~ 2147399900	

Wiring Diagram:

Ethernet cable:



Master-Slave Server

For more information, please refer to User's Manual CH28.


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Master-Slave Server		
PLC I/F	RS232	RS232/RS485	
Baud rate	115200	9600~115200	
Data bits	8	7,8	
Parity	Even	None,Even,Odd,Mark,Space	
Stop bits	1	1,2	
HMI sta. no.	0		
PLC sta. no.	0		

FOR MT500 HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Master (Master-Slave Protocol)		
PLC I/F	RS232		
Baud rate	115200	38400, 115200	
Data bits	8		
Parity	Even		
Stop bits	1		
HMI sta. no.	0		
PLC sta. no.	0		
Parameter 1	MT500 PLC ID	Use PLCAddressView.exe to find PLC ID.	


To connect HMI with MT500, MT500 has to be set as [Slave].

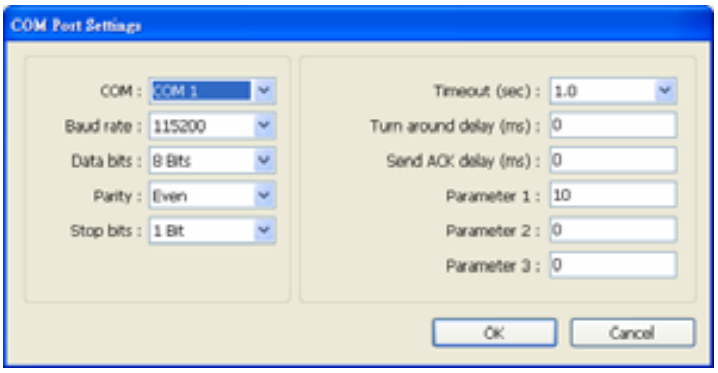

PLC Setting:

Communication mode	MT500 Multiple HMI set Slave.

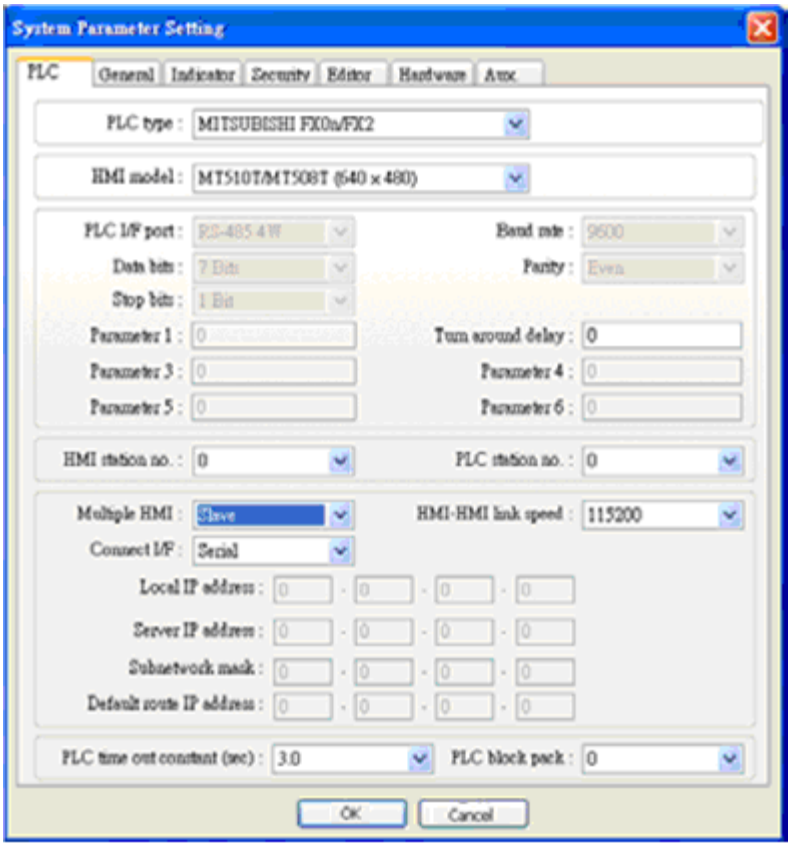

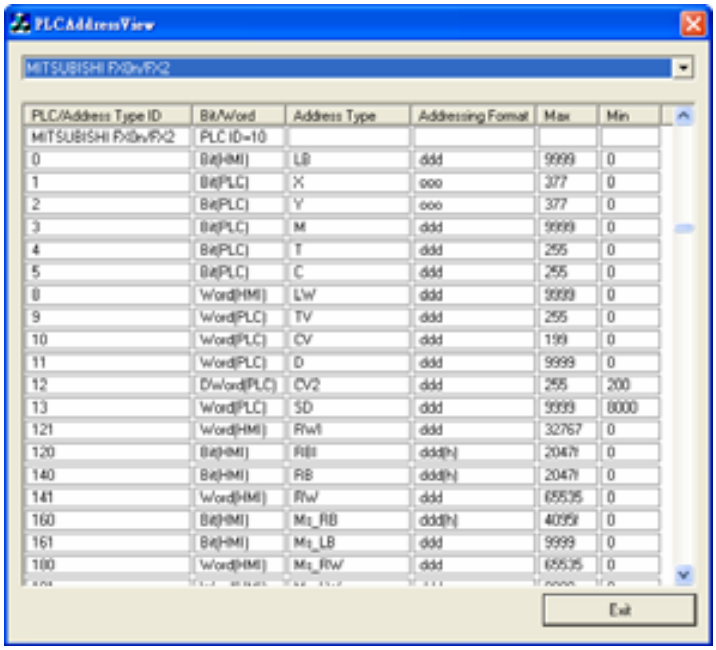

Device Address:

Bit/Word	MT500	MT8000	Range	Memo
B	Ms_RB	RW_Bit	dddd: 0 ~ 4095 (h): 0 ~ f	
B	Ms_LB	LB	dddd:0 ~ 9999	
W	Ms_RW	RW	ddddd:0 ~ 65535	
W	Ms_LW	LW	dddd:0 ~ 9999	

MEGMEET MC Series

Supported Series: MEGMEET MC Series (Modbus RTU Protocol)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MEGMEET MC Series		
PLC I/F	RS232		
Baud rate	9600	9600, 19200, 115200	
Data bits	8	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	0	0-255	

PLC Setting:

Communication mode	Modbus RTU protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 377	1200~01455 0000~0255
B	Y	OOO	0 ~ 377	0000~0255
B	M	DDDDD	0 ~ 10239	2000~2047 12000~20191
B	SM	DDD	0 ~ 511	4400~4655 30000~30255
B	S	DDDD	0 ~ 4095	6000~7023 31000~34071
B	T_Bit	DDD	0 ~ 511	8000~8255
B	C_Bit	DDD	0 ~ 306	9200~9455 10000~10050
B	D_Bit	DDDDdd	0 ~ 799915	
B	R_Bit	DDDDDdd	0 ~ 3276715	
W	D	DDDD	0 ~ 7999	0000~7999
DW	D_Double	DDDD	0 ~ 7998	0000~7999
W	SD	DDD	0 ~ 255	8000~8255 12000~12255
DW	SD_Double	DDD	0 ~ 510	8000~8255 12000~12255
W	Z	DD	0 ~ 15	8500~8515
W	T	DDD	0 ~ 511	9000~9255 11000~11255
W	C	DDD	0 ~ 199	9500~9699

Bit/Word	Device type	Format	Range	Memo
DW	C_Double	DDD	200 ~ 306	9700~10101
W	R	DDDDD	0 ~ 32767	13000~45767
DW	R_Double	DDDDD	0 ~ 32766	13000~45767

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		MC Series COM1 terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		MC Series COM1 terminal
Rx	2	⟷	TXD
Tx	3	⟷	RXD
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		MC Series COM1 terminal
Rx	9	⟷	TXD
Tx	6	⟷	RXD
GND	5	⟷	GND


MEIKONG Metro Safe Server

Supported Series: MEIKONG Metro Safe Server
Website: http://www.xiemaowang.com/detail/2079110.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MEIKONG Metro Safe Server		
PLC I/F	RS4852W	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7,8	
Parity	None	Even,Odd,None	
Stop bits	1	1,2	
PLC sta. no.	1	0~252	

In COM Port Settings, the data read will be stored in 25 consecutive addresses start from [Data save address (LW)] as shown below. Data will be stored in LW-100 to LW-124.

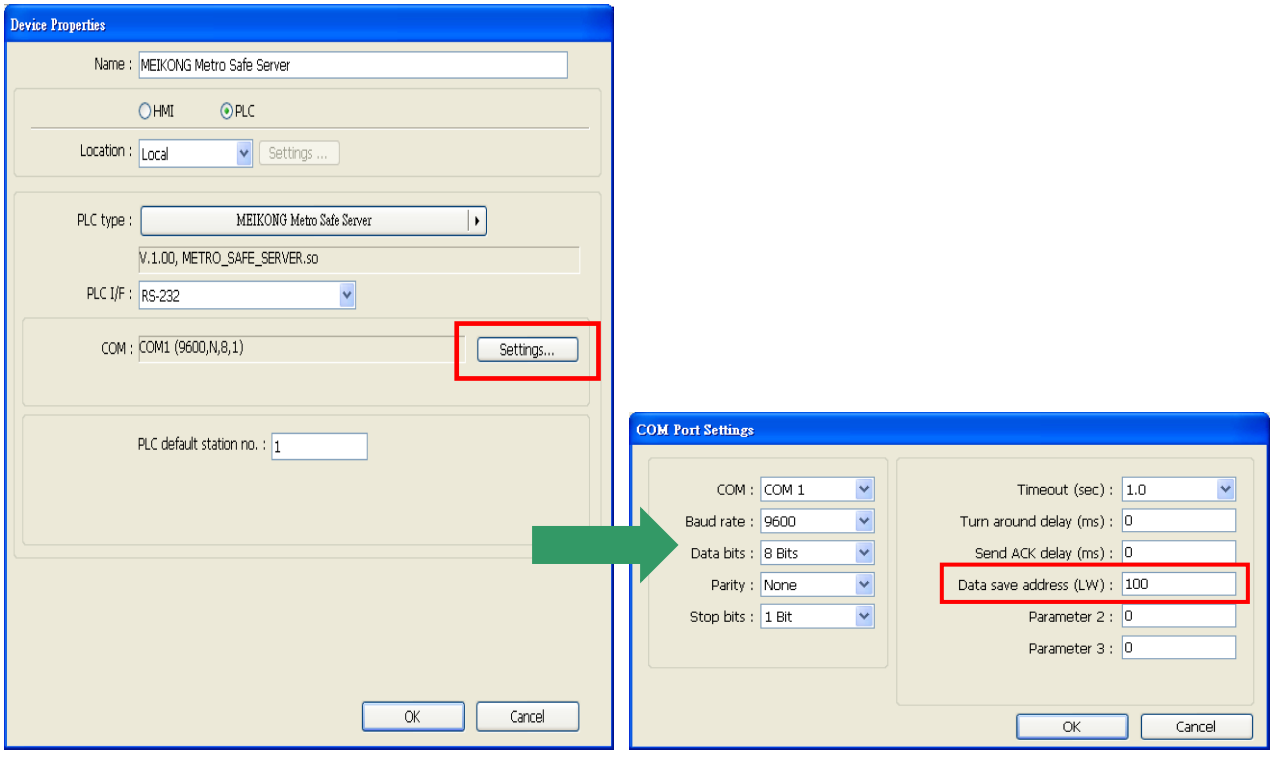

Protocol:

Byte	Description
0	AA
1	E0
2	C5 (The first 3 bytes are fixed, which represents the start of the message.)
3	Address（range 0-252）
4	Date-Year tens digit
5	Date-Year unit digit
6	Date-Month tens digit
7	Date-Month unit digit
8	Date-Day tens digit
9	Date-Day unit digit
10	Time-Hour tens digit
11	Time -Hour unit digit
12	Time -Minute tens digit
13	Time -Minute unit digit
14	Time -Second tens digit
15	Time -Second unit digit
16	1-Manual；2-Automatic
17	The number of slaves.
18	The sequence number of slave.
19	Slave status：1-Normal；2-Warning；3-Emergency；4-Disconnected
20	Backup power：1-normal；2-abnormal voltage；3- disconnect；4-short
21	00
22	00
23	EE
24	BB(The last 4 bytes are fixed, which represents the end of the message.)

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

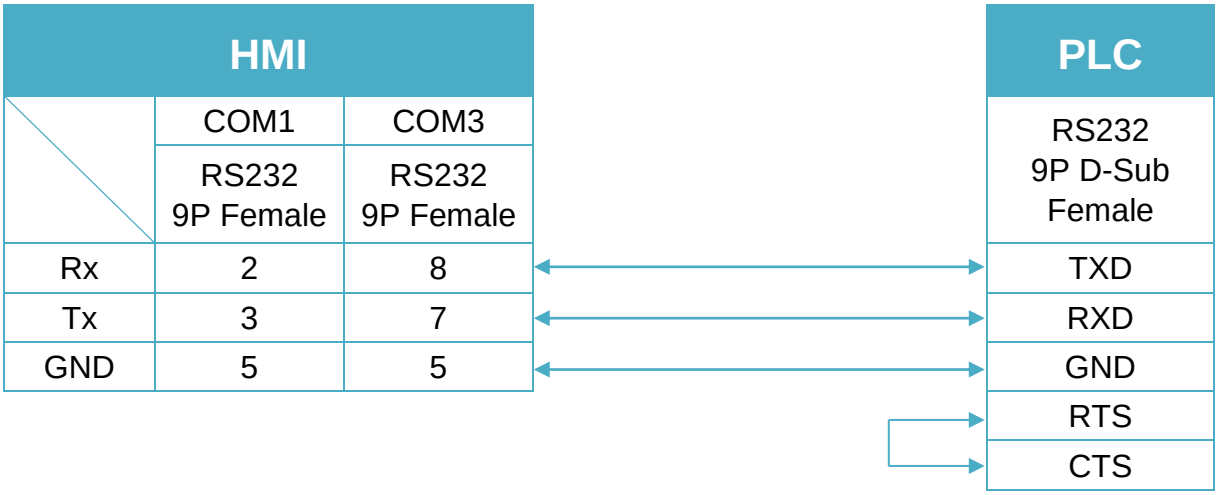


Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Female
Rx	2	TXD
Tx	3	RXD
GND	5	GND
		RTS
		CTS

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Female
Rx	9	TXD
Tx	6	RXD
GND	5	GND
		RTS
		CTS

RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 9P D-Sub Male
Rx-	1	↔	TX-
Rx+	2	↔	TX+
Tx-	3	↔	RX-
TX+	4	↔	RX+
GND	5	↔	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 9P D-Sub Male
Rx-	7	↔	TX-
Rx+	6	↔	TX+
Tx-	9	↔	RX-
TX+	8	↔	RX+
GND	5	↔	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 9P D-Sub Male
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 9P D-Sub Male
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

Memory Map

Memory Map protocol is similar to IBM 3764R communication protocol. EasyBuilder reserves 512 words of data memory to use with this protocol. EasyBuilder must update the values in these words. EasyBuilder uses these words to display data and control parts status on screen. When touch actions are taken, data is sent to the others once, and then update the memory in it. The HMI should always update the data memory.

HMI Setting:

Parameters	Recommende	Options	Notes
PLC type	Memory Map		
PLC I/F	RS232	RS232, RS485 4W, 2W	RS232 default
Baud rate	115200	9600~115200	
Data bits	8		
Parity	Even	Even, Odd, None	
Stop bits	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MB	DDDDh	0 ~ 4095f	
W	MW	DDDD	0 ~ 9999	

MB and MW share the same data storage.

MW 0 = MB 00000 ~ MB 0000f, MW 1 = MB 00010 ~ MB 0001f

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			HMI
	COM1	COM3	
	RS232 9P Female	RS232 9P Female	RS232 9P D-Sub Female
Rx	2	8	3
Tx	3	7	2
GND	5	5	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI		HMI
	COM1	
	RS232 9P Female	RS232 9P D-Sub Female
Rx	2	3
Tx	3	2
GND	5	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			HMI
	COM1		RS232 9P D-Sub Female
	RS232 9P Female		
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

RS485 2W (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				HMI
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	1
Data+	2	9	⟷	2
GND	5	5	⟷	5

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				HMI
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	1
Data+	6	1	⟷	2
GND	5	5	⟷	5

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				HMI
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	1
Data+	2	8	⟷	2
GND	**5**	**9**	⟷	5

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				HMI
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	1
Data+	2	9	⟷	2
GND	5	5	⟷	5


Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				HMI
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	1
Data+	2	8	⟷	2
GND	5	5	⟷	5

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

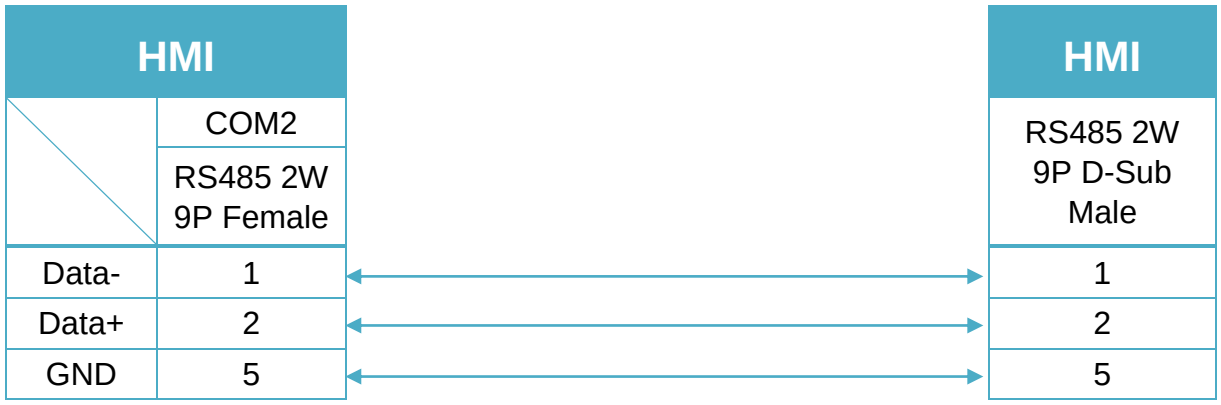

RS485 4W (Diagram 10 ~ Diagram 13)

Diagram 10

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***



Diagram 11

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			HMI
	COM2 RS485 4W 9P Female		RS485 4W 9P Male
Rx-	7	⟷	3
Rx+	6	⟷	4
Tx-	9	⟷	1
TX+	8	⟷	2
GND	5	⟷	5

Diagram 12

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			HMI
	COM2 RS485 4W 9P Male		RS485 4W 9P Male
Rx-	1	⟷	3
Rx+	2	⟷	4
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	5

Diagram 13

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	3
Rx+	2	⟷	4
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	5

Note:

For Memory map information, please refer to User's Manual "Chapter 31 Memory Map Communication".

MIKOM MX Series PLC

Support series: MIKOM MX series PLC
Web: http://www.mikom.com.cn/


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MIKOM MX Series PLC		
PLC I/F	RS232	RS232/485/Ethernet	
Baud rate	19200	9600~115200	
Data bits	Even	None,Even,Odd	
Parity	8	8	
Stop bits	1	1,2	
PLC sta. no.	1	0~31	

Online simulator	YES

PLC Setting:

PORT 0(RS232 Setting)

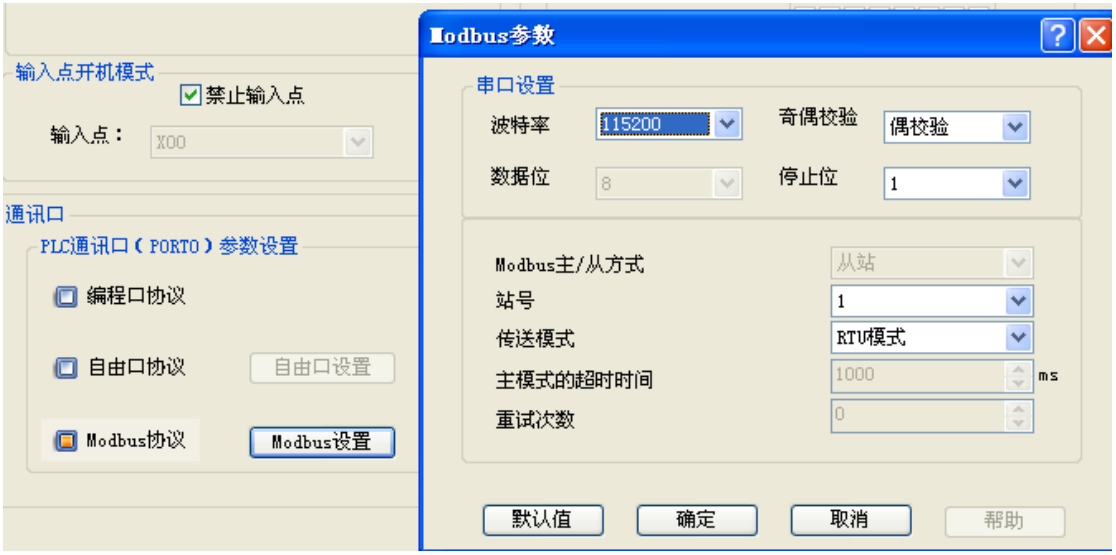

PORT 1(RS485 Setting)



Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Y	DDD	0~777	Output Relay
B	X	DDD	0~777	Input Relay
B	M	DDDD	0~4095	Auxiliary Relay
B	SM	DDD	0-511	Special Auxiliary Relay
B	S	DDDD	0~1535	Step Relay
B	T	DDD	0~511	Timer Relay
B	C	DDD	0~511	Counter Relay
W	D	DDDDD	0~32767	Data Register
W	SD	DDD	0~511	Special Data Register
W	Z	DDD	0~255	Indexed Addressing Register
W	T	DDD	0~511	Timer
W	C	DDD	0~199	Counter
W	U0	DDD	0~199	Special Module Register
W	U1	DDD	0~199	Special Module Register
W	U2	DDD	0~199	Special Module Register
W	U3	DDD	0~199	Special Module Register
W	U4	DDD	0~199	Special Module Register
W	U5	DDD	0~199	Special Module Register
W	U6	DDD	0~199	Special Module Register
W	U7	DDD	0~199	Special Module Register
DW	C-32bit	DDD	200~511	32 Bit Counter

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-DIN Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-DIN Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

Diagram 4

Ethernet cable:



Mitsubishi A1S/A2N

Supported Series: Mitsubishi A1S/A2N
Website: http://www.mitsubishi-automation.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi A1S/A2N		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device	Format	Range	Memo
B	X	HHHH	0 ~ ffff	Input Relay
B	Y	HHHH	0 ~ ffff	Output Relay
B	M	DDDDD	0 ~ 65535	Auxiliary Relay
B	B	HHHH	0 ~ ffff	
B	F	DDDDD	0 ~ 65535	
W	TV	DDDDD	0 ~ 65535	Timer Memory
W	CV	DDDDD	0 ~ 65535	Counter Memory
W	D	DDDDD	0 ~ 65535	Data Register
W	W	HHHH	0 ~ ffff	
W	R	DDDDD	0 ~ 65535	

Wiring Diagram:

Use the RS422 to RS232 PLC programming cable (shown as follows)

MITSUBISHI AnS CPU

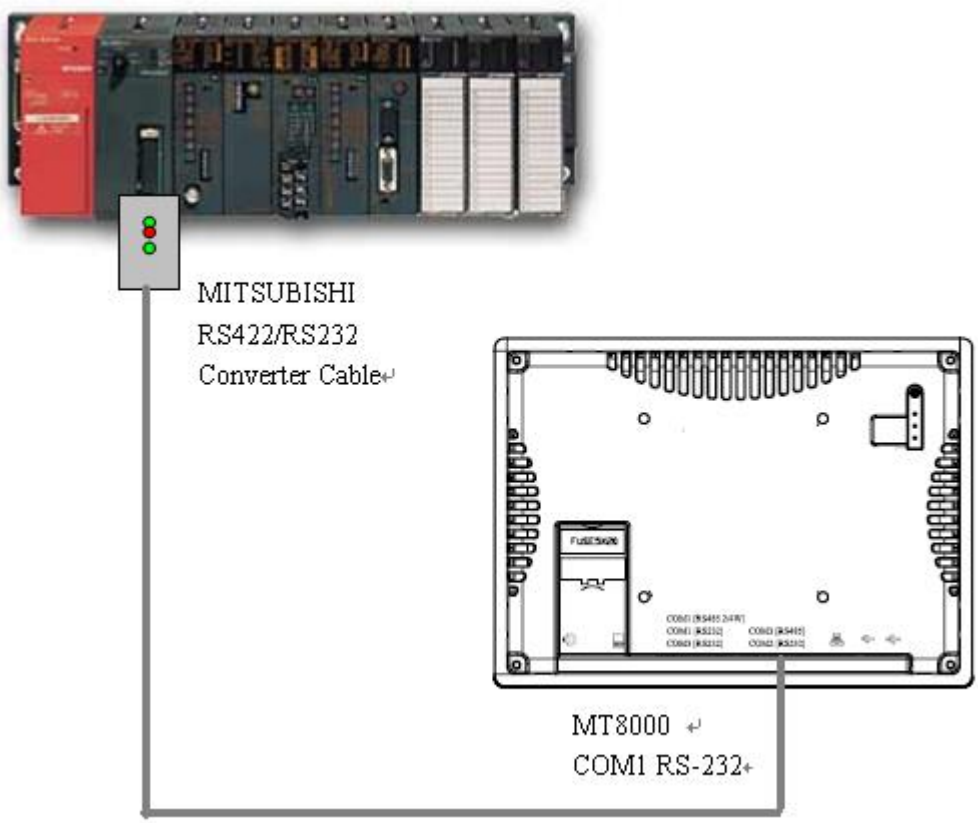


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female		9P Female programming cable
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5
RTS	7	⟷	7
CTS	8	⟷	8

Diagram 2

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		9P Female programming cable
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5
RTS	7	⟷	7
CTS	8	⟷	8

Mitsubishi A2A/A2U/A2AS/A2USH

Supported Series: Mitsubishi A2A,A2U,A2AS,A2USH
Website: http://www.mitsubishi-automation.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi A2A/A2U/A2AS/A2USH		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		
Parameter 1	0	0 ~ 8	File register (0~8) K
Parameter 2	0	0 ~ 1	Set A2A and A2USH to 1

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ 270f	Input Relay
B	Y	HHHH	0 ~ 270f	Output Relay
B	M	DDDD	0 ~ 9999	Auxiliary Relay
B	B	HHHH	0 ~ ffff	
B	F	DDDDD	0 ~ 65535	
W	TV	DDD	0 ~ 255	Timer Memory
W	CV	DDD	0 ~ 255	Counter Memory
W	D	DDDD	0 ~ 9999	Data Register
W	W	HHHH	0 ~ ffff	
W	R	DDDDD	0 ~ 65535	

Wiring Diagram:

Use the RS422 to RS232 PLC programming cable (shown as follows)

MITSUBISHI AnS CPU

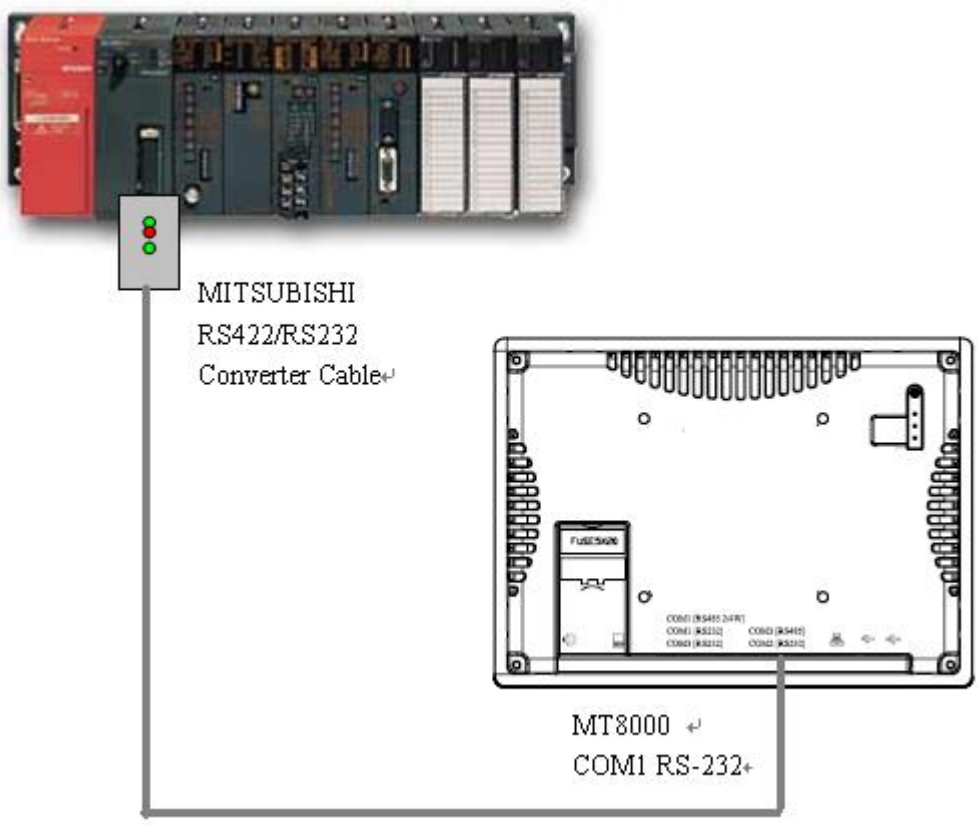


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female		9P Female programming cable
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5
RTS	7	⟷	7
CTS	8	⟷	8

Diagram 2

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		9P Female programming cable
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5
RTS	7	⟷	7
CTS	8	⟷	8

Mitsubishi A2US

Supported Series: Mitsubishi A2US
Website: http://www.mitsubishi-automation.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi A2US		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ 270f	Input Relay
B	Y	HHHH	0 ~ 270f	Output Relay
B	M	DDDD	0 ~ 9999	Auxiliary Relay
W	TV	DDD	0 ~ 255	Timer Memory
W	CV	DDD	0 ~ 255	Counter Memory
W	D	DDDD	0 ~ 9999	Data Register

Wiring Diagram:

Use the RS422 to RS232 PLC programming cable (shown as follows)

MITSUBISHI AnS CPU

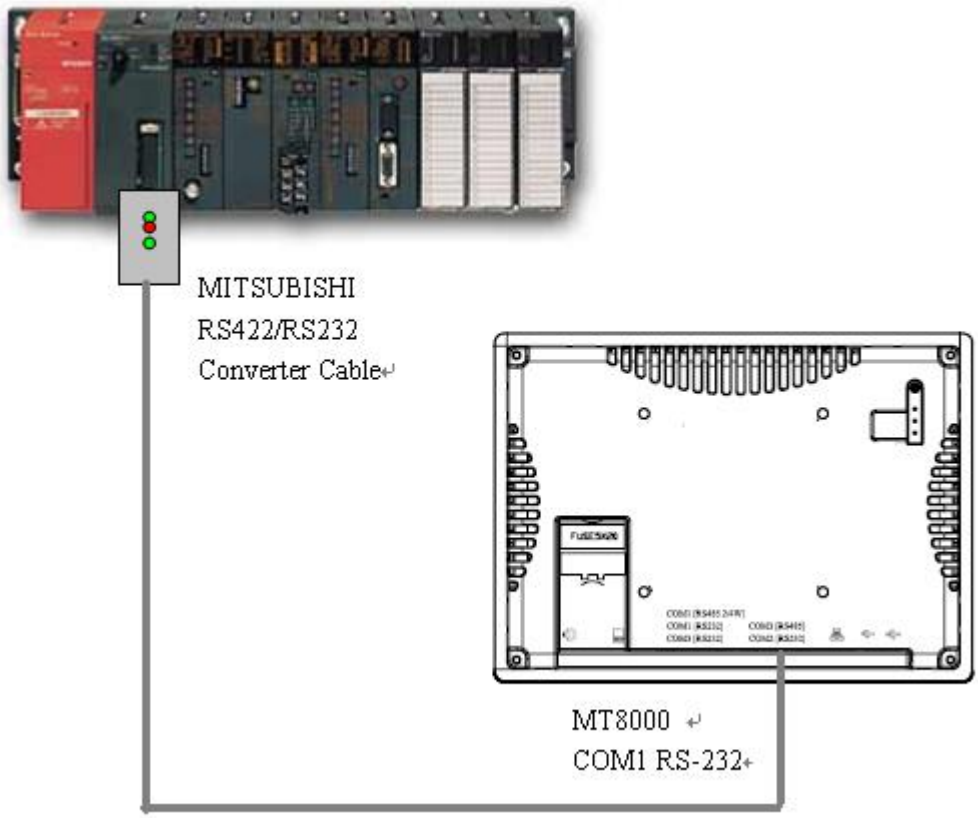


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female		9P Female programming cable
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5
RTS	7	⟷	7
CTS	8	⟷	8

Diagram 2

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		9P Female programming cable
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5
RTS	7	⟷	7
CTS	8	⟷	8

Mitsubishi A3A/A3N/A1SH/A2SH

Supported Series: Mitsubishi A3A,A3N,A1SH,A2SH
Website: http://www.mitsubishi-automation.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi A3A/A3N/A1SH/A2SH		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		

Note: This driver is not available for On-line Simulation.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ ffff	Input Relay
B	Y	HHHH	0 ~ ffff	Output Relay
B	M	DDDDD	0 ~ 65535	Auxiliary Relay
B	B	HHHH	0 ~ ffff	
B	F	DDDDD	0 ~ 65535	
W	TV	DDDDD	0 ~ 65535	Timer Memory
W	CV	DDDDD	0 ~ 65535	Counter Memory
W	D	DDDDD	0 ~ 65535	Data Register
W	W	HHHH	0 ~ ffff	
W	R	DDDDD	0 ~ 65535	

Wiring Diagram:

Use the RS422 to RS232 PLC programming cable (shown as follows)

MITSUBISHI AnS CPU

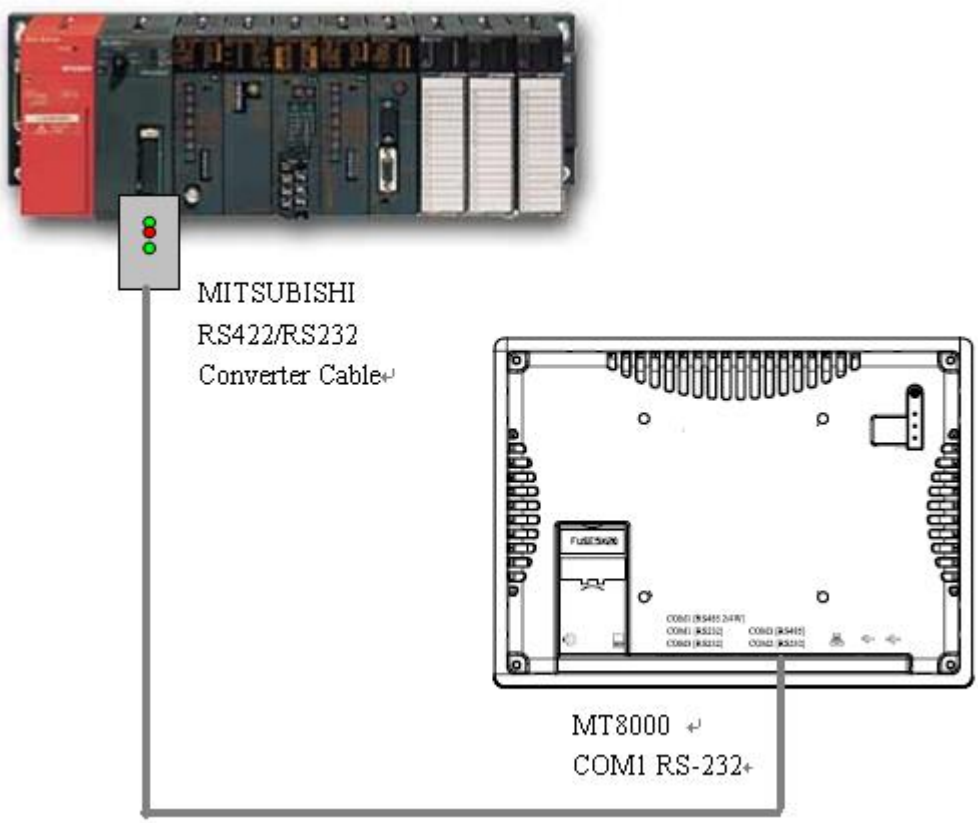


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female		9P Female programming cable
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5
RTS	7	⟷	7
CTS	8	⟷	8

Diagram 2

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		9P Female programming cable
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5
RTS	7	⟷	7
CTS	8	⟷	8

Mitsubishi AJ71

Supported Series: Mitsubishi A series PLC with AJ71C24 communication module using the Computer Link protocol.
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi AJ71	Mitsubishi AJ71 (AnA/AnU CPU), Mitsubishi AJ71 (Format 4)	
PLC I/F	RS485 4W	RS485 4W, RS232	
Baud rate	19200	9600, 19200	
Data bits	8	8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0		

PLC Setting:

Communication mode	Computer Link protocol 9600, Even, 8, 1 (default)
Mode setting switch	Format 1
Parity check	Enable
Sum check	Enable

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ ffff	Input Bits
B	Y	HHHH	0 ~ ffff	Output Bits
B	M	DDDDD	0 ~ 65535	Internal Relays
B	L	DDDDD	0 ~ 65535	
B	T	DDDDD	0 ~ 65535	
B	C	DDDDD	0 ~ 65535	
B	B	HHHH	0 ~ ffff	
B	F	DDDDD	0 ~ 65535	
W	TV	DDDDD	0 ~ 65535	Timer Preset Value

Bit/Word	Device type	Format	Range	Memo
W	CV	DDDDD	0 ~ 65535	Counter Preset Value
W	D	DDDDD	0 ~ 65535	Data Registers
W	W	HHHH	0 ~ ffff	
W	R	DDDDD	0 ~ 65535	

Wiring Diagram:

AJ71C24 RS422 Terminal (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***



Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		AJ71C24 RS422 Terminal
Rx-	7	⟷	SDB
Rx+	6	⟷	SDA
Tx-	9	⟷	RDB
TX+	8	⟷	RDA
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		AJ71C24 RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		AJ71C24 RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

A1SJ71UC24-R2 (Diagram 5 ~ Diagram 7)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	TXD-3
Tx	3	7	↔	RXD-2
GND	5	5	↔	GND-5
			→	DCD-1
			→	DTR-4
			→	DSR-6
			→	RTS-7
			→	CTS-8

Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


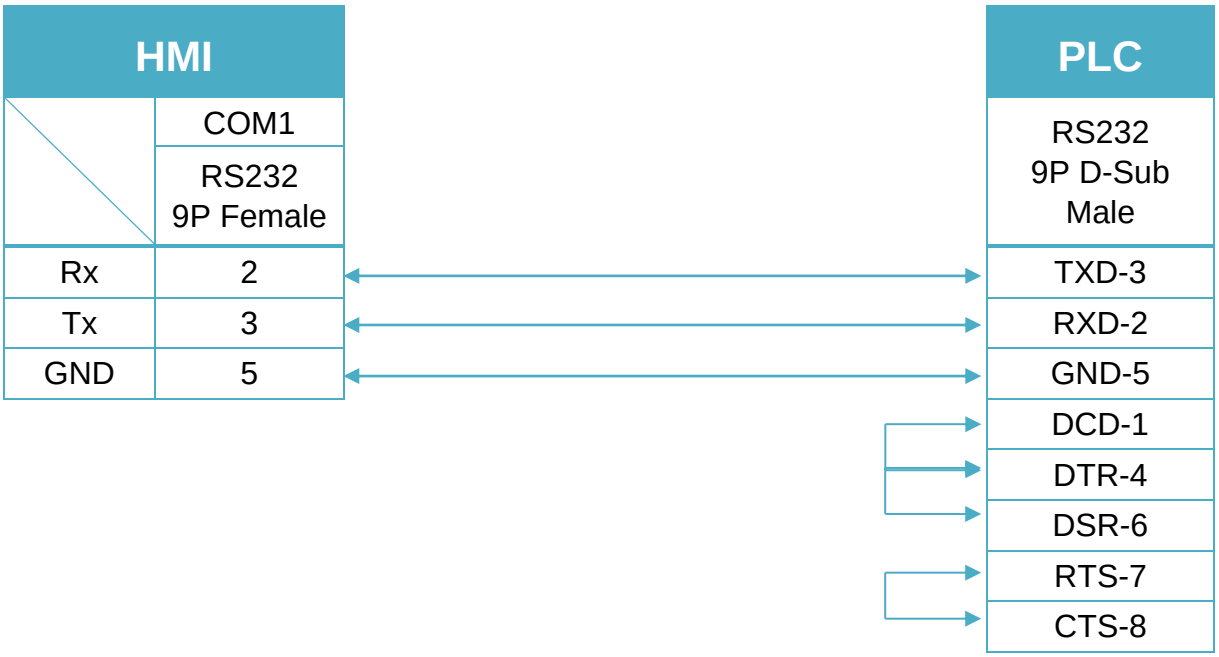


Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

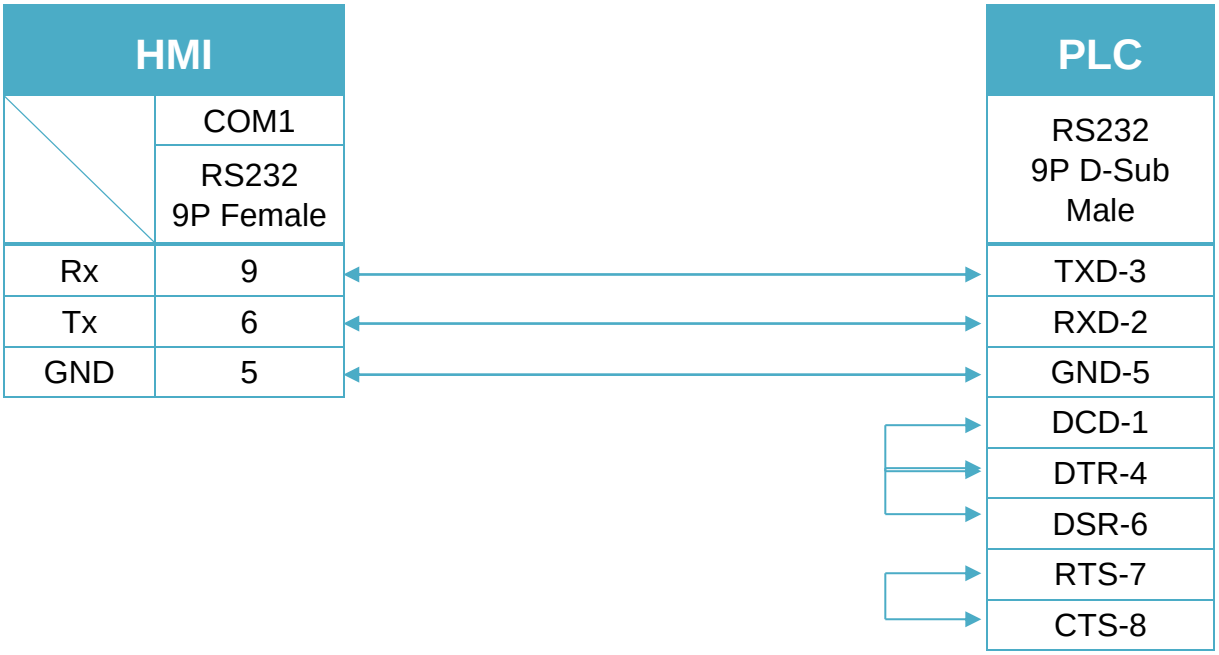

Mitsubishi AJ71 (AnA/AnU CPU)

Supported Series: Mitsubishi AJ71 (AnA/AnU CPU)
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi AJ71 (AnA/AnU CPU)		
PLC I/F	RS485 4W	RS485 4W, RS232	
Baud rate	19200	9600, 19200	
Data bits	8	8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0		

PLC Setting:

Communication mode	Computer Link protocol 9600, Even, 8, 1 (default)
Mode setting switch	Format 1
Parity check	Enable
Sum check	Enable

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ ffff	Input Bits
B	Y	HHHH	0 ~ ffff	Output Bits
B	M	DDDDD	0 ~ 65535	Internal Relays
B	T	DDDDD	0 ~ 65535	
B	C	DDDDD	0 ~ 65535	
B	B	HHHH	0 ~ ffff	
B	F	DDDDD	0 ~ 65535	
B	L	DDDDD	0 ~ 65535	
W	TV	DDDDD	0 ~ 65535	Timer Preset Value
W	CV	DDDDD	0 ~ 65535	Counter Preset Value
W	D	DDDDD	0 ~ 65535	Data Registers
W	W	HHHH	0 ~ ffff	

Bit/Word	Device type	Format	Range	Memo
W	R	DDDDD	0 ~ 65535	

Wiring Diagram:

RS422 Terminal (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS422 Terminal
Rx-	7	⟷	SDB
Rx+	6	⟷	SDA
Tx-	9	⟷	RDB
TX+	8	⟷	RDA
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

RS232 (Diagram 5 ~ Diagram 8)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	TXD-3
Tx	3	7	↔	RXD-2
GND	5	5	↔	GND-5
			→	DCD-1
			→	DTR-4
			→	DSR-6
			→	RTS-7
			→	CTS-8

Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


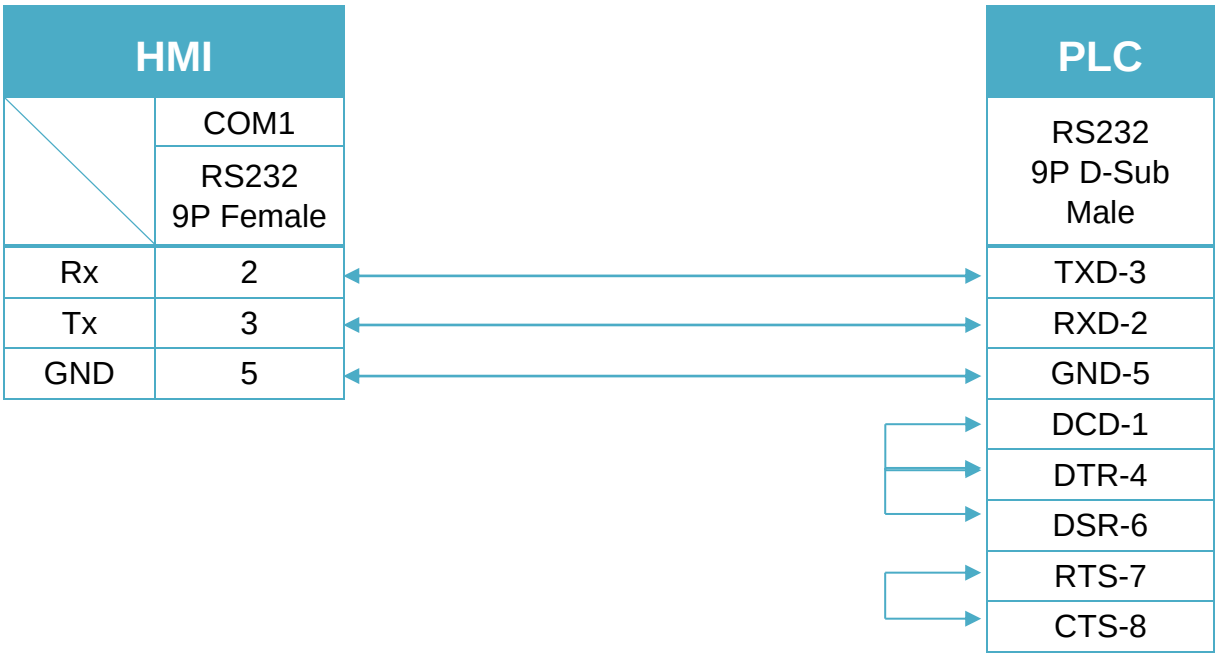


Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

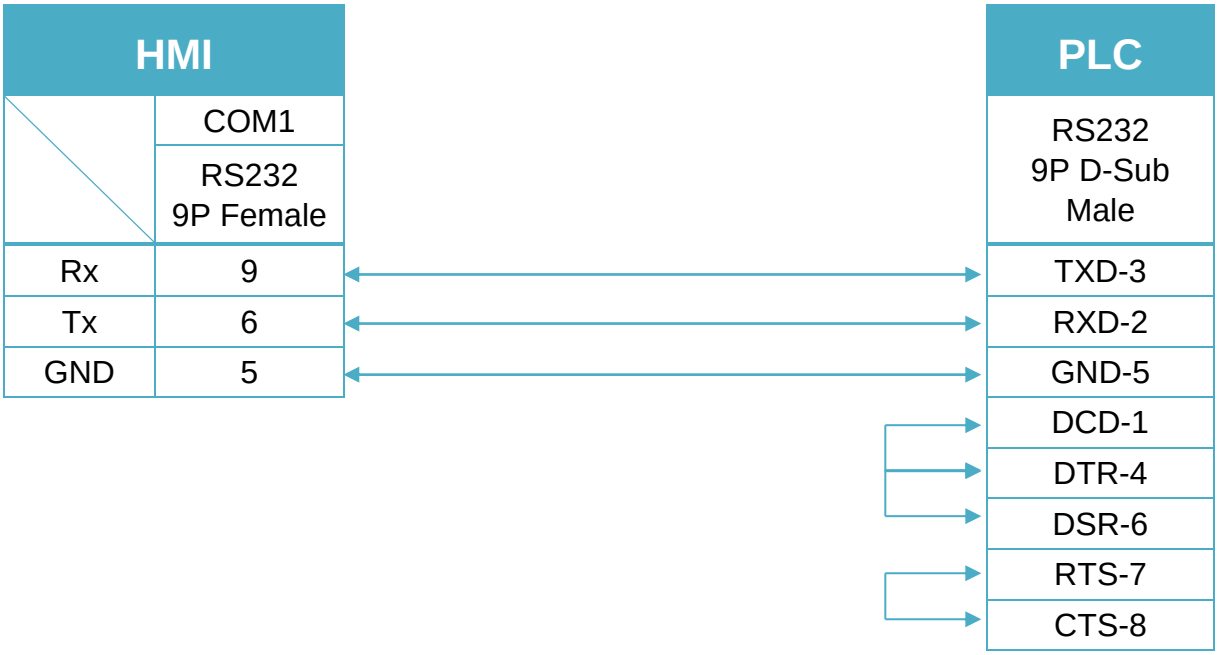

Mitsubishi AJ71 (Format 4)

Supported Series: Mitsubishi A series PLC with AJ71C24 communication module using the Computer Link protocol.
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi AJ71 (Format 4)		
PLC I/F	RS485 4W	RS485 4W, RS232	
Baud rate	19200	9600, 19200	
Data bits	8	8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0		

PLC Setting:

Communication mode	Computer Link protocol 9600, Even, 8, 1 (default)
Mode setting switch	Format 4
Parity check	Enable
Sum check	Enable

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ ffff	Input Bits
B	Y	HHHH	0 ~ ffff	Output Bits
B	M	DDDDD	0 ~ 65535	Internal Relays
B	T	DDDDD	0 ~ 65535	
B	C	DDDDD	0 ~ 65535	
B	B	HHHH	0 ~ ffff	
B	F	DDDDD	0 ~ 65535	
W	TV	DDDDD	0 ~ 65535	Timer Preset Value
W	CV	DDDDD	0 ~ 65535	Counter Preset Value
W	D	DDDDD	0 ~ 65535	Data Registers
W	W	HHHH	0 ~ ffff	

Bit/Word	Device type	Format	Range	Memo
W	R	DDDDD	0 ~ 65535	

Wiring Diagram:

AJ71C24 RS422 Terminal (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***



Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		AJ71C24 RS422 Terminal
Rx-	7	⟷	SDB
Rx+	6	⟷	SDA
Tx-	9	⟷	RDB
TX+	8	⟷	RDA
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		AJ71C24 RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		AJ71C24 RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

RS232 (Diagram 5 ~ Diagram 8)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	TXD-3
Tx	3	7	↔	RXD-2
GND	5	5	↔	GND-5
			→	DCD-1
			→	DTR-4
			→	DSR-6
			→	RTS-7
			→	CTS-8

Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


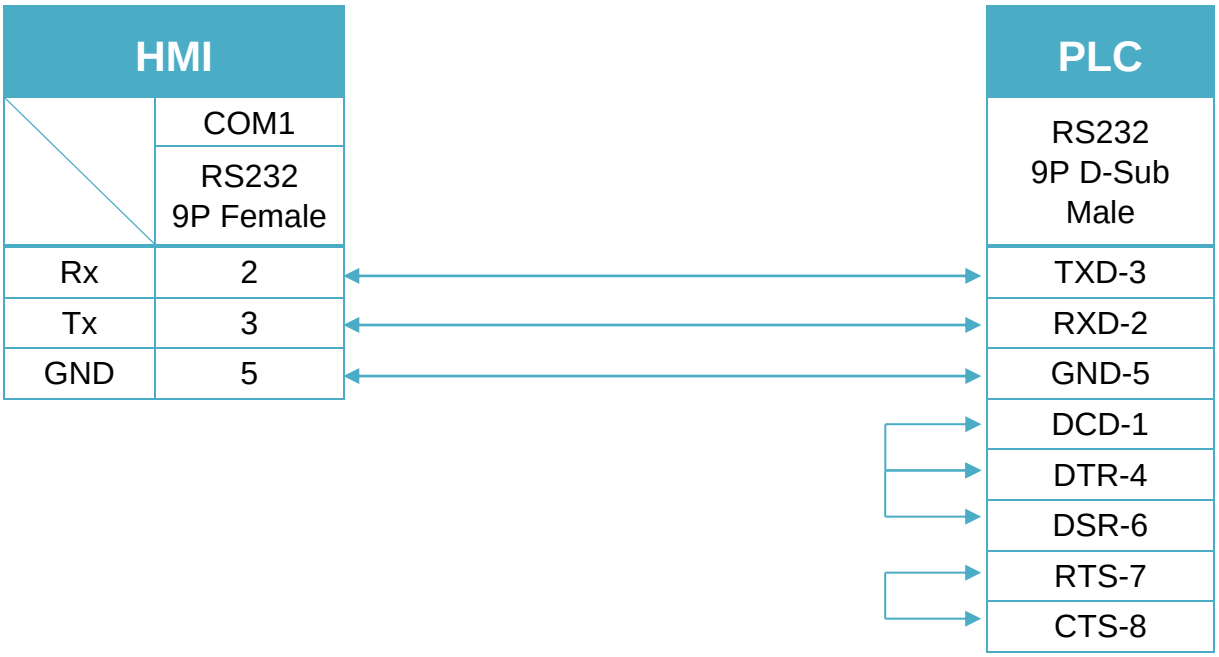


Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

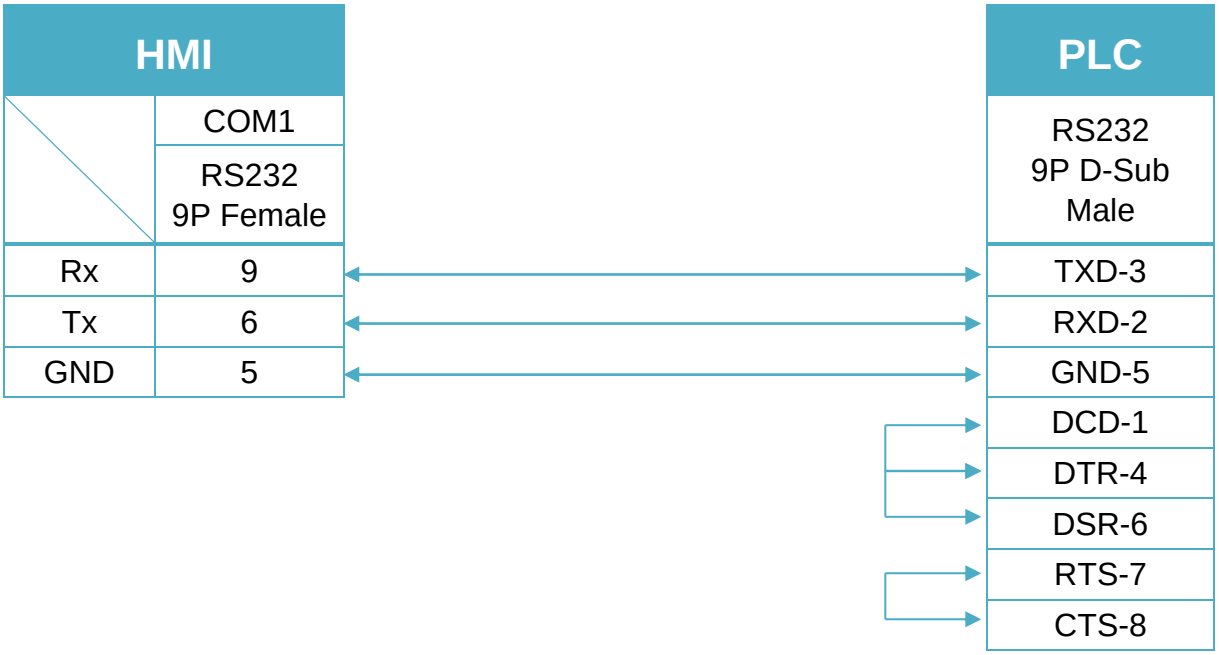

Mitsubishi Alpha2

Supported Series: Mitsubishi Alpha2 Series
Website: http://www.mitsubishi-automation.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Mitsubishi Alpha2		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	M	DD	1 ~ 14	
B	I	DD	1 ~ 15	
B	EI	DDD	129 ~ 132	
B	O	D	1 ~ 9	
B	EO	DDD	129 ~ 132	
B	K	D	1 ~ 8	
B	E	D	1 ~ 4	
B	A	D	1 ~ 4	
B	N	D	1 ~ 4	
W	CB	DDD	1 ~ 100	*Note
W	AI	D	1 ~ 8	
W	CW	DDD	1 ~ 100	*Note

Note:

Delicated communication for CB and CW.

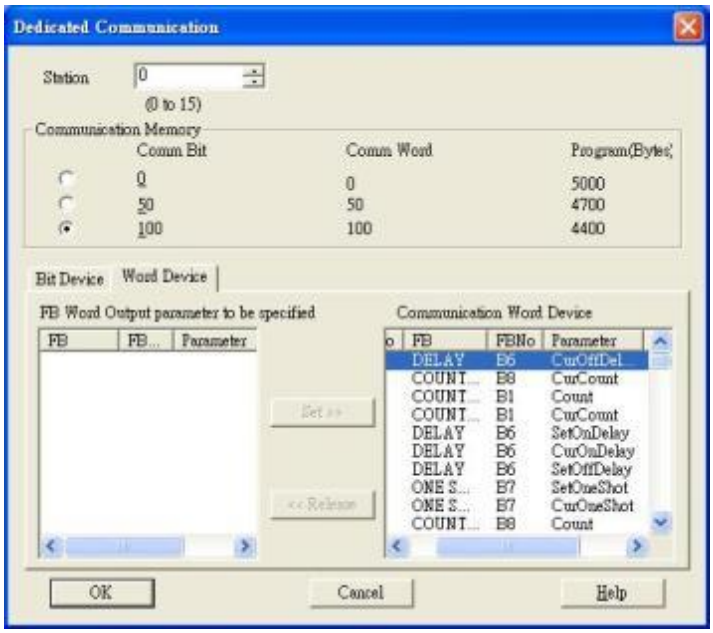

Wiring Diagram:

AL-232CAB RS-232C CABLE

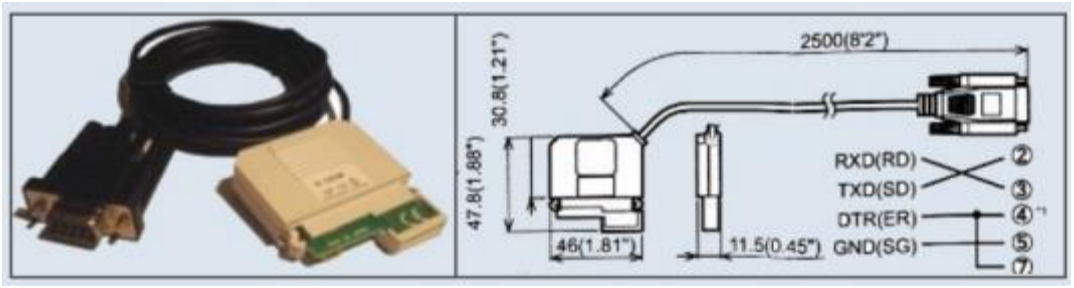


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1		RS232 9P D-Sub (AL-232CAB)
	RS232 9P Female		
Rx	2	⟷	2 TX
Tx	3	⟷	3 RX
GND	5	⟷	5 GND
RTS	7	⟷	4 DTR

Diagram 2

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM1		RS232 9P D-Sub (AL-232CAB)
	RS232 9P Female		
Rx	9	⟷	2 TX
Tx	6	⟷	3 RX
GND	5	⟷	5 GND
RTS	7	⟷	4 DTR

Mitsubishi F930GOT Server

Supported Series: F930GOT general-purpose communication Type 1.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	F930GOT Server		
PLC I/F	RS232		
Baud rate	38400	9600, 115200	
Data bits	8	7 or 8	
Parity	None	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	RB	DDDD	0 ~ 2047	
W	RW	DDDDD	0 ~ 65535	

Note: In PLC name drop - down menu don't select F930GOT Server.

Please select Local HMI, Device Type=RW.

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		Micro Computer Board RS232 Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		Micro Computer Board RS232 Female
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		Micro Computer Board RS232 Female
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

Protocol:

Read Command:

PC ➔ HMI

02	'0'	Read address	Size	CR

02	30	30	30	30	30	30	32	0D

Read RW0 1 word (2 bytes) STX = 0x02, '0' = Read command, CR = 0x0D

Read address (hexadecimal)

0 ~ FFFF = RW0 ~ 65535

Size (hexadecimal)

2 ~ FE = 2 ~ 254 bytes = 1 ~ 127 word.

Size must be even.

HMI ➔ PC (response)

02	Data1	Data2	…….	CR

02	30	30	31	30	0D

RW0 = 0x0010 = 16

Write Command:

PC ➔ HMI

02	'1'	Read address	Size	Data1	Data2		CR

02	31	30	30	30	30	30	32	12	34	0D

Write RW0 = 0x1234

Read address (hexadecimal)

0 ~ FFFF = RW0 ~ 65535

Size (hexadecimal)

2 ~ FE = 2 ~ 254 bytes = 1 ~ 127 word.

Size must be even.

HMI ➔ PC (response)

06

ACK = 0x06


Mitsubishi FX0S/FX0N/FX1S/FX1N/FX2

Supported Series: Mitsubishi FX0S/FX0N/FX1S/FX1N/FX2/FX3S
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX0S/FX0N/FX1S/FX1N/FX2		
PLC I/F	RS485 4W	RS232/RS485	
Baud rate	9600	9600/19200/38400/57600/115200	
Data bits	7	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	0	0-255	

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode
*[Send RESET when power on] selection is provided in PLC COM Port Settings. If enabled, PLC can be reset when HMI is powered ON.

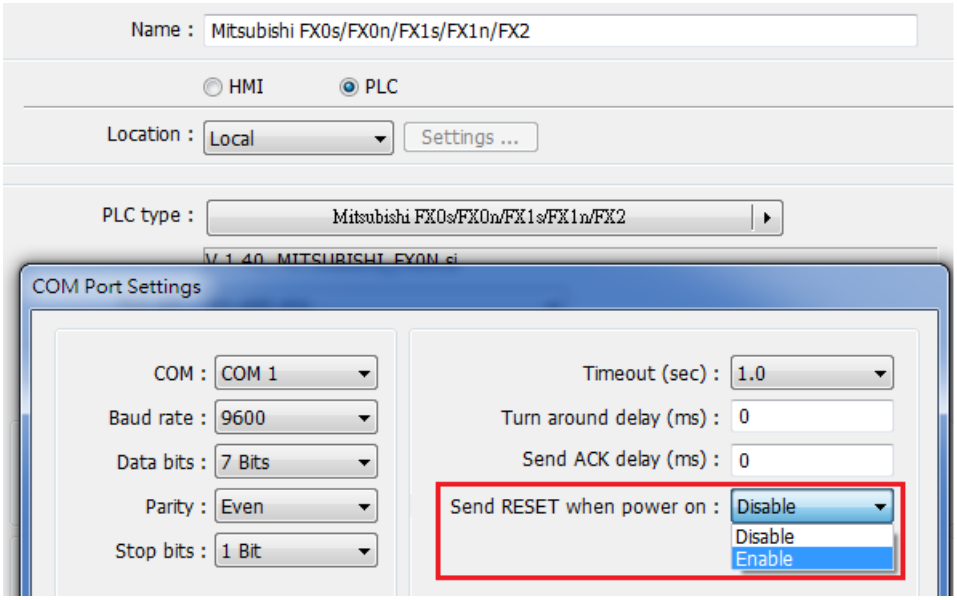

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 377	Input Relay
B	Y	OOO	0 ~ 377	Output Relay
B	M	DDDD	0 ~ 9999	Auxiliary Relay
B	T	DDD	0 ~ 255	Timer Relay
B	C	DDD	0 ~ 255	Counter Relay
B	SM	DDDD	8000 ~ 9999	Special Aux. Relays
B	D_Bit	DDDDdd	0 ~ 999915	Data Register Bit (D)
B	S	DDDD	0 ~ 4095	States
W	TV	DDD	0 ~ 255	Timer Memory
W	CV	DDD	0 ~ 199	Counter Memory
W	D	DDDD	0 ~ 9999	Data Register
DW	CV2	DDD	200 ~ 255	Counter Memory(D Word)
W	SD	DDDD	8000 ~ 9999	Special Data Register

Wiring Diagram:

RS422 Port 8P Mini-Din Male (Diagram 1 ~ Diagram 4)

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI		PLC
	COM1 RS485 4W 9P Male	RS422 Port 8P Mini-Din Male
Rx-	1	4
Rx+	2	7
Tx-	3	1
TX+	4	2
GND	5	3

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS422 Port 8P Mini-Din Male
Rx-	7	⟷	4
Rx+	6	⟷	7
Tx-	9	⟷	1
TX+	8	⟷	2
GND	5	⟷	3

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS422 Port 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS422 Port 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

RS422 Port 25P D-Sub Male (Diagram 5 ~ Diagram 8)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

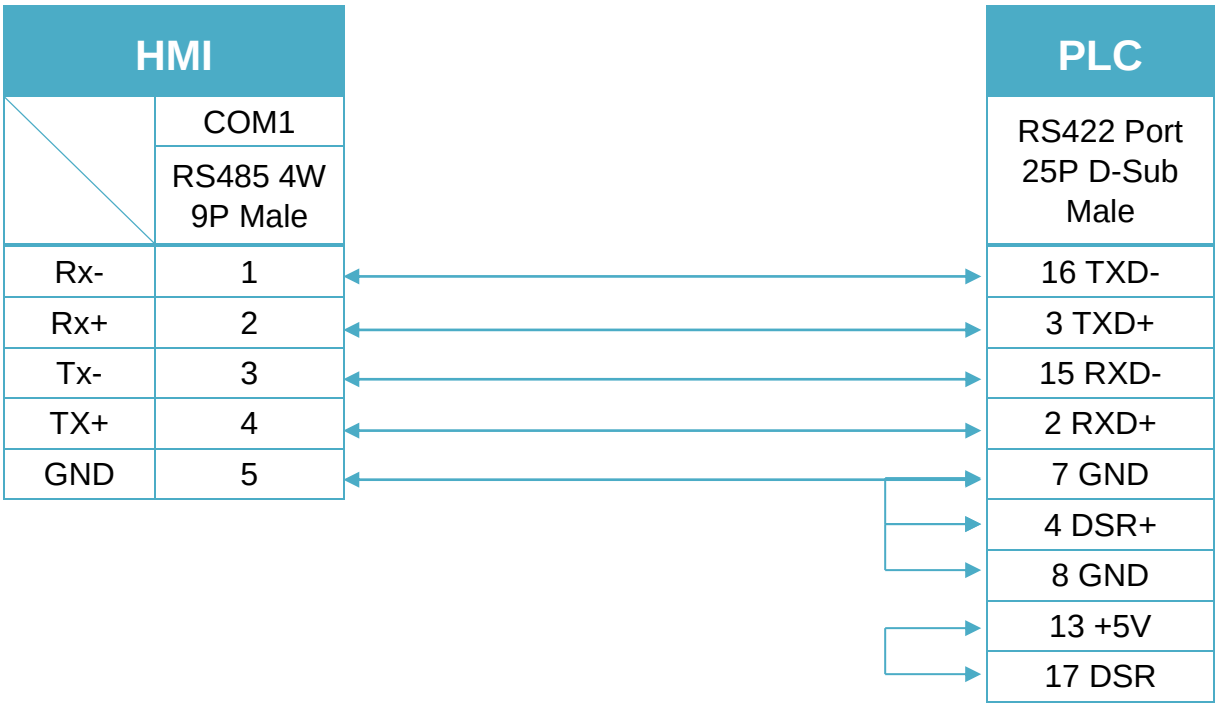


Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***

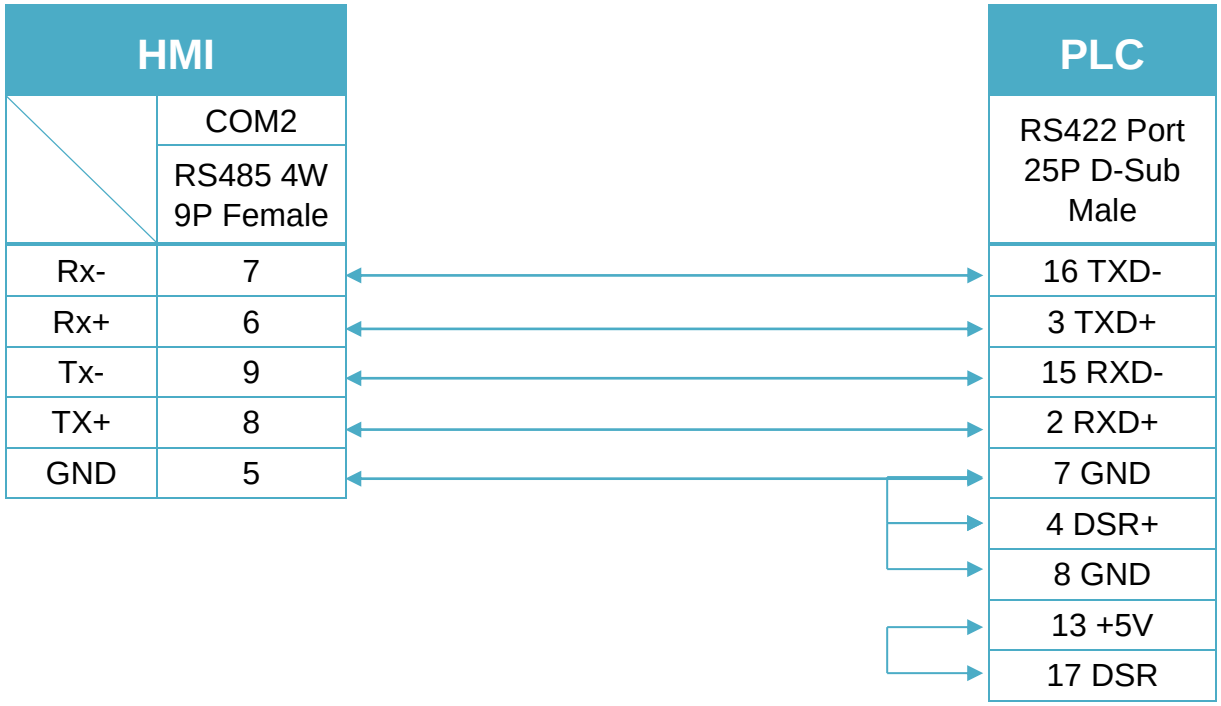


Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***


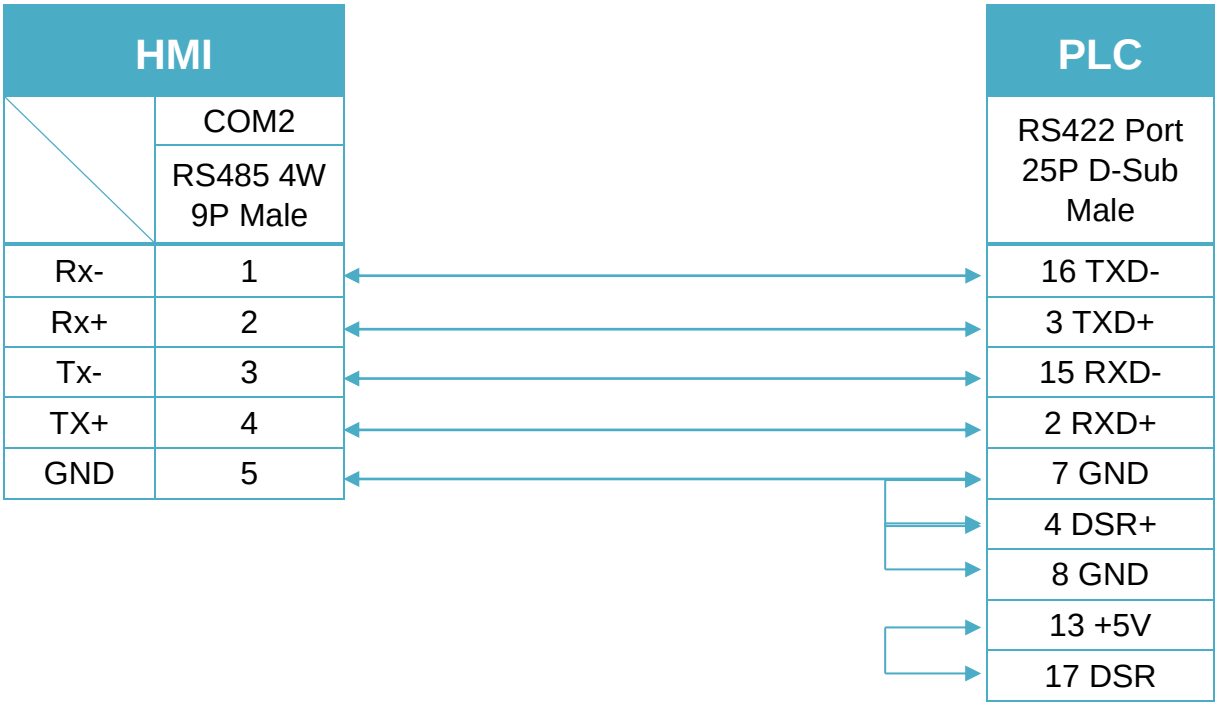


Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

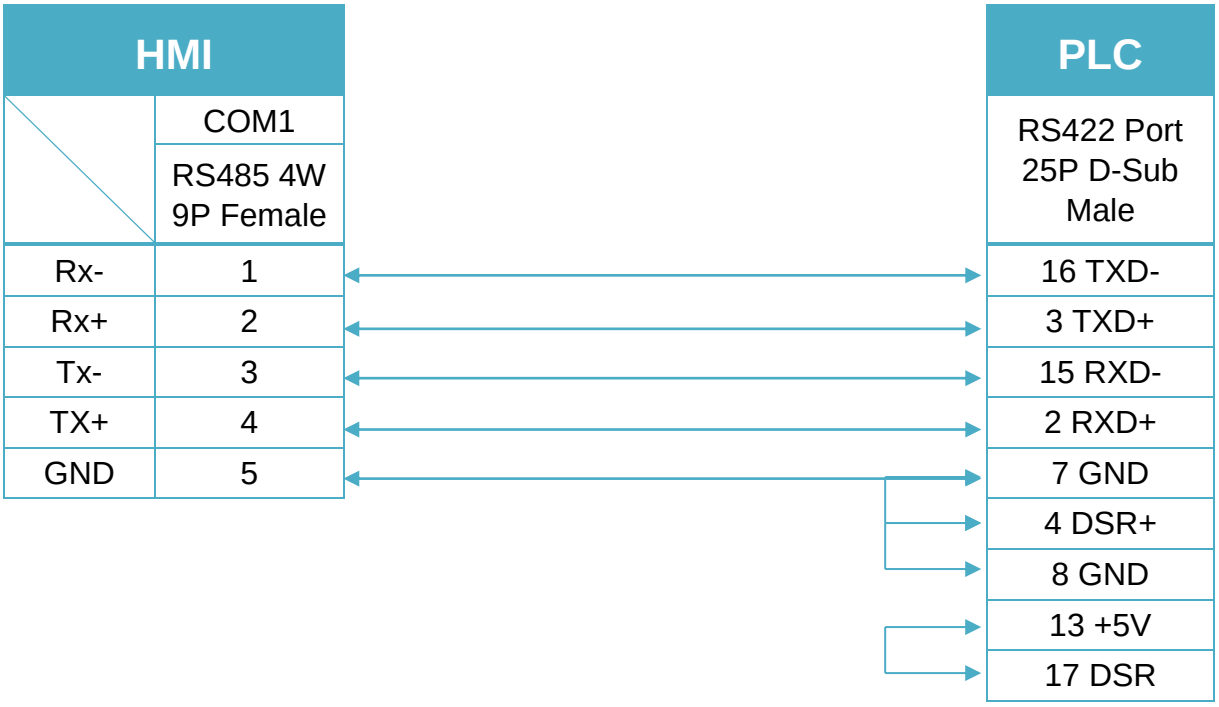

Mitsubishi FX232/485BD

Supported Series: Mitsubishi FX0N/FX2/FX2N COM for Communication Module BD FX2N-485-BD, FX2N-232-BD, FX1N-485-BD, FX1N-232-BD & FX3U-485ADP.
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX232/485BD		
PLC I/F	RS232/RS485	RS232/RS485 2w/4w	in accordance with the BD module
Baud rate	19200	9600/19200/38400	
Data bits	7	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	1	0-15	


Note: It is recommended to set turn around delay to 8. (For RS485 2W)

Online simulator	YES	**Extend address mode**	YES


PLC Setting:

Communication mode	Must set PLC station when useing BD Module.

Register D8120 setting: set b9 and b8 of BFM#0 to 0.

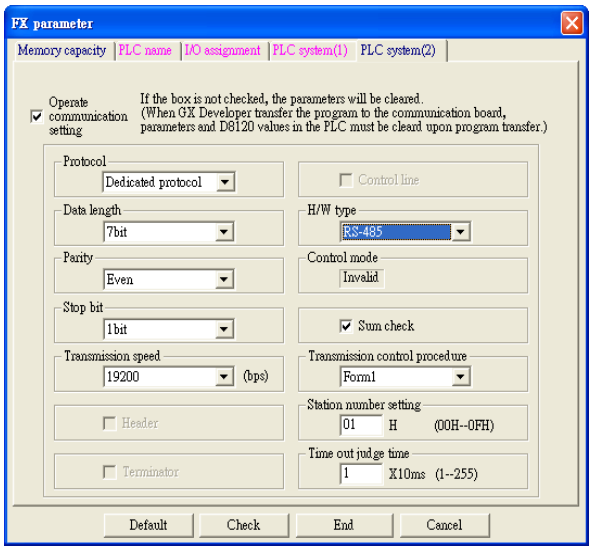

FX2N-485-BD, FX1N-485-BD

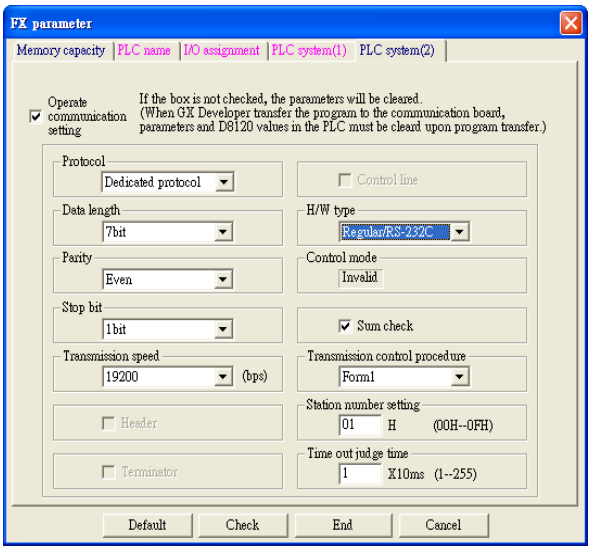

FX2N-232-BD, FX1N-232-BD

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 377	Input Relay
B	Y	OOO	0 ~ 377	Output Relay
B	M	DDDD	0 ~ 7999	Auxiliary Relay
B	T	DDD	0 ~ 511	Timer Relay
B	C	DDD	0 ~ 255	Counter Relay
B	SM	DDDD	8000 ~ 9999	Special Auxiliary Relay
B	D_Bit	DDDDh	0 ~ 7999f	Data Register Bit
B	S	DDDD	0 ~ 4095	State Relay
W	TV	DDD	0 ~ 511	Timer Memory
W	CV	DDD	0 ~ 199	Counter Memory
W	D	DDDD	0 ~ 7999	Data Register
W	CV2	DDD	200 ~ 255	Counter Memory(D Word)
W	SD	DDDD	8000 ~ 9999	Special Data Register
W	R	DDDDD	0 ~ 32767	Extended Register

Wiring Diagram:

Communication Module RS232-BD (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1		RS232 9P D-Sub Female
	RS232 9P Female		
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

Communication Module RS485BD: RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		485BD Module 5P Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		485BD Module 5P Terminal
Rx-	7	⟷	SDB
Rx+	6	⟷	SDA
Tx-	9	⟷	RDB
TX+	8	⟷	RDA
GND	5	⟷	GND


Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		485BD Module 5P Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

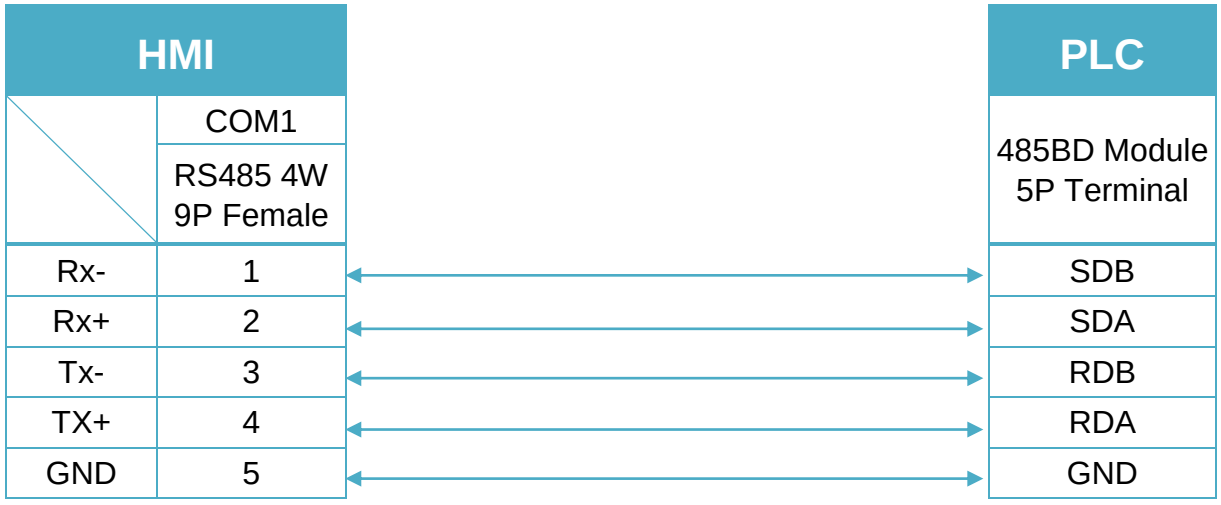


HMI		PLC
	COM1 RS485 4W 9P Female	485BD Module 5P Terminal
Rx-	1	SDB
Rx+	2	SDA
Tx-	3	RDB
TX+	4	RDA
GND	5	GND

Communication Module RS485BD: RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

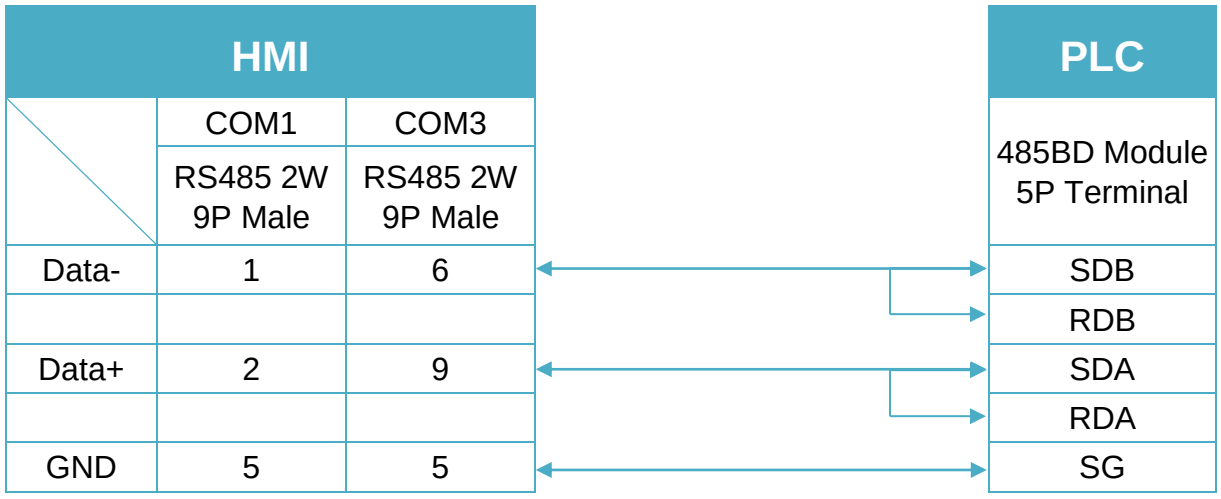

HMI			PLC
	COM1 RS485 2W 9P Male	COM3 RS485 2W 9P Male	485BD Module 5P Terminal
Data-	1	6	SDB
			RDB
Data+	2	9	SDA
			RDA
GND	5	5	SG

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		485BD Module 5P Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	SDB
			→	RDB
Data+	6	1	⟷	SDA
			→	RDA
GND	5	5	⟷	SG

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		485BD Module 5P Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	SDB
			→	RDB
Data+	2	8	⟷	SDA
			→	RDA
GND	**5**	**9**	⟷	SG

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		485BD Module 5P Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	SDB
			→	RDB
Data+	2	9	⟷	SDA
			→	RDA
GND	5	5	⟷	SG


Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		485BD Module 5P Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	SDB
			→	RDB
Data+	2	8	⟷	SDA
			→	RDA
GND	5	5	⟷	SG

Diagram 13

MT-iP ***MT6071iP / MT8071iP***

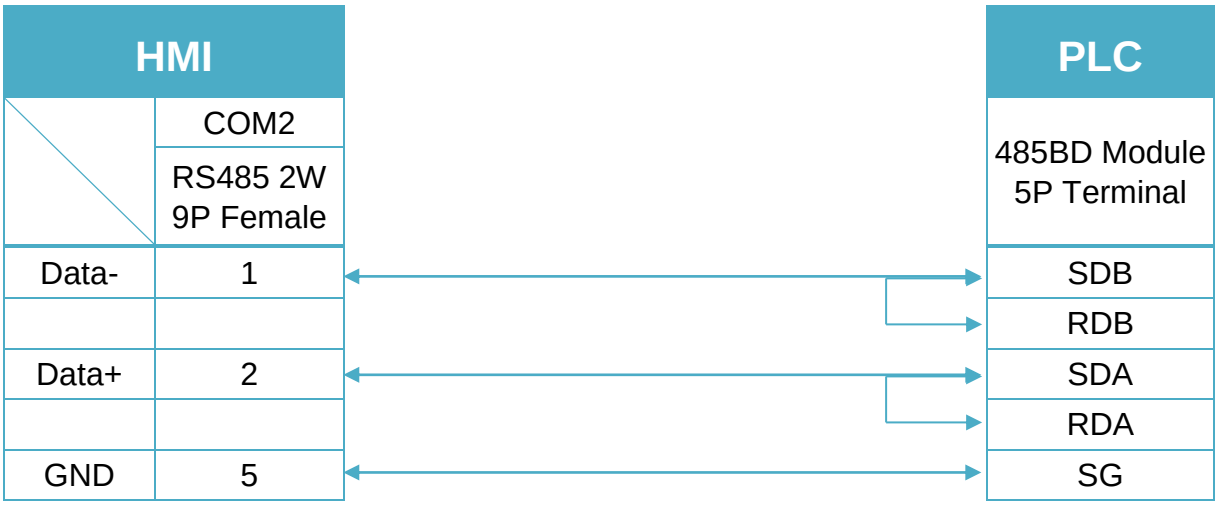

Mitsubishi FX2N

Supported Series: Mitsubishi FX2N series PLC
Website http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX2N		
PLC I/F	RS485 4W	RS232/RS485	
Baud rate	19200	9600/19200/38400 /57600/115200	
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		

Online simulator	YES	**Extend address mode**	NO

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 377	Input Relay
B	Y	OOO	0 ~ 377	Output Relay
B	M	DDDD	0 ~ 7999	Auxiliary Relay
B	T	DDD	0 ~ 255	Timer Relay
B	C	DDD	0 ~ 255	Counter Relay
B	SM	DDDD	8000 ~ 9999	Special Auxiliary Relay
B	D_Bit	DDDDdd	0 ~ 799915	Data Register Bit (D)
B	S	DDDD	0 ~ 4095	State Relay (S)
W	TV	DDD	0 ~ 255	Timer Memory
W	CV	DDD	0 ~ 199	Counter Memory
W	D	DDDD	0 ~ 7999	Data Register
DW	CV2	DDD	200 ~ 255	Counter Memory(D Word)
W	SD	DDDD	8000 ~ 9999	Special Data Register

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	7	⟷	4
Rx+	6	⟷	7
Tx-	9	⟷	1
TX+	8	⟷	2
GND	5	⟷	3

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Mitsubishi FX2N-10GM/20GM

Supported Series: Mitsubishi FX2N -10GM/20GM PLC.
Website http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX2N-10GM/20GM		
PLC I/F	RS485 4W		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		

Online simulator	YES	Extend address mode	NO

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 103	Input Relay
B	Y	OOO	0 ~ 103	Output Relay
B	M	DDD	0 ~ 511	Auxiliary Relay
B	SM	DDDD	9000 ~ 9175	Special Auxiliary Relay
W	X_W	OOO	0 ~ 103	
W	Y_W	OOO	0 ~ 103	
W	M_W	DDD	0 ~ 511	
W	SM_W	DDDD	9000 ~ 9175	
W	D	DDDD	0 ~ 6999	Data Register
W	SD	DDDD	9000 ~ 9599	Special Data Register
W	V	D	0 ~ 7	Index register
DW	Z	D	0 ~ 7	Index register

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	7	⟷	4
Rx+	6	⟷	7
Tx-	9	⟷	1
TX+	8	⟷	2
GND	5	⟷	3

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Mitsubishi FX3U (Ethernet)

Supported Series: Mitsubishi FX SERIES, Module: FX3U-ENET.
Website: http://www.mitsubishi-automation.com


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX3U (Ethernet)		
PLC I/F	Ethernet		
Port no.	5001(default)		Refer to Module Setting
PLC sta. no.	0 (default)		Refer to Module Setting

PLC Setting:

Fx3u-ENET module setting:
Before using Ethernet module, use GX Developer / FX Configurator-EN to set the Ethernet module, the FX3u-ENET module setting steps are shown below.


Step1. Open GX Developer, select “Read from PLC” in Online list.

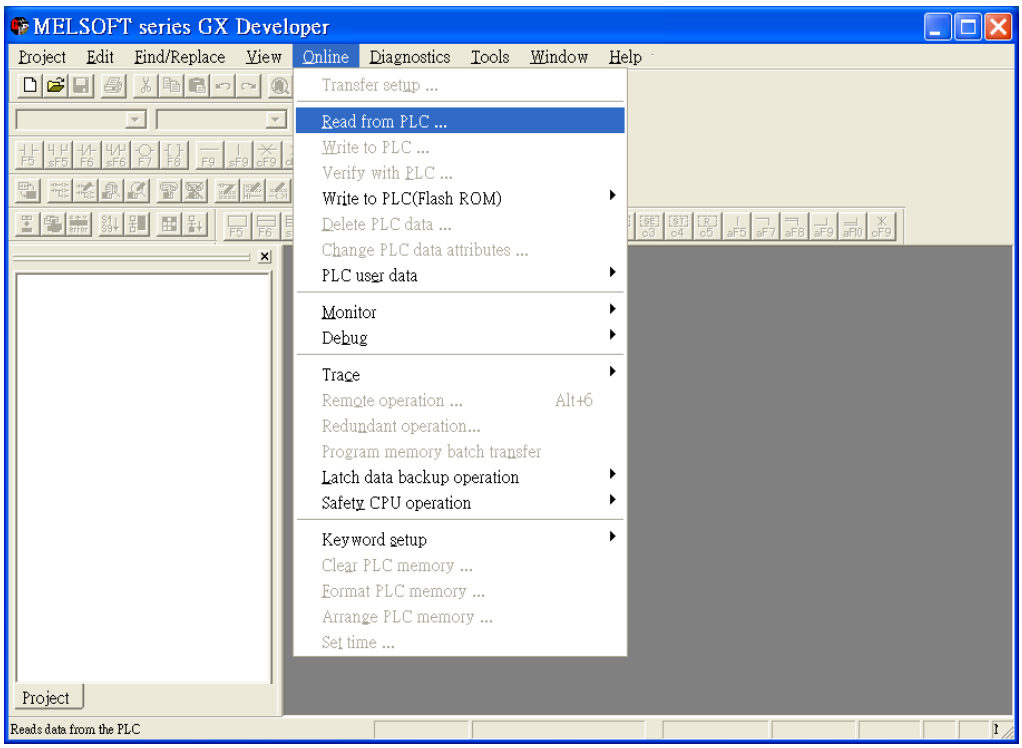


Step2. Select “FXCPU” in PLC series.




Step3. Connect PLC via serial port for setting IP address first.

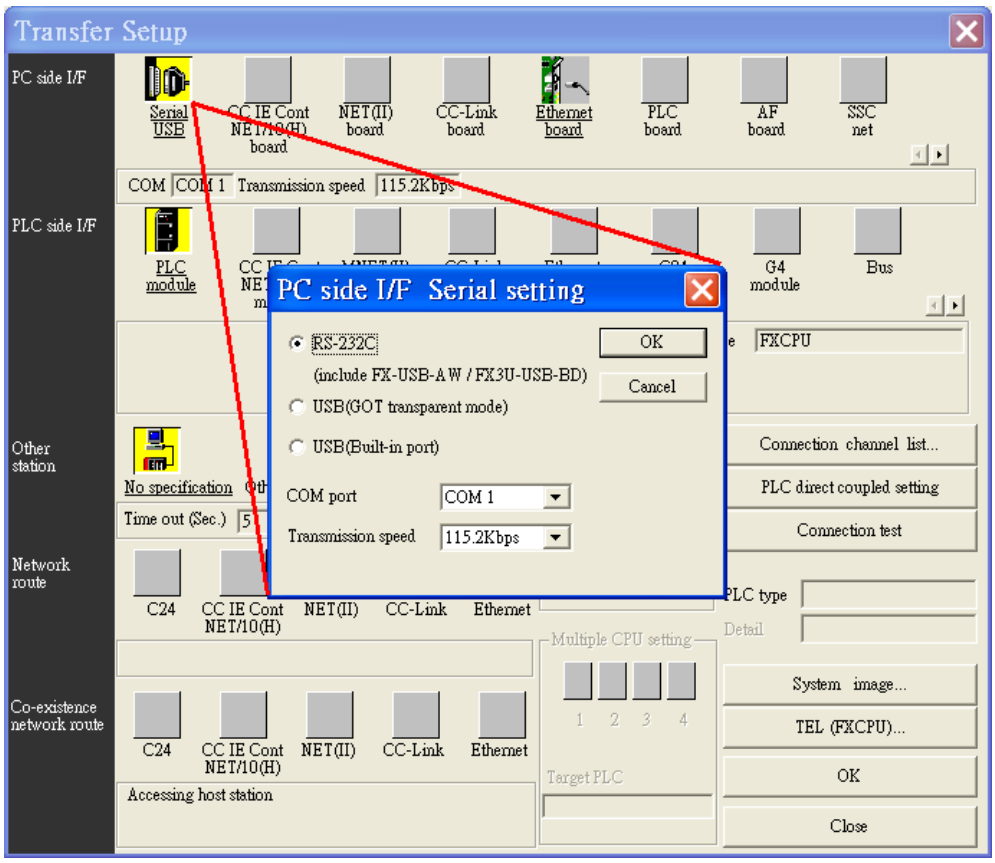


Step4. After finishing the PLC settings, select Tools/FX special function utility/FX Configurator-EN.

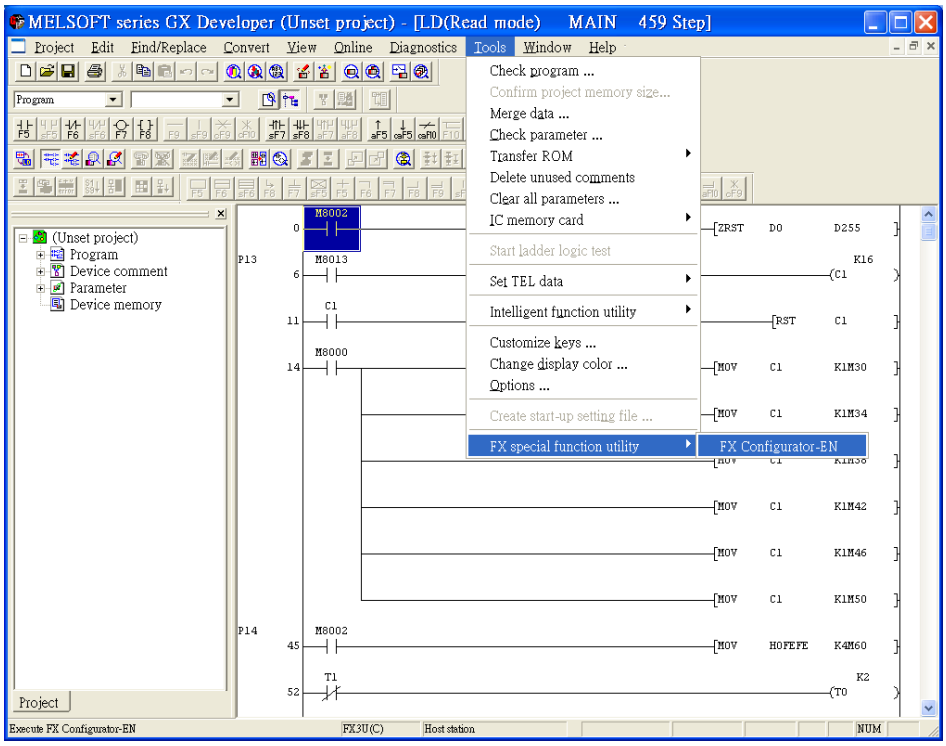

Step5. Select “Module 0” in Ethernet Module settings.
(If more than one module needed, please set modules step by step)

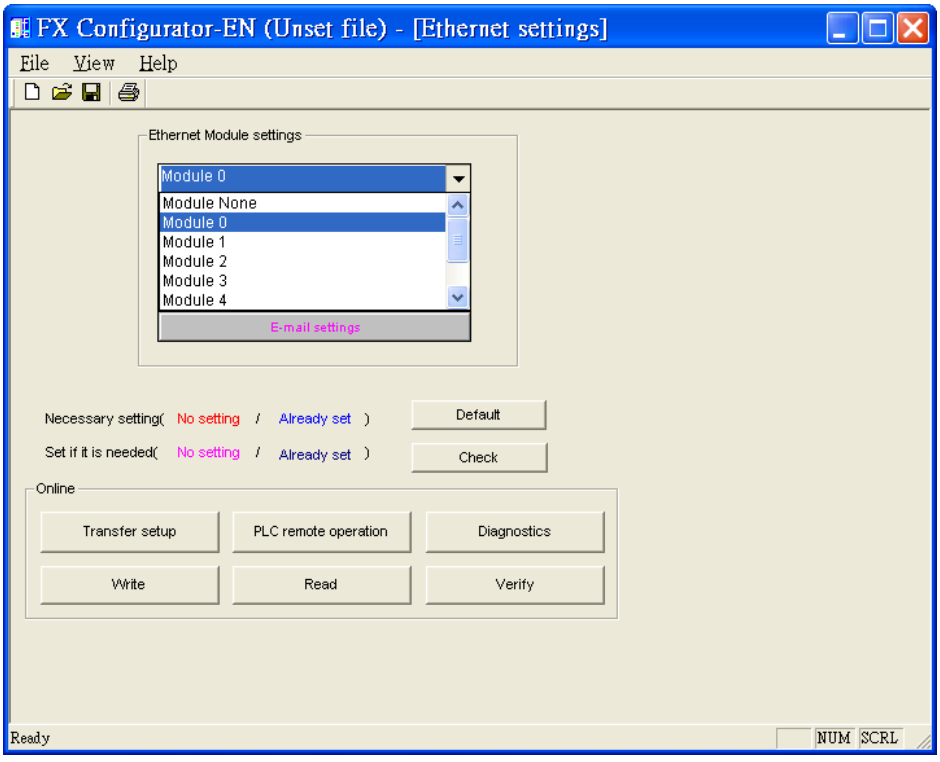


Step6. In Ethernet operational settings, select the related parameters and IP address and then press ”End” to finish setting.

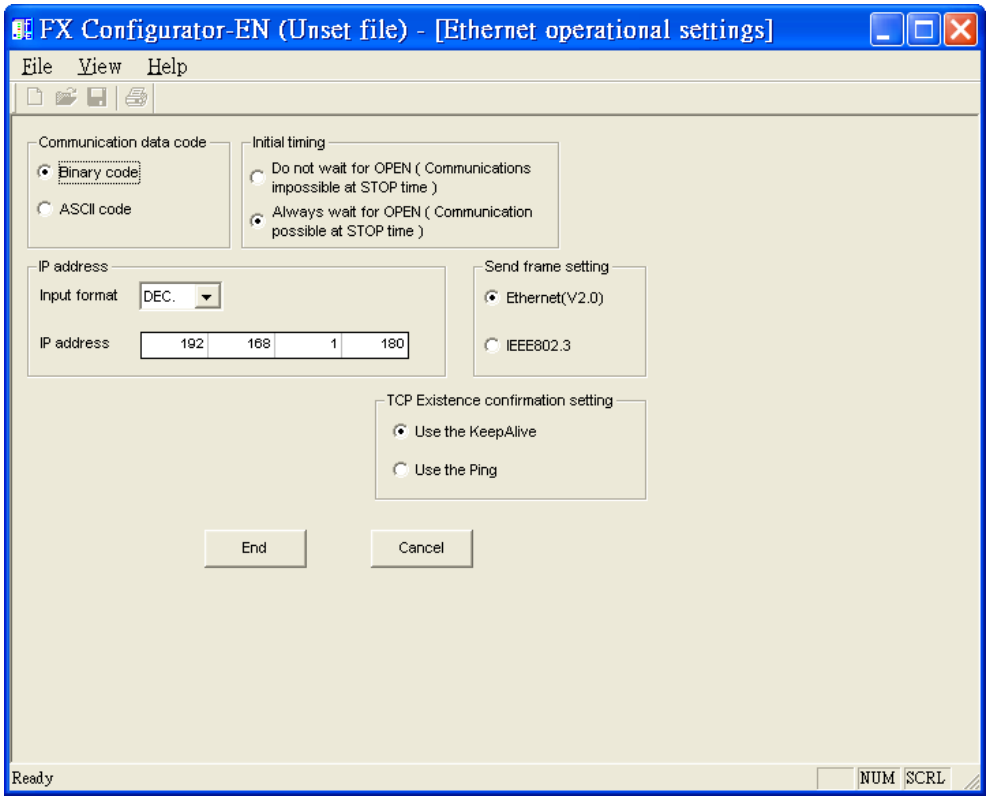


Step7. In Ethernet open settings, press “End” after setting the parameters below.

1	TCP	MELSOFT connection					
2	TCP	Unpassive	Send	Procedure exist(MC)	Disable	No confirm	5001
3	TCP	Unpassive	Send	Procedure exist(MC)	Disable	No confirm	5001
4	TCP	Unpassive	Send	Procedure exist(MC)	Disable	No confirm	5001


(The first Protocol means using GX Developer to communicate with module, the max. “Fixed buffer communication preocedure” is 4 units.)

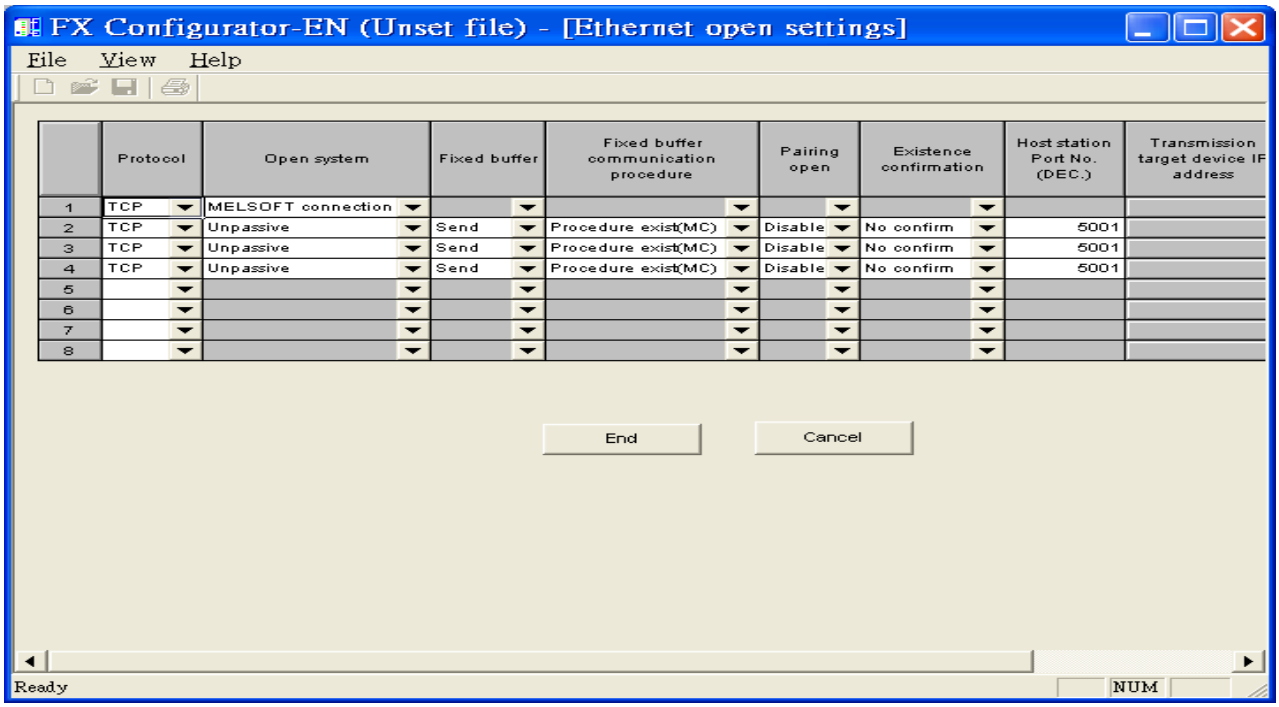
FX Configurator-EN (Unset file) - [Ethernet open settings]
File View Help
Protocol
Open system
Fixed buffer
Fixed buffer communication procedure
Pairing open
Existence confirmation
Host station Port No. (DEC.)
Transmission target device IP address
1 TCP MELSOFT connection
2 TCP Unpassive Send Procedure exist(MC) Disable No confirm 5001
3 TCP Unpassive Send Procedure exist(MC) Disable No confirm 5001
4 TCP Unpassive Send Procedure exist(MC) Disable No confirm 5001
5
6
7
8
End
Cancel
Ready
NUM

Or

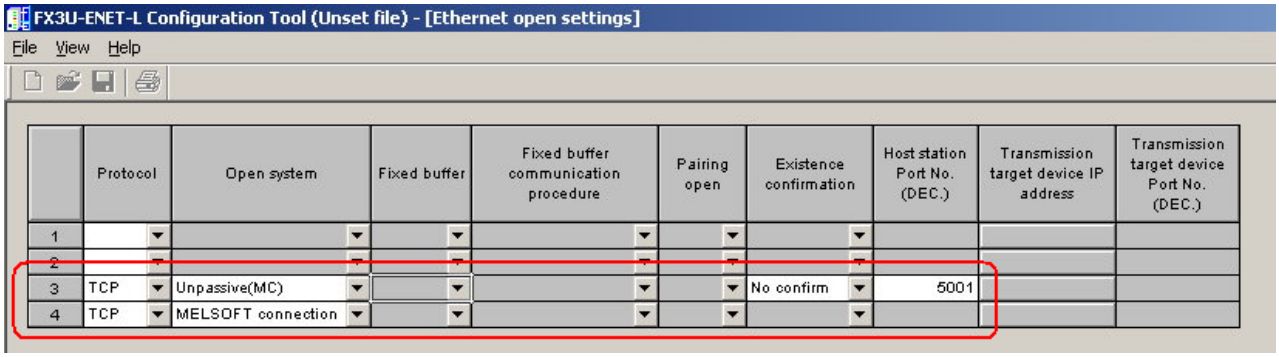
FX3U-ENET-L Configuration Tool (Unset file) - [Ethernet open settings]
File View Help
Protocol
Open system
Fixed buffer
Fixed buffer communication procedure
Pairing open
Existence confirmation
Host station Port No. (DEC.)
Transmission target device IP address
Transmission target device Port No. (DEC.)
1
2
3 TCP Unpassive(MC) No confirm 5001
4 TCP MELSOFT connection

Step8. After setting the parameters of PLC, restart for Ethernet communication.

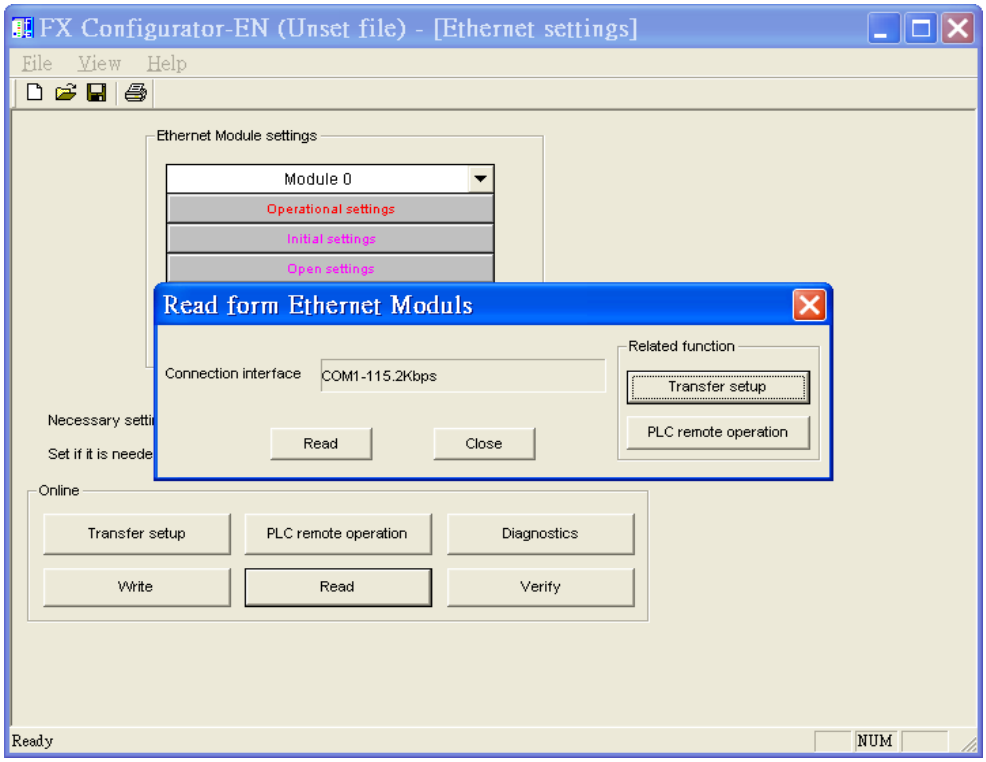


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 571	Input
B	Y	OOO	0 ~ 571	Output Relay
B	M	DDDD	0 ~ 7999	Internal Relay
B	T	DDD	0 ~ 511	Timer Contacts
B	C	DDD	0 ~ 255	Counter Contacts
B	SM	DDDD	8000 ~ 8511	Special Int. Relays
B	D_Bit	DDDDDdd	0 ~ 1799915	Data Register Bit Access
B	S	DDDD	0 ~ 4095	Step Relays
W	TV	DDD	0 ~ 511	Timer Value
W	CV	DDD	0 ~ 199	Counter Value
W	D	DDDD	0 ~ 7999	Data Registers
W	CV2	DDD	200 ~255	Counter Value
W	SD	DDDD	8000 ~ 8511	Special Data Registers
W	R	DDDDD	0 ~ 32767	File Register

Wiring Diagram:

Ethernet cable:

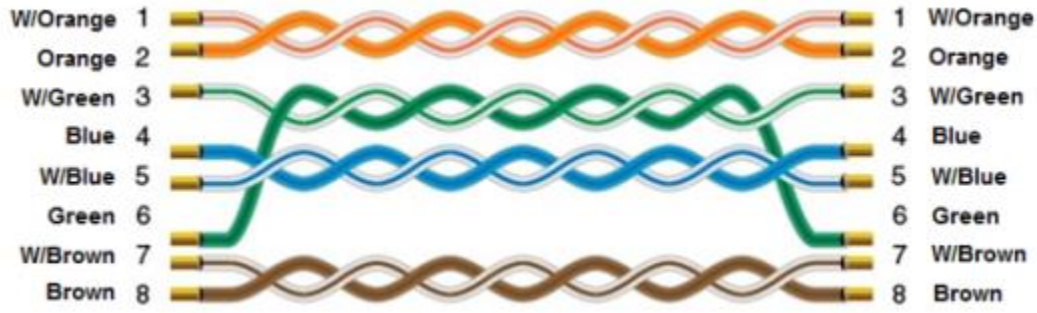

Mitsubishi FX3U/FX3G

Supported Series: Mitsubishi FX3U/FX3UC/FX3G/FX3S.
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX3U/FX3G		
PLC I/F	RS485 4w	RS232 / RS485 2w/4w / USB	
Baud rate	38400	9600/19200	
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	0		Does not apply to this protocol

Online simulator	YES (9600 baud rate only)	Extend address mode	NO

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device	Format	Range	Memo
B	X	OOO	0 ~ 764	Input Relay
B	Y	OOO	0 ~ 764	Output Relay
B	M	DDDD	0 ~ 7999	Auxiliary Relay
B	T	DDD	0 ~ 511	Timer Relay (T)
B	C	DDD	0 ~ 255	Counter Relay (C)
B	SM	DDDD	8000 ~ 9999	Special Relay (M)
B	D_Bit	DDDDdd	0 ~ 799915	Data Register Bit (D)
B	S	DDDD	0 ~ 4095	State Relay (S)
W	TV	DDD	0 ~ 511	Timer Memory (T)
W	CV	DDD	0 ~ 199	Counter Memory (C)
W	D	DDDD	0 ~ 7999	Data Register (D)
DW	CV2	DDD	200 ~ 255	Counter Memory(D Word)
W	SD	DDDD	8000 ~ 9999	Special Data Register (D)

Bit/Word	Device	Format	Range	Memo
W	R	DDDDD	0 ~ 32767	Extended Register (R)
W	Z	D	0 ~ 7	Index register

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	7	⟷	4
Rx+	6	⟷	7
Tx-	9	⟷	1
TX+	8	⟷	2
GND	5	⟷	3

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Mitsubishi FX5U

Supported Series: Mitsubishi FX5U/FX5UC

Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX5U		
PLC I/F	RS485 4w		
Baud rate	19200	9600 ~ 115200	
Data bits	8	7 , 8	
Parity	None	None/Odd/Even	
Stop bits	1	1 , 2	
PLC sta. no.	0	0 ~ 15	
Parameter 1	1	1,4,5	Message Pattern *Note1


*Note1:

Pattern1 = ASCII Mode

Pattern4 = ASCII Mode (CR,LF)


Pattern5 = Binary Mode

Online simulator	YES	Extend address mode	NO

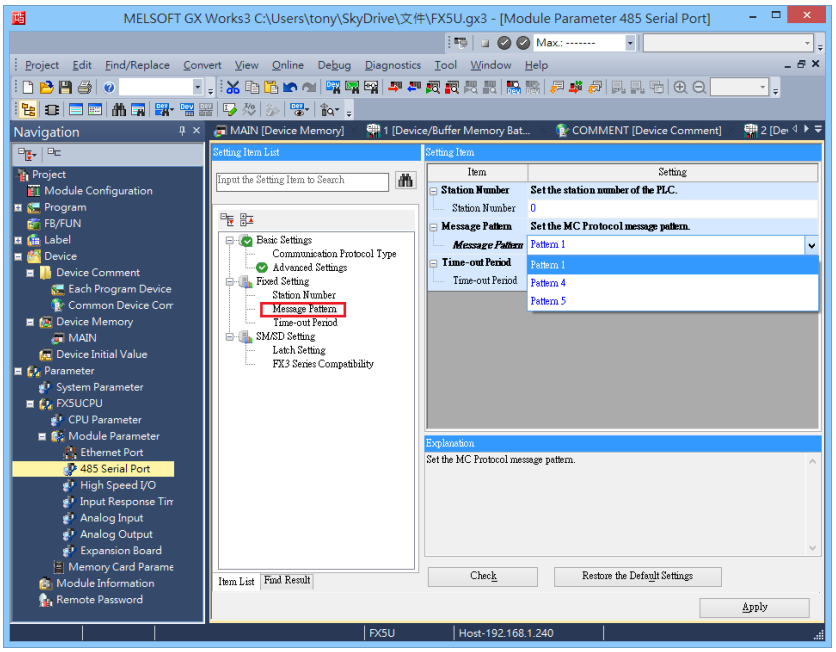

PLC Setting:

Communication Protocol	MC Protocol
Sum Check Code	Added

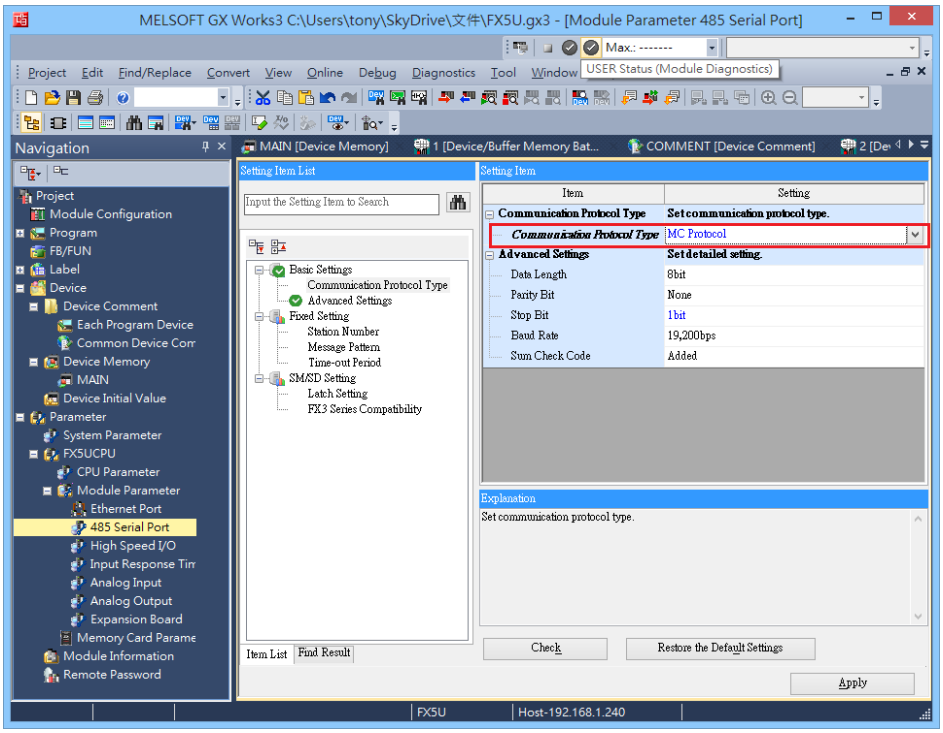

Device Address:

Bit/Word	Device	Format	Range	Memo
B	LCS	DDDD	0 ~ 1023	Long counter Contact
B	LCC	DDDD	0 ~ 1023	Long counter Coil
B	SM	DDDD	0 ~ 9999	Special Relay
B	X	OOOO	0 ~ 1777	Input Relay
B	Y	OOOO	0 ~ 1777	Output Relay
B	M	DDDDD	0 ~ 32767	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	B	HHHH	0 ~ 7FFF	Link Relay
B	TS	DDDD	0 ~ 1023	Timer Contact
B	TC	DDDD	0 ~ 1023	Timer Coil
B	SS	DDDD	0 ~ 1023	Retentive Timer Contact
B	SC	DDDD	0 ~ 1023	Retentive Timer Coil
B	CS	DDDD	0 ~ 1023	Counter Contact

Bit/Word	Device	Format	Range	Memo
B	CC	DDDD	0 ~ 1023	Counter Coil
B	SB	HHHH	0 ~ 7FFF	Special Link Relay
B	S	DDDD	0 ~ 4095	Step relay
B	D_Bit	DDDDh	0 ~ 7999F	Data Register bit
B	SD_bit	DDDDDh	0 ~ 11999F	Special register Bit
B	R_bit	DDDDDh	0 ~ 32767F	File Register Bit
B	SW_bit	HHHHh	0 ~ 7FFFF	Special Link Register Bit
B	W_bit	HHHHh	0 ~ 7FFFF	Link Register Bit
DW	LCN	DDDD	0 ~ 1023	Long counter Current Value
DW	LZ	D	0 ~ 1	Long Index Register
W	SD	DDDDD	0 ~ 11999	Special register
W	D	DDDD	0 ~ 7999	Data Register
W	R	DDDDD	0 ~ 32767	File Register
W	W	HHHH	0 ~ 7FFF	Link Register
W	TN	DDDD	0 ~ 1023	Timer Current value
W	SN	DDDD	0 ~ 1023	Retentive Timer Current value
W	CN	DDDD	0 ~ 1023	Counter Current value
W	SW	HHHH	0 ~ 7FFF	Special Link Register
W	Z	DD	0 ~ 19	Index Register

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		FX5U RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	SG

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		FX5U RS422 Terminal
Rx-	7	⟷	SDB
Rx+	6	⟷	SDA
Tx-	9	⟷	RDB
TX+	8	⟷	RDA
GND	5	⟷	SG

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		FX5U RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	SG

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		FX5U RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	SG

Mitsubishi FX5U - ASCII Mode (Ethernet)

Supported Series: Mitsubishi FX5U ethernet module
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX5U - ASCII Mode (Ethernet)		
PLC I/F	Ethernet		
Port no.	Set identically to the PLC setting		Adviced to set port no. to 4999
PLC sta. no.	Set identically to the PLC setting	255	
Network number	0	0~999	


PLC Setting:

Communication Data Code	ASCII

[Ethernet Configuration]

To connect PLC with multiple HMIs, Port No. must be set.

In GX WORK 3, the setting steps are: Project -> Parameter -> FX5UCPU -> Module Parameter -> Ethernet Port -> Setting Item -> External Device Configuration -> Detailed Setting

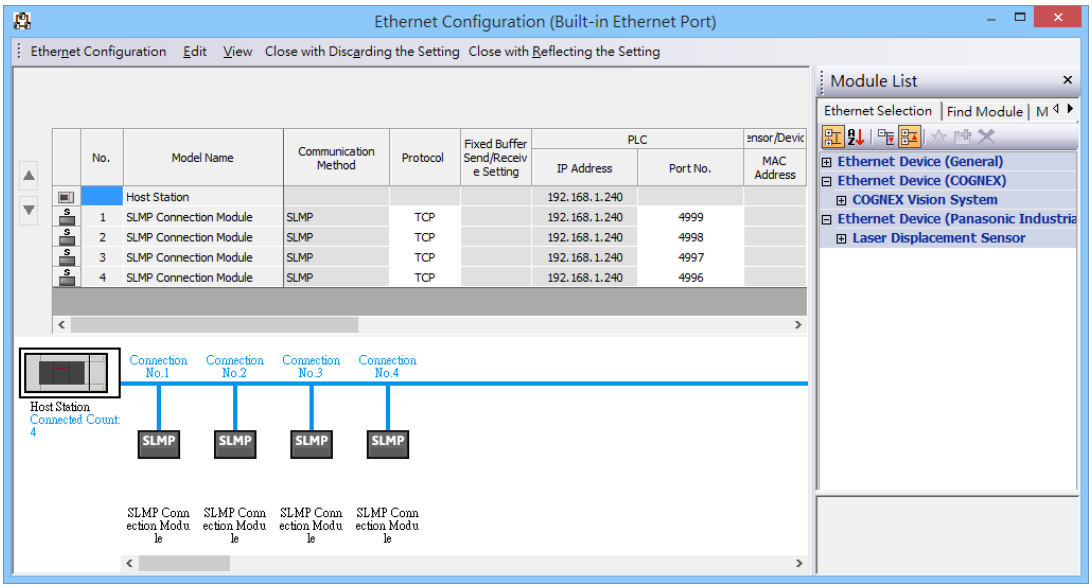


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SM	DDDD	0 ~ 9999	Special Relay
B	X	OOOO	0 ~ 1777	Input Relay
B	Y	OOOO	0 ~ 1777	Output Relay
B	M	DDDDD	0 ~ 32767	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	B	HHHH	0 ~ 7FFF	Link Relay
B	TS	DDDD	0 ~ 1023	Timer Contact
B	TC	DDDD	0 ~ 1023	Timer Coil
B	SS	DDDD	0 ~ 1023	Retentive Timer Contact
B	SC	DDDD	0 ~ 1023	Retentive Timer Coil
B	CS	DDDD	0 ~ 1023	Counter Contact
B	CC	DDDD	0 ~ 1023	Counter Coil
B	SB	HHHH	0 ~ 7FFF	Special Link Relay
B	S	DDDD	0 ~ 4095	Step relay
B	D_Bit	DDDDh	0 ~ 7999F	Data Register bit
B	SD_bit	DDDDDh	0 ~ 11999F	Special register Bit
B	R_bit	DDDDDh	0 ~ 32767F	File Register Bit
B	SW_bit	HHHHh	0 ~ 7FFFF	Special Link Register Bit
B	W_bit	HHHHh	0 ~ 7FFFF	Link Register Bit
DW	LZ	D	0 ~ 1	Long Index Register
W	SD	DDDDD	0 ~ 11999	Special register
W	D	DDDD	0 ~ 7999	Data Register
W	R	DDDDD	0 ~ 32767	File Register
W	W	HHHH	0 ~ 7FFF	Link Register
W	TN	DDDD	0 ~ 1023	Timer Current value
W	SN	DDDD	0 ~ 1023	Retentive Timer Current value
W	CN	DDDD	0 ~ 1023	Counter Current value
W	SW	HHHH	0 ~ 7FFF	Special Link Register
W	Z	DD	0 ~ 19	Index Register

Wiring Diagram:

Ethernet cable:

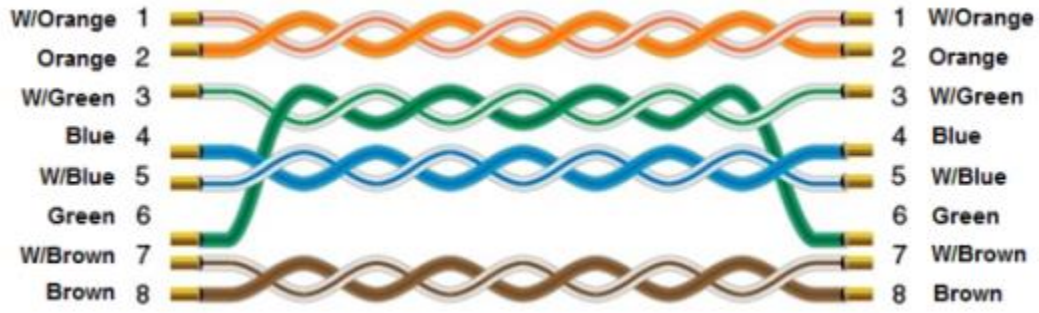

Mitsubishi FX5U - Binary Mode (Ethernet)

Supported Series: Mitsubishi FX5U ethernet module
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX5U - Binary Mode (Ethernet)		
PLC I/F	Ethernet		
Port no.	Set identically to the PLC setting		Adviced to set port no. to 4999
PLC sta. no.	Set identically to the PLC setting	255	
Network number	0	0~999	


PLC Setting:

Communication Data Code	Binary

[Ethernet Configuration]

To connect PLC with multiple HMIs, Port No. must be set.

In GX WORK 3, the setting steps are: Project -> Parameter -> FX5UCPU -> Module Parameter -> Ethernet Port -> Setting Item -> External Device Configuration -> Detailed Setting

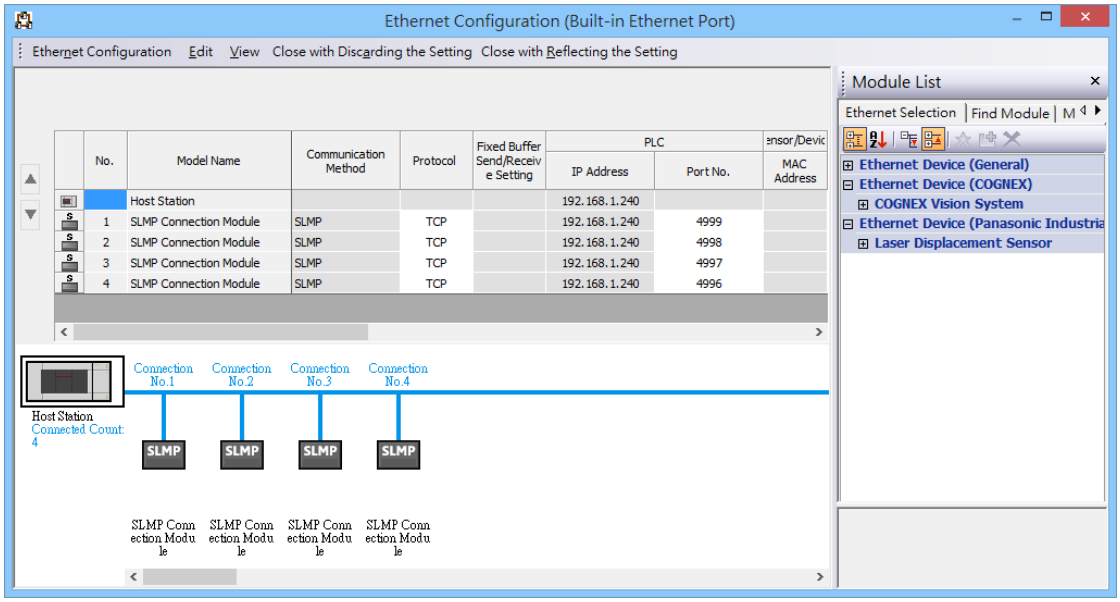


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	LCS	DDDD	0 ~ 1023	Long counter Contact
B	LCC	DDDD	0 ~ 1023	Long counter Coil
B	SM	DDDD	0 ~ 9999	Special Relay
B	X	OOOO	0 ~ 1777	Input Relay
B	Y	OOOO	0 ~ 1777	Output Relay
B	M	DDDDD	0 ~ 32767	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	B	HHHH	0 ~ 7FFF	Link Relay
B	TS	DDDD	0 ~ 1023	Timer Contact
B	TC	DDDD	0 ~ 1023	Timer Coil
B	SS	DDDD	0 ~ 1023	Retentive Timer Contact
B	SC	DDDD	0 ~ 1023	Retentive Timer Coil
B	CS	DDDD	0 ~ 1023	Counter Contact
B	CC	DDDD	0 ~ 1023	Counter Coil
B	SB	HHHH	0 ~ 7FFF	Special Link Relay
B	S	DDDD	0 ~ 4095	Step relay
B	D_Bit	DDDDh	0 ~ 7999F	Data Register bit
B	SD_bit	DDDDDh	0 ~ 11999F	Special register Bit
B	R_bit	DDDDDh	0 ~ 32767F	File Register Bit
B	SW_bit	HHHHh	0 ~ 7FFFF	Special Link Register Bit
B	W_bit	HHHHh	0 ~ 7FFFF	Link Register Bit
DW	LCN	DDDD	0 ~ 1023	Long counter Current Value
DW	LZ	D	0 ~ 1	Long Index Register
W	SD	DDDDD	0 ~ 11999	Special register
W	D	DDDD	0 ~ 7999	Data Register
W	R	DDDDD	0 ~ 32767	File Register
W	W	HHHH	0 ~ 7FFF	Link Register
W	TN	DDDD	0 ~ 1023	Timer Current value
W	SN	DDDD	0 ~ 1023	Retentive Timer Current value
W	CN	DDDD	0 ~ 1023	Counter Current value
W	SW	HHHH	0 ~ 7FFF	Special Link Register
W	Z	DD	0 ~ 19	Index Register

Wiring Diagram:

Ethernet cable:

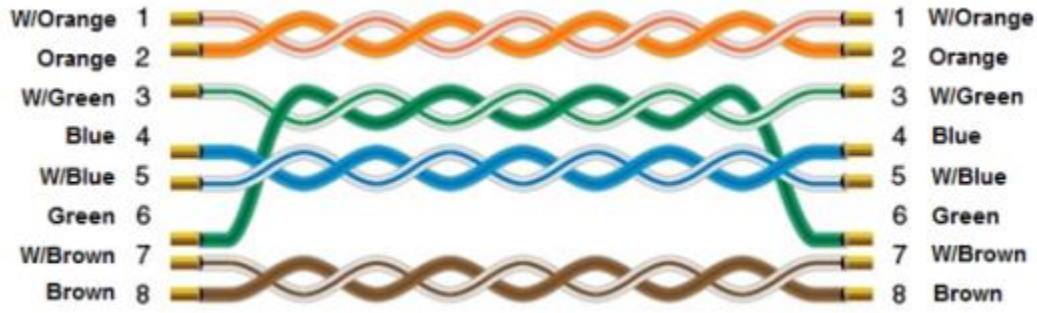

Mitsubishi L6ADP

Supported Series: Mitsubishi L6ADP CPU RS232 Series Port
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi L6ADP		
PLC I/F	RS232		
Baud rate	115200		
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	1		

Online simulator	YES	**Extend address mode**	NO
Pass-Through	YES		

*Communications between HMI and PLC in pass-through mode are not supported.
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device	Format	Range	Memo
B	SM	DDDD	0 ~ 2047	Special Int. Relays
B	X	HHHH	0 ~ 1FFF	Input Relay
B	Y	HHHH	0 ~ 1FFF	Output Relay
B	M	DDDD	0 ~ 8191	Internal Relay
B	L	DDDD	0 ~ 8191	Latch Relay
B	F	DDDD	0 ~ 2047	Annunciator
B	V	DDDD	0 ~ 2047	Edge Relay
B	B	HHHH	0 ~ 1FFF	Link Relay
B	SB	HHH	0 ~ 7FF	Special Link Relay
B	D_Bit	DDDDDDh	0 ~ 143359F	Data Register bit
W	SD	DDDD	0 ~ 2047	Special register
W	D	DDDDDD	0 ~ 143359	Data Register
W	W	HHHH	0 ~ 1FFF	Link Register

Bit/Word	Device	Format	Range	Memo
W	SW	HHH	0 ~ 7FF	Special Link Register
W	Z	DD	0 ~ 19	Index Register
W	C	DDDD	0 ~ 2047	Counter
W	T	DDDD	0 ~ 1023	Timer

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P Mini-Din Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	2	⟷	3
Tx	3	⟷	4
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	9	⟷	3
Tx	6	⟷	4
GND	5	⟷	5

Mitsubishi MELSEC-Q/L - ASCII Mode (Ethernet)


Supported Series: Mitsubishi Q series (Q03UDE, Q04UDEH, Q06UDEH, Q10UDEH, Q13UDEH, Q20UDEH, Q26UDEH), Mitsubishi L series(L02, L26-BT), MELSEC-Q/L protocol application to CPU of Ethernet interface or Ethernet module.
Website: http://www.mitsubishi-automation.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Mitsubishi MELSEC-Q/L - ASCII Mode (Ethernet)		
PLC I/F	Ethernet		
Port no.	Set identically to the PLC setting		Adviced to set port no. to 4999
Parameter 1	Networking no. (Set identically to PLC setting)	0~255	Q13UDEH has to be set to 0
PLC sta. no.	Set identically to the PLC setting	255	Q13UDEH has to be set to 255

PLC Setting:

MITSUBISHI Q/L series Ethernet module setting:
Note: If using QJ71E71 module, please refer to MITSUBISHI QJ71E71 connection guide.

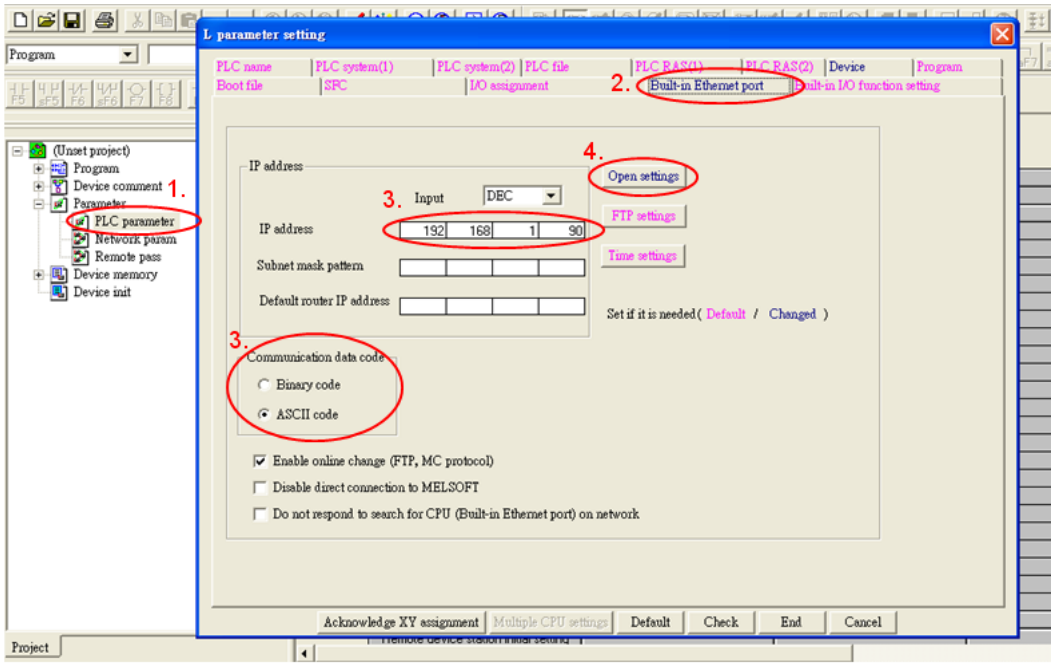


1. Click [PLC parameter].
2. [Built-in Ethernet port].
3. Click [Open settings] and then set the IP address and communication data code
4. Set the MC protocol-TCP Port No.1387 (Hex) and in EasyBuilder, TCP port is 4999 (Dec).

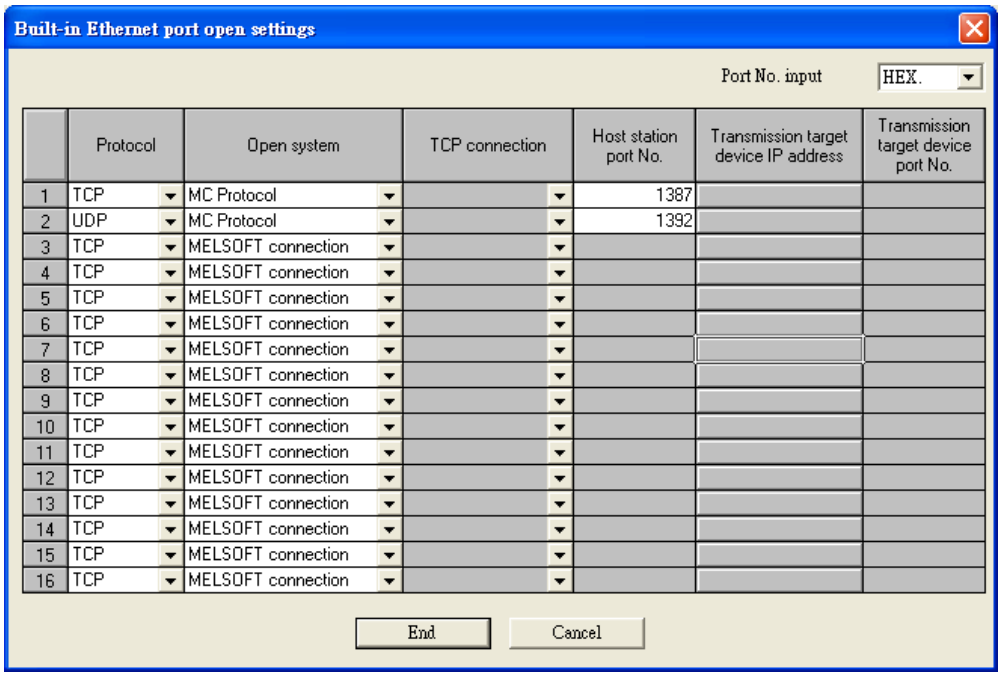


*If not using an ethernet module, skip the following settings.

Note: In EasyBuilder, please fill in [Network No.] in Parameter 1 as PLC setting. For example below, the Network No. is 2.

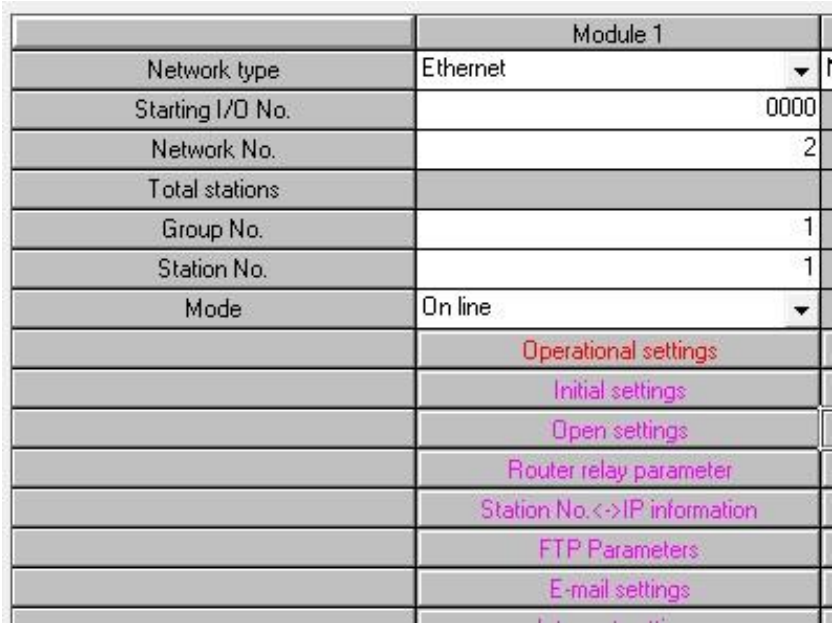

Set to 2 for Parameter 1 in EasyBuilder.

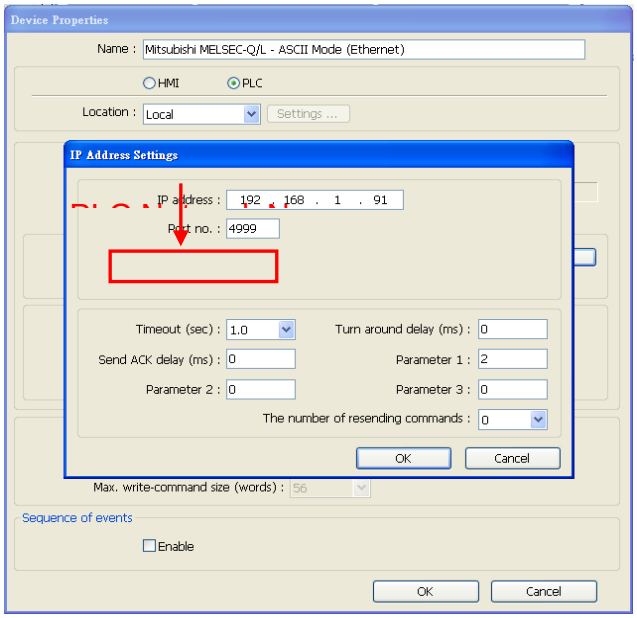

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SM	DDDD	0 ~ 2047	Special Relay
B	X	HHHH	0 ~ 1fff	Input Relay
B	Y	HHHH	0 ~ 1fff	Output Relay
B	M	DDDDD	0 ~ 61439	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	V	DDDDD	0 ~ 32767	Edge Relay
B	B	HHHH	0 ~ efff	Link Relay
B	TS	DDDDD	0 ~ 25471	Timer Contact
B	TC	DDDDD	0 ~ 25471	Timer Coil
B	SS	DDDDD	0 ~ 25471	Retentive Timer Contact
B	SC	DDDDD	0 ~ 25471	Retentive Timer Coil
B	CS	DDDDD	0 ~ 25471	Counter Contact
B	CC	DDDDD	0 ~ 25471	Counter Coil
B	SB	HHHH	0 ~ 7fff	Special Link Relay
B	S	DDDD	0 ~ 8191	Step relay
B	DX	HHHH	0 ~ 1fff	Direct Input
B	DY	HHHH	0 ~ 1fff	Direct Output
B	D_Bit	DDDDDDh	0 ~ 999999f	Data Register bit
B	SD_bit	DDDDh	0 ~ 2047f	Special register Bit
B	ZR_bit	DDDDDDh	0 ~ 999999f	File Register Bit

Bit/Word	Device type	Format	Range	Memo
B	R_bit	DDDDDh	0 ~ 32767f	File Register Bit
B	SW_bit	HHHh	0 ~ 7fff	Special Link Register Bit
B	W_bit	HHHHHHh	0 ~ 3fd7fff	Link Register Bit
W	SD	DDDD	0 ~ 2047	Special register
W	D	DDDDDD	0 ~ 999999	Data Register
W	W	HHHHHH	0 ~ 3fd7ff	Link Register
W	TN	DDDDD	0 ~ 25471	Timer Current value
W	SN	DDDDD	0 ~ 25471	Retentive Timer Current value
W	CN	DDDDD	0 ~ 25471	Counter Current value
W	SW	HHH	0 ~ 7ff	Special Link Register
W	Z	DD	0 ~ 20	Index Register
W	R	DDDDD	0 ~ 32767	File Register
W	ZR	DDDDDD	0 ~ 999999	File Register

Note: Each model of CPU is different, it is recommended to refer to MITSUBISHI MELSEC-Q Manual Device List.

Wiring Diagram:

Ethernet cable:



Mitsubishi MELSEC-Q/L - Binary Mode (Ethernet)


Supported Series: Mitsubishi Q series (Q03UDE, Q04UDEH, Q06UDEH, Q10UDEH, Q13UDEH, Q20UDEH, Q26UDEH), Mitsubishi L series(L02, L26-BT), MELSEC-Q/L protocol application to CPU of Ethernet interface or Ethernet module.
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi MELSEC-Q/L - Binary Mode (Ethernet)		
PLC I/F	Ethernet		
Port no.	Set identically to the PLC setting		Adviced to set port no. to 4999
Parameter 1	Networking no. (Set identically to PLC setting)	0~255	Q13UDEH has to be set to 0
PLC sta. no.	Set identically to the PLC setting	255	Q13UDEH has to be set to 255

PLC Setting:

MITSUBISHI Q/L series Ethernet module setting:
Note: If using QJ71E71 module, please refer to MITSUBISHI QJ71E71 connection guide.

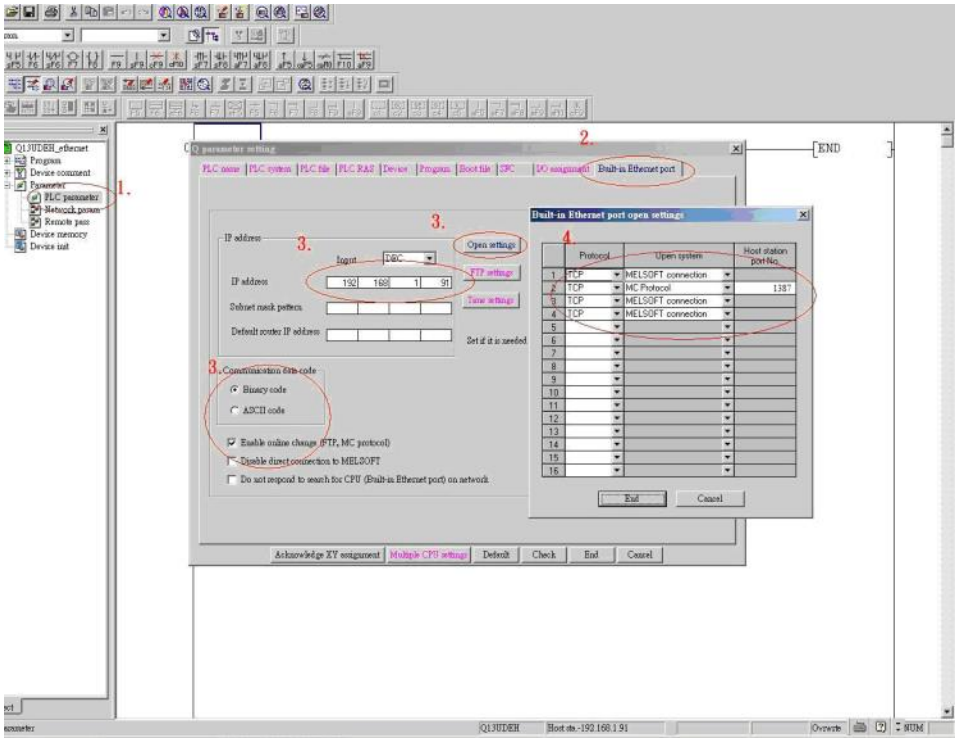


1. Click [PLC parameter].
2. [Built-in Ethernet port].
3. Click [Open settings] and then set the IP address and communication data code
4. Set the MC protocol-TCP Port No.1387 (Hex) and in EasyBuilder, TCP port is 4999 (Dec).


*If not using an ethernet module, skip the following settings.

Note: In EasyBuilder, please fill in [Network No.] in Parameter 1 as PLC setting.

For example below, the Network No. is 2.

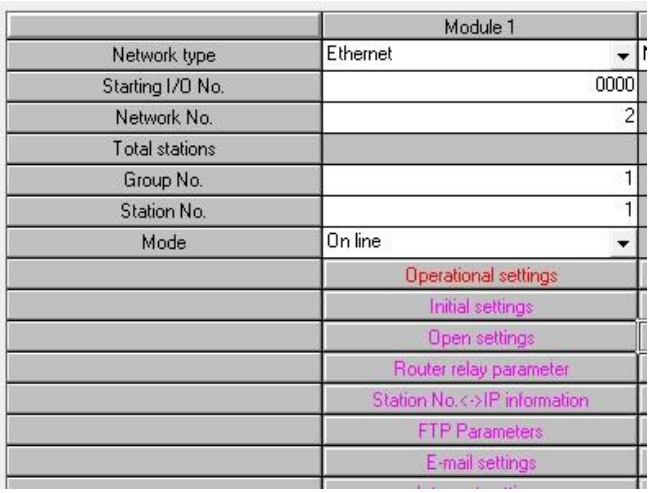

Set to 2 for Parameter 1 in EasyBuilder.

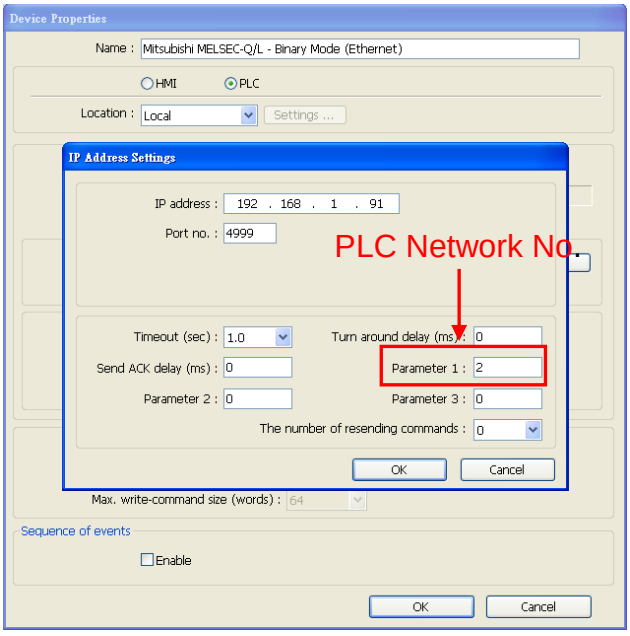

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SM	DDDD	0 ~ 2047	Special Relay
B	X	HHHH	0 ~ 1fff	Input Relay
B	Y	HHHH	0 ~ 1fff	Output Relay
B	M	DDDDD	0 ~ 61439	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	V	DDDDD	0 ~ 32767	Edge Relay
B	B	HHHH	0 ~ efff	Link Relay
B	TS	DDDDD	0 ~ 25471	Timer Contact
B	TC	DDDDD	0 ~ 25471	Timer Coil
B	SS	DDDDD	0 ~ 25471	Retentive Timer Contact
B	SC	DDDDD	0 ~ 25471	Retentive Timer Coil
B	CS	DDDDD	0 ~ 25471	Counter Contact
B	CC	DDDDD	0 ~ 25471	Counter Coil
B	SB	HHHH	0 ~ 7fff	Special Link Relay
B	S	DDDD	0 ~ 8191	Step relay
B	DX	HHHH	0 ~ 1fff	Direct Input
B	DY	HHHH	0 ~ 1fff	Direct Output
B	D_Bit	DDDDDDDh	0 ~ 4184063f	Data Register bit
B	SD_bit	DDDDh	0 ~ 2047f	Special register Bit
B	ZR_bit	HHHHHHHh	0 ~ 3fd7fff	File Register Bit
B	R_bit	DDDDDh	0 ~ 32767f	File Register Bit
B	SW_bit	HHHh	0 ~ 7fff	Special Link Register Bit
B	W_bit	HHHHHHHh	0 ~ 3fd7fff	Link Register Bit
W	SD	DDDD	0 ~ 2047	Special register
W	D	DDDDDDD	0 ~ 4184063	Data Register
W	W	HHHHHH	0 ~ 3fd7ff	Link Register
W	TN	DDDDD	0 ~ 25471	Timer Current value
W	SN	DDDDD	0 ~ 25471	Retentive Timer Current value
W	CN	DDDDD	0 ~ 25471	Counter Current value
W	SW	HHH	0 ~ 7ff	Special Link Register
W	Z	DD	0 ~ 20	Index Register
W	R	DDDDD	0 ~ 32767	File Register
W	ZR	HHHHHH	0 ~ 3fd7ff	File Register

Note: Each model of CPU is different, it is recommended to refer to MITSUBISHI MELSEC-Q Manual Device List.

Wiring Diagram:

Ethernet cable:



Mitsubishi MR J3/J4 A

Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi MR J3/J4 A		
PLC I/F	RS485 4W	RS232/RS485	
Baud rate	9600	9600~115200	
Parity	Even		
Data bits	8		
Stop bits	1		
PLC sta. no.	0	0~31	

Device Address:

Bit/Word	Device	Format	Range	Memo
B	EIP	DD	0 ~ 31	External input pin status read *3
B	EOP	DD	0 ~ 31	External output pin status read *3
W	PA	DD	1 ~ 32	Basic Setting *4
W	PB	DD	1 ~ 64	Gain / Filter Setting *4
W	PC	DD	1 ~ 80	Extension Setting *4
W	PD	DD	1 ~ 48	Input / Output Setting *4
W	Status	DD	0 ~ 41	Amplifier Status *1
W	Alarm	D	0 ~ 6	Alarm
W	Alarm_T	D	0 ~ 6	Alarm Time (Hour) *2
W	Mode	D	1 ~ 4	Write Only, Mode Setting *2
W	Speed	D	0 ~ 1	Write Only, Set Current Speed *2
W	Acc	D	0 ~ 1	Write Only, Set Acceleration *2
W	Rotation	D	0 ~ 1	Write Only, Rotation Direction *2
W	End	D	0 ~ 1	Write Only, End *2
W	M_dist	D	0 ~ 1	Write Only, Moving Distance *2
W	Rot_P	D	0 ~ 1	Write Only, Rotation Position *2
W	P_start	D	0 ~ 1	Write Only, Start Positioning *2
W	Cur_Alarm	D	0 ~ 1	Current Alarm
W	PE	DD	1 ~ 64	Extension Setting 2 *4
W	PF	DD	1 ~ 48	Extension Setting 3 *4

Note1： Status information

Address	Item
0	Cumulative feedback pulses
1	Servo motor speed
2	Droop pulse
3	Cumulative cmd. Pulses
4	Command pulse frequency
5	Analog speed command voltage
6	Analog torque command voltage
7	Regenerative load ratio
8	Effective load ratio
9	Peak load ratio
10	Instantaneous torque
11	Within one-revolution position
12	ABS conter
13	Load inertia moment ratio
14	Bus voltage
15	Load-side cumulative feedback pulses
16	Load-side droop pulses
17	Load-side encoder information 1
18	Load-side encoder information 2
22	Motor thermistor temperature
23	Motor-side cumu.feedback pulses(before gear)
24	Electrical angle
30	Motor-side / load –side position deviation
31	Motor-side / load –side speed diviation
32	Encoder inside temperature
33	Setting time
34	Oscillation detection frequency
35	Number of tough drive operations
40	Unit power consumption
41	Unit total power consumption


Note2： represents the write-only registers. The usage of this kind of registers is to run Jog Mode and Positioning Mode.

Note3：represents the read-only registers.

Note4：The data in address 1~XX is written to RAM, and the data in address 1001~10XX is written to ROM.

EIP:

The ON/OFF statuses of the input pins are sent back.



Command of each bit is transmitted to the master station as hexadecimal data.

bit	CN1 connector pin
0	43
1	44
2	42
3	15
4	19
5	41
6	16
7	17


bit	CN1 connector pin
8	18
9	45
10	
11	
12	
13	
14	
15	

bit	CN1 connector pin
16	
17	
18	
19	
20	
21	
22	
23	

bit	CN1 connector pin
24	
25	
26	
27	
28	
29	
30	
31	

EOP:

The slave station sends back the ON/OFF statuses of the output pins.



Command of each bit is transmitted to the master station as hexadecimal data.

bit	CN1 connector pin
0	49
1	24
2	23
3	25
4	22
5	48
6	33
7	

bit	CN1 connector pin
8	
9	
10	
11	
12	
13	
14	
15	

bit	CN1 connector pin
16	
17	
18	
19	
20	
21	
22	
23	

bit	CN1 connector pin
24	
25	
26	
27	
28	
29	
30	
31	


How to use EasyBuilder8000/Easy BuilderPro to run Jog and Positioning Mode

*Jog Mode

To run Jog Mode, please follow the steps listed sequentially:

(1) Set Jog Mode
(2) Set rotation speed
(3) Set acceleration
(4) Set forward / reverse rotation direction
(5) End

The following shows how to run the steps above using Macro in EasyBuilder8000/Easy BuilderPro.

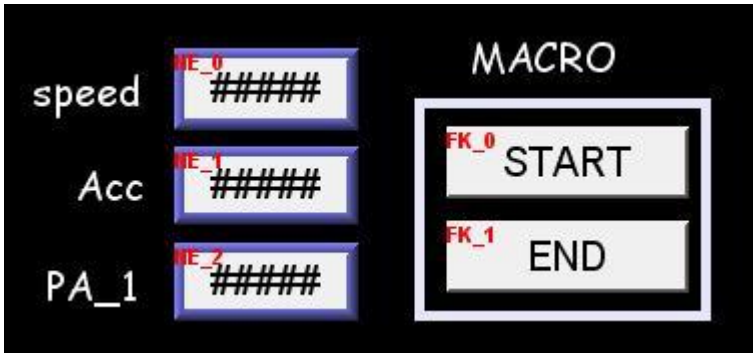

On the editing window of EasyBuilder8000/Easy BuilderPro, the write address of “speed” is set to Local HMI LW0 (the address can be user-defined), and set “Acc” (Acceleration) to LW1.
To run Jog Mode, the communication with the device must be continuous which only allows an interval less than 0.5 seconds, otherwise the motor will be locked. Therefore, in this example, only one register PA_1 is set to read device value.

Macro Demonstration:
a. Start Macro

```
macro_command main()
short speed
short acc
short mode
mode = 1    // This represents Jog Mode.

SetData(mode, "MITSUBISHI MR J3 A", Mode, 1, 1)    // Set driver mode to Jog.

GetData(speed, "Local HMI", LW, 0, 1)    // Save LW0 value to speed.
SetData(speed, "MITSUBISHI MR J3 A", Speed, 0, 1) // Set motor operating speed.
```


GetData(acc, "Local HMI", LW, 1, 1) //
SetData(acc, "MITSUBISHI MR J3 A", Acc, 0, 1) // Set motor acceleration.

short motion
motion = 0x0801 // Special code, see Note 1.

SetData(motion, "MITSUBISHI MR J3 A", Rotation, 0, 1) // Rotate.

end macro_command

Note 1. Original Factory Manual:

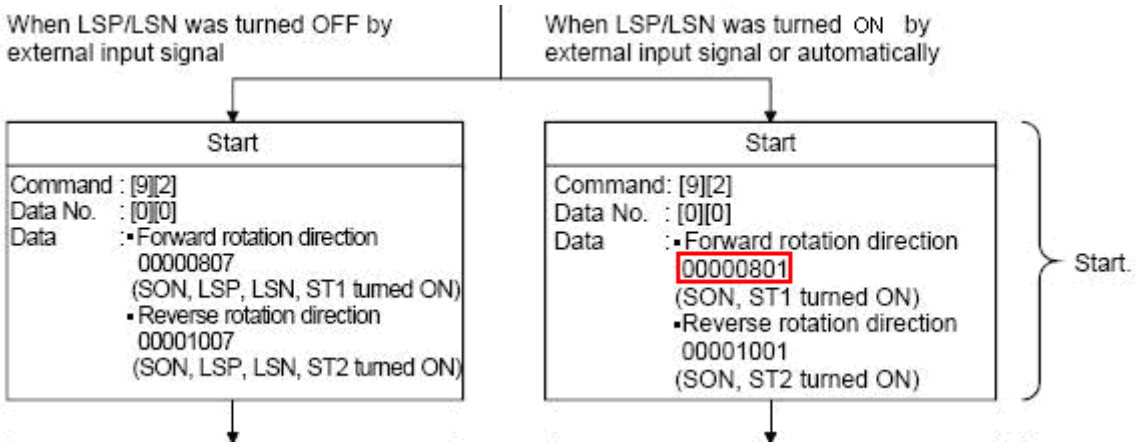


b. End Macro
macro_command main()

short stop
stop = 1 // See Note 2.


SetData(stop, "MITSUBISHI MR J3 A", End, 1, 1)

end macro_command

Note 2. Original Factory Manual:

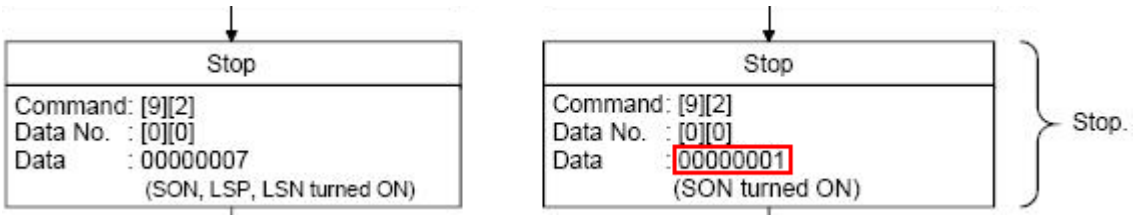

*Positioning Mode

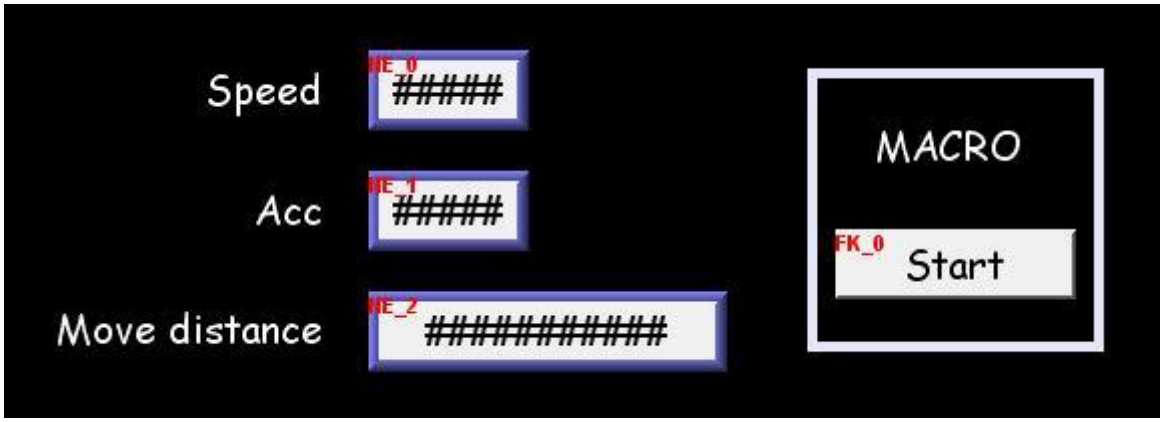

On the editing window of EasyBuilder8000/Easy BuilderPro, the write address of “Speed” is set to Local HMI LW2 (the address can be user-defined), and set “Acc” (Acceleration) to LW3, “Move distance” to LW4 (DW format).

Macro Demonstration:

```
macro_command main()

short mode
mode = 0x2    // Positioning Mode
SetData(mode, "MITSUBISHI MR J3 A", Mode, 1, 1)

short speed
GetData(speed, "Local HMI", LW, 2, 1)
SetData(speed, "MITSUBISHI MR J3 A", Speed, 0, 1)

short acc
GetData(acc, "Local HMI", LW, 3, 1)
SetData(acc, "MITSUBISHI MR J3 A", Acc, 0, 1)

short dist
GetData(dist, "Local HMI", LW, 4, 1)
SetData(dist, "MITSUBISHI MR J3 A", M_dist, 0, 1)

short rot_P
rot_P = 1             // Set to    0: Forward Rotation    1: Reverse Rotation
SetData(rot_P, "MITSUBISHI MR J3 A", Rot_P, 0, 1)


short rotat
rotat = 1     // See Note 3.
```

SetData(rotat, "MITSUBISHI MR J3 A", Rotation, 0, 1)

SetData(rot_P, "MITSUBISHI MR J3 A", P_start, 0, 1) // Start Positioning.

end macro_command

Note 3. Original Factory Manual

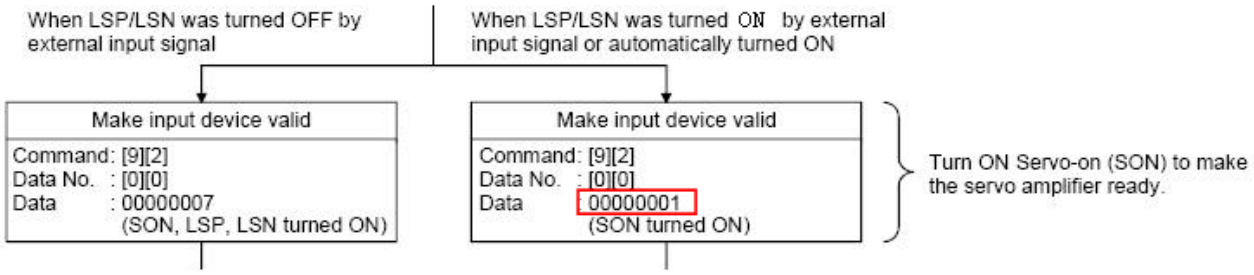

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		CN3 RS485 4W RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	5
Tx-	3	⟷	6
TX+	4	⟷	3
GND	5	⟷	7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		CN3 RS485 4W RJ45 Male
Rx-	7	⟷	4
Rx+	6	⟷	5
Tx-	9	⟷	6
TX+	8	⟷	3
GND	5	⟷	7

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		CN3 RS485 4W RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	5
Tx-	3	⟷	6
TX+	4	⟷	3
GND	5	⟷	7

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		CN3 RS485 4W RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	5
Tx-	3	⟷	6
TX+	4	⟷	3
GND	5	⟷	7


Mitsubishi MR-MQ100 (Ethernet)

Supported Series: Mitsubishi MR-MQ100-Ethernet
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi MR-MQ100 (Ethernet)		
PLC I/F	Ethernet		
Port no.	Set identically to the PLC setting		Adviced to set port no. to 4999
Parameter1	1		Network No.
PLC sta. no.	255		

PLC Setting:

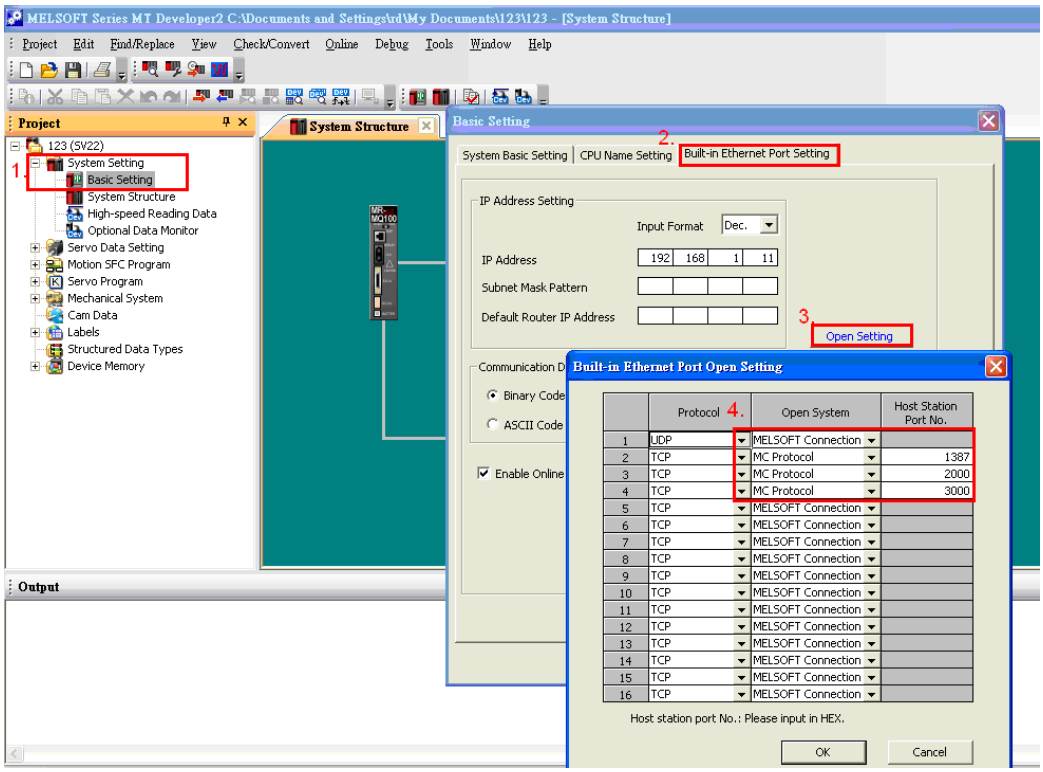

1. Click [Basic Setting].
2. [Built-in Ethernet Port Setting].
3. Click [Open Setting] and then set the IP address and communication data code.
4. Set the MC Protocol-TCP Port No. (Hex)


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SM	DDDD	0 ~ 2255	Special Relay
B	X	HHHH	0 ~ 1fff	Input
B	Y	HHHH	0 ~ 1fff	Output
B	M	DDDDD	0 ~ 61439	Internal Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	B	HHHH	0 ~ efff	Link Relay
B	D_Bit	DDDDDDDh	0 ~ 4184063f	
W	SD	DDDD	0 ~ 2255	Special Register
W	D	DDDDDDD	0 ~ 4184063	Data Register
W	W	HHHHHH	0 ~ 3fd7ff	Link Register
W	#	DDDDD	0 ~ 12287	Motion Register

Note: ddd: Decimal, hhh: Hexadecimal, ooo: Octal.

Wiring Diagram:

Ethernet cable:

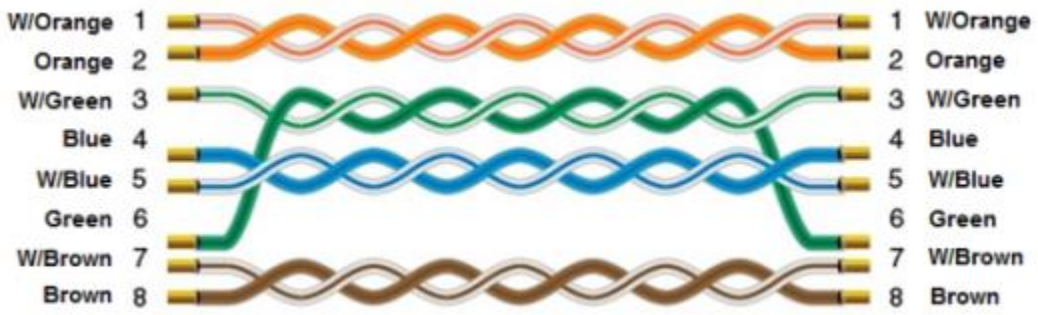

Mitsubishi Q00/Q00UJ/Q01/QJ71

Supported Series: Mitsubishi Q series PLC with QJ71C24 communication module, Q00, Q00J, Q00UJ, Q01, Q02H, Q06H, Q12H, Q25H, Q12PH, Q25PH CPU port.
Website: http://www.mitsubishi-automation.com


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi Q00/Q00UJ/Q01/QJ71		
PLC I/F	RS232	RS485 2W/4W, RS232	
Baud rate	9600	9600~115200	
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		


Online simulator	Yes	**Extend address mode**	NO

PLC Setting:


Q00, Q01 CPU port setting:

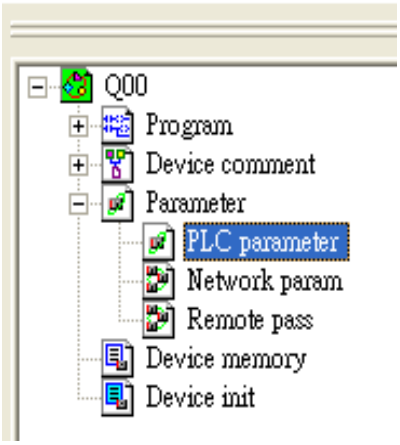



1. In GX Developer “PLC data list” click [PLC parameter].
2. In “PLC parameter” go to [Serial] page.
3. Select [Use serial communication].
4. Set [Transmission speed] to 9600~115200.
5. Select [Sum check].
6. Set [Transmission wait time] to 10ms.
7. Permit [RUN write setting].
8. Click [End] to close the dialog.
9. Write the PLC Parameter to PLC.
10. Reset PLC, the parameter will be actived.

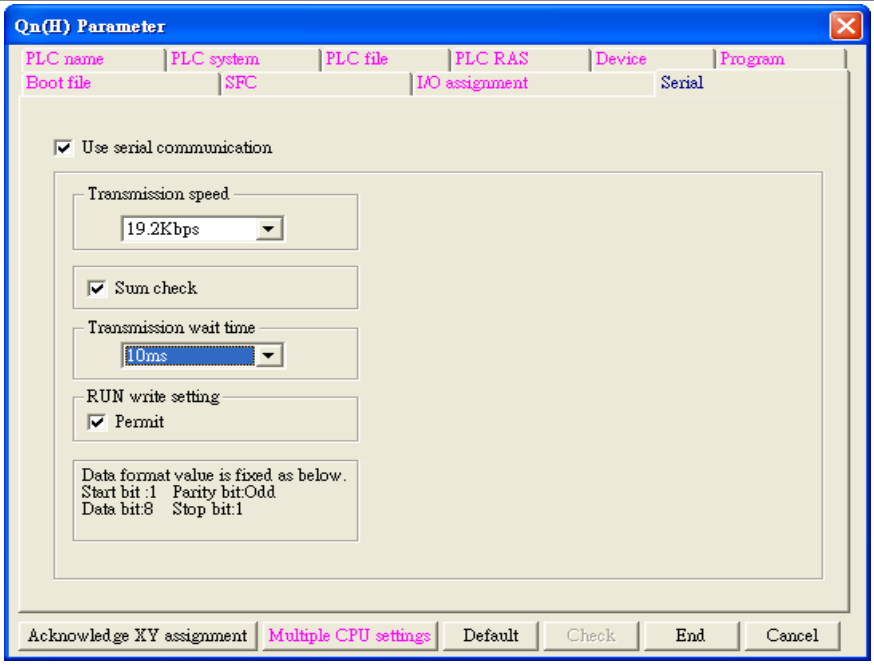

QJ71 setting:

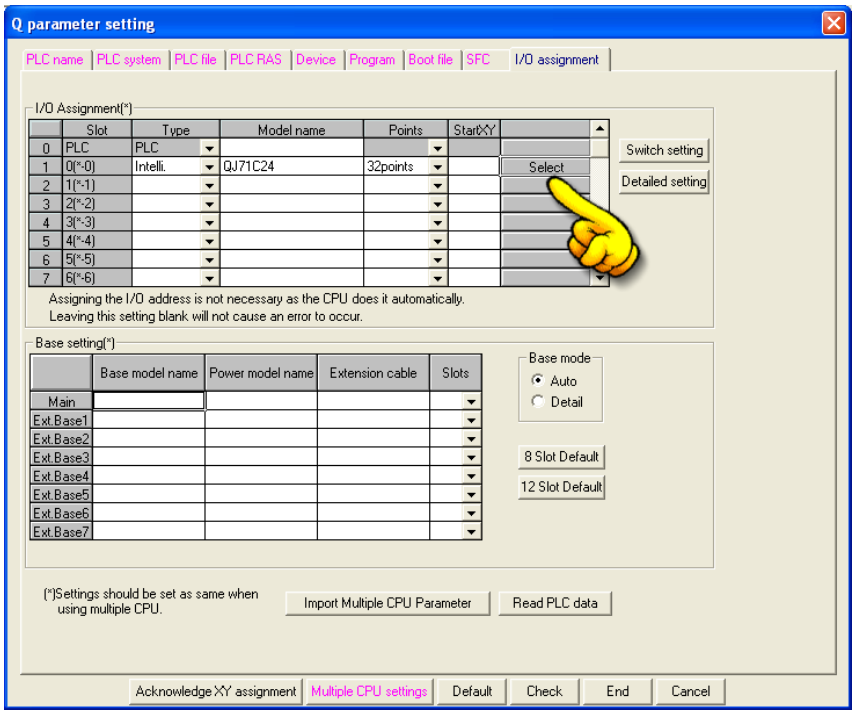

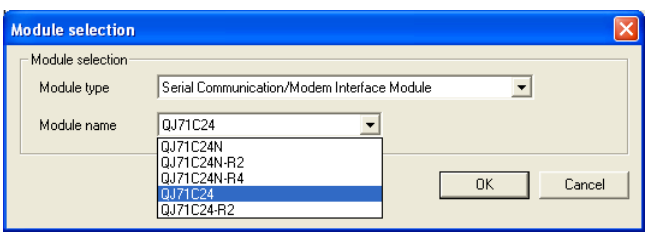

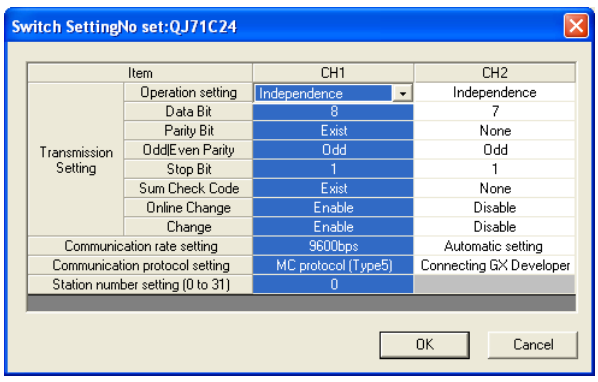

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ 1fff	Input Relay
B	Y	HHHH	0 ~ 1fff	Output Relay
B	M	DDDDD	0 ~ 61439	Internal Relay
B	L	DDDD	0 ~ 8191	Latch Relay
B	F	DDDD	0 ~ 2047	Annunciator
B	V	DDDD	0 ~ 2047	Edge Relay
B	B	HHHH	0 ~ efff	Link Relay
B	TC	DDDD	0 ~ 2047	Timer Coil
B	SS	DDDD	0 ~ 2047	Retentive Timer Contact
B	SC	DDDD	0 ~ 2047	Retentive Timer Coil
B	CS	DDDD	0 ~ 1023	Counter Contact
B	CC	DDDD	0 ~ 1023	Counter Coil
B	SB	HHH	0 ~ 7ff	Special Link Relay
B	S	DDDD	0 ~ 8191	Step Relay
B	DX	HHHH	0 ~ 1fff	Direct Input
B	DY	HHHH	0 ~ 1fff	Direct Output
B	TS	DDDD	0 ~ 2047	Timer Contact
B	SM	DDDD	0 ~ 2047	
B	D_Bit	DDDDDDDh	0 ~ 4212735f	
B	W_Bit	HHHHh	0 ~ 2ffff	
B	ZR_Bit	HHHHHh	0 ~ fe7fff	
B	ZR_Dec_Bit	DDDDDDDh	0 ~ 1042431f	
W	W	HHHH	0 ~ 2fff	Link Register
W	TN	DDDD	0 ~ 2047	Timer Current Value
W	SN	DDDD	0 ~ 2047	Retentive Timer Current Value
W	CN	DDDD	0 ~ 1023	Counter Current Value
W	R	FFDDDDD	0 ~ 3132767	File Register (FF:File No. 0~31) (DDDDD:0~32767)
W	SW	HHH	0 ~ 7ff	Special Link Register
W	Z	DD	0 ~ 15	Index Register
W	ZR	HHHHH	0 ~ fe7a5	File Register
W	ZR_decimal_addr	DDDDDDD	0 ~ 1042341	
W	D	DDDDDDD	0 ~ 4212735	Data Register
W	SD	DDDD	0 ~ 2047	

Wiring Diagram:

QJ71C24 CH.2 RS422 Terminal (Diagram 1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		QJ71C24 CH.2 RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		QJ71C24 CH.2 RS422 Terminal
Rx-	7	⟷	SDB
Rx+	6	⟷	SDA
Tx-	9	⟷	RDB
TX+	8	⟷	RDA
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		QJ71C24 CH.2 RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		QJ71C24 CH.2 RS422 Terminal
Rx-	1	⟷	SDB
Rx+	2	⟷	SDA
Tx-	3	⟷	RDB
TX+	4	⟷	RDA
GND	5	⟷	GND

QJ71C24 CH.2 RS232 (Diagram 5 ~ Diagram 7)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

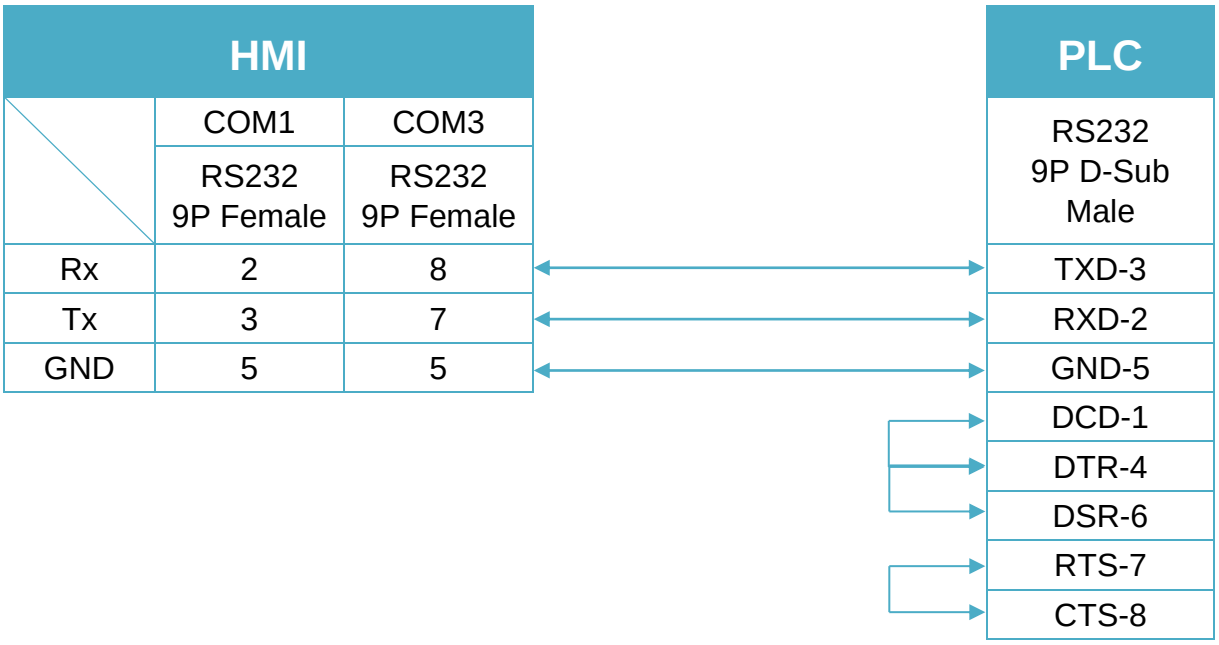


Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


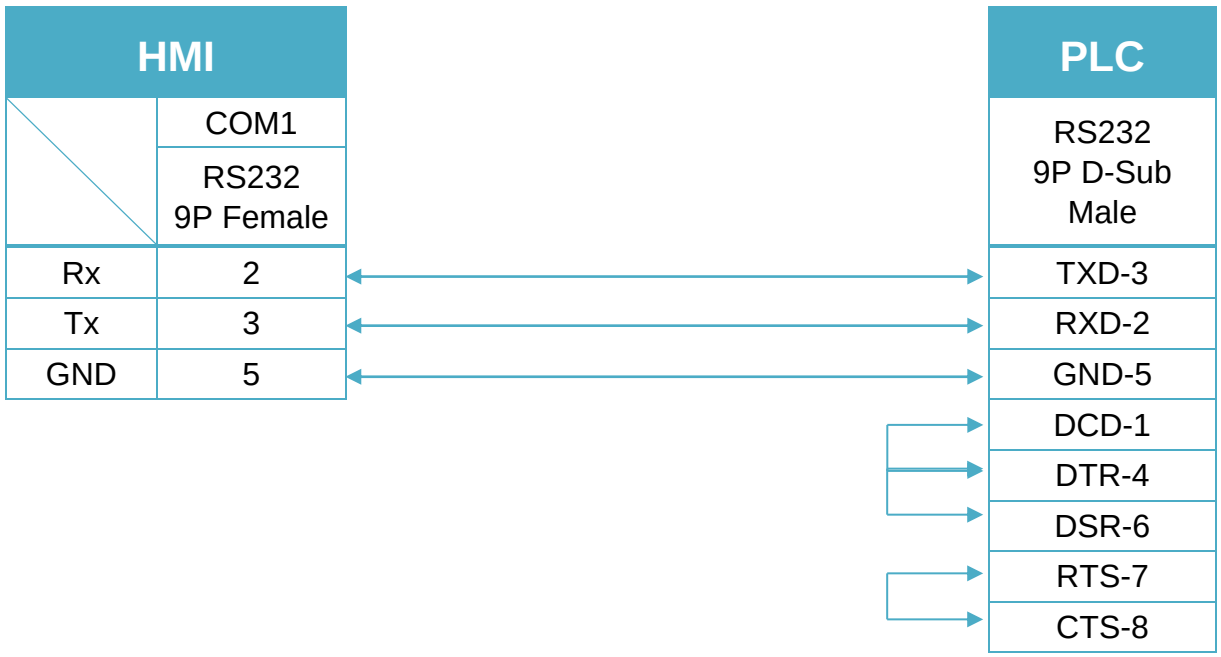


Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

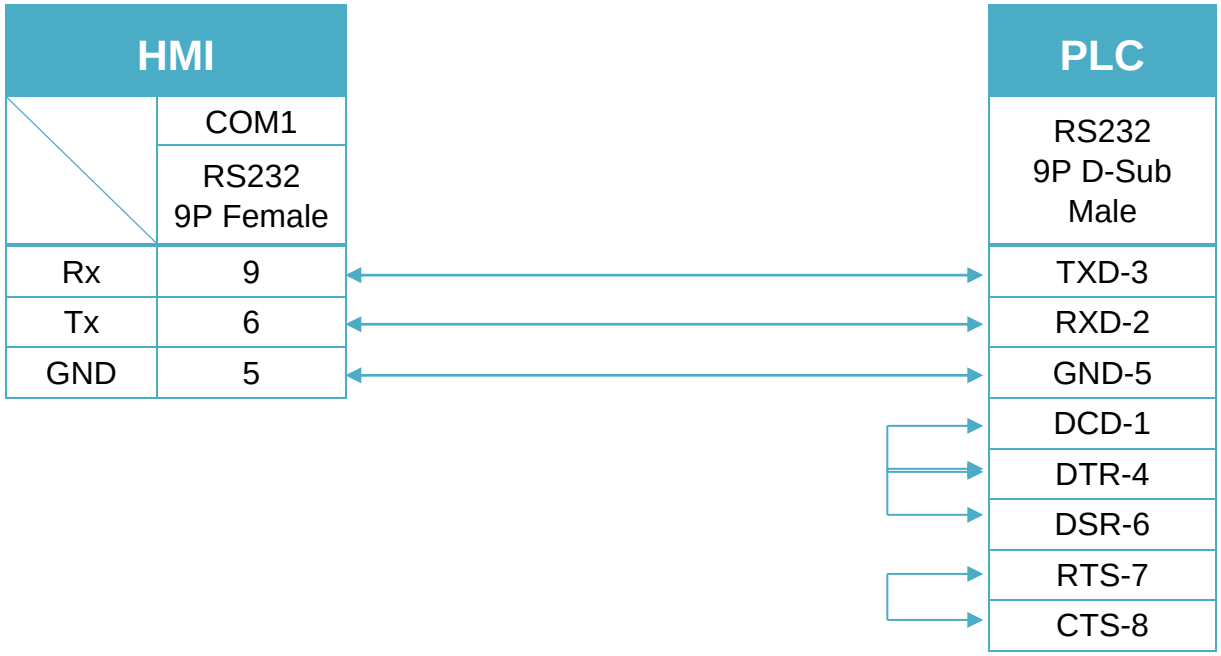

6P Mini-DIN: Q00, Q01 CPU port RS232 (Diagram 8 ~ Diagram 10)

The following is the view from the soldering point of a connector.



Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P Mini-Din Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	5

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	2	⟷	3
Tx	3	⟷	4
GND	5	⟷	5

Diagram 10

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	9	⟷	3
Tx	6	⟷	4
GND	5	⟷	5

6P Mini-DIN: Q00UJ CPU port RS232 (Diagram 11 ~ Diagram 13)

The following is the view from the soldering point of a connector.



Diagram 11

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	5
			⟷	1
			⟷	6

Diagram 12

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


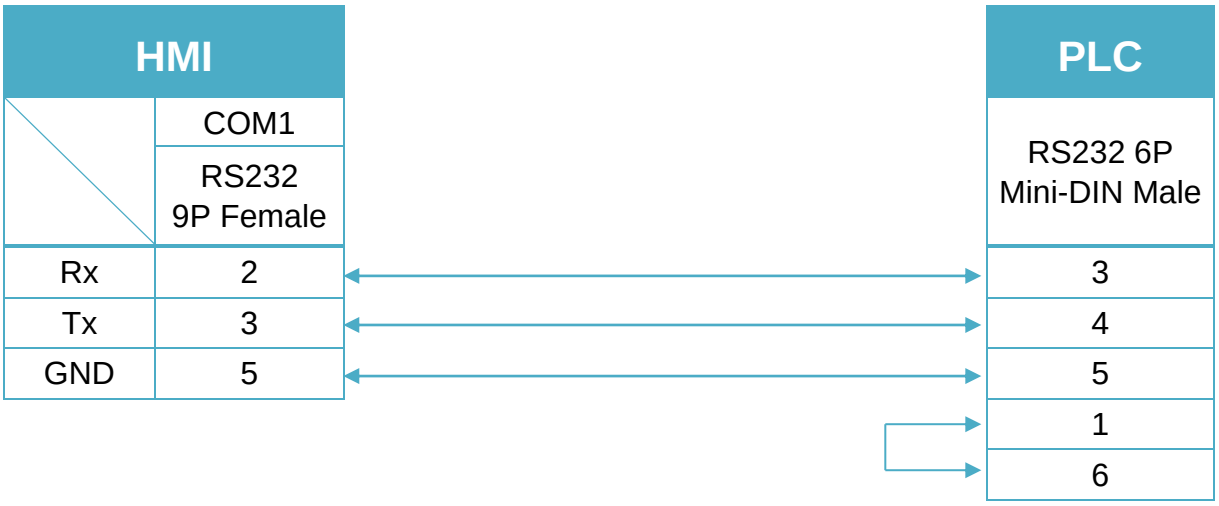


Diagram 13

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

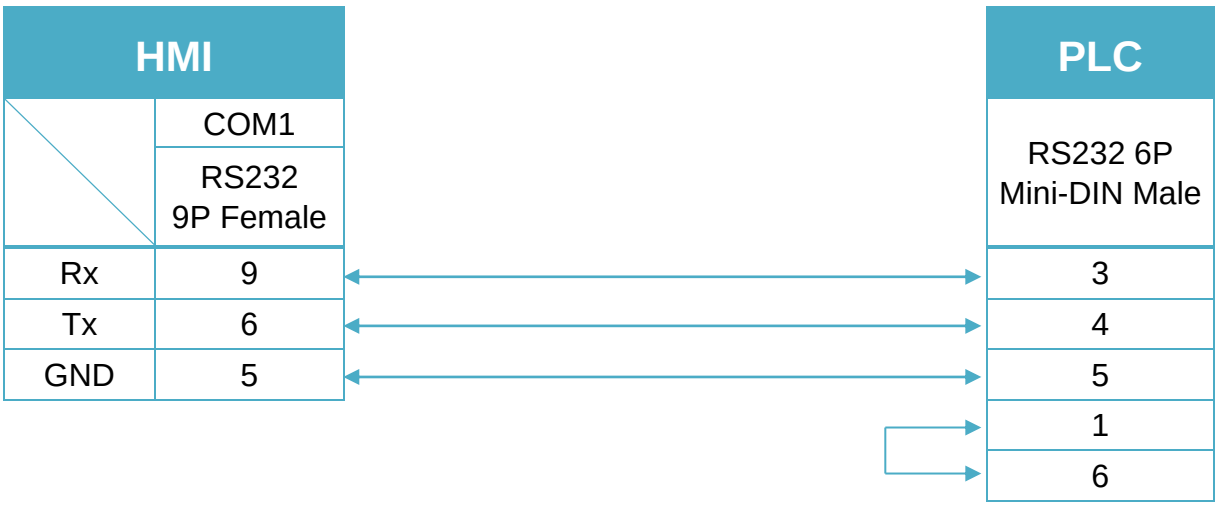

Mitsubishi Q00J

Supported Series: Mitsubishi Q00J CPU

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi Q00J		
PLC I/F	RS232		CPU port
Baud rate	115200	9600,19200,38400, 57600,115200	
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.			

Online simulator	NO	Extend address mode	NO

*Support communications between HMI and PLC in pass-through mode

*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device	Format	Range	Memo
B	SM	DDDD	0 ~ 1023	
B	X	HHH	0 ~ 7ff	
B	Y	HHH	0 ~ 7ff	
B	M	DDDDD	0 ~ 61439	
B	L	DDDD	0 ~ 2047	
B	F	DDDD	0 ~ 1023	
B	V	DDDD	0 ~ 1023	
B	B	HHH	0 ~ 7ff	
B	SB	HHH	0 ~ 3ff	
B	D_Bit	DDDDDDDh	0 ~ 4212735f	
W	SD	DDDD	0 ~ 1023	
W	D	DDDDDDD	0 ~ 4212735	
W	W	HHH	0 ~ 7ff	
W	SW	HHH	0 ~ 3ff	

Bit/Word	Device	Format	Range	Memo
W	Z	D	0 ~ 9	
W	C	DDD	0 ~ 511	
W	T	DDD	0 ~ 511	

Wiring Diagram:

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P Mini-Din Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	2	⟷	3
Tx	3	⟷	4
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	9	⟷	3
Tx	6	⟷	4
GND	5	⟷	5

MT8-Mitsubishi-Q-3M cable can connect HMI with Mitsubishi Q series directly.

Mitsubishi Q00U/Q01U/Q02U/QnUD/QnUDH

Supported Series: Mitsubishi Q00U, Q01U, Q02U, Q03UD, Q04UDH, Q06UDH, Q10UDH, Q13UDH, Q20UDH, Q26UDH, Q00UJ CPU.


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi Q00U/Q01U/Q02U/QnUD/QnUDH		
PLC I/F	RS232	RS485 4W, RS232	CPU port direct connect
Baud rate	115200	9600~115200	For Q00UJ, only 9600 is available
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	No		

Online simulator	NO	**Extend address mode**	NO

PLC Setting:

Please **do not** select **[Use Serial Communication]**. If this is selected the communication method will be the same as QJ71, please refer to Mitsubishi Q00/Q00UJ/Q01/QJ71 driver.

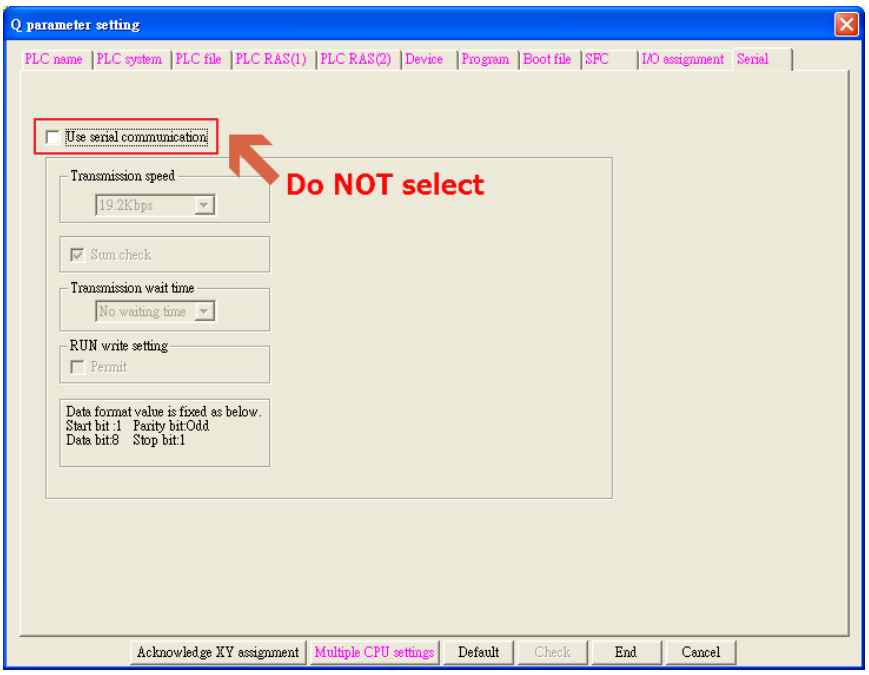

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SM	DDDD	0 ~ 2047	
B	X	HHHH	0 ~ 1fff	Input Relay
B	Y	HHHH	0 ~ 1fff	Output Relay
B	M	DDDDD	0 ~ 61439	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	V	DDDDD	0 ~ 32767	Edge Relay
B	B	HHHH	0 ~ efff	Link Relay
B	SB	HHHH	0 ~ 7fff	Special Link Relay
B	TC	DDDDD	0 ~ 2047	Timer Coil
B	CC	DDDDD	0 ~ 1023	Counter Coil
B	D_Bit	DDDDDDDh	0 ~ 4212735f	
B	W_Bit	HHHHHHh	0 ~ 4047fff	
B	ZR_Bit	HHHHHh	0 ~ fe7fff	
B	ZR_Dec_Bit	DDDDDDDh	0 ~ 1042431f	
W	SD	DDDD	0 ~ 2047	
W	D	DDDDDDD	0 ~ 4212735	Data Register
W	W	HHHHHH	0 ~ 4047ff	Link Register
W	SW	HHHH	0 ~ 6dff	Special Link Register
W	Z	DD	0 ~ 19	Index Register
W	R	FFDDDDD	0 ~ 3132767	File Register (FF:File No. 0~31) (DDDDD:0~32767)
W	ZR	HHHHHH	0 ~ fe7ff	File Register
W	ZR_decimal_addr	DDDDDDD	0 ~ 1042341	
W	C	DDDDD	0 ~ 25471	Counter Current Value
W	T	DDDDD	0 ~ 25471	Timer Current Value

Note:

EasyBuilder doesn’t support MITSUBISHI Q02U CPU to do on-line simulation on PC. When using Q02U driver, HMI needs 10 seconds to initiate PLC Q02U driver. Before the completion of initiation, it is recommended not to write data to PLC, this could cause “PLC no response”； Incorrect wiring or data could cause PLC to be locked. If PLC is locked, please restart PLC or reinstall PLC module.

Wiring Diagram:

6P Mini-DIN: Q02 CPU port RS232 (Diagram 1 ~ Diagram 3)

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	5
			⟷	1
			⟷	6

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


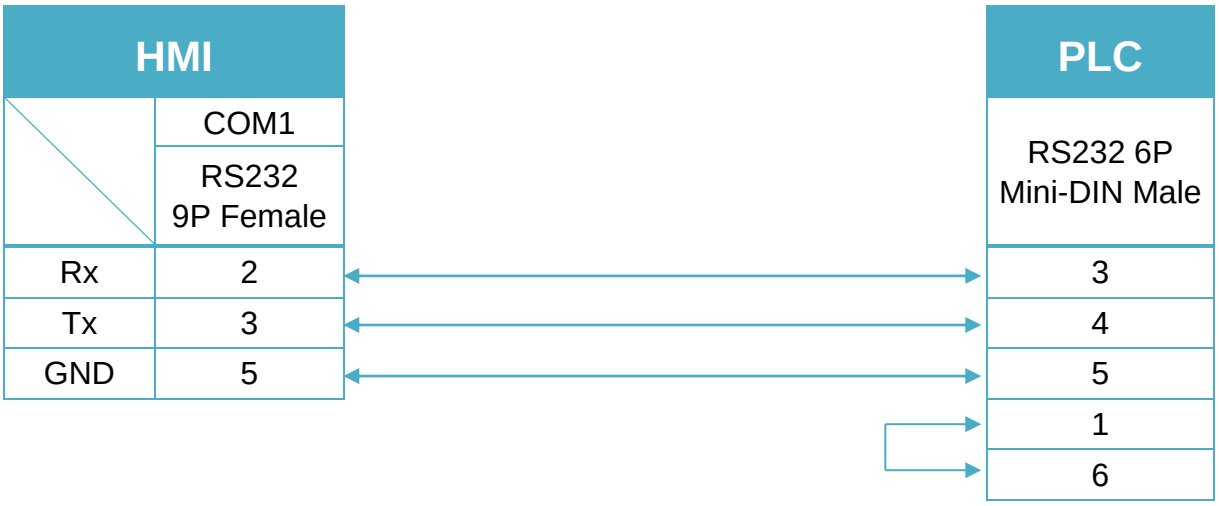


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

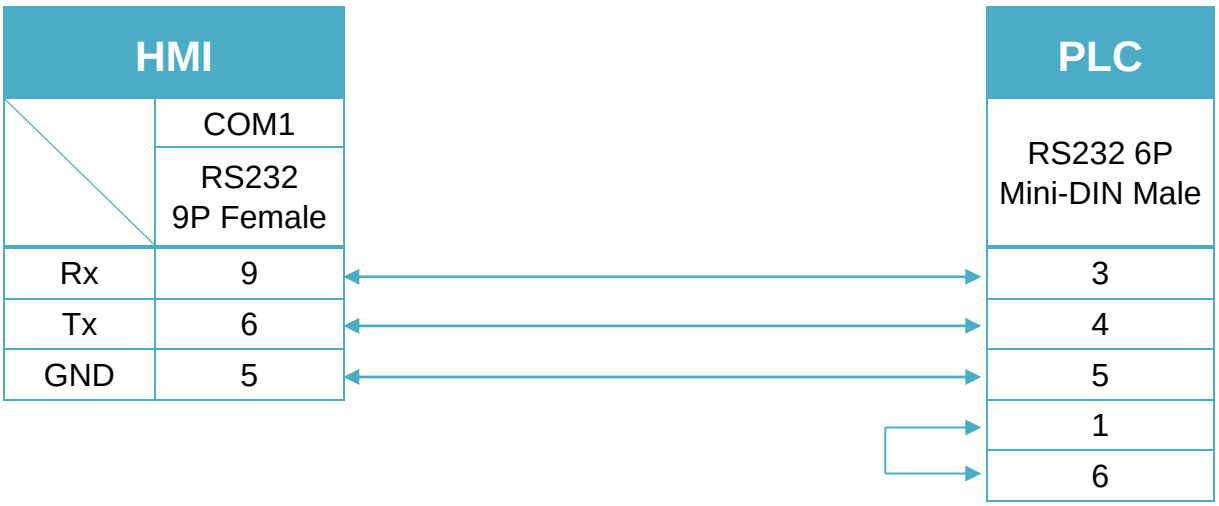

Mitsubishi Q00UJ/QnU/QnUD/QnUDH/QnUDEH/L (mini USB)

Supported Series: Mitsubishi Q00UJ, Q00U, Q01U, Q02U, Q03UDE, Q03UD, Q04UDEH, Q04UDH, Q06UDEH, Q06UDH, Q10UDEH, Q10UDH, Q13UDEH, Q13UDH, Q20UDEH, Q20UDH, Q26UDEH, Q26UDH, L02, L26-BT USB Port.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi Q00UJ/QnU/QnUD/QnUDH/QnUDEH/L (mini USB)		
PLC I/F	USB		CPU port direct connect

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SM	DDDD	0 ~ 2047	
B	X	HHHH	0 ~ 1fff	Input Relay
B	Y	HHHH	0 ~ 1fff	Output Relay
B	M	DDDDD	0 ~ 61439	Internal Relay
B	L	DDDD	0 ~ 8191	Latch Relay
B	F	DDDD	0 ~ 2047	Annunciator
B	V	DDDD	0 ~ 2047	Edge Relay
B	B	HHHH	0 ~ 1fff	Link Relay
B	SB	HHH	0 ~ 7ff	Special Link Relay
B	D_Bit	DDDDDDDh	0 ~ 4212735f	
B	ZR_Bit	HHHHh	0 ~ fffff	
B	ZR_Dec_Bit	DDDDDh	0 ~ 65535f	
W	SD	DDDD	0 ~ 2047	
W	D	DDDDDDD	0 ~ 4212735	Data Register
W	W	HHHH	0 ~ 1fff	Link Register
W	SW	HHH	0 ~ 7ff	Special Link Register
W	Z	DD	0 ~ 19	Index Register
W	R	FFDDDDD	0 ~ 132767	File Register (FF:File No. 0~31) (DDDDD:0~32767)
W	ZR	HHHH	0 ~ ffff	File Register
W	ZR_decimal_addr	DDDDD	0 ~ 65535	

Bit/Word	Device type	Format	Range	Memo
W	C	DDDD	0 ~ 1023	Counter Current Value
W	T	DDDD	0 ~ 2047	Timer Current Value

Note:

EasyBuilder doesn't support MITSUBISHI Q02U CPU to do on-line simulation on PC. When using Q02U driver, HMI needs 10 seconds to initiate PLC Q02U driver. Before the completion of initiation, it is recommended not to write data to PLC, this could cause "PLC no response"； Incorrect wiring or data could cause PLC to be locked. If PLC is locked, please restart PLC or reinstall PLC module.

Mitsubishi Q02/02H

Supported Series; Mitsubishi Q02/Q02H CPU port.
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi Q02/02H		
PLC I/F	RS232	RS485 4W, RS232	
Baud rate	115200	115200 only	
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ 1fff	Input Relay
B	Y	HHHH	0 ~ 1fff	Output Relay
B	M	DDDDD	0 ~ 61439	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	V	DDDDD	0 ~ 32767	Edge Relay
B	B	HHHH	0 ~ 7fff	Link Relay
B	TC	DDDDD	0 ~ 23087	Timer Coil
B	SS	DDDDD	0 ~ 23087	Retentive Timer Contact
B	SC	DDDDD	0 ~ 23087	Retentive Timer Coil
B	CS	DDDDD	0 ~ 23087	Counter Contact
B	CC	DDDDD	0 ~ 23087	Counter Coil
B	SB	HHH	0 ~ 7ff	Special Link Relay

Bit/Word	Device type	Format	Range	Memo
B	S	DDDD	0 ~ 8191	Step Relay
B	DX	HHHH	0 ~ 1fff	Direct Input
B	DY	HHHH	0 ~ 1fff	Direct Output
B	TS	DDDD	0 ~ 2047	Timer Contact
B	D_Bit	DDDDDDDh	0 ~ 4212735f	
B	ZR_Bit	HHHHHh	0 ~ fe7fff	
B	ZR_Dec_Bit	DDDDDDDh	0 ~ 1042431f	
W	W	HHHH	0 ~ 657f	Link Register
W	TN	DDDDD	0 ~ 23087	Timer Current Value
W	SN	DDDDD	0 ~ 23087	Retentive Timer Current Value
W	CN	DDDDD	0 ~ 23087	Counter Current Value
W	R	FFDDDDD	0 ~ 3132767	File Register (FF:File No.
W	SW	HHH	0 ~ 7ff	Special Link Register
W	Z	DD	0 ~ 15	Index Register
W	ZR	HHHHH	0 ~ fe7ff	File Register
W	ZR_decimal_addr	DDDDDDD	0 ~ 1042431	
W	D	DDDDDDD	0 ~ 4212735	Data Register

Wiring Diagram:

6P Mini-DIN: Q02 CPU port RS232 (Diagram 1 ~ Diagram 3)

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	5
				1
				6

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI		PLC
	COM1 RS232 9P Female	RS232 6P Mini-DIN Male
Rx	2	3
Tx	3	4
GND	5	5
		1
		6

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 6P Mini-DIN Male
Rx	9	3
Tx	6	4
GND	5	5
		1
		6

Mitsubishi Q06H

Supported Series: Mitsubishi Q06H CPU port.
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi Q06H		
PLC I/F	RS232	RS485 4W, RS232	
Baud rate	115200	115200 only	
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	0		

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHH	0 ~ 1fff	Input Relay
B	Y	HHHH	0 ~ 1fff	Output Relay
B	M	DDDDD	0 ~ 61439	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	V	DDDDD	0 ~ 32767	Edge Relay
B	B	HHHH	0 ~ 7fff	Link Relay
B	TC	DDDDD	0 ~ 23087	Timer Coil
B	SS	DDDDD	0 ~ 23087	Retentive Timer
B	SC	DDDDD	0 ~ 23087	Retentive Timer Coil
B	CS	DDDDD	0 ~ 23087	Counter Contact
B	CC	DDDDD	0 ~ 23087	Counter Coil
B	SB	HHH	0 ~ 7ff	Special Link Relay

Bit/Word	Device type	Format	Range	Memo
B	S	DDDD	0 ~ 8191	Step Relay
B	DX	HHHH	0 ~ 1fff	Direct Input
B	DY	HHHH	0 ~ 1fff	Direct Output
B	TS	DDDD	0 ~ 2047	Timer Contact
B	D_Bit	DDDDDDDh	0 ~ 4212735f	
B	ZR_Bit	HHHHHh	0 ~ fe7fff	
B	ZR_Dec_Bit	DDDDDDDh	0 ~ 1042431f	
W	W	HHHH	0 ~ 657f	Link Register
W	TN	DDDDD	0 ~ 23087	Timer Current Value
W	SN	DDDDD	0 ~ 23087	Retentive Timer
W	CN	DDDDD	0 ~ 23087	Counter Current
W	R	FFDDDDD	0 ~ 3132767	File Register (FF:File No.
W	SW	HHH	0 ~ 7ff	Special Link Register
W	Z	DD	0 ~ 15	Index Register
W	ZR	HHHHH	0 ~ fe7ff	File Register
W	ZR_decimal_addr	DDDDDDD	0 ~ 1042431	
W	D	DDDDD	0 ~ 25983	Data Register

Wiring Diagram:

6P Mini-DIN: Q02 CPU port RS232 (Diagram 1 ~ Diagram 3)

The following is the view from the soldering point of a connector.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	4
GND	5	5	⟷	5
				1
				6

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


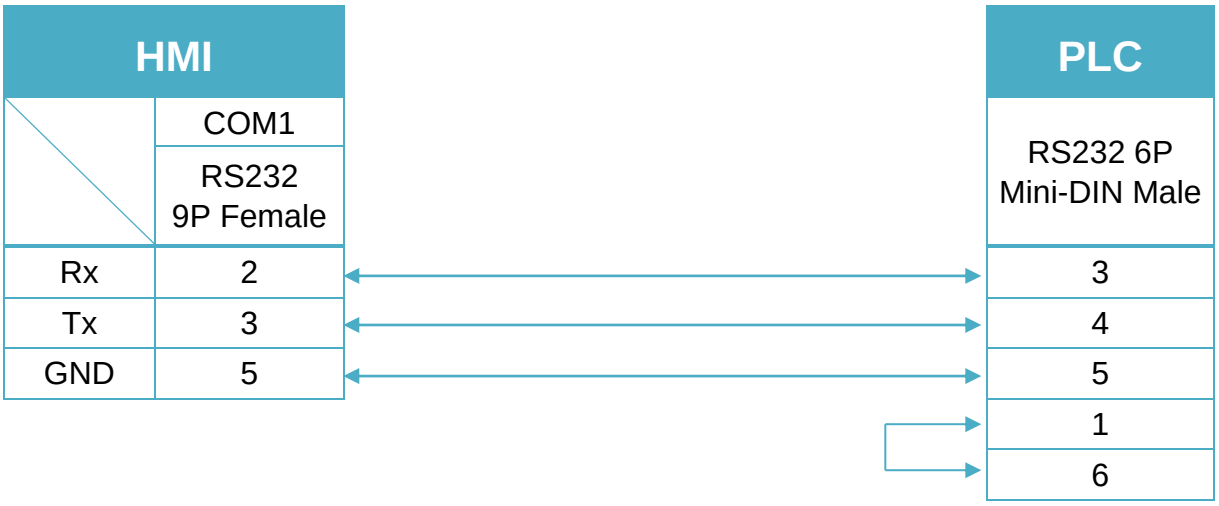


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

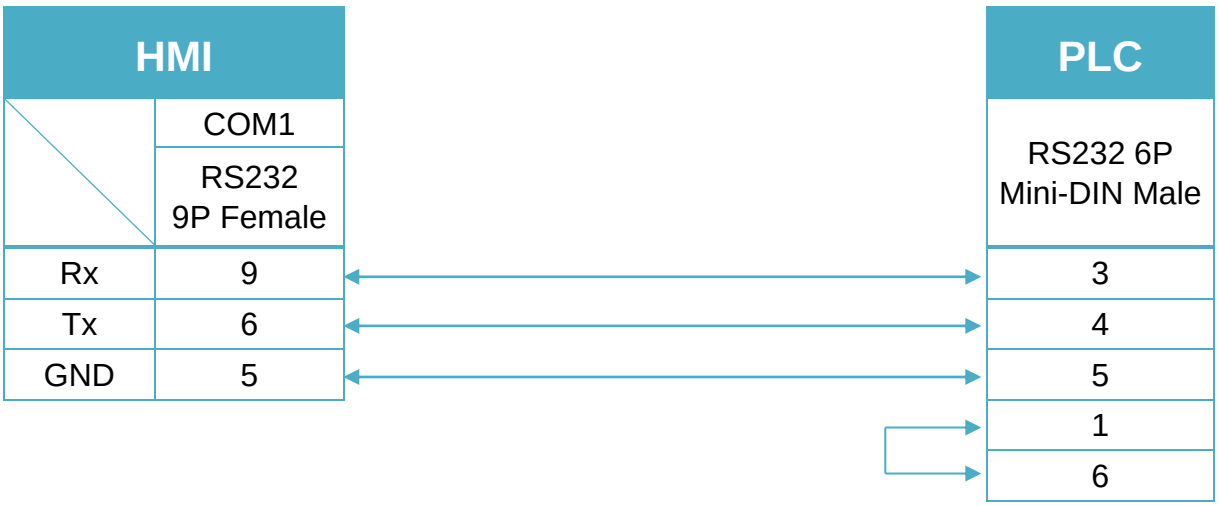

Mitsubishi QJ71E71 (Ethernet)

Supported Series ; Mitsubishi Q type, MELSEC-Q series PLC (Q00J, Q00, Q01, Q02, Q02H, Q06H, Q12H, Q25H, Q12PH, Q25PH) QJ71E71-100 Ethernet module.
Website: http://www.mitsubishi-automation.com


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi QJ71E71 (Ethernet)		
PLC I/F	Ethernet		
Port no.	5002		
PLC sta. no.	2	1~99	
Network	1	1~999	


PLC Setting:

QJ71E71-100 Ethernet module settings:

1. Use USB or RS232 of Q-CPU for setting PLC parameters.

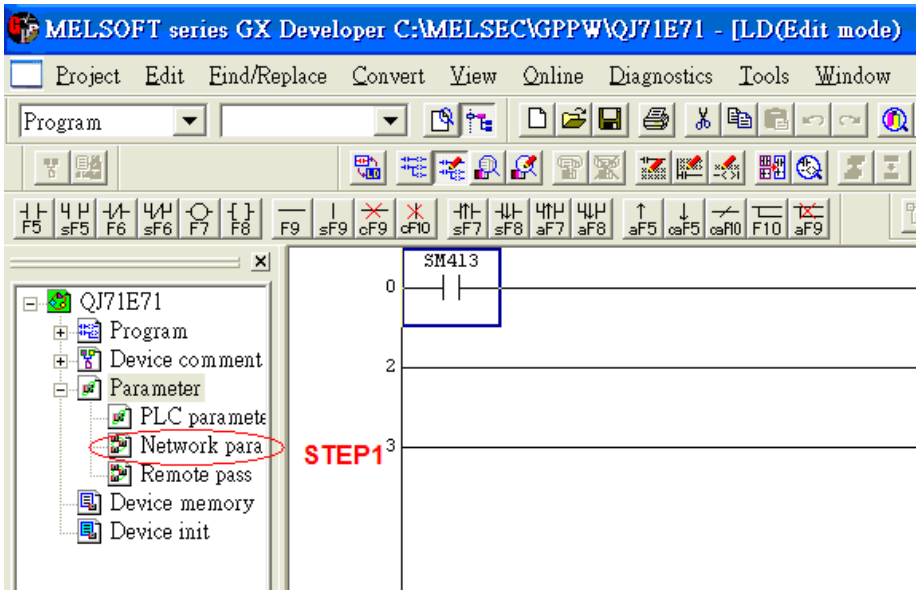


2. Click [Operational settings] to set IP information.

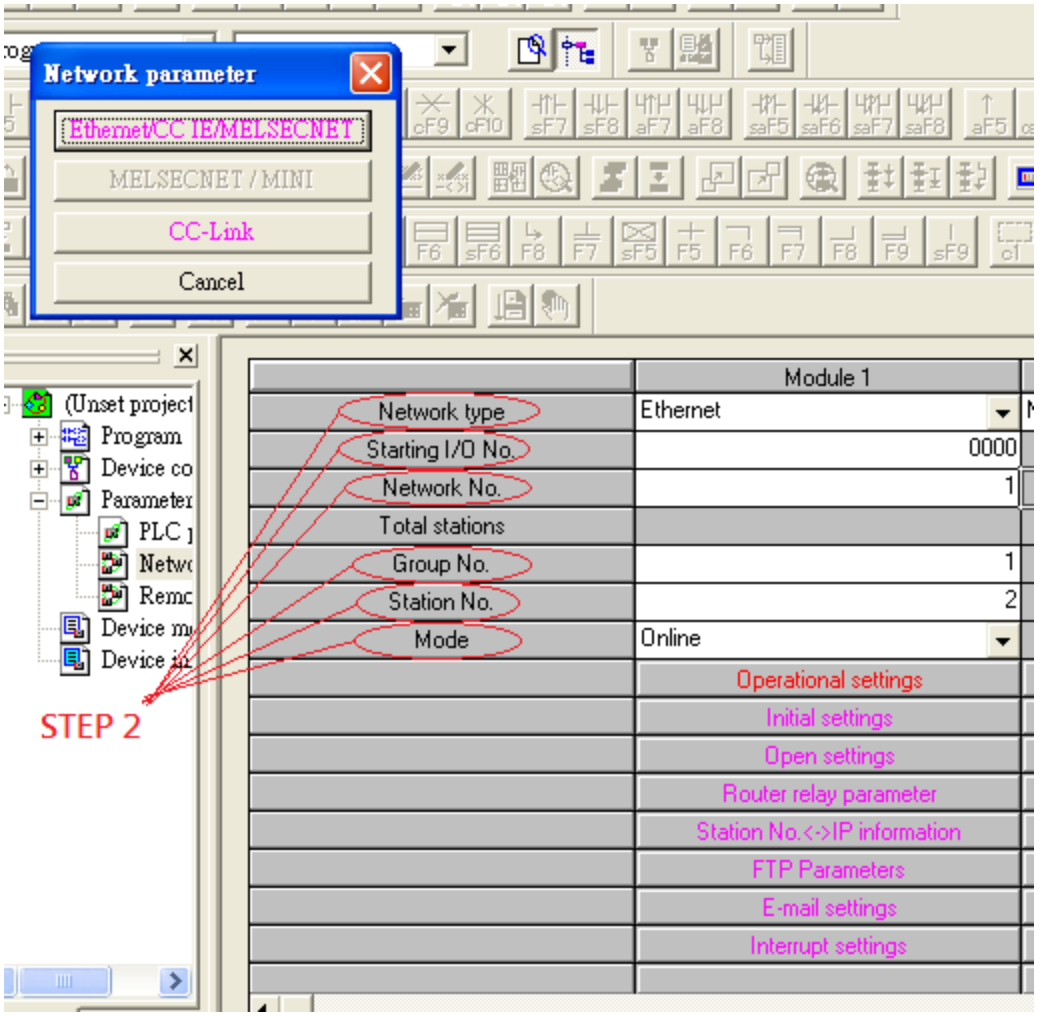

	Module 1
Network type	Ethernet
Starting I/O No.	0000
Network No.	1
Total stations	
Group No.	1
Station No.	2
Mode	Online
	Operational settings
	Initial settings
	Open settings
	Router relay parameter
	Station No.<->IP information
	FTP Parameters
	E-mail settings
	Interrupt settings

3. Select Ethernet (2.0) for communicating with HMI.

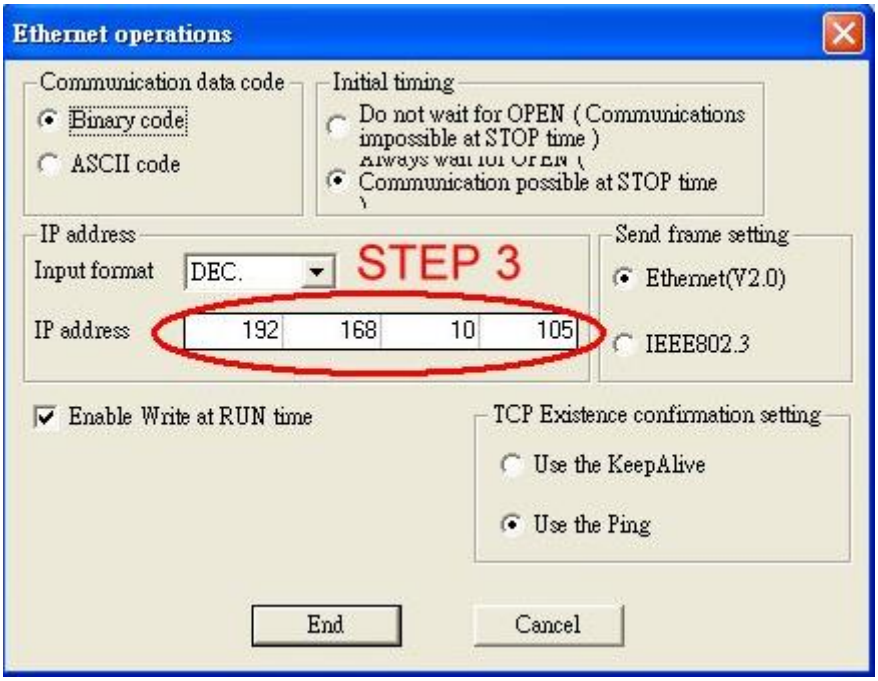


4. Click [Open settings] to set the system.


	Module 1
Network type	Ethernet
Starting I/O No.	0000
Network No.	1
Total stations	
Group No.	1
Station No.	2
Mode	Online
	Operational settings
	Initial settings
STEP 4	Open settings
	Router relay parameter
	Station No.<->IP information
	FTP Parameters
	E-mail settings
	Interrupt settings

	Protocol	Open system	Fixed buffer	Fixed buffer communication procedure	Pairing open	Existence confirmation	Host station Port No.	Transmission target device IP address	Transmission target device Port No.
1	TCP	MELSOFT connection							
2	TCP	MELSOFT connection							
3	TCP	MELSOFT connection							
4	TCP	MELSOFT connection							
5									
6									
7									
8									
9									
10									
11									
12									
13									
14									
15									
16									


5. Press [END] to finish settings.

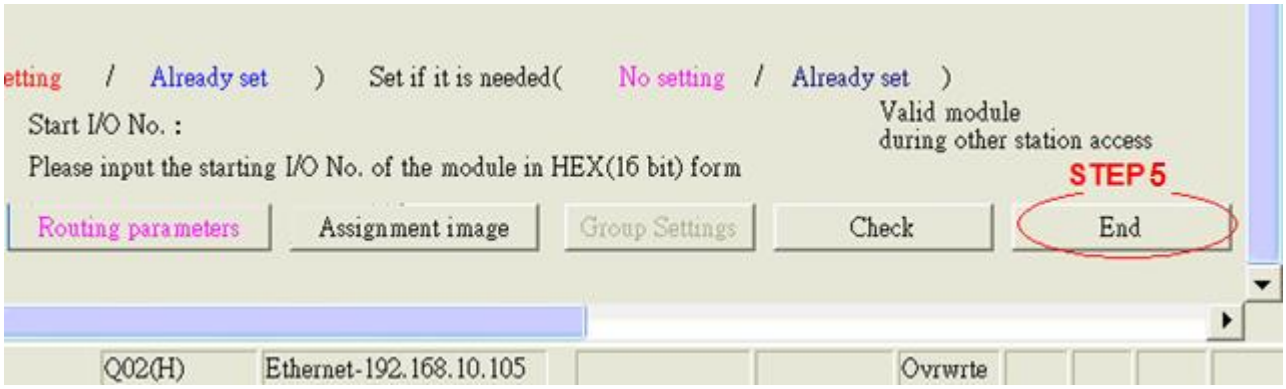


6. Restart PLC software and select [READ FROM PLC], select [QCPU(Qmode)] and press [OK].

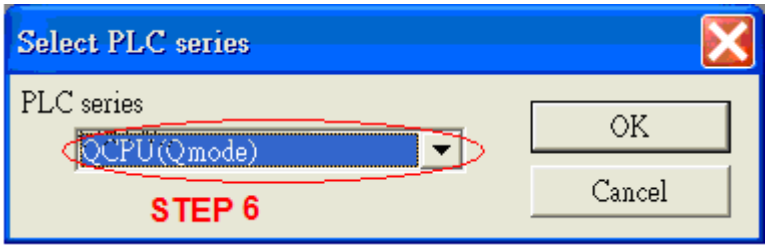


7. In [PC side I/F Ethernet board setting] set Network No. and Station No. (Station No.1 is PC Station No. not Ethernet module Station No., ranged from 2~64, the Network No. can not be the same as that of PC)

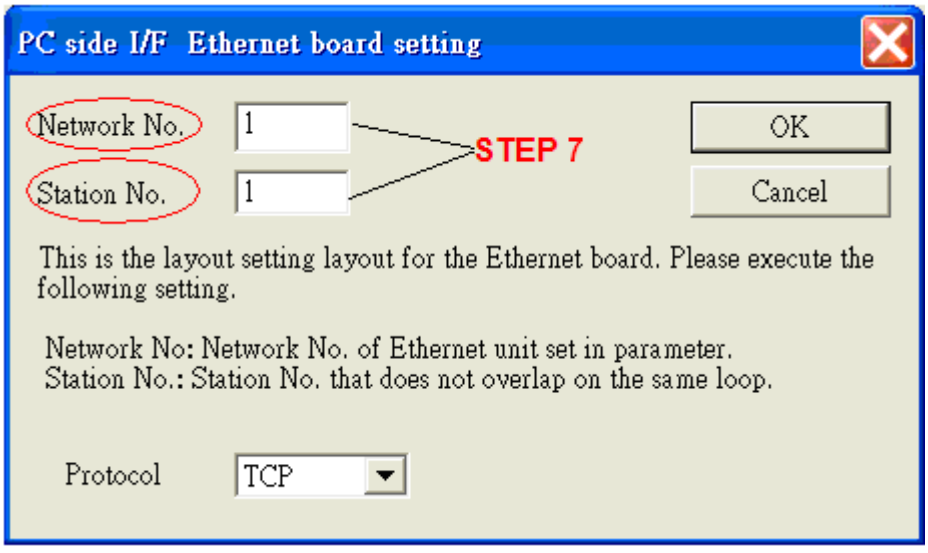

8. Select “Ethernet module” in PLC Side I/F to set QJ71E71 IP address.(IP address = Network Parameter IP address)

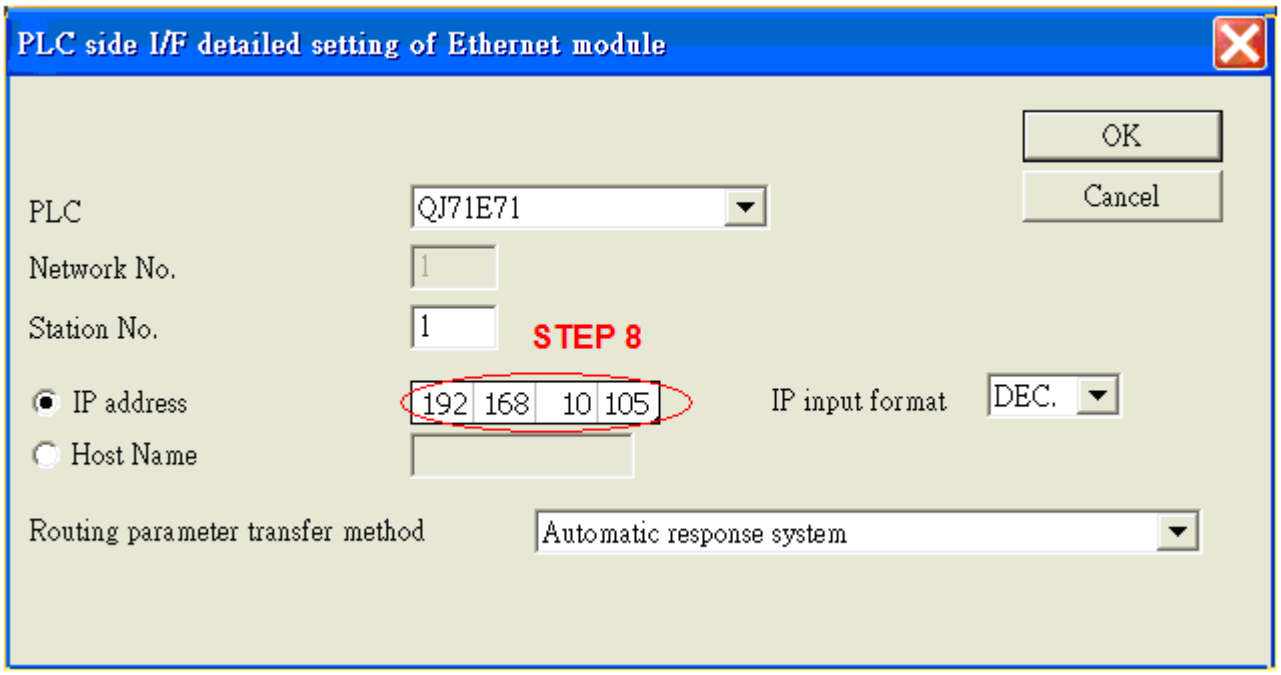

9. For “Other station”, click [Other station(Single network)”] for setting [Check at communication time] and [Retry times].

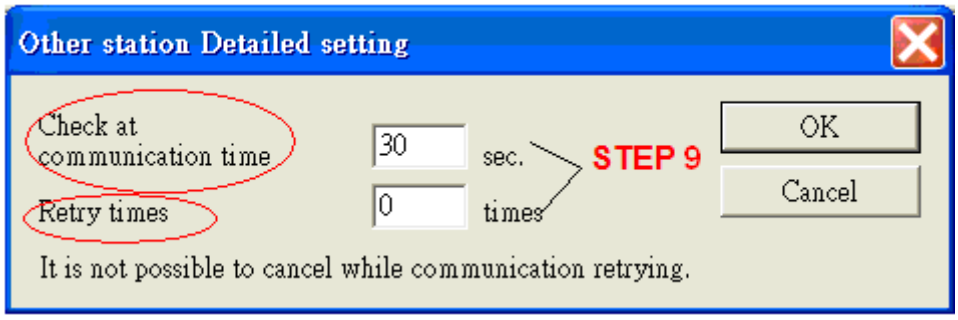


10. After finishing the settings above, click [Connection test] for testing the communication and sending the PLC program.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SM	DDDD	0 ~ 2047	
B	X	HHHH	0 ~ 1fff	Input Relay
B	Y	HHHH	0 ~ 1fff	Output Relay
B	M	DDDDD	0 ~ 61439	Internal Relay
B	L	DDDD	0 ~ 8191	Latch Relay
B	F	DDDD	0 ~ 2047	Annunciator
B	V	DDDD	0 ~ 2047	Edge Relay
B	B	HHHH	0 ~ 1fff	Link Relay
B	TS	DDDD	0 ~ 2047	Timer Contact
B	TC	DDDD	0 ~ 2047	Timer Coil
B	SS	DDDD	0 ~ 2047	Retentive Timer Contact
B	SC	DDDD	0 ~ 2047	Retentive Timer Coil
B	CS	DDDD	0 ~ 1023	Counter Contact
B	CC	DDDD	0 ~ 1023	Counter Coil
B	SB	HHH	0 ~ 7ff	Special Link Relay
B	S	DDDD	0 ~ 8191	Step Relay
B	DX	HHHH	0 ~ 1fff	Direct Input
B	DY	HHHH	0 ~ 1fff	Direct Output
B	D_Bit	DDDDDDDh	0 ~ 4212735f	
B	ZR_Bit	HHHHHh	0 ~ fe7fff	
B	ZR_Dec_Bit	DDDDDDDh	0 ~ 1042431f	
W	SD	DDDD	0 ~ 2047	
W	D	DDDDDDD	0 ~ 4212735	Data Register
W	W	HHHH	0 ~ 1fff	Link Register
W	TN	DDDD	0 ~ 2047	Timer Current Value
W	SN	DDDD	0 ~ 2047	Retentive Timer Current Value
W	CN	DDDD	0 ~ 1023	Counter Current Value
W	SW	HHH	0 ~ 7ff	Special Link Register
W	Z	DD	0 ~ 15	Index Register
W	R	FFDDDDD	0 ~ 3132767	File Register (FF:File No. 0~31) (DDDDD:0~32767)
W	ZR	HHHHH	0 ~ fe7ff	File Register
W	ZR_decimal_addr	DDDDDDD	0 ~ 1042341	

Wiring Diagram:

Ethernet cable:

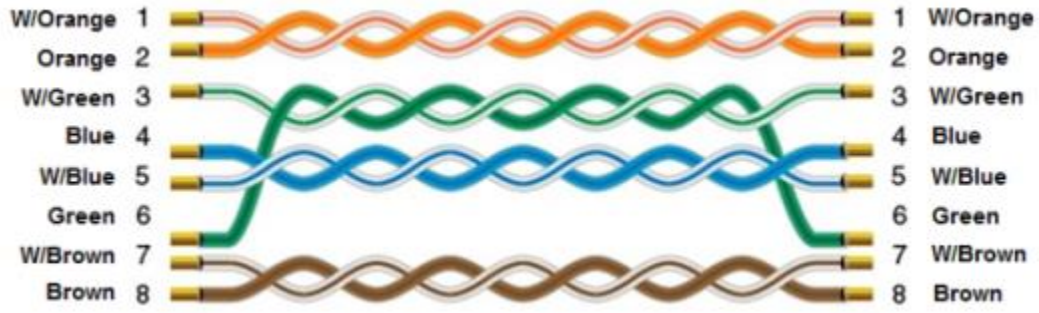

Mitsubishi R04 (Ethernet)

Supported Series : Mitsubishi R04CPU Ethernet Module
Website: http://www.mitsubishi-automation.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Mitsubishi FX5U - ASCII Mode (Ethernet)		
PLC I/F	Ethernet		
Port no.	Set identically to the PLC setting		Adviced to set port no. to 4999
PLC sta. no.	Set identically to the PLC setting		
Network number	0	0~999	
Communication data code	Binary	Binary / ASCII	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	HHHh	0 ~ 2ff	Input
B	Y	HHHh	0 ~ 2ff	Output
B	M	DDDDDDDD	0 ~ 16777215	Internal Relay
B	L	DDDDD	0 ~ 32767	Latch Relay
B	B	HHHHHHh	0 ~ fffffff	Link Relay
B	F	DDDDD	0 ~ 32767	Annunciator
B	SB	HHHHHHh	0 ~ fffffff	Link Special Relay
B	V	DDDDD	0 ~ 32767	Edge Relay
B	TS	DDDDDDD	0 ~ 8993439	Timer Contact
B	TC	DDDDDDD	0 ~ 8993439	Timer Coil
B	SS	DDDDDDD	0 ~ 8993439	Retentive Timer
B	SC	DDDDDDD	0 ~ 8993439	Retentive Timer Coil
B	CS	DDDDDDD	0 ~ 8993439	Counter Contact
B	CC	DDDDDDD	0 ~ 8993439	Counter Coil
B	SM	DDDD	0 ~ 4095	Special Relay
B	D_Bit	DDDDDDDDh	0 ~ 10117631f	Data Register
B	SD_Bit	DDDDh	0 ~ 4095f	Special Register
B	W_Bit	HHHHHHh	0 ~ 9a61fff	Link Register
B	SW_Bit	HHHHHHh	0 ~ 9a61fff	Link Special Register

Bit/Word	Device type	Format	Range	Memo
W	TN	DDDDDDD	0 ~ 8993439	Timer Current Value
W	SN	DDDDDDD	0 ~ 8993439	Retentive Timer Current
W	CN	DDDDDDD	0 ~ 8993439	Counter Current Value
W	D	DDDDDDDD	0 ~ 10117631	Data Register
W	W	HHHHHH	0 ~ 9a61ff	Link Register
W	SW	HHHHHH	0 ~ 9a61ff	Special Link Register
W	SD	DDDD	0 ~ 4095	Special Register
W	Z	DD	0 ~ 23	Index Register

Wiring Diagram:

Ethernet cable:



MODBUS ASCII

Supported Series: MODBUS ASCII CONTROLLER
Website: http://www.modbus.org

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS ASCII		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600/19200/38400/ 57600/115200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	1	0-255	

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

PLC Setting:

Communication mode	Modbus ASCII protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	0x	DDDDD	1 ~ 65535	Output bit
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
W	3x	DDDDD	1 ~ 65535	Input Register (read only)
W	4x	DDDDD	1 ~ 65535	Output Register
W	6x	DDDDD	1 ~ 65535	

Modbus RTU function code:

0x	0x01 Read coil	0x05 write single coil
1x	0x02 Read discrete input	N/A for write operation
3x	0x04 Read input register	N/A for write operation
4x	0x03 Read holding register	0x10 write multiple registers

3xbit is equivalent to 3x

4xbit is equivalent to 4x

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND
			→	RTS
			←	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


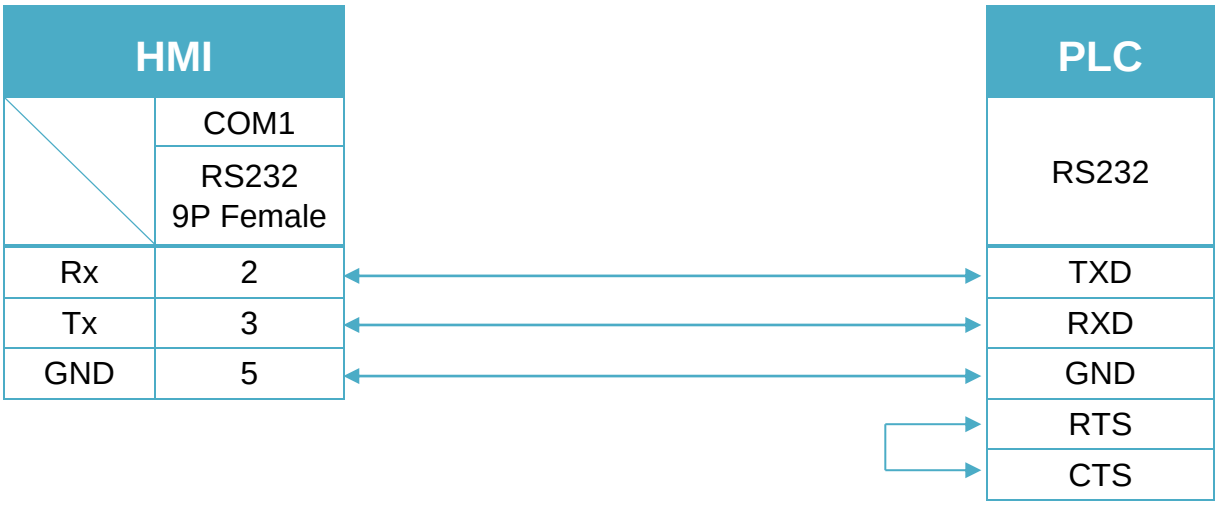


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

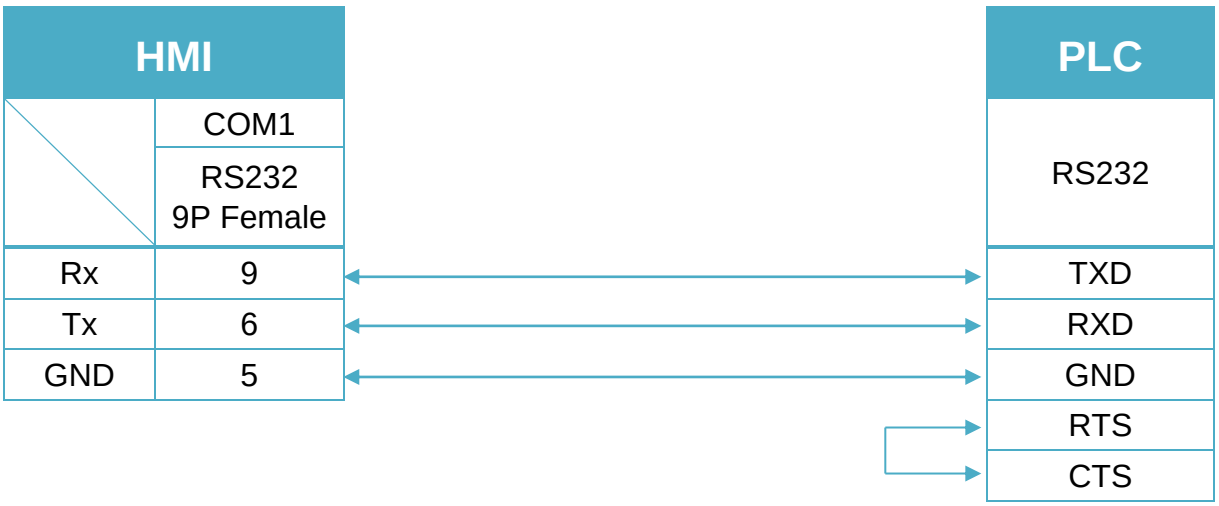

RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W
Rx-	1	↔	TX-
Rx+	2	↔	TX+
Tx-	3	↔	RX-
TX+	4	↔	RX+
GND	5	↔	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W
Rx-	7	↔	TX-
Rx+	6	↔	TX+
Tx-	9	↔	RX-
TX+	8	↔	RX+
GND	5	↔	GND


Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***



Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

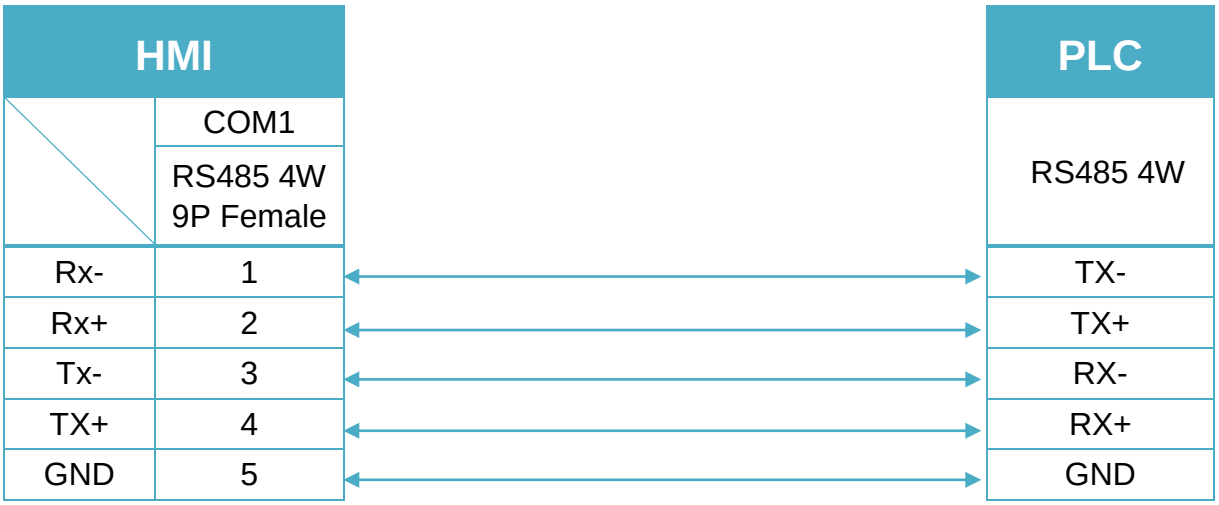

RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	↔	D-
Data+	2	9	↔	D+
GND	5	5	↔	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	↔	D-
Data+	6	1	↔	D+
GND	5	5	↔	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

MODBUS ASCII Server

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS ASCII Server		
PLC I/F	RS232	RS232, RS485	
Baud rate	9600	9600~115200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
PLC sta.	1	1-31	HMI Modbus Station No.

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

PLC Setting:

Communication mode	Modbus ASCII protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	LB	dddd	0 ~ 9998	Mapping to 0x/1x 1 ~ 9999
W	LW	dddd	0 ~ 9998	Mapping to 3x/4x 1 ~ 9999
W	RW	ddddd	0 ~ 55536	Mapping to 3x/4x 10000 ~ 65536

LB0 = 0x0001, LB1 = 0x0002, LW0 = 3x0001, LW1 = 3x0002
Modbus RTU Server doesn't support function code 06(preset single register), please use function code 16(0x10, preset multiple registers).

Modbus Server Function Code:

0x	0x01 Read coil	0x05 write single coil
0x_multi_coils	0x01 Read coil	0x0f write multiple coils
1x	0x02 Read discrete input	N/A for write operation
3x	0x04 Read input register	N/A for write operation
4x	0x03 Read holding register	0x10 write multiple registers

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND
			→	RTS
			←	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


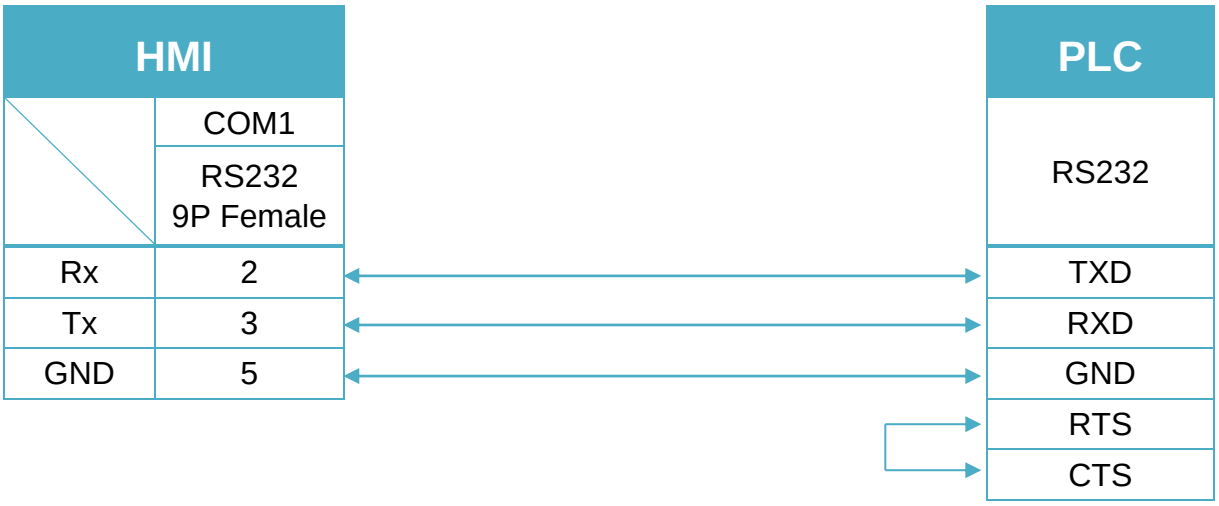


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

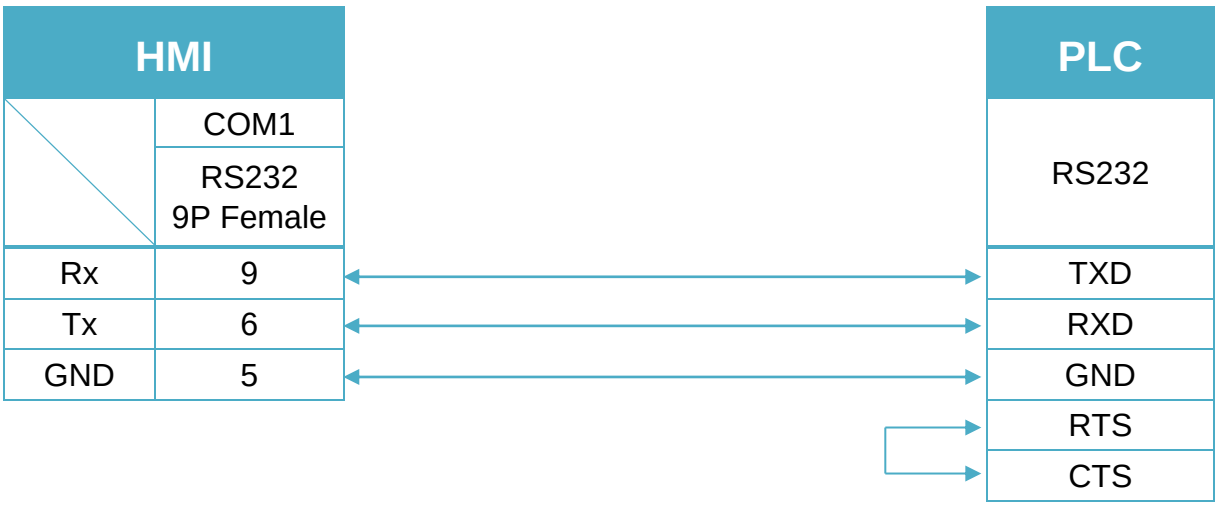

RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

Note: Setting more than one Modbus ASCII Server in HMI Device List is of no effect.


MODBUS RTU

Supported Series : MODBUS RTU CONTROLLER
Website : http://www.modbus.org

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS RTU		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	1	0-255	

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

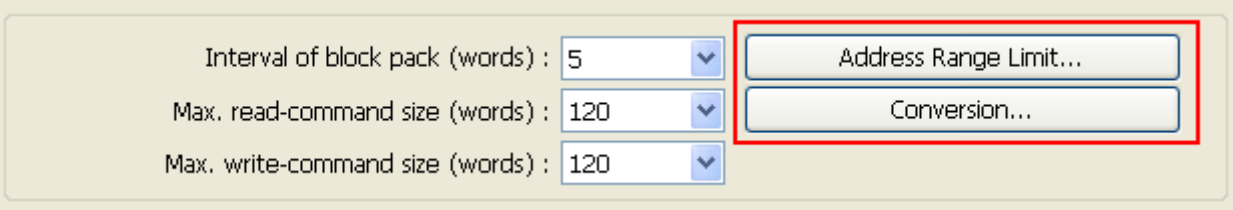

[Address Range Limit]
The address range of 0x, 1x, and 0x_multi_coils device types can be set.
[Conversion]
The 3x_Double and 4x_Double address types are added. If [ABCD ->CDAB] check box is selected, please select 3x_Double and 4x_Double address types.

PLC Setting:


Communication mode	Modbus RTU protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output bit
B	0x_single_bit	DDDDD	1 ~ 65535	*Note4
B	1x_single_bit	DDDDD	1 ~ 65535	*Note4
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	6x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	1 ~ 65535	Write multiple coils
W	3x	DDDDD	1 ~ 65535	Input Register (read only)
W	3x_MAX1W	DDDDD	1 ~ 65535	Display 32 bits *Note1
DW	3x_MAX2W	DDDDD	1 ~ 65535	*Note1
W	4x	DDDDD	1 ~ 65535	Output Register
W	4x_MAX1W	DDDDD	1 ~ 65535	Display 32 bits *Note1
DW	4x_MAX2W	DDDDD	1 ~ 65535	*Note1
DW	5x	DDDDD	1 ~ 65535	4x double word swap *Note5
W	6x	DDDDD	1 ~ 65535	4x single word write
W	3x_Double	DDDDD	1 ~ 65535	*Note2
W	4x_Double	DDDDD	1 ~ 65535	*Note2
W	4x_32Bit	DDDDD	1 ~ 65535	Output Registerv *Note1
W	0x_single_coil	DDDDD	1 ~ 65535	*Note3

Note1: MAX1W and 4X_32Bit reads/writes 1 word for each packet and displays a 32-bit value, whereas MAX2W reads/writes 2 words for each packet.

Note2: Go the [System Parameter Settings] -> [Device Properties] and click [Conversion] to set the data format of device types 3x, 4x, 6x, 3x_double, 4x double.

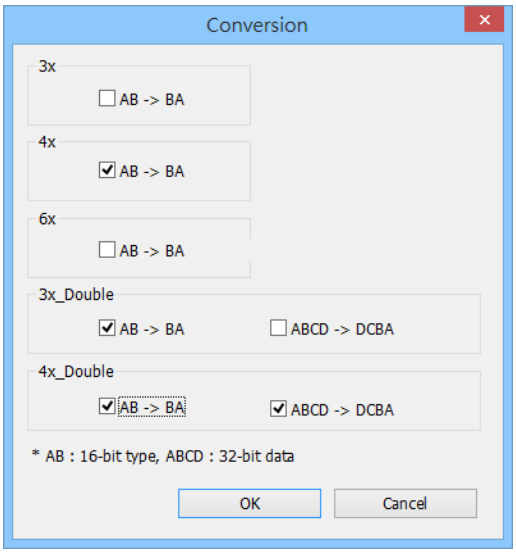

Note3: Read/write a Bit at a time. Value 0 and 1 are used to represent ON or OFF status where 0 means set OFF and 1 means set ON.

Note4: The number of bits to read can be set in Macro; therefore, it is recommended to use 0x address type for functions such as GetData() and SetData(), in order to increase reading speed.

To read/write multiple 0x address type in macro, use 0x_multi_coils to increase write speed.

Note5: Please assign all the addresses to Even addresses, or all to Odd addresses, in order to prevent communication failure.

NOTE:

Address type “5x” is mapped to Holding Register. The communication protocol of 5x is almost the same as “4x” except that “5x” swaps double word.

If 4x contains the following information:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0201		0x0403		0x0605		

For 5x, it will be:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0102		0x0304		0x0506		

Modbus RTU function code:

0x	0x01 Read coil	0x05 write single coil
0x_multi_coils	0x01 Read coil	0x0f write multiple coils
1x	0x02 Read discrete input	N/A for write operation
3x	0x04 Read input register	N/A for write operation
4x	0x03 Read holding register	0x10 write multiple registers
5x	0x03 Read holding register	0x10 write multiple registers

(Note: reverse word order in double word format)

3xbit is equivalent to 3x

4xbit is equivalent to 4x

6x	0x03 Read holding register	0x06 write single register

(Note: 6x is limited to device of one word only)

0x_single_coil	0x01 Read coil	0x05 write single coil

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	TXD
Tx	3	7	↔	RXD
GND	5	5	↔	GND
			→	RTS
			←	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI		PLC
	COM1 RS232 9P Female	RS232
Rx	2	TXD
Tx	3	RXD
GND	5	GND
		RTS
		CTS

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232
Rx	9	TXD
Tx	6	RXD
GND	5	GND
		RTS
		CTS

RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

MODBUS RTU (0x/1x Range Adjustable)

Supported Series : MODBUS RTU CONTROLLER
Website : http://www.modbus.org

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS RTU (0x/1x Range Adjustable)		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	1	0-255	

Online simulator	YES
Extend address mode	YES

PLC Setting:

Communication mode	Modbus RTU protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output bit
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	6x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	1 ~ 65535	Write multiple coils
W	3x	DDDDD	1 ~ 65535	Input Register (read only)
W	4x	DDDDD	1 ~ 65535	Output Register
DW	5x	DDDDD	1 ~ 65535	4x double word swap *Note2
W	6x	DDDDD	1 ~ 65535	4x single word write
W	4x_32Bit*	DDDDD	1 ~ 65535	Output Register *Note1

*Note1: 4x_32Bit will only read / write 2 words for each package, for continuous addresses, it will be divided into several packages.

*Note2: Please assign all the addresses to Even addresses, or all to Odd addresses, in order to prevent communication failure.

NOTE:

Address type “5x” is mapping to Hold Reg. The communication protocol of “5x” is almost the same as “4x” except that “5x” swaps double words.

If 4x contains the following information:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0201		0x0403		0x0605		

For 5x, it will be:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0102		0x0304		0x0506		

Modbus RTU function code:

0x 0x01 Read coil 0x05 Write single coil

0x_multi_coils 0x01 Read coil 0x0f Write multiple coils

1x 0x02 Read discrete input N/A for writing operation

3x 0x04 Read input register N/A for writing operation

4x 0x03 Read holding register 0x10 Write multiple registers

5x 0x03 Read holding register 0x10 Write multiple registers

(Note: reverse word order in double words format)

3xbit is equivalent to 3x


4xbit is equivalent to 4x

6x 0x03 Read holding register 0x06 Write single register

(Note: 6x is limited to device of one word only)


Setting Instructions:

1. Go to [System Parameter Settings]  ，click [New] to add a new device -Modbus RTU (0x 1x range adjustable)，as shown below:

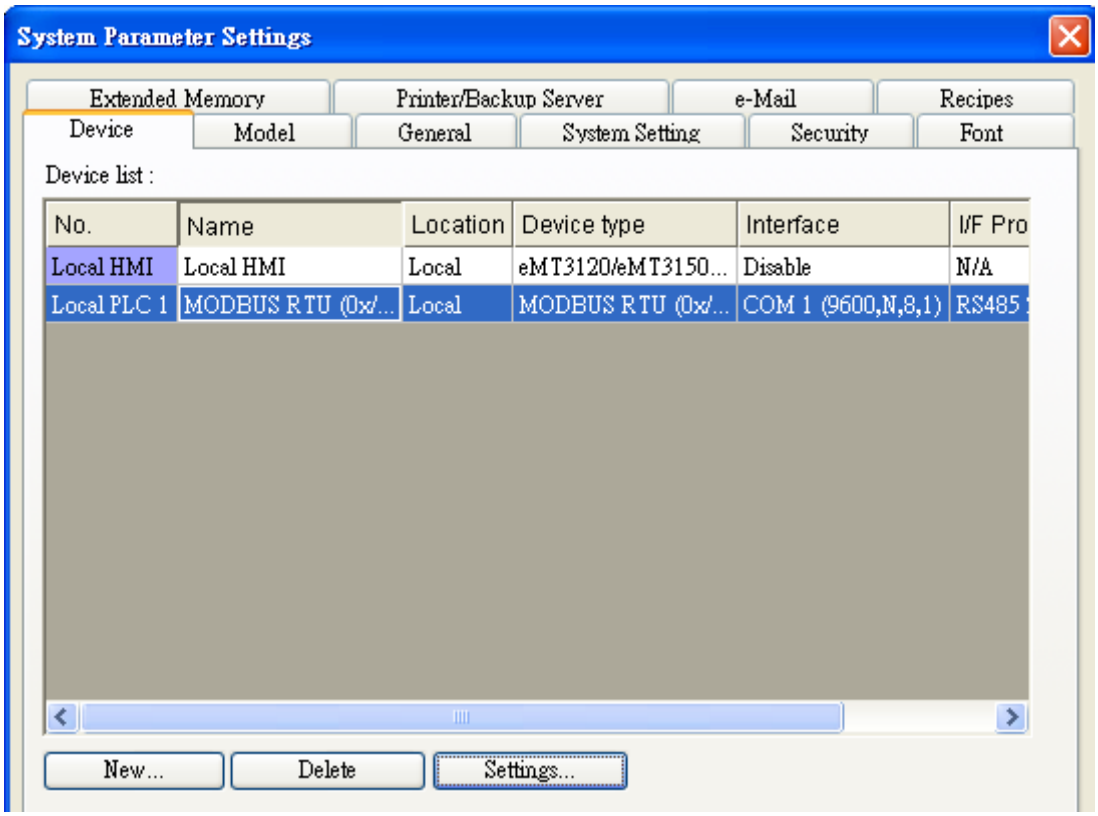


2. After adding Modbus RTU (0x 1x Range Adjustable) driver, [Add Address Range Limit] button will be enabled as below. Users can set maximum read/write command size here.


   - Max.read-command size (words): Pull down to select PLC reading range.




   - Max.write-command size (words): Pull down to select PLC writing range.




Note: Setting [Add Address Range Limit] is enabled only when bit address is not a multiple of 16bit.

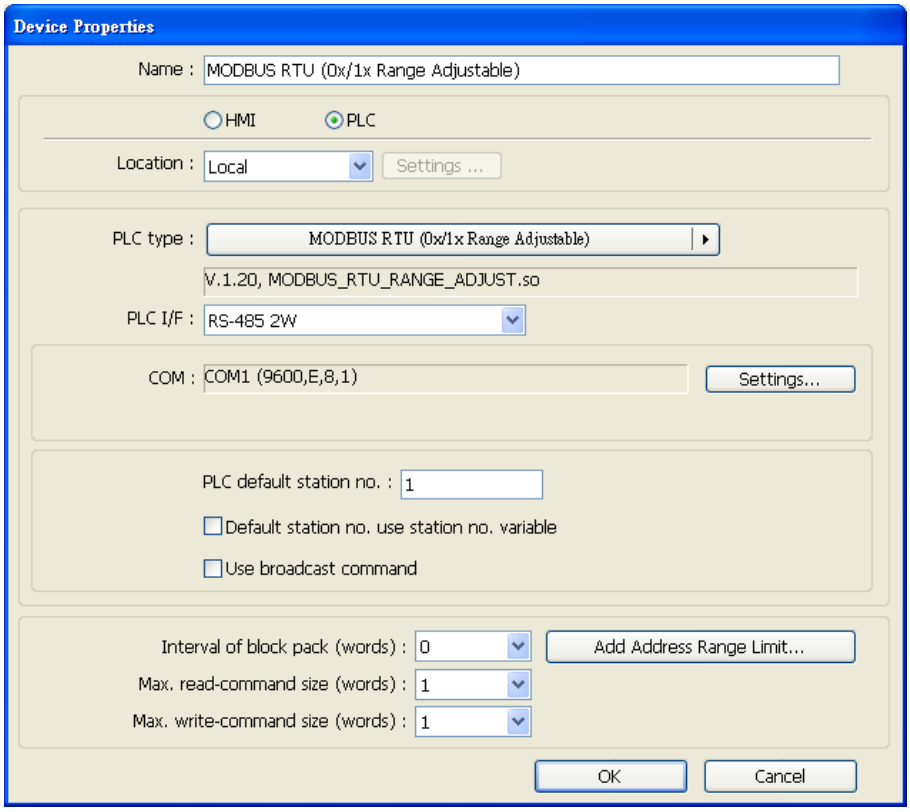

3. Click [Add Address Range Limit] button, Users can define 0x , 1x and 0x_multi_coils address range in [0x 1x Address Range] dialog box, referring to bit range of the device used.

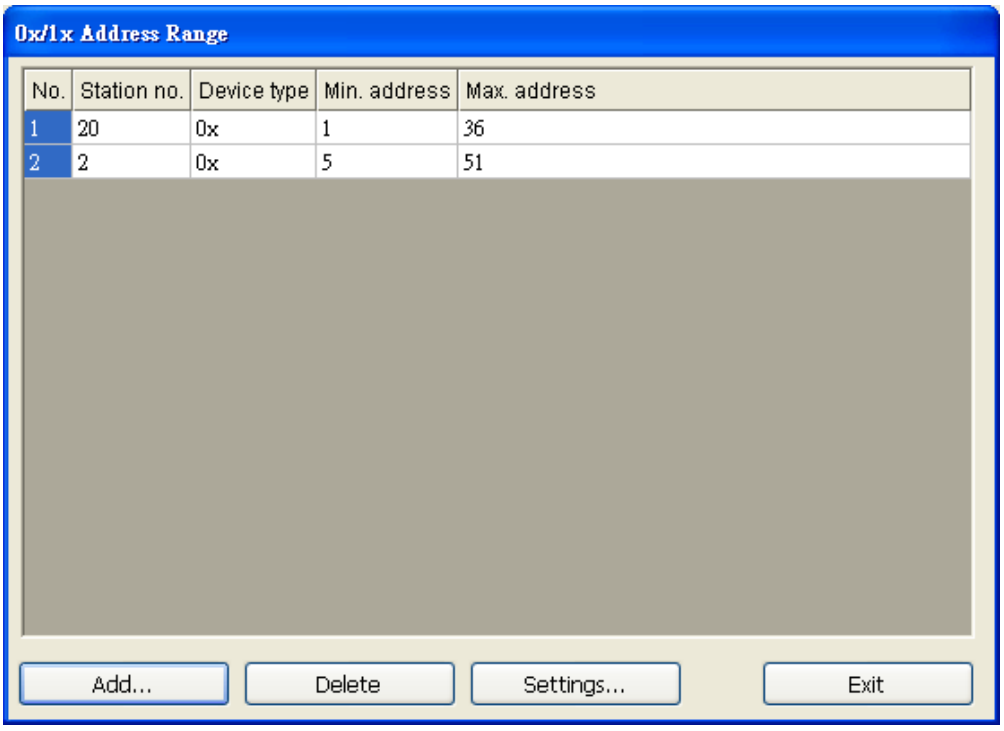


Add：Set [Station No.], [Device Type], [Min. Address], [Max. Address] then click [OK] to finish adding as below:

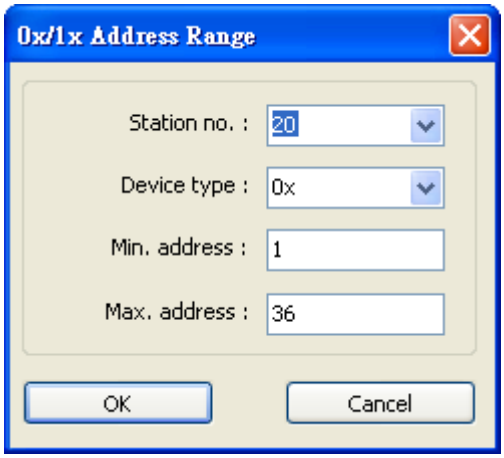

Delete：The selected items will be deleted.

Settings：Set [Station No.], [Device Type], [Min. Address], [Max. Address] then click [OK] to finish adding as below:

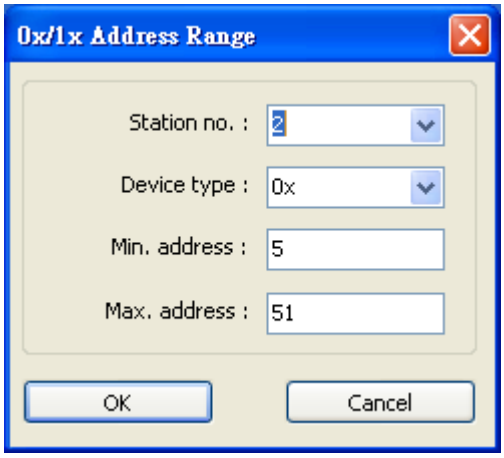


Example：


Take D2 and D8 of SCON as example, the settings depend on bit range of different PLC types. Set [Station No.] and address first.

For D2, set [Station No.] to **20**, [Device Type] **0x**, [Max. Address] **36**.

For D8, set [Station No.] to **2**, [Device Type] **0x**, [Max. Address] **51**.

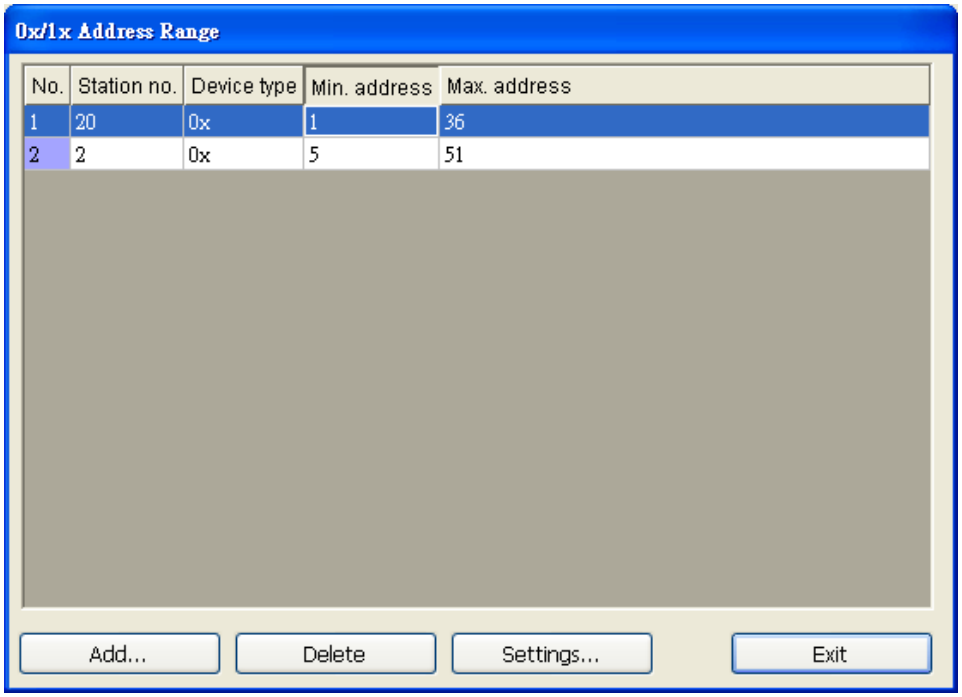

Note: If communicating with a RS-485 2W PLC, the [Turn around delay] setting may need to be adjusted according to the reply speed of the device. Please click [Settings] in [Device Properties], and set the [Turn around delay (ms)] parameter as shown:

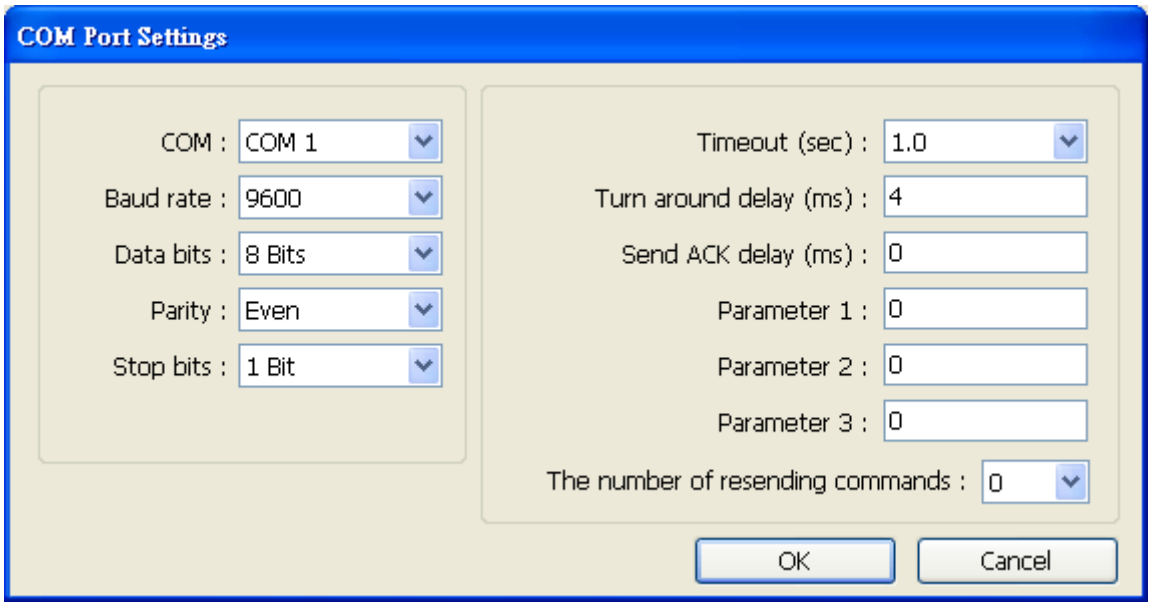

After completing all settings above, the communication is enabled.

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND
			→	RTS
			←	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		RS232
Rx	2	⟷	TXD
Tx	3	⟷	RXD
GND	5	⟷	GND
		⟷	RTS
		⟷	CTS

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232
Rx	9	⟷	TXD
Tx	6	⟷	RXD
GND	5	⟷	GND
		⟷	RTS
		⟷	CTS

RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

MODBUS RTU (Adjustable)

Supported Series : MODBUS RTU CONTROLLER
Website : http://www.modbus.org

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS RTU (Adjustable)		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600/19200/38400/57600/115200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	1	0-255	

Online simulator	YES
Extend address mode	YES

PLC Setting:

Communication mode	Modbus RTU protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output bit
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	1 ~ 65535	Write multiple coils
W	3x	DDDDD	1 ~ 65535	Input Register (read only)
W	4x	DDDDD	1 ~ 65535	Output Register
W	5x	DDDDD	1 ~ 65535	4x double word swap *Note1
DW	5x (32-bit)	DDDDD	1 ~ 65535	4x double word
W	6x	DDDDD	1 ~ 65535	4x single word write

*Note1: Please assign all the addresses to Even addresses, or all to Odd addresses, in order to prevent communication failure.

NOTE:

Address type “5x” is mapping to Hold Reg. The communication protocol of “5x” is almost the same as “4x” except that “5x” swaps double words.

If 4x contains the following information:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0201		0x0403		0x0605		

For 5x, it will be:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0102		0x0304		0x0506		

Modbus RTU function code:

0x	0x01 Read coil	0x05 Write single coil
0x_multi_coils	0x01 Read coil	0x0f Write multiple coils
1x	0x02 Read discrete input	N/A for writing operation
3x	0x04 Read input register	N/A for writing operation
4x	0x03 Read holding register	0x10 Write multiple registers
5x	0x03 Read holding register	0x10 Write multiple registers

(Note: reverse word order in double words format)

3xbit is equivalent to 3x


4xbit is equivalent to 4x

6x	0x03 Read holding register	0x06 Write single register

(Note: 6x is limited to device of one word only)

Setting Instructions:

1. Go to [System Parameter Settings]  ，click [New] to add a new device - MODBUS RTU (Adjustable)，as shown below:

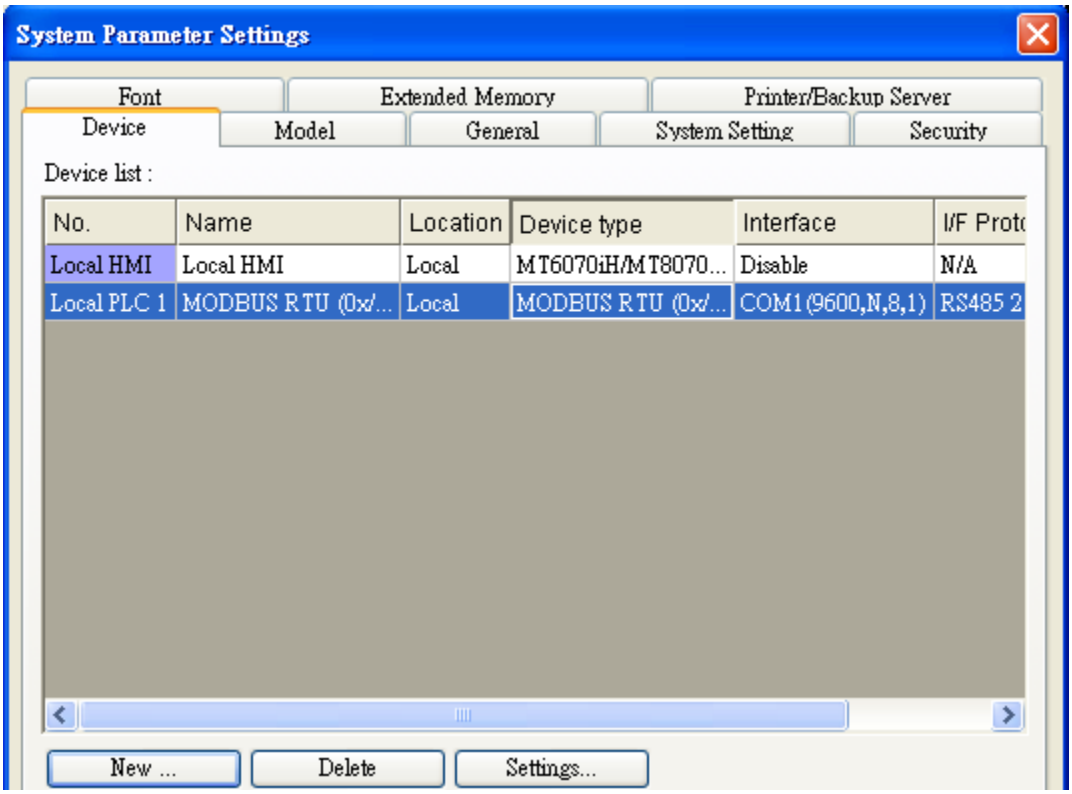


2. After adding MODBUS RTU (Adjustable) driver, [Add Address Range Limit] button will be enabled as below. Users can set maximum read/write command size here.

   - Max.read-command size (words): Pull down to select PLC reading range.




   - Max.write-command size (words): Pull down to select PLC writing range.



Note:

MODBUS RTU (adjustable) usage

Users can decide the address range via setting value on Parameter 1. For example, when users set 5 to Parameter 1, the address range will be 5 ~ 65535.

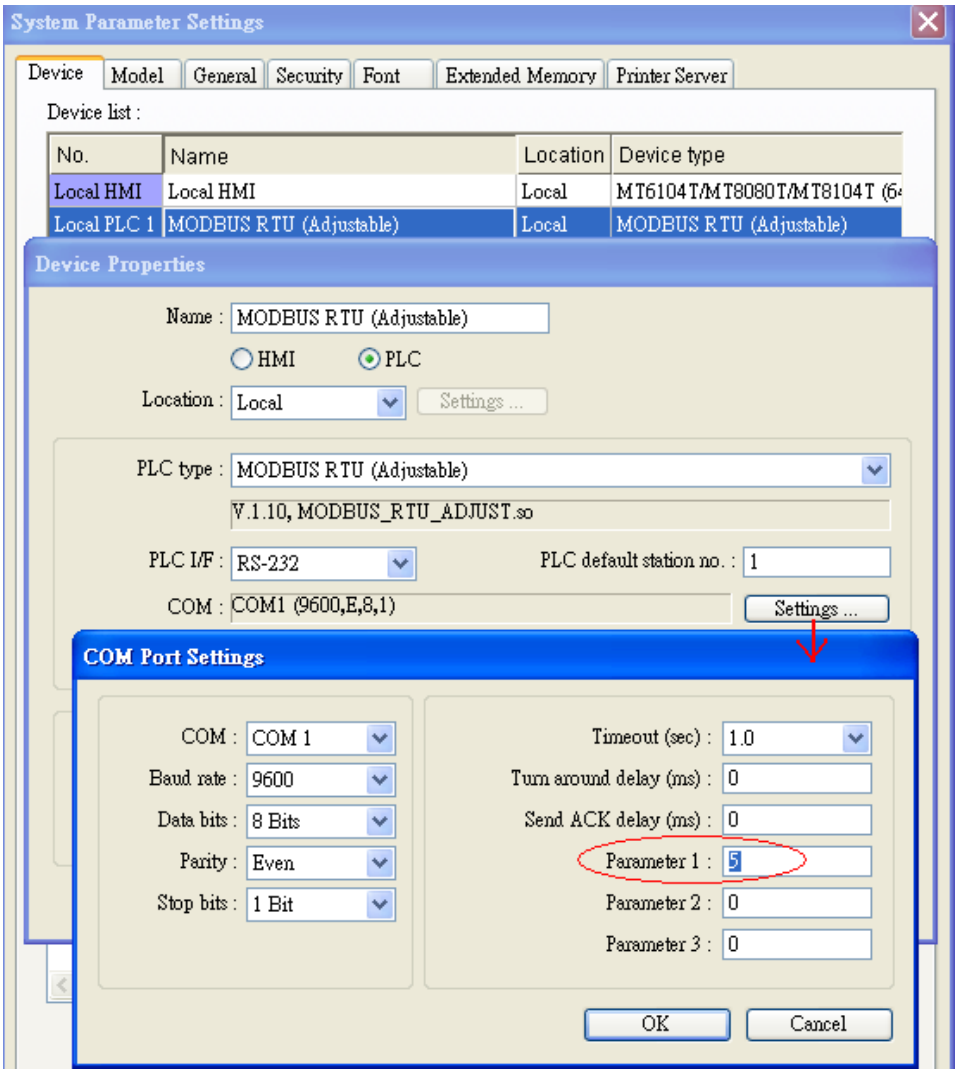

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND
			→	RTS
			→	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI		PLC
	COM1 RS232 9P Female	RS232
Rx	2	TXD
Tx	3	RXD
GND	5	GND
		RTS
		CTS

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232
Rx	9	TXD
Tx	6	RXD
GND	5	GND
		RTS
		CTS

RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	↔	D-
Data+	2	9	↔	D+
GND	5	5	↔	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	↔	D-
Data+	6	1	↔	D+
GND	5	5	↔	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

MODBUS RTU (zero-based addressing)

Supported Series : MODBUS RTU CONTROLLER
Website : http://www.modbus.org

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS RTU (zero-based addressing)		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	1	0-255	

Online simulator	YES	**Broadcast**	YES
Extend address mode	YES		

PLC Setting:

Communication mode	Modbus RTU protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	0 ~ 65535	Output bit
B	1x	DDDDD	0 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	0 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	0 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	0 ~ 65535	Write multiple coils
W	3x	DDDDD	0 ~ 65535	Input Register (read only)
W	4x	DDDDD	0 ~ 65535	Output Register
DW	5x	DDDDD	0 ~ 65535	4x double word swap *Note1
W	6x	DDDDD	0 ~ 65535	4x single word write

*Note1: Please assign all the addresses to Even addresses, or all to Odd addresses, in order to prevent communication failure.

NOTE:

Address type “5x” is mapping to Hold Reg. The communication protocol of 5x is almost the same as “4x” except that “5x” swaps double words.

If 4x contains the following information:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0201		0x0403		0x0605		

For 5x, it will be:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0102		0x0304		0x0506		

Modbus RTU function code:

0x	0x01 Read coil	0x05 write single coil
0x_multi_coils	0x01 Read coil	0x0f write multiple coils
1x	0x02 Read discrete input	N/A for write operation
3x	0x04 Read input register	N/A for write operation
4x	0x03 Read holding register	0x10 write multiple registers
5x	0x03 Read holding register	0x10 write multiple registers

(Note: reverse word order in double word format)

3xbit is equivalent to 3x

4xbit is equivalent to 4x

6x	0x03 Read holding register	0x06 write single register

(Note: 6x is limited to device of one word only)

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND
			→	RTS
			←	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


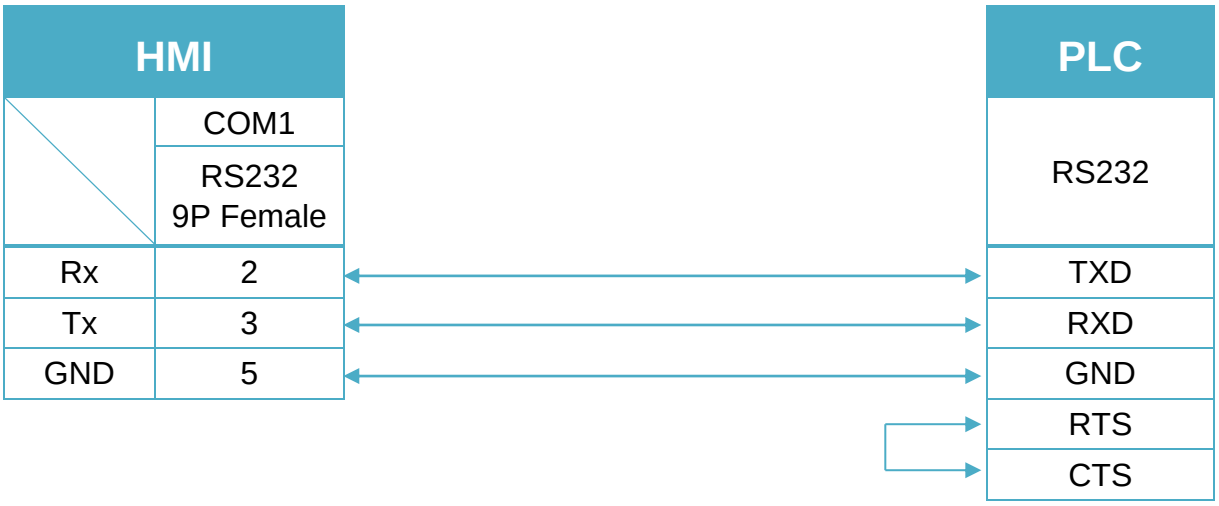


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

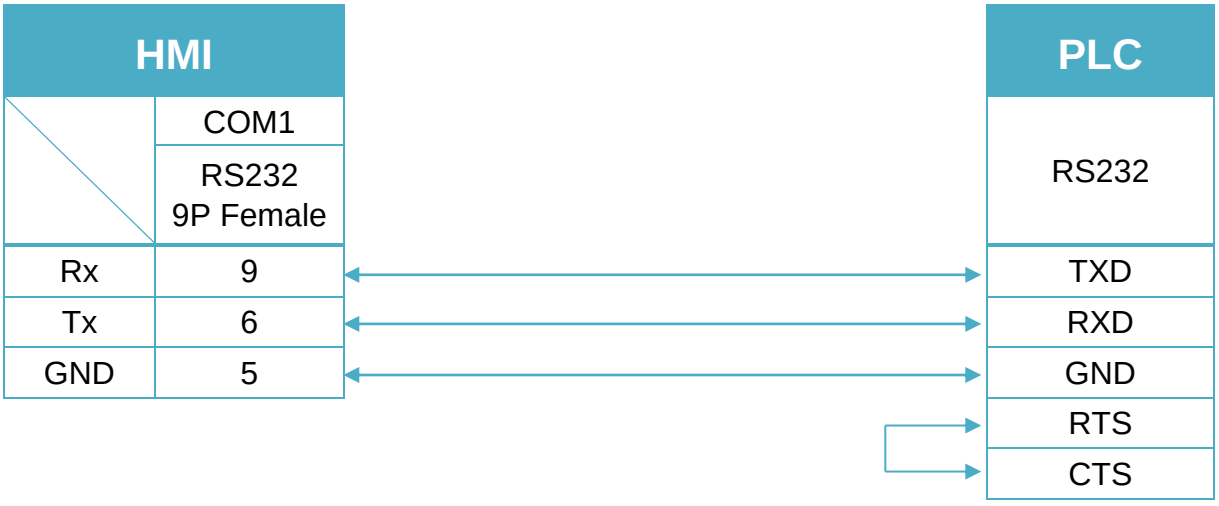

RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	↔	D-
Data+	2	9	↔	D+
GND	5	5	↔	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	↔	D-
Data+	6	1	↔	D+
GND	5	5	↔	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND


MODBUS Server (COM/Ethernet)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS Server (COM/Ethernet)		
PLC I/F	RS232	RS232, RS485	
Baud rate	9600	9600~115200 Ethernet	Ethernet supports UDP or TCP/IP protocol
Data bits	8	8	
Parity	Even	Even, Odd,	
Stop bits	1	1	
PLC sta. no.	1	1-31	HMI Modbus Station No.
Port no.		502	

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

If HMI is Modbus Server, connecting two or more Modbus Servers with one Modbus RTU via RS485 4W is not supported. To do so, use RS485 2W instead.

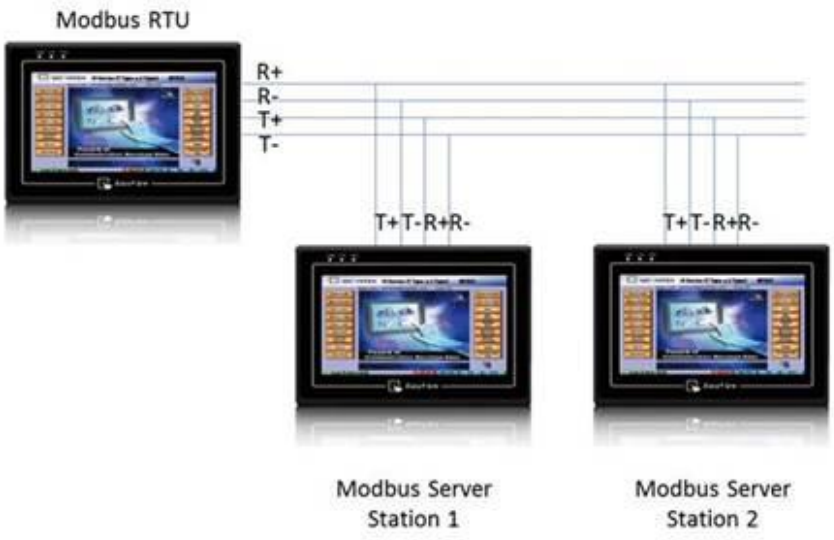


PLC Setting:

Communication mode	Modbus RTU protocol

Modbus Server UDP Protocol Setting:

MODBUS Server (Ethernet) supports UDP communication protocol. To use UDP mode, go to [System Parameter Settings] in editing software, in [Device list] click [New], for [PLC type] select “Modbus Server”, [PLC I/F] set to [Ethernet], and select [Use UDP (User Datagram Protocol)] to finish setting.

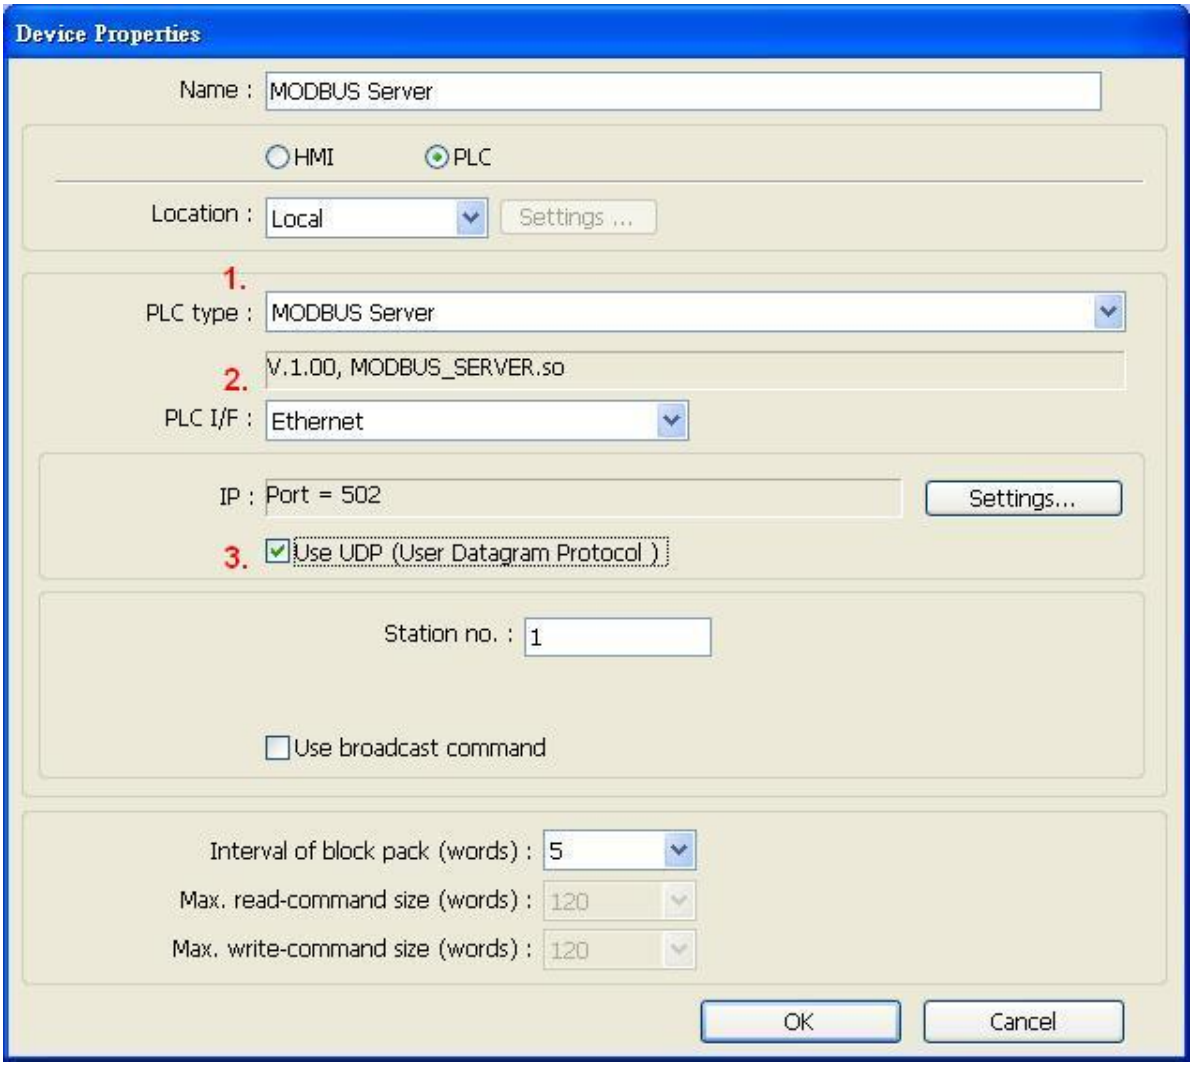

Modbus Server Port No. can be changed by clicking [Settings].


Modbus Server Port No. can not be set identically to HMI Port No. When doing so, the warning message below will be shown requesting users to change setting.




Note:
A maximum of 64 Clients can be connected simultaneously.
Modbus Server Port No. can't be identical to HMI Port No.

Modbus Server TCP/IP Protocol Setting:

MODBUS Server (Ethernet) supports TCP/IP communication protocol. Go to [System Parameter Settings] in editing software, in [Device list] click [New], for [PLC type] select "Modbus Server", [PLC I/F] set to [Ethernet] to finish setting.

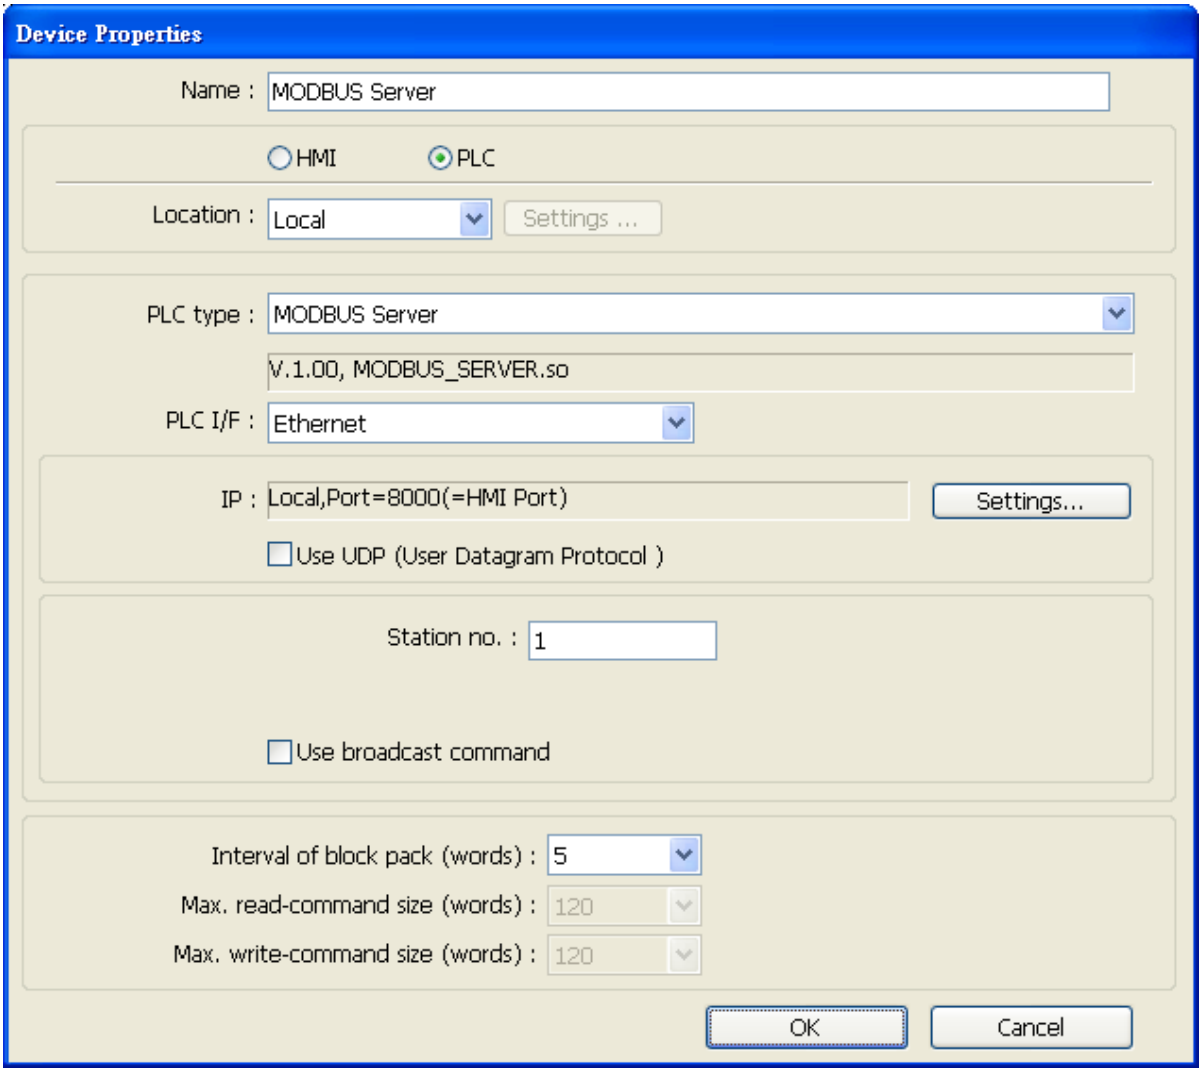


For Modbus Server TCP/IP, HMI Port No. is the same as Modbus Server Port No. To change Prot No. go to [System Parameter Settings] / [Model], the default Port No. is “8000”, and it is allowed to change Modbus Server Port No. here.

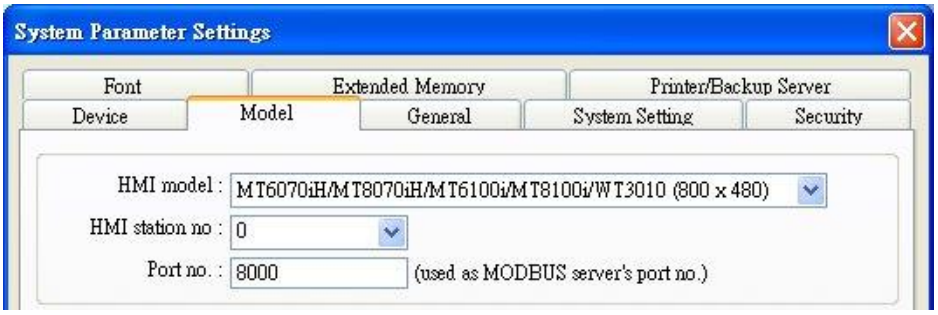

MODBUS TCP/IP Gateway:

By adding MODBUS Server with [Ethernet] interface, the [MODBUS TCP/IP Gateway] feature can be enabled by selecting the [Enable] check box.

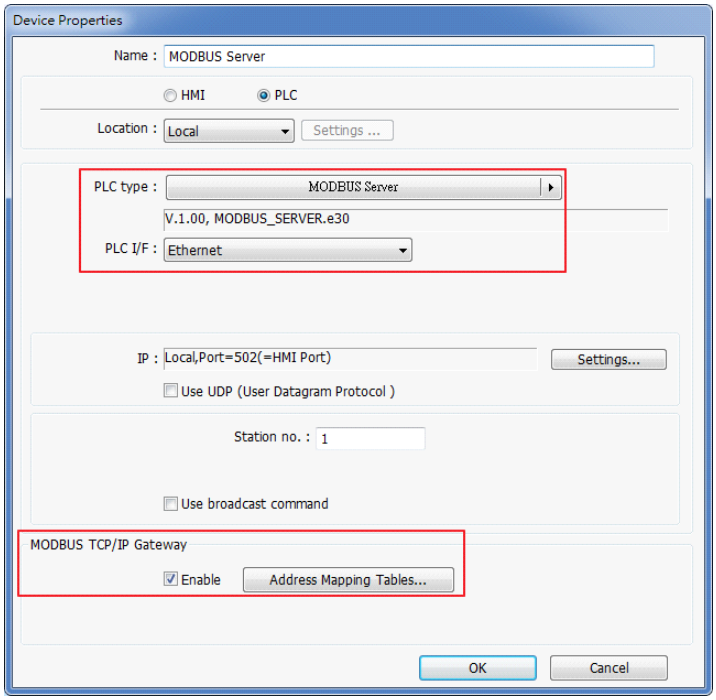

Note the following two points when enabling the [MODBUS TCP/IP Gateway]:

a. The original mapping between the MODBUS Server and the HMI address will be canceled.

b. The SCADA cannot read from or write in the addresses defined in different Address Mapping Table at one time.

For more information about this, see “Chapter37 MODBUS TCPIP Gateway”.

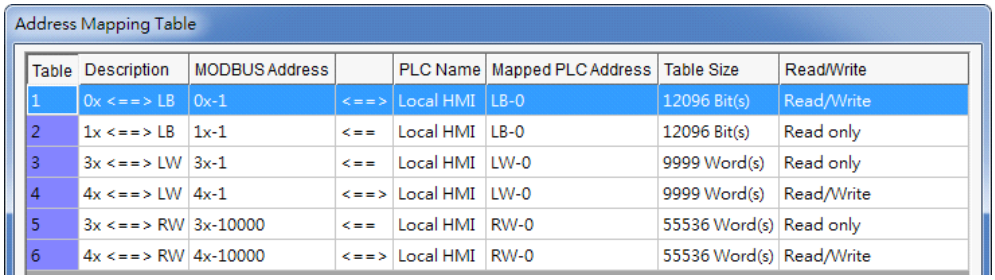

Address Mapping Table

Table	Description	MODBUS Address		PLC Name	Mapped PLC Address	Table Size	Read/Write
1	0x <==> LB	0x-1	<==>	Local HMI	LB-0	12096 Bit(s)	Read/Write
2	1x <==> LB	1x-1	<==	Local HMI	LB-0	12096 Bit(s)	Read only
3	3x <==> LW	3x-1	<==	Local HMI	LW-0	9999 Word(s)	Read only
4	4x <==> LW	4x-1	<==>	Local HMI	LW-0	9999 Word(s)	Read/Write
5	3x <==> RW	3x-10000	<==	Local HMI	RW-0	55536 Word(s)	Read only
6	4x <==> RW	4x-10000	<==>	Local HMI	RW-0	55536 Word(s)	Read/Write

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	LB	dddd	0 ~ 9998	Mapping to 0x/1x 1 ~ 9999
W	LW	dddd	0 ~ 9998	Mapping to 3x/4x 1 ~ 9999
W	RW	ddddd	0 ~ 55536	Mapping to 3x/4x 10000 ~ 65536

LB0 = 0x0001, LB1 = 0x0002, LW0 = 3x0001, LW1 = 3x0002

Modbus Server Function Code:

0x	0x01 Read coil	0x05 write single coil
0x_multi_coils	0x01 Read coil	0x0f write multiple coils
1x	0x02 Read discrete input	N/A for write operation
3x	0x04 Read input register	N/A for write operation
4x	0x03 Read holding register	0x10 write multiple registers

Modbus Server Error Code:

Error Code	Definition	Condition
01	Incorrect function code	The function code is not supported.
02	Incorrect read address	The read address is not within the range.
03	Incorrect data	The data read is incorrect, for example, the data length is 0.
251	Incorrect data	Read/Write exceeding number of words from/to the register of the Modbus device.
252	Incorrect data	Modbus device replies incorrect data format.
253	Incorrect data	Modbus device checksum error.

Wiring Diagram:

RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND
			→	RTS
			←	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***


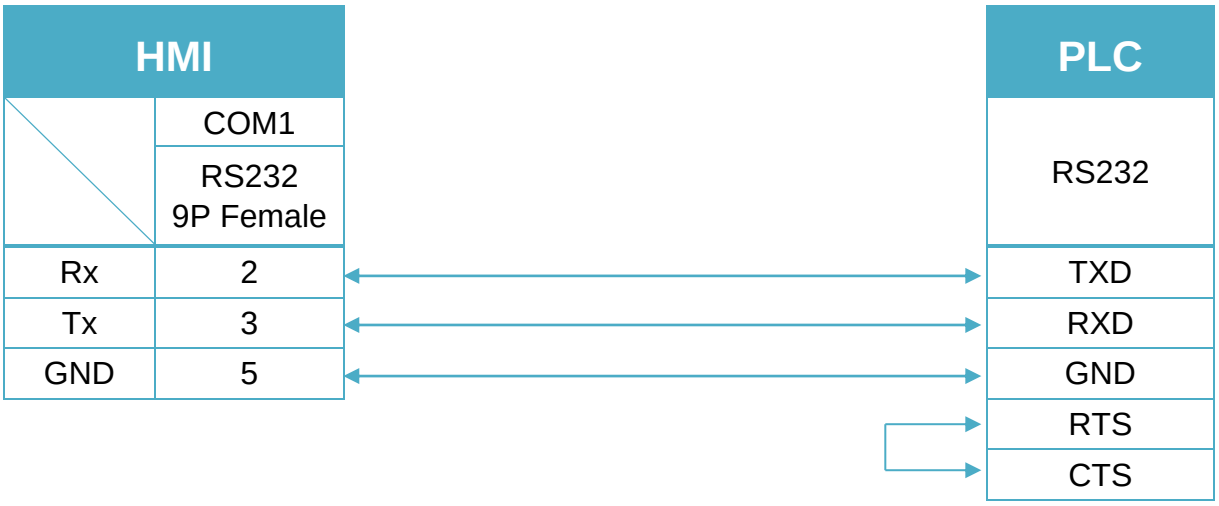


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

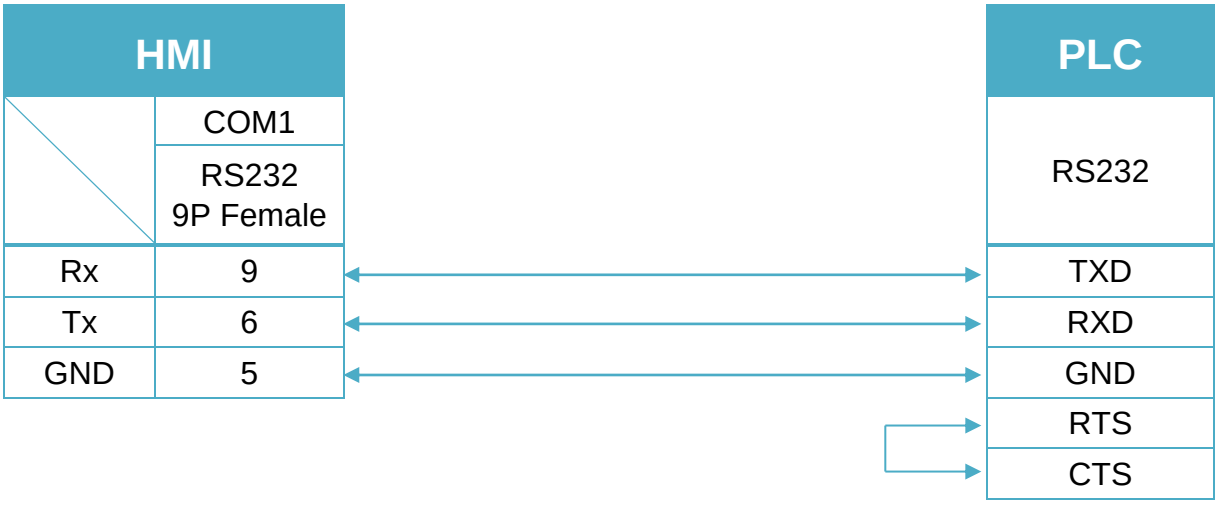

RS485 4W (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS485 2W (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

Note: Setting more than one Modbus Server in HMI Device List is of no effect.

Diagram 14

Ethernet cable:



MODBUS TCP/IP

Supported Series: Modbus RTU TCP/IP device.
Website: http://www.modbus.org


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS TCP/IP		
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.	1	0~255	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output bit
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	0x_single_Bit	DDDDD	1 ~ 65535	
B	1x_single_Bit	DDDDD	1 ~ 65535	
B	3x_bit	DDDDDdd	100 ~ 6553515	Input Register bit(read
B	4x_bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	6x_bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	1 ~ 65535	Write multiple coils
W	3x	DDDDD	1 ~ 65535	Input Register
W	4x	DDDDD	1 ~ 65535	Output Register
DW	5x	DDDDD	1 ~ 65535	4x double word swap
W	6x	DDDDD	1 ~ 65535	4x single word write
DW	3x_Double	DDDDD	1 ~ 65535	*Note1
DW	4X_Double	DDDDD	1 ~ 65535	*Note1
W	4x string central europe	DDDDD	1 ~ 65535	Convert the Central Europe ASCII to Unicode.
W	4x string central europe (rev)	DDDDD	1 ~ 65535	

Note1: Go the [System Parameter Settings] -> [Device Properties] and click [Conversion] to set the data format of device types 3x, 4x, 6x, 3x_double, 4x double.

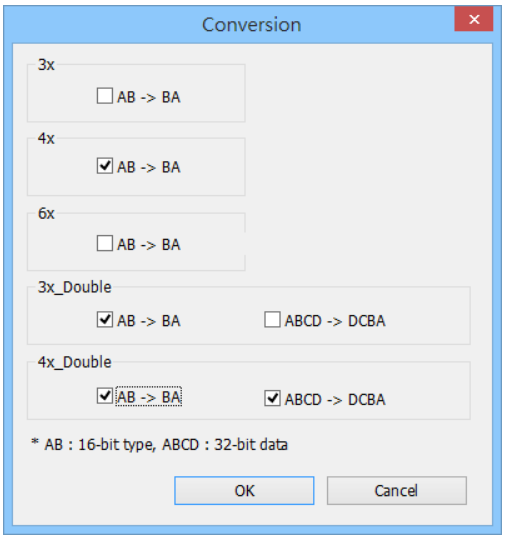

Wiring Diagram:

Diagram 1

Ethernet cable:



MODBUS TCP/IP (0x/1x Range Adjustable)

Supported Series : Modbus RTU TCP/IP device.
Website : http://www.modbus.org

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS TCP/IP (0x/1x Range Adjustable)		
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.	1	0~255	

Online simulator	YES
Extend address mode	YES

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output bit
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	6x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	1 ~ 65535	Write multiple coils
W	3x	DDDDD	1 ~ 65535	Input Register (read only)
W	4x	DDDDD	1 ~ 65535	Output Register
DW	5x	DDDDD	1 ~ 65535	4x double word swap
W	6x	DDDDD	1 ~ 65535	4x single word write
W	4x string central europe rev	DDDDD	1 ~ 65535	

NOTE:

Address type “5x” is mapping to Hold Reg. The communication protocol of “5x” is almost the same as “4x” except that “5x” swaps double words.

If 4x contains the following information:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0201		0x0403		0x0605		

For 5x, it will be:

Address	1	2	3	4	5	6	...
Data in word	0x1	0x2	0x3	0x4	0x5	0x6	
Data	0x0102		0x0304		0x0506		

Modbus RTU function code:

0x 0x01 Read coil 0x05 Write single coil

0x_multi_coils 0x01 Read coil 0x0f Write multiple coils

1x 0x02 Read discrete input N/A for writing operation

3x 0x04 Read input register N/A for writing operation

4x 0x03 Read holding register 0x10 Write multiple registers

5x 0x03 Read holding register 0x10 Write multiple registers

(Note: reverse word order in double words format)

3xbit is equivalent to 3x


4xbit is equivalent to 4x

6x 0x03 Read holding register 0x06 Write single register


(Note: 6x is limited to device of one word only)

Setting Instructions:

1. Go to [System Parameter Settings]  ，click [New] to add a new device -MODBUS TCP/IP (0x/1x Range Adjustable)，as shown below:

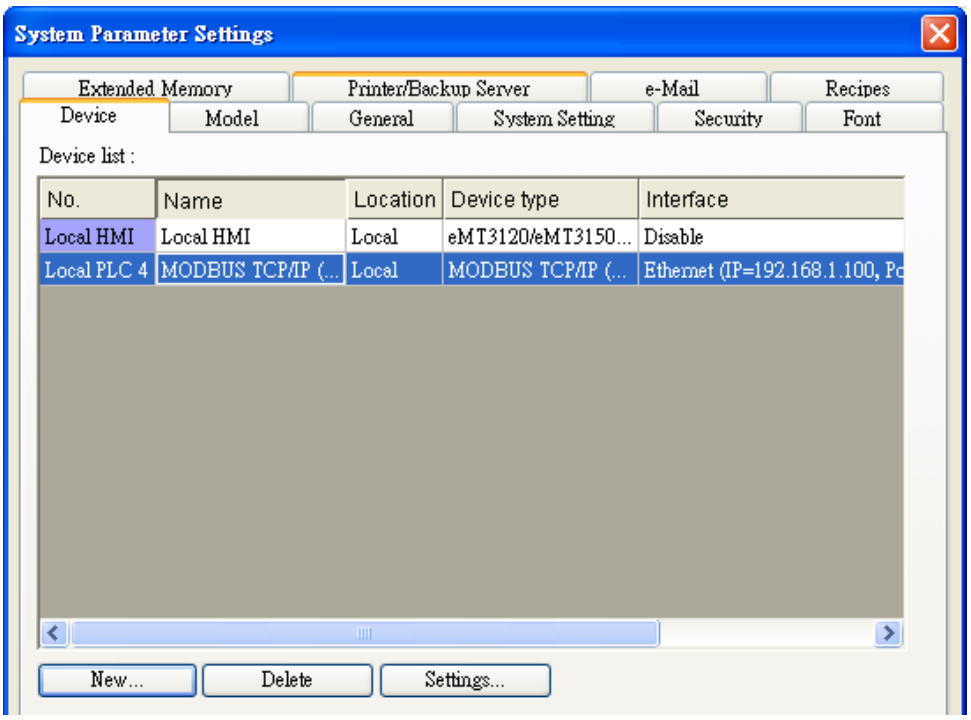

2. Click [Add Address Range Limit] button, Users can define 0x and 1x address range in [0x 1x Address Range] dialog box, referring to bit range of the device used.

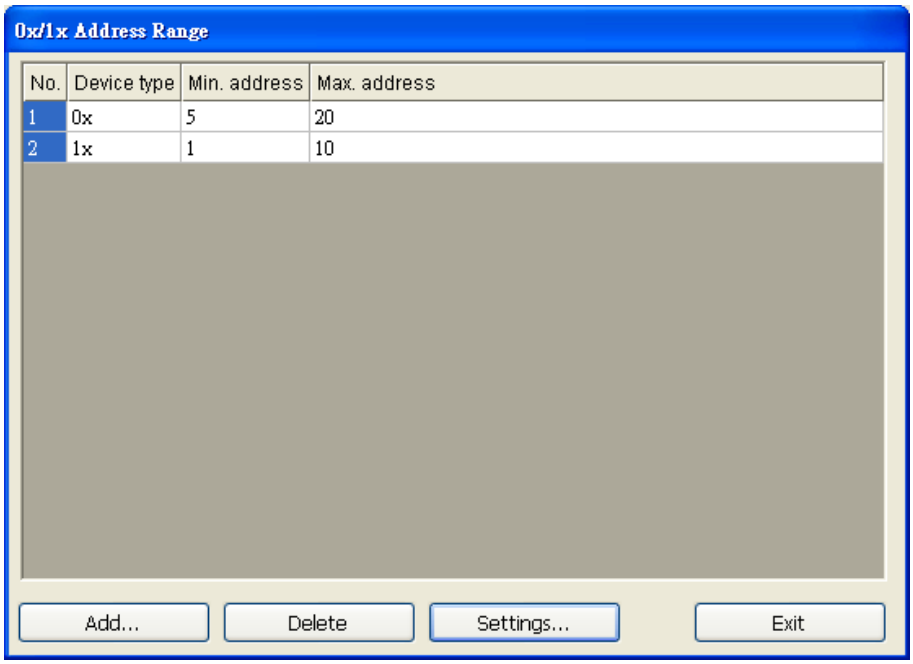

Add：Set [Station No.], [Device Type], [Max. Address] then click [OK] to finish adding as below:



Delete：The selected items will be deleted.

Settings：Set [Station No.], [Device Type], [Max. Address] then click [OK] to finish adding as below:




Example：

Take 0x and 1x as example, the settings depend on bit range of different PLC types.

For 0x, [Device Type] **0x**, [Min. Address]**5**,[Max. Address] **20**.

For 1x, [Device Type] **0x**, [Min. Address]**1,**[Max. Address] **10**.

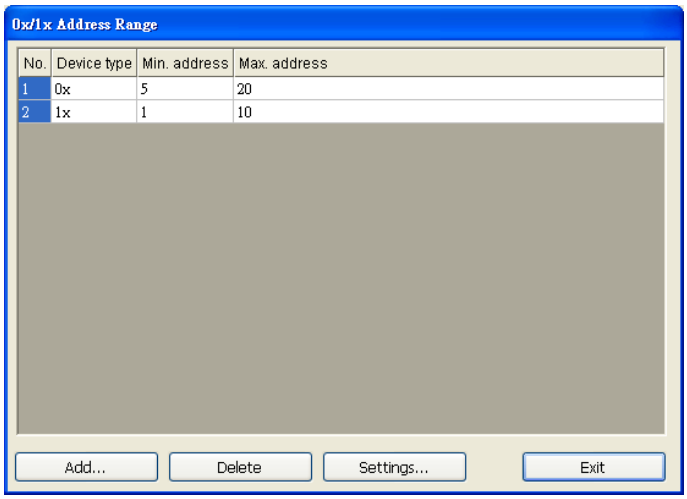

After completing all settings above, the communication is enabled.

Wiring Diagram:

Diagram 1

Ethernet cable:



MODBUS TCP/IP (zero-based addressing)

Supported Series : Modbus RTU TCP/IP device.
Website: http://www.modbus.org

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS TCP/IP (zero-based addressing)		
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.	1	0~255	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	0 ~ 65535	Output bit
B	1x	DDDDD	0 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	0 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	0 ~ 6553515	Output Register bit
B	6x_Bit	DDDDDdd	0 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	0 ~ 65535	Write multiple coils
W	3x	DDDDD	0 ~ 65535	Input Register
W	4x	DDDDD	0 ~ 65535	Output Register
DW	5x	DDDDD	0 ~ 65535	4x double word swap
W	6x	DDDDD	0 ~ 65535	4x single word write

Wiring Diagram:

Ethernet cable:



MODBUS TCP/IP 32Bit

Supported Series: Modbus RTU TCP/IP device.
Website: http://www.modbus.org

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	MODBUS TCP/IP 32Bit		
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.	1	0~255	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output bit
B	1x	DDDDD	1 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	6x_Bit	DDDDDdd	100 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	1 ~ 65535	Write multiple coils
W	3x	DDDDD	1 ~ 65535	Input Register
W	4x	DDDDD	1 ~ 65535	Output Register
DW	5x	DDDDD	1 ~ 65535	4x double word swap
W	6x	DDDDD	1 ~ 65535	4x single word write
W	4x_32Bit*	DDDDD	1 ~ 65535	

4x_32Bit will only read / write 2 words for each package, for continuous addresses, it will be divided into several packages.

Wiring Diagram:

Ethernet cable:



Moeller XC-CPU101

Supported Series: MOELLER XC100/200 series
Website: http://www.moeller.net

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Moeller XC-CPU101		
PLC I/F	RS232		
Baud rate	38400	4800 ~ 57600	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Note
B	IX	DDo	0 ~ 157	
B	QX	DDo	0 ~ 157	
B	MX	DDDDo	0 ~ 40957	
W	IW	DD	0 ~ 15	
W	QW	DD	0 ~ 15	
W	MW	DDDD	0 ~ 4095	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P RJ45 Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	5 TD
Tx	3	7	⟷	8 RD
GND	5	5	⟷	4 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1		RS232 8P RJ45 Male
	RS232 9P Female		
Rx	2	⟷	5 TD
Tx	3	⟷	8 RD
GND	5	⟷	4 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P RJ45 Male
Rx	9	⟷	5 TD
Tx	6	⟷	8 RD
GND	5	⟷	4 GND

motrona CT-150

Supported Series: motrona CT-150
Website: http://motrona.net/index.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	motrona CT-150		
PLC I/F	RS232	RS232/RS485	
Baud rate	9600	1200 ~ 38400	
Data bits	7	Even,Odd,None	
Parity	Even	7,8	
Stop bits	1	1,2	
PLC sta. no.	11	11 ~ 99	The station number must not contain 0.

Device Address:

Bit/Word	Device type	Format	Range	Note
W	An	D	4 ~ 8	
W	Bn	D	1 ~ 9	
W	Cn	DD	0 ~ 99	
W	An_32Bit	D	4 ~ 8	
W	Bn_32Bit	D	1 ~ 9	
W	Cn_32Bit	DD	0 ~ 99	
W	ERR_CNT	D	0	
W	LV_VAL	D	0	
W	PRTMARK_ERR	D	0	
W	BAT_CNT	D	0	
W	WASTE_CNT	D	0	
W	LINE_SPD	D	0	
W	ACT_CUT_LEN	D	0	
W	ACT_CUT_ERR_M	D	0	
W	ACT_CUT_ERR_L	D	0	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TXD
Tx	3	7	⟷	2 RXD
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1		RS232 9P D-Sub Female
	RS232 9P Female		
Rx	2	⟷	3 TXD
Tx	3	⟷	2 RXD
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	3 TXD
Tx	6	⟷	2 RXD
GND	5	⟷	5 GND

motrona CT15012B

Supported Series: motrona CT15012B
Website: http://motrona.net/index.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	motrona CT15012B		
PLC I/F	RS232		
Baud rate	9600		
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	11		

Device Address:

Bit/Word	Device type	Format	Range	Note
W	Cn	DD	0 ~ 99	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TXD
Tx	3	7	⟷	2 RXD
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1		RS232 9P D-Sub Female
	RS232 9P Female		
Rx	2	⟷	3 TXD
Tx	3	⟷	2 RXD
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	3 TXD
Tx	6	⟷	2 RXD
GND	5	⟷	5 GND

motrona MC700

Supported Series: motrona MC700
Website: http://motrona.net/index.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	motrona MC700		
PLC I/F	RS232		
Baud rate	9600		
Data bits	7		
Parity	Even		
Stop bits	1		
PLC sta. no.	11		

Device Address:

Bit/Word	Device type	Format	Range	Note
W	ERCD	HHHH	0 ~ FFFF	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		
	RS232 9P Female	RS232 9P Female		RS-232 9P D-Sub Female
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE /***

HMI			PLC
	COM1 RS232 9P Female		RS-232 9P D-Sub Female
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS-232 9P D-Sub Female
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

Nanjing CIGU Controller (for i-Series only)

Website: http://www.cigu.org.cn/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Nanjing CIGU Controller		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	4x	DDD	1 ~ 107	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	7 D-
Data+	2	9	⟷	8 D+
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	7 D-
Data+	6	1	⟷	8 D+
GND	5	5	⟷	5 GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	7 D-
Data+	2	8	⟷	8 D+
GND	**5**	**9**	⟷	5 GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	
	RS485 2W 9P Male	RS485 2W 9P Male	RS485 2W 9P D-Sub Male
Data-	1	6	7 D-
Data+	2	9	8 D+
GND	5	5	5 GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	
	RS485 2W 9P Female	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	7	7 D-
Data+	2	8	8 D+
GND	5	5	5 GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	
	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	7 D-
Data+	2	8 D+
GND	5	5 GND

Nanotec Stepper Motor

Supported Series: Nanotec Stepper Motor
Website: http://en.nanotec.com/start.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Nanotec Stepper Motor		
PLC I/F	RS485 2W		
Baud rate	115200		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	A1 ~ A14	DD	1 ~ 32	
W	B1 ~ B17	D	1	
W	B18	DD	1 ~ 32	
W	B19 ~ B24	D	1	
W	B25 ~ B26	DD	1 ~ 8	
W	B27 ~ B46	D	1	
W	C1 ~ C6	D	1	
W	D1 ~ D13	D	1	
W	E1 ~ E6	D	1	
W	F1 ~ F41	D	1	
W	G1	D	1	
W	G2	DD	1 ~ 10	
W	G3 ~ G5	DD	1 ~ 7	
W	H1 ~ H10	D	1	
W	J1 ~ J6	D	1	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Female
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	7 Out -
			→	9 In -
Data+	2	9	⟷	2 Out +
			→	4 In +
GND	5	5	⟷	8 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Female
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	7 Out -
			→	9 In -
Data+	6	1	⟷	2 Out +
			→	4 In +
GND	5	5	⟷	8 GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Female
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	→	7 Out -
			→	9 In -
Data+	2	8	→	2 Out +
			→	4 In +
GND	5	9	→	8 GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Female
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	→	7 Out -
			→	9 In -
Data+	2	9	→	2 Out +
			→	4 In +
GND	5	5	→	8 GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 2W 9P D-Sub Female
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	7 Out -
			9 In -
Data+	2	8	2 Out +
			4 In +
GND	5	5	8 GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	RS485 2W 9P D-Sub Female
	RS485 2W 9P Female	
Data-	1	7 Out -
		9 In -
Data+	2	2 Out +
		4 In +
GND	5	8 GND

NMEA 0183

Supported Series: NMEA 0183 Interface Standard.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	NMEA 0183		
PLC I/F	RS232		
Baud rate	4800	4800 ~ 115200	
Data bits	8	7,8	
Parity	None	None,Even,Odd	
Stop bits	1	1,2	

NMEA Sentences:

Support sentences				
AAM	ACK	ADS	AKD	ALA
ALM	ALR	APB	BEC	BOD
BWC	BWR	BWW	COP	CUR
DBT	DCR	DDC	DOR	DPT
DSC	DTM	ETL	EVE	FIR
FSI	GBS	GGA	GLC	GLL
GMP	GNS	GRS	GSA	GST
GSV	HDG	HMR	HMS	HSC
HSS	HTC	HTD	LCD	MLA
MSK	MSS	MTW	MWD	MWV
NAK	NRM	OSD	PRC	RMA
RMB	RMC	ROR	ROT	RPM
RSA	RSD	RST	SFI	SID
STN	THS	TLL	TRD	TTM
TUT	TXT	UID	VBW	VDR
VER	VHW	VLW	VPW	VTG
WAT	WCV	WNC	WPL	XTE
XTR	ZDA	ZDL	ZFO	ZTG

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	SD
Tx	3	7	⟷	RD
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	SD
Tx	3	⟷	RD
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	SD
Tx	6	⟷	RD
GND	5	⟷	GND


ODVA EtherNet/IP Explicit Messaging


Supported Series: Crevis EtherNet/IP NA-9188
Website: http://www.crevis.co.kr/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	ODVA EtherNet/IP Explicit Messaging		
PLC I/F	Ethernet		
Port no.	44818		
PLC sta. no.	0		

Please click [Tag Editor] when adding this driver to initiate tag information. To edit address tag, please see the factory manual.

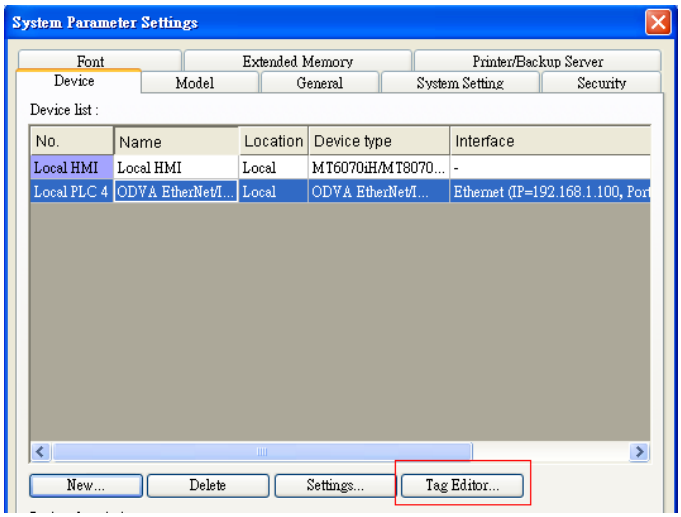

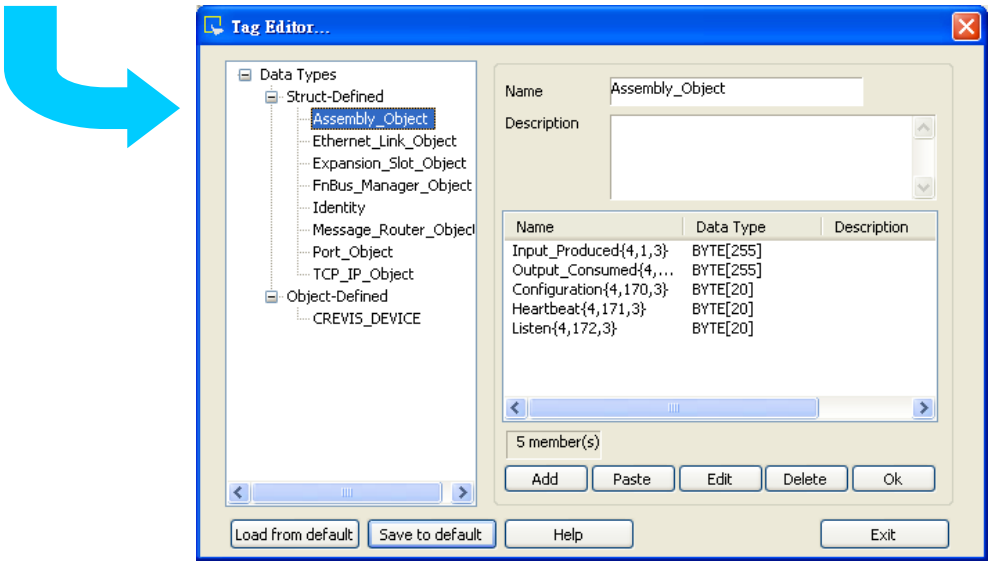

The following is an example of how to add Vendor ID in Tag Editor. See *3.2.3 Identity Object* in factory manual for the detail of this ID.


3.2. Identity Object

Class Code: 01_{HEX}

3.2.3. Instance Attributes

Instance ID	Attribute ID	Access Rule	Name	Data Type	Value
1	1	Get	Vendor ID	UINT	741_{DEC} (Crevis Co., Ltd)
	2	Get	Device Type	UINT	$0C_{HEX}$ (Communications Adapter)
	3	Get	Product Code	UINT	512_{DEC} (NA-9188)
	4	Get	Revision - Major - Minor	Structure of: USINT USINT	 1 ~ 9 1 ~ 255

Under Struct-Defined select Identity to add Vendor_ID. {1,1,1} represents {**Class code** , **Instance ID** , **Attribute ID**}. Enter “UINT” in Data Type field according to the factory manual. When finished, this data member can be found in Identity Object.

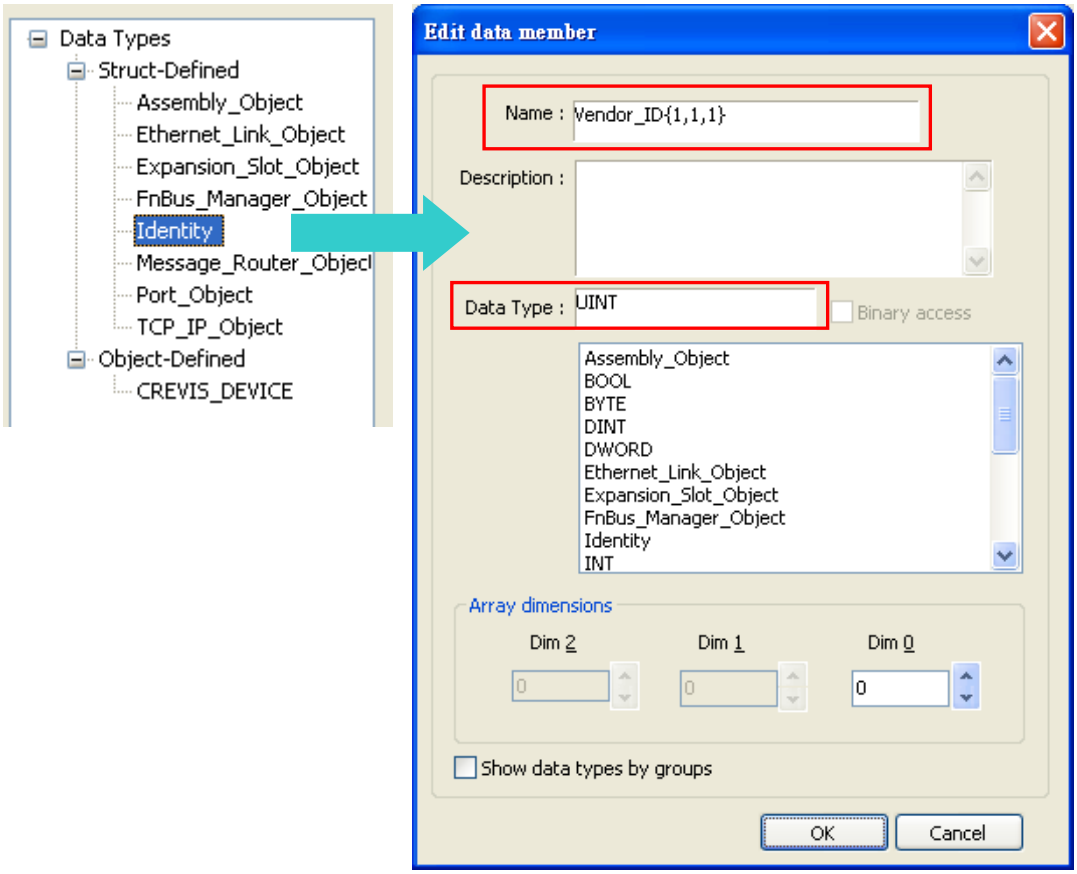


Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
Array	Word array for ASCII input and display	Length=word

Wiring Diagram:

Ethernet cable:

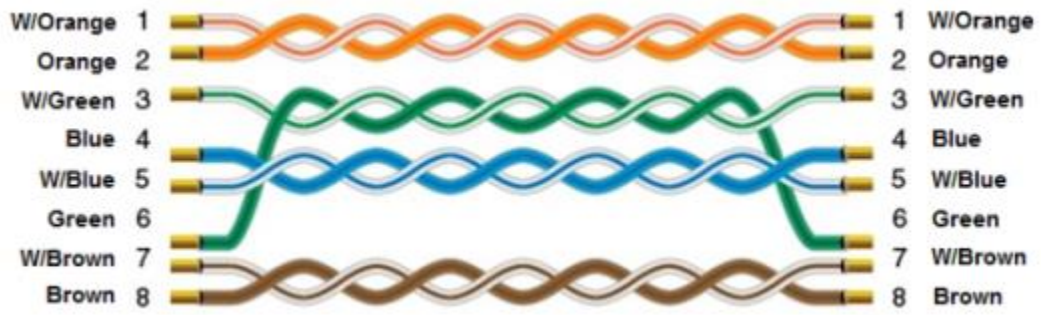

OMRON C/CQM1 Series

Supported Series: OMRON C, CPM, CPL, CQM Series (Host Link Protocol)
Website: http://www.omron.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OMRON C/CQM1 Series		
PLC I/F	RS232	RS232, RS422, RS485	
Baud rate	9600	9600, 19200	
Data bits	7	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	2	1 or 2	
PLC sta. no.	0	0-31	Host Link Station No.

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

PLC Setting:

Communication mode	Host Link Protocol / PLC must be set to monitor mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	IR	DDDDdd	0 ~ 409515	I/O and Internal Relay
B	HR	DDDDdd	0 ~ 409515	Hold Relay
B	LR	DDDDdd	0 ~ 409515	Link Relay
B	IR (Force Set/Reset)	DDDDdd	0 ~ 409515	
B	HR (Force Set/Reset)	DDDDdd	0 ~ 409515	
B	LR (Force Set/Reset)	DDDDdd	0 ~ 409515	
B	AR	DDDDdd	0 ~ 409515	Auxiliary Relay
W	AR_W	DDDD	0 ~ 4095	
W	IR_W	DDDD	0 ~ 4095	

Bit/Word	Device type	Format	Range	Memo
W	HR_W	DDDD	0 ~ 4095	
W	LR_W	DDDD	0 ~ 4095	
W	TC	DDD	0 ~ 255	
W	DM	DDDD	0 ~ 9999	Data Register

Wiring Diagram:

CPU Port (CPM2A,CQM1/1H,C200H/HS/ALPHA series)
Communication Module:
CPM1-CIF01 adapter (for CPM1/CPM1A/CPM2A series, CQM1/CQM1H series)
CPM1H-SCB41 communication module (for CQM1H-CPU51/61)
(Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 SD
Tx	3	7	⟷	3 RD
GND	5	5	⟷	9 GND
			⟷	4 RS
			⟷	5 CS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


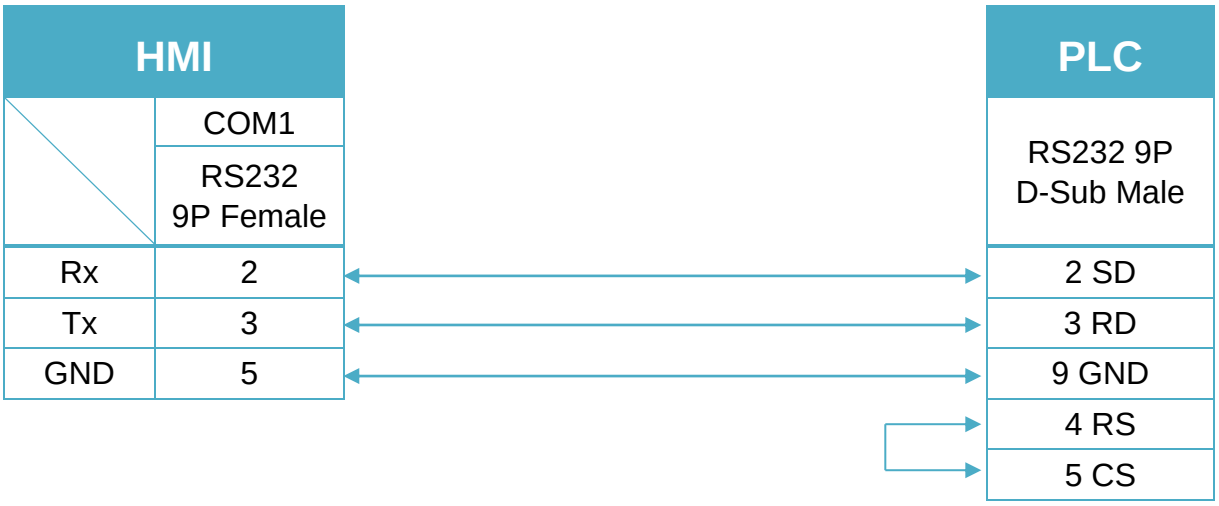


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

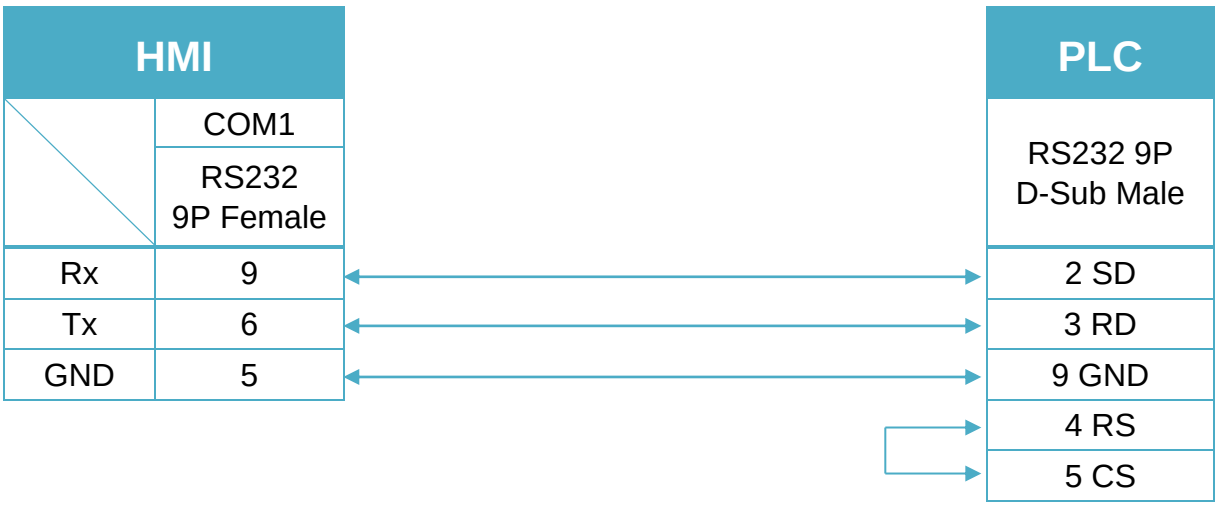

C200h-LK201,3G2A6-LK201 communication module
C200HW-COM02/03/04/05/06 communication module
(Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 SD
Tx	3	7	⟷	3 RD
GND	5	5	⟷	7 GND
			→	4 RS
			→	5 CS

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


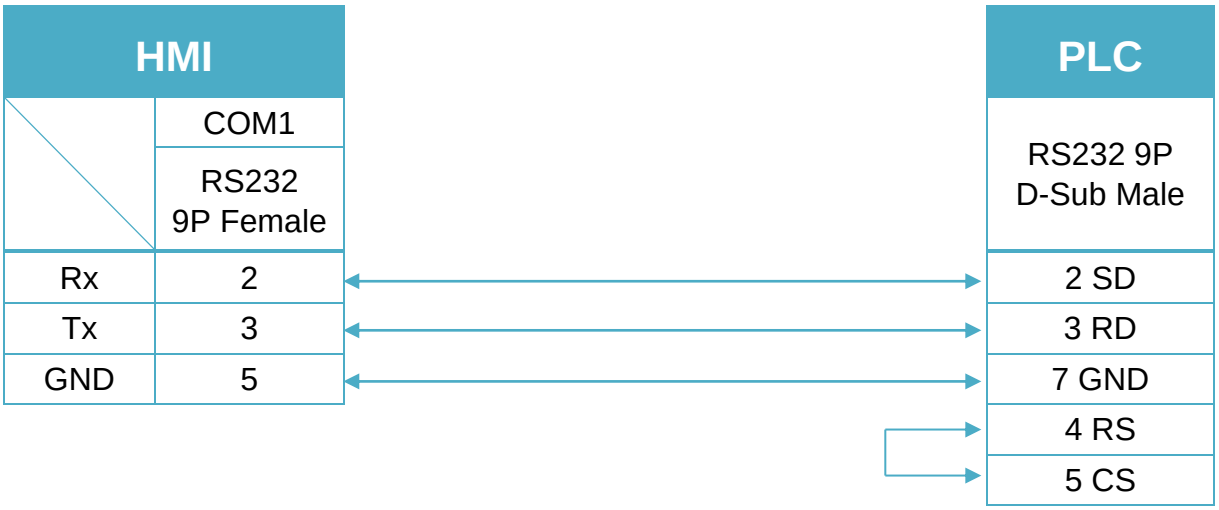


Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

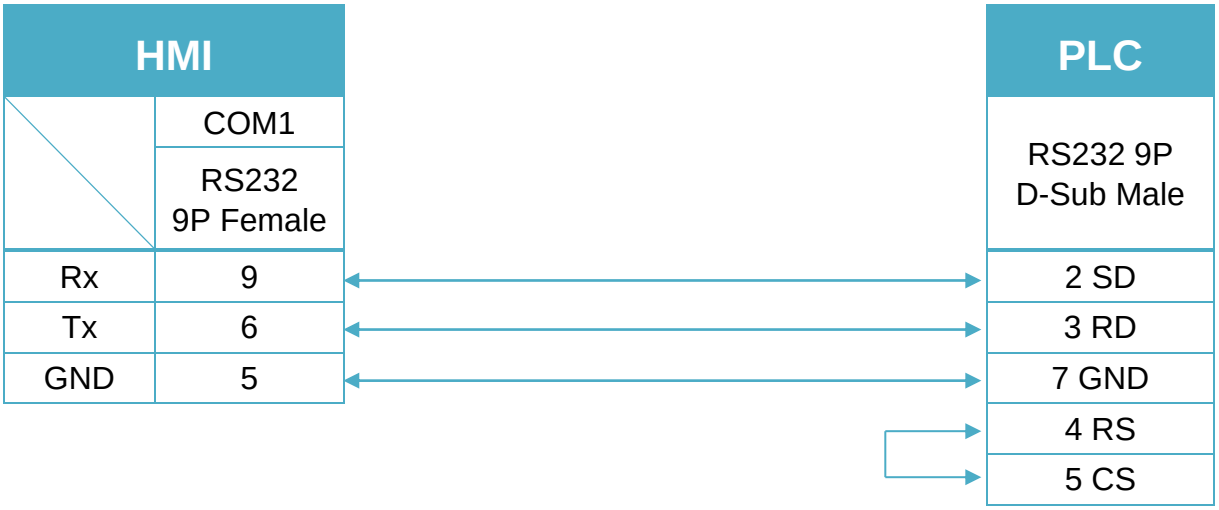

OMRON CJ/CS/CP

Supported Series: OMRON CP1E,CP1L, CP1H, CJ1M, CJ2M, CJ1H, CJM1G, CS1H and CS1G. (Host Link Protocol FINS command), this driver supports Extend Addressing Mode.
Website: http://www.omron.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OMRON CJ/CS/CP		
PLC I/F	RS232	RS232, RS422, RS485	
Baud rate	9600	9600~115200	
Data bits	7	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	2	1 or 2	
PLC sta. no.	0	0-31	Host Link Station No.

Online simulator	YES	**Extend address**	YES
Broadcast	NO		

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

PLC Setting:

Communication	Host Link Protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CIO_Bit	DDDDDdd	0 ~ 3276715	Channel I/O (CIO)
B	W_Bit	DDDDDdd	0 ~ 3276715	Work Area (WR)
B	H_Bit	DDDDDdd	0 ~ 3276715	Holding Area (HR)
B	D_Bit	DDDDDdd	0 ~ 3276715	Data Memory (DM)
B	A_Bit	DDDDDdd	0 ~ 3276715	Auxiliary Relay (AR)
B	T_Bit	DDDDDdd	0 ~ 3276715	Timer (TIM)
B	C_Bit	DDDDDdd	0 ~ 3276715	Counter (CNT)
B	C_flag	DDDD	0 ~ 4095	

Bit/Word	Device type	Format	Range	Memo
B	T_flag	DDDD	0 ~ 4095	
B	LR_Bit	DDDdd	0 ~ 19915	
B	EM0_Bit ~ EMC_Bit	DDDDDdd	0 ~3276715	Extend Memory
W	T	DDDDD	0 ~ 32767	Timer (TIM)
W	H	DDDDD	0 ~ 32767	Holding Area (HR)
W	D	DDDDD	0 ~ 32767	Data Memory (DM)
W	A	DDDDD	0 ~ 32767	Auxiliary Relay (AR)
W	W	DDDDD	0 ~ 32767	Work Area (WR)
W	C	DDDDD	0 ~ 32767	Counter (CNT)
W	CIO	DDDDD	0 ~ 32767	Channel I/O (CIO)
W	EM0 ~ EMC	DDDDD	0 ~ 32767	Extend Memory
W	LR	DDD	0 ~ 199	

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 SD
Tx	3	7	⟷	3 RD
GND	5	5	⟷	9 GND
			⟷	4 RS
			⟷	5 CS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	2 SD
Tx	3	3 RD
GND	5	9 GND
		4 RS
		5 CS

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	9	2 SD
Tx	6	3 RD
GND	5	9 GND
		4 RS
		5 CS

RS-485 4W Terminal (Diagram 4 ~ Diagram 7)

CP1H/CP1L CP1W-CIF11 RS485 4W : 9P D-Sub to Termainals:

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		CP1W-CIF11 RS485 4W Terminal
Rx-	1	⟷	SDA
Rx+	2	⟷	SDB
Tx-	3	⟷	RDA
TX+	4	⟷	RDB
GND	5	⟷	FG

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		CP1W-CIF11 RS485 4W Terminal
Rx-	7	⟷	SDA
Rx+	6	⟷	SDB
Tx-	9	⟷	RDA
TX+	8	⟷	RDB
GND	5	⟷	FG

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		CP1W-CIF11 RS485 4W Terminal
Rx-	1	⟷	SDA
Rx+	2	⟷	SDB
Tx-	3	⟷	RDA
TX+	4	⟷	RDB
GND	5	⟷	FG

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		CP1W-CIF11 RS485 4W Terminal
Rx-	1	⟷	SDA
Rx+	2	⟷	SDB
Tx-	3	⟷	RDA
TX+	4	⟷	RDB
GND	5	⟷	FG

CP1W-CIF11: SW1 ON, others OFF.

OMRON CJ/CS/CP (Ethernet - FINS/TCP)

Supported Series: OMRON CJ Series, CS Series, CP Series +Ethernet Module. (Ethernet FINS)

Website: http://www.omron.com/


*On initialization, switch from RUN MODE to MONITOR MODE.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OMRON CJ/CS/CP (Ethernet - FINS/TCP)		
PLC I/F	Ethernet		
Port no.	9600		
PLC sta. no.	0		

PLC Setting:

Communication mode	Ethernet (FINS/TCP) protocol

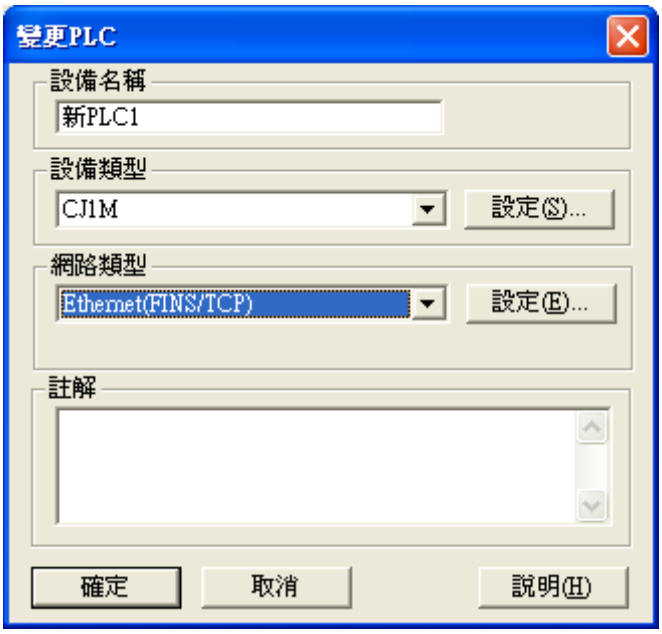

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CIO_Bit	DDDDDdd	0 ~ 3276715	Channel I/O (CIO)
B	W_Bit	DDDDDdd	0 ~ 3276715	Work Area (WR)
B	H_Bit	DDDDDdd	0 ~ 3276715	Holding Area (HR)
B	A_Bit	DDDDDdd	0 ~ 3276715	Auxiliary Relay (AR) (Read only)
B	D_Bit	DDDDDdd	0 ~ 3276715	Data Memory (DM)
B	T_Bit	DDDDDdd	0 ~ 3276715	Timer (TIM)
B	C_Bit	DDDDDdd	0 ~ 3276715	Counter (CNT)
B	C_Flag	DDDD	0 ~ 4095	
B	T_Flag	DDDD	0 ~ 4095	
B	EM0_Bit ~ EMC_Bit	DDDDDdd	0 ~ 3276715	Extend Memory
W	CIO	DDDDD	0 ~ 32767	Channel I/O (CIO)
W	W	DDDDD	0 ~ 32767	Work Area (WR)
W	H	DDDDD	0 ~ 32767	Holding Area (HR)
W	A	DDDDD	0 ~ 32767	Auxiliary Relay (AR) (Read only)
W	C	DDDDD	0 ~ 32767	Counter (CNT)
W	T	DDDDD	0 ~ 32767	Timer (TIM)
W	D	DDDDD	0 ~ 32767	Data Memory (DM)
W	EM0 ~ EMC	DDDDD	0 ~ 32767	Extend Memory

Wiring Diagram:

Ethernet cable:



OMRON CP Series (USB)

Supported Series: OMRON CP1E CPU Module USB Port.
Website: http://www.omron.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OMRON CP Series (USB)		
PLC I/F	USB		USB Host

Online simulator	No

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CIO_Bit	DDDdd	0 ~ 28915	Channel I/O (CIO)
B	A_Bit	DDDdd	0 ~ 75315	Auxiliary Relay (AR)
B	T_Bit	DDDdd	0 ~ 25515	Timer (TIM)
B	C_Bit	DDDdd	0 ~ 25515	Counter (CNT)
B	D_Bit	DDDDdd	0 ~ 204715	Data Memory (DM)
B	H_Bit	DDdd	0 ~ 4915	Holding Area (HR)
B	W_Bit	DDdd	0 ~ 9915	Work Area (WR)
W	CIO	DDD	0 ~ 289	Channel I/O (CIO)
W	A	DDD	0 ~ 753	Auxiliary Relay (AR)
W	T	DDD	0 ~ 255	Timer (TIM)
W	C	DDD	0 ~ 255	Counter (CNT)
W	D	DDDD	0 ~ 2047	Data Memory (DM)
W	H	DD	0 ~ 49	Holding Area (HR)
W	W	DD	0 ~ 99	Work Area (WR)

OMRON E5CN/E5EZ/E5ZN

Supported Series: OMRON E5CN series temperature controller with communication options. E5EN/CN/GN/EZ/ZN series.
Website: http://oeiweb.omron.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OMRON E5CN		
PLC I/F	RS485 2W		
Baud rate	9600	9600/19200/38400/ 57600/115200	
Data bits	7	7,8	
Parity	Even	Even, Odd, None	
Stop bits	2	1,2	
PLC sta. no.	0	0-99	

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device	Format	Range	Memo
B	Status_CH1	DD	0 ~ 31	Page40
B	Status_CH2	DD	0 ~ 31	
DW	C0	HHHH	0 ~ 270f	Read only (Hex) Page34
DW	C1	HHHH	0 ~ 270f	Read/Write (Hex) Page35
DW	C2	HHHH	0 ~ 270f	Read/Write (Hex) Page35
DW	C3	HHHH	0 ~ 270f	Read/Write (Hex) Page36
W	Code00_00	H	0	Communications writing OFF (disabled)
W	Code00_01	H	0	Communications writing ON(enabled)
W	Code01_00	H	0	Run
W	Code01_01	H	0	Stop
W	Code02_00	H	0	Multi-SP Set point 0

Bit/Word	Device	Format	Range	Memo
W	Code02_01	H	0	Multi-SP Set point 1
W	Code02_02	H	0	Multi-SP Set point 2
W	Code02_03	H	0	Multi-SP Set point 3
W	Code03_00	H	0	AT cancel
W	Code03_01	H	0	AT execute
W	Code04_00	H	0	Write mode (Backup)
W	Code04_01	H	0	Write mode (Ram)
W	Code05_00	H	0	Save RAM data
W	Code06_00	H	0	Software reset
W	Code07_00	H	0	Move to setup area 1
W	Code08_00	H	0	Move to protect level
W	Code01_10	H	0	
W	Code01_11	H	0	
W	Code01_F0	H	0	
W	Code01_F1	H	0	
W	Code02_10	H	0	
W	Code02_11	H	0	
W	Code02_F0	H	0	
W	Code02_F1	H	0	
W	Code03_10	H	0	
W	Code03_11	H	0	
W	Code03_F0	H	0	
W	Code03_F1	H	0	
W	Code09_00	H	0	
W	Code09_01	H	0	
W	Code09_10	H	0	
W	Code09_11	H	0	
W	Code09_F0	H	0	
W	Code09_F1	H	0	
W	Code0A_00	H	0	
W	Code0B_00	H	0	
W	Code0C_00	H	0	
W	Code0C_01	H	0	
W	Code0C_02	H	0	
W	Code0C_0F	H	0	
W	Code0C_10	H	0	
W	Code0C_11	H	0	

Bit/Word	Device	Format	Range	Memo
W	Code0C_12	H	0	
W	Code0C_1F	H	0	
W	Code0C_F0	H	0	
W	Code0C_F1	H	0	
W	Code0C_F2	H	0	
W	Code0C_FF	H	0	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		OMRON E5CN Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	12 B
Data+	2	9	⟷	11 A
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		OMRON E5CN Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	12 B
Data+	6	1	⟷	11 A
GND	5	5	⟷	GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		OMRON E5CN Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	12 B
Data+	2	8	⟷	11 A
GND	**5**	**9**	⟷	GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		OMRON E5CN Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	12 B
Data+	2	9	⟷	11 A
GND	5	5	⟷	GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		OMRON E5CN Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	↔	12 B
Data+	2	8	↔	11 A
GND	5	5	↔	GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		OMRON E5CN Terminal
	RS485 2W 9P Female		
Data-	1	↔	12 B
Data+	2	↔	11 A
GND	5	↔	GND

Note:

For communication with OMRON E5EZ, please set communication settings to 9600, E, 7, 2, station no. 1.

OMRON Ethernet

Supported Series: OMRON CJ Series, CS Series, CP Series +Ethernet Module. (Ethernet FINS)

Website: http://www.omron.com/


*On initialization, switch from RUN MODE to MONITOR MODE.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OMRON Ethernet		
PLC I/F	Ethernet (UDP)		
Port no.	9600		
PLC sta. no.	0		


PLC Setting:

Communication mode	Ethernet (UDP) protocol

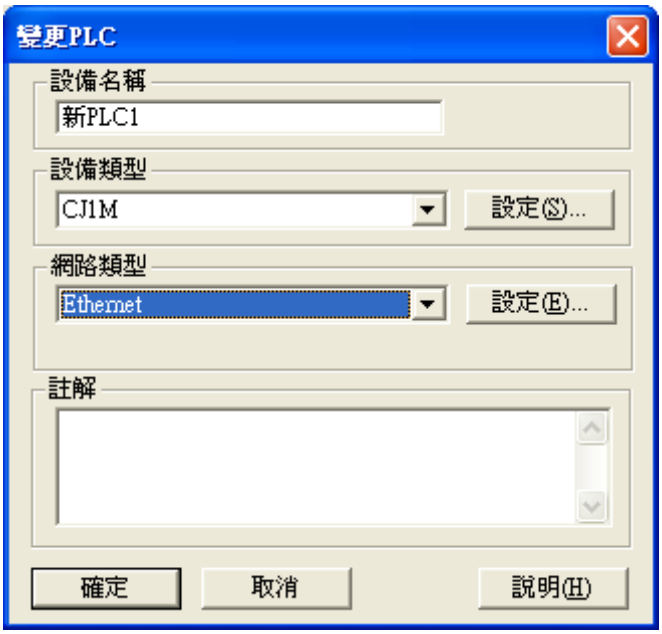


How to connect OMRON NJ and NX Series:


1. In the tree menu on the left hand side, select Controller Setup » Built-in EtherNet/IP Port Settings.

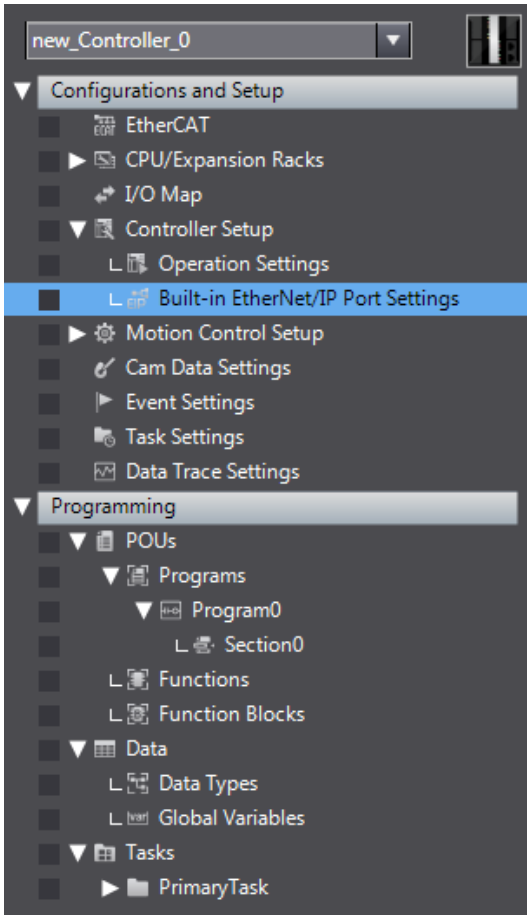

2. Click the button (FINS) marked in the red frame below, and enter 9600 as the FINS/UDP port number. Select Automatic Generation as conversion method.

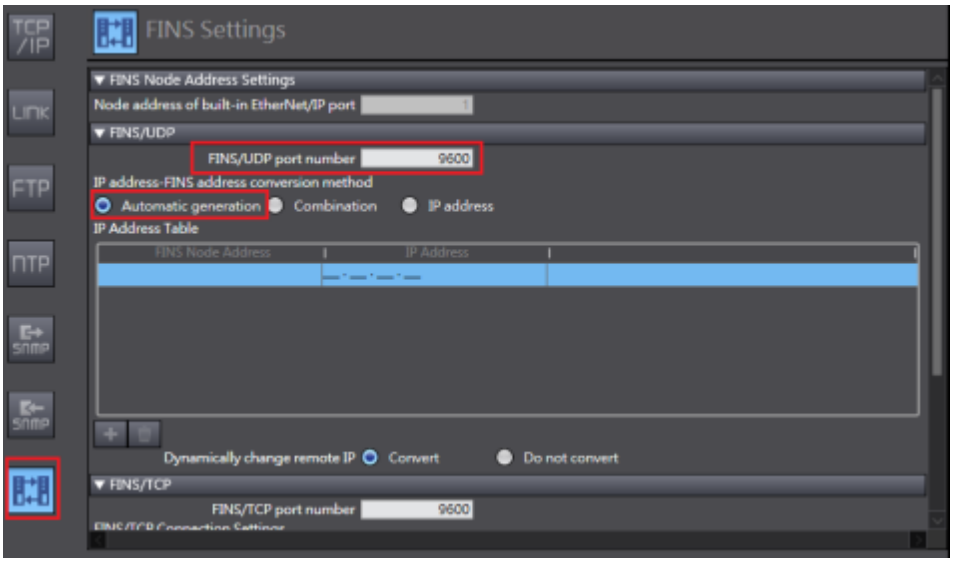

3. Select Global Variables to set PLC address.

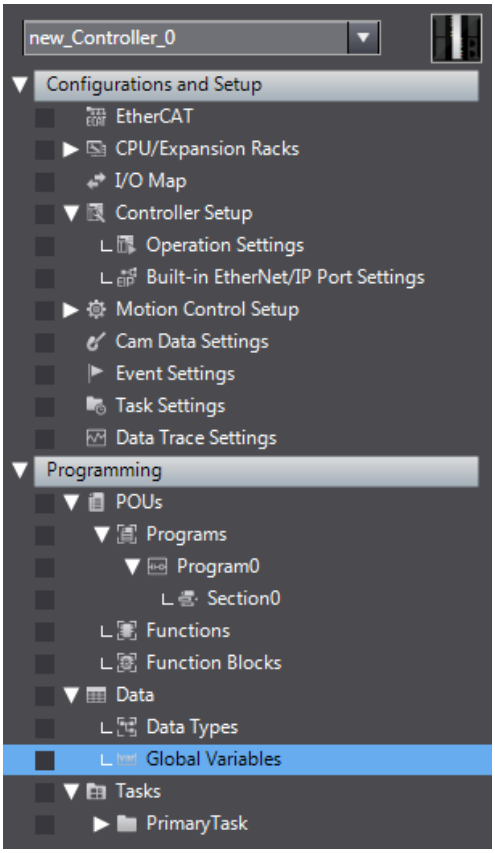

4. Please note that the setting marked in red frame below should be an absolute address mapping to Omron Etherne.

Name	Data Type	Initial Value	AT	Retain	Constant	Network Publish	Comment
TestW0	WORD		%W0	☐	☐	Do not publish	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CIO_Bit	DDDDDdd	0 ~ 3276715	Channel I/O (CIO)
B	W_Bit	DDDDDdd	0 ~ 3276715	Work Area (WR)
B	H_Bit	DDDDDdd	0 ~ 3276715	Holding Area (HR)
B	A_Bit	DDDDDdd	0 ~ 3276715	Auxiliary Relay (AR) (Read only)
B	D_Bit	DDDDDdd	0 ~ 3276715	Data Memory (DM)
B	T_Bit	DDDDDdd	0 ~ 3276715	Timer (TIM)
B	C_Bit	DDDDDdd	0 ~ 3276715	Counter (CNT)
B	C_Flag	DDDD	0 ~ 4095	
B	T_Flag	DDDD	0 ~ 4095	
B	EM0_Bit ~ EMC_Bit	DDDDDdd	0 ~ 3276715	Extend Memory Bit
B	CIO_Bit_Force	DDDDDdd	0 ~ 3276715	CIO Bit Force Command
W	CIO	DDDDD	0 ~ 32767	Channel I/O (CIO)
W	W	DDDDD	0 ~ 32767	Work Area (WR)
W	H	DDDDD	0 ~ 32767	Holding Area (HR)
W	A	DDDDD	0 ~ 32767	Auxiliary Relay (AR) (Read only)
W	C	DDDDD	0 ~ 32767	Counter (CNT)
W	T	DDDDD	0 ~ 32767	Timer (TIM)
W	D	DDDDD	0 ~ 32767	Data Memory (DM)
W	EM0 ~ EMC	DDDDD	0 ~ 32767	Extend Memory

Wiring Diagram:

Ethernet cable:



OMRON Ethernet (FINS/TCP)

Supported Series: Non OMRON PLC . (Ethernet FINS)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OMRON Ethernet (FINS/TCP)		
PLC I/F	Ethernet		
Port no.	9600		
PLC sta. no.	0		

PLC Setting:

Communication mode	Ethernet (FINS/TCP) protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CIO_Bit	DDDDDdd	0 ~ 3276715	Channel I/O (CIO)
B	W_Bit	DDDDDdd	0 ~ 3276715	Work Area (WR)
B	H_Bit	DDDDDdd	0 ~ 3276715	Holding Area (HR)
B	A_Bit	DDDDDdd	0 ~ 3276715	Auxiliary Relay (AR) (Read only)
B	D_Bit	DDDDDdd	0 ~ 3276715	Data Memory (DM)
B	T_Bit	DDDDDdd	0 ~ 3276715	Timer (TIM)
B	C_Bit	DDDDDdd	0 ~ 3276715	Counter (CNT)
B	C_Flag	DDDD	0 ~ 4095	
B	T_Flag	DDDD	0 ~ 4095	
W	CIO	DDDDD	0 ~ 32767	Channel I/O (CIO)
W	W	DDDDD	0 ~ 32767	Work Area (WR)
W	H	DDDDD	0 ~ 32767	Holding Area (HR)
W	A	DDDDD	0 ~ 32767	Auxiliary Relay (AR) (Read only)
W	C	DDDDD	0 ~ 32767	Counter (CNT)
W	T	DDDDD	0 ~ 32767	Timer (TIM)
W	D	DDDDD	0 ~ 32767	Data Memory (DM)
W	EM0 ~ EMC	DDDDD	0 ~ 32767	Extend Memory

Wiring Diagram:

Ethernet cable:



OMRON EtherNet/IP (NJ Series)

Supported Series: OMRON EtherNet/IP NJ Series PLC
Website: http://www.omron.com/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	OMRON EtherNet/IP (NJ Series)		
PLC I/F	Ethernet		
Port no.	44818		
PLC sta. no.	1		

On-line simulator	Yes	**Multi-HMI connect**	Yes

Instructions:


Note:

1. In Sysmac Studio, please select **[Publish Only]** for **[Network Publish]** when setting address tag.
2. When **[Do not publish]** is selected for a tag, different import methods may lead to different results. When import tags by **[Get Tags from Device]**, the tag will be eliminated. If **[Import tags]** is selected, the tags will be imported, but the communication will not succeed.

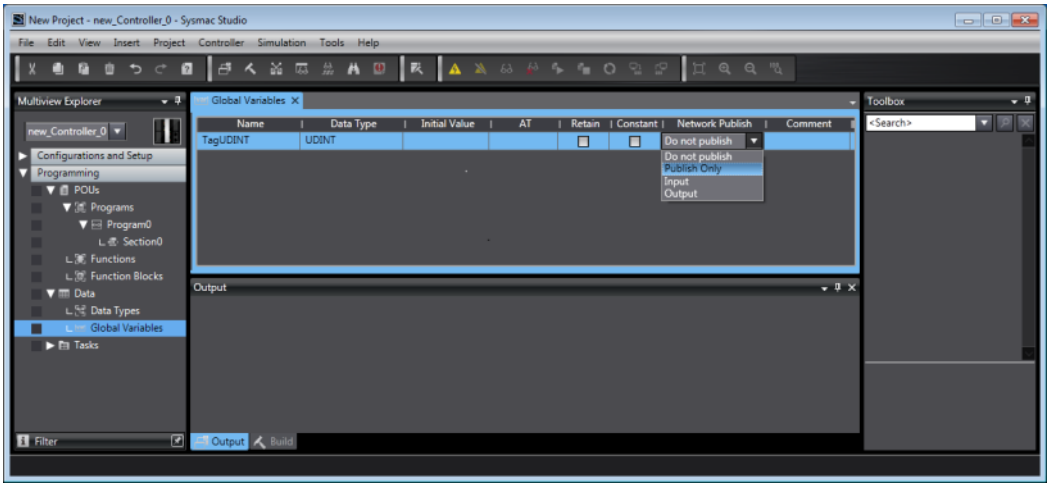


Get Tags from Network


1. In EasyBuilder, open System Parameter Settings, and add **Omron EtherNet/IP (NJ series)**. Set communication parameters, and then click **[Tag Manager]**.

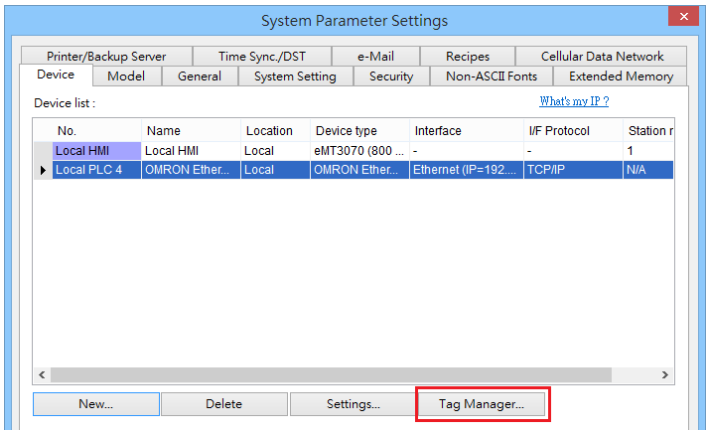

2. Click **[Get Tags]** » **[Get Tags from Device]**.

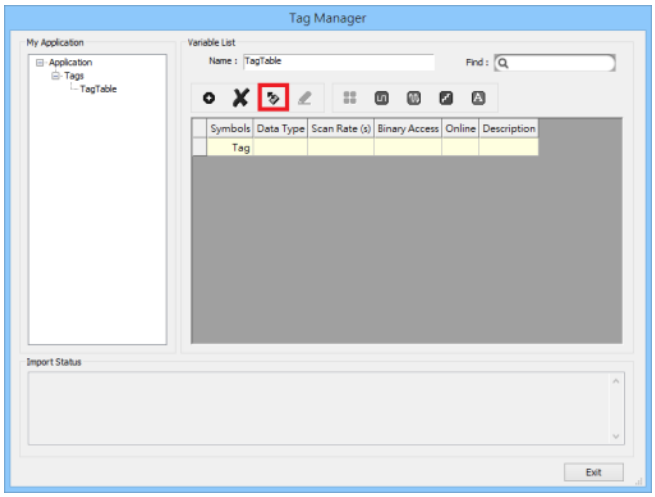


3. The **Import Status** field shows the result, click **[Exit]** to finish importing address tags.

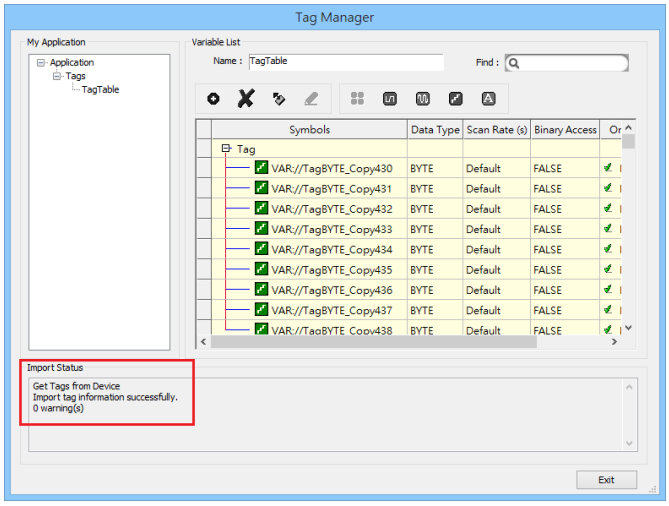


Export Tags from Sysmac Studio


1. Launch Sysmac Studio, under Global Variables create the address tags, and then select **[Tools]** » **[Export Global Variables]**.

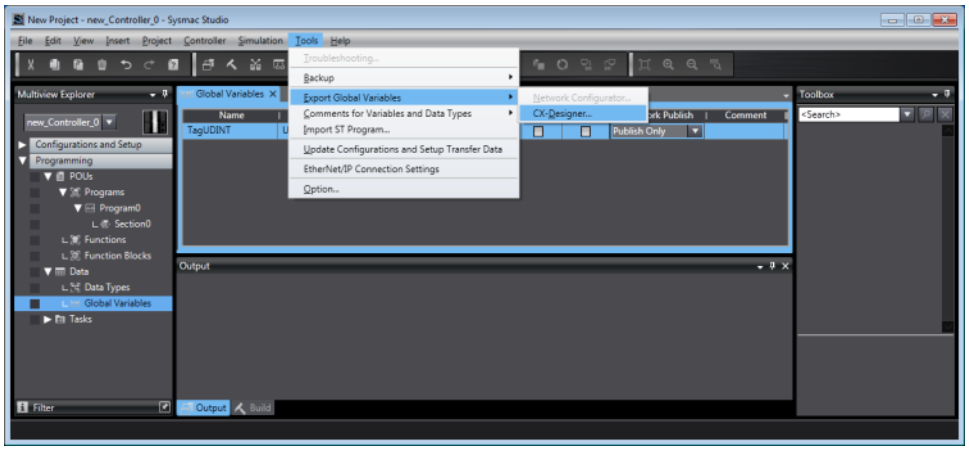


2. Launch EasyBuilder, in System Parameter Settings add **Omron EtherNet/IP (NJ series)**.
3. Click **[Tag Manager]**.

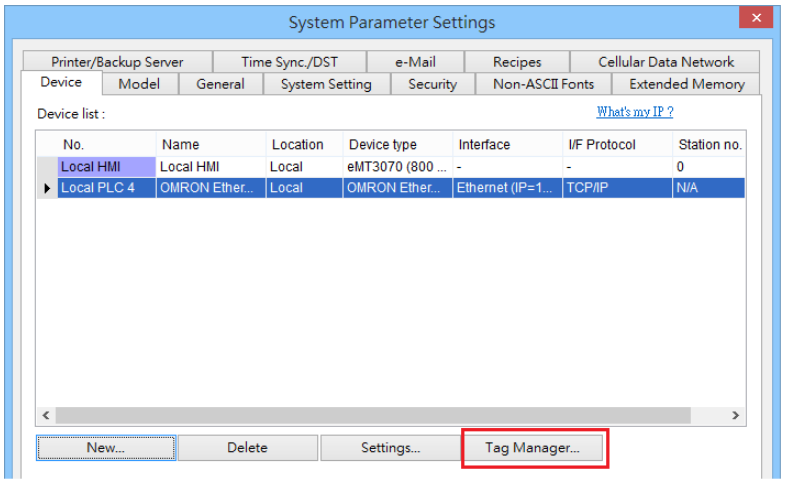

4. Click **[Get Tags]** » **[Import Tags]** and then select the file exported in step 1.

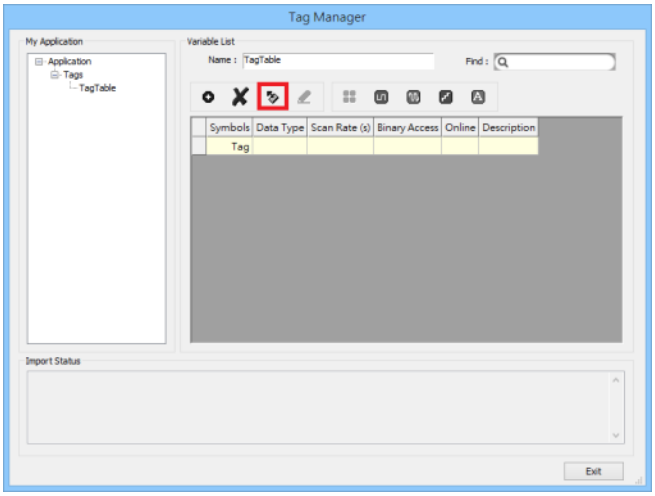

5. The **Import Status** field shows the result, click **[Exit]** to finish importing address tags.

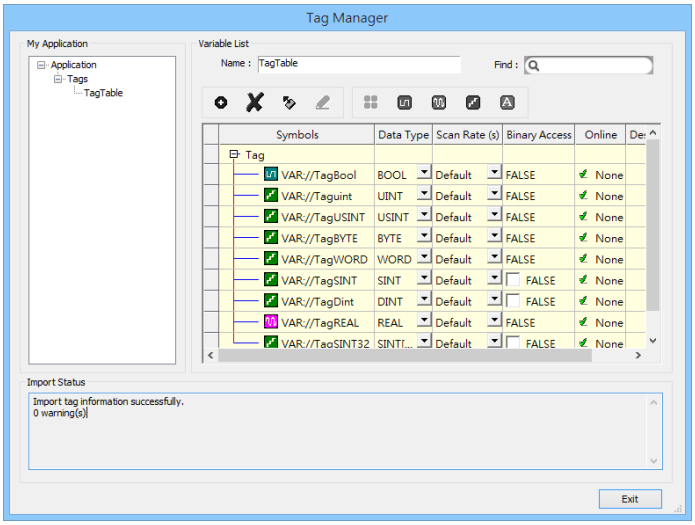

- Supported data types include: BOOL, SINT, BYTE, USINT, INT, WORD, UINT, DINT, REAL, UDINT and DWORD. These data types support one-dimensional array.

Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
Array	Word array for ASCII input and ASCII display	Length=word

Wiring Diagram:

Ethernet cable:



OMRON Host Link

Supported Series: OMRON C, CPM, CPL, CQM Series (Host Link Protocol)
Website: http://www.omron.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OMRON Host Link		
PLC I/F	RS232	RS232, RS422, RS485	
Baud rate	9600	9600, 19200	
Data bits	7	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	2	1 or 2	
PLC sta. no.	0	0-31	Host Link Station No.

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

PLC Setting:

Communication mode	Host Link Protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	IR	DDDDdd	0 ~ 409515	I/O and Internal Relay
B	HR	DDDDdd	0 ~ 409515	Hold Relay
B	LR	DDDDdd	0 ~ 409515	Link Relay
B	IR (Force Set/Reset)	DDDDdd	0 ~ 409515	
B	HR (Force Set/Reset)	DDDDdd	0 ~ 409515	
B	LR (Force Set/Reset)	DDDDdd	0 ~ 409515	
B	AR	DDDDdd	0 ~ 409515	Auxiliary Relay
W	AR_W	DDDD	0 ~ 4095	
W	IR_W	DDDD	0 ~ 4095	
W	HR_W	DDDD	0 ~ 4095	
W	LR_W	DDDD	0 ~ 4095	
W	TC	DDD	0 ~ 255	

Bit/Word	Device type	Format	Range	Memo
W	DM	DDDD	0 ~ 9999	Data Register

Wiring Diagram:

CPU Port (CPM2A,CQM1/1H,C200H/HS/ALPHA series)
Communication Module:
CPM1-CIF01 adapter (for CPM1/CPM1A/CPM2A series, CQM1/CQM1H series)
CPM1H-SCB41 communication module (for CQM1H-CPU51/61)
RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 SD
Tx	3	7	⟷	3 RD
GND	5	5	⟷	9 GND
			⟷	4 RS
			⟷	5 CS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


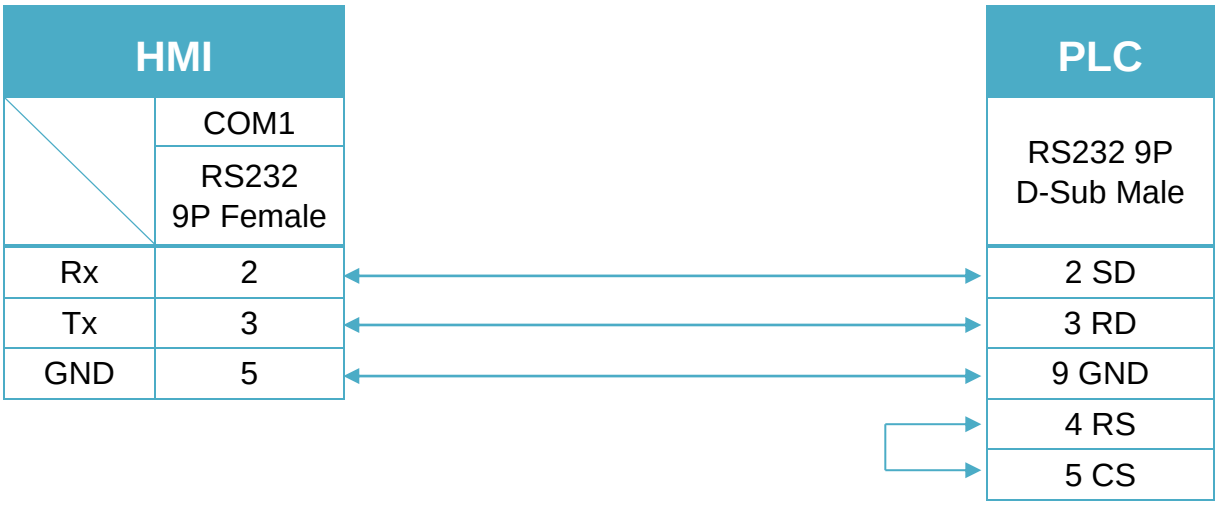


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

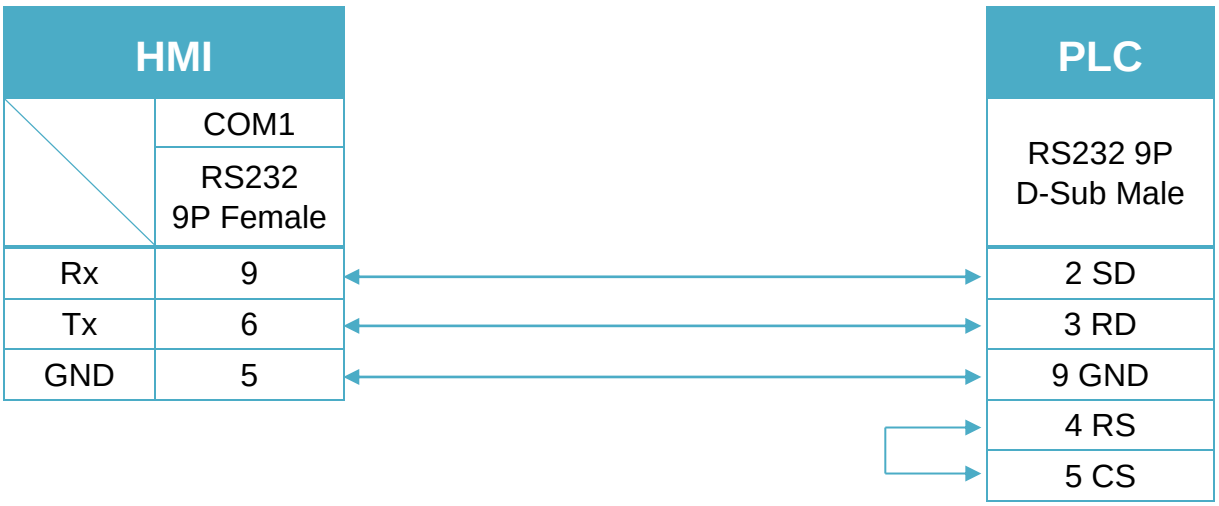

C200h-LK201,3G2A6-LK201 communication module
C200HW-COM02/03/04/05/06 communication module

RS-232 9P D-Sub (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

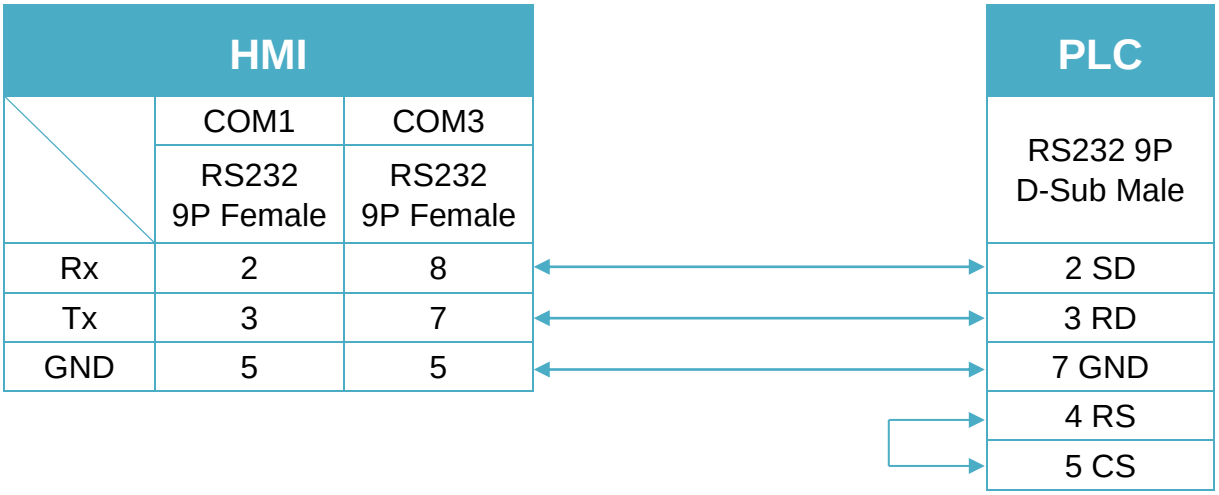


Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


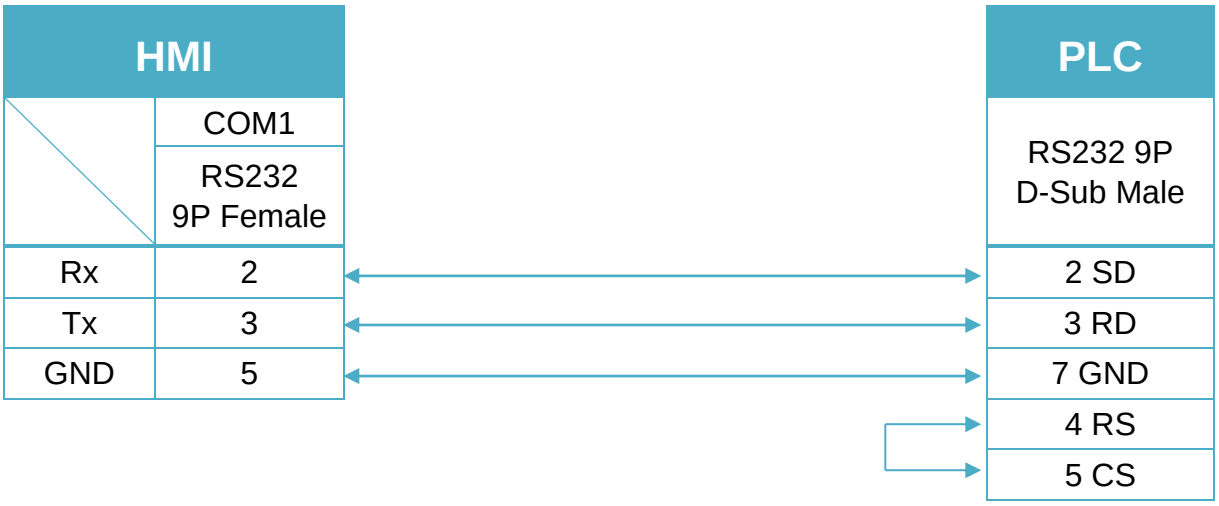


Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

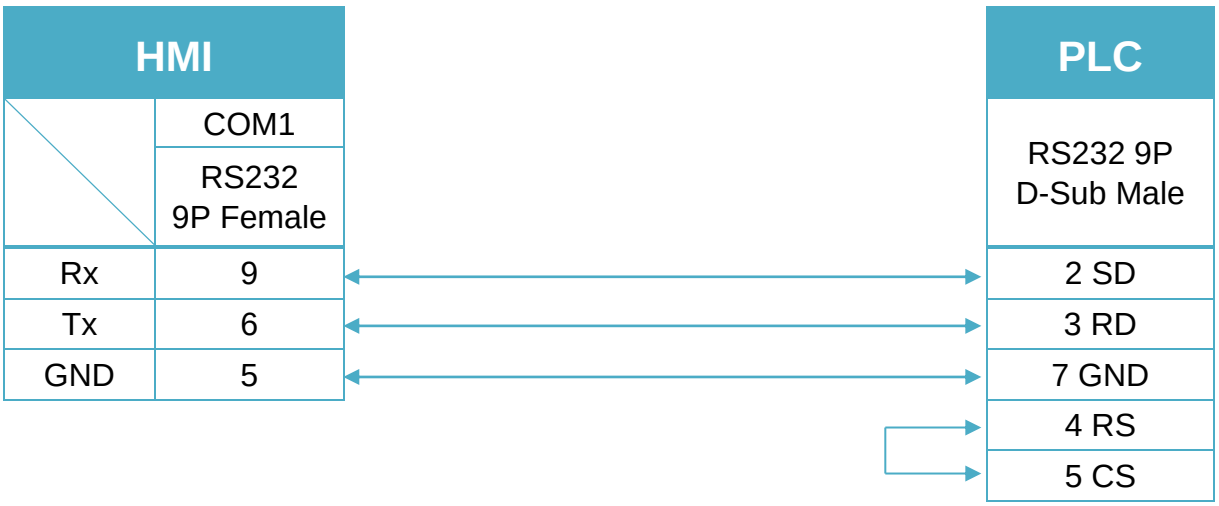

OPC UA Client

Supported Series: Weinetk OPC UA Server, Unified Automation, Prosys, Kepware

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OPC UA Client		
PLC I/F	Ethernet		
Port no.	4840		
Security policy	None	None / Basic128Rsa15 / Basic256 /	
Message security mode	None	None / Sign/ SignAndEncrypt	


On-line simulator	Yes	**Multi-HMI connect**	Yes

Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit

Wiring Diagram:

Ethernet cable:

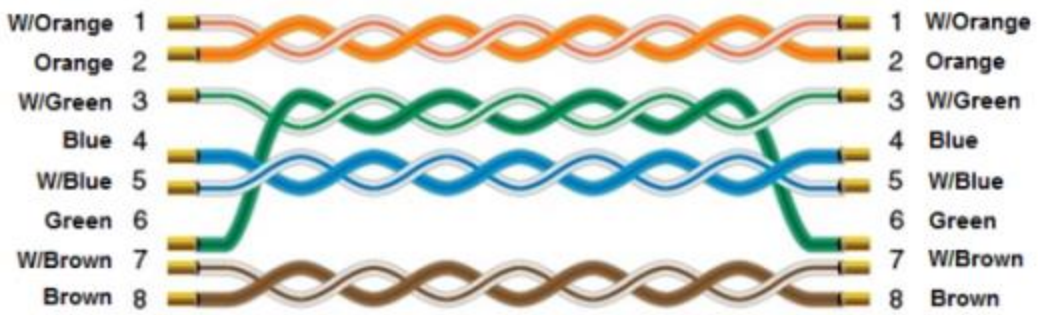

OuHua OHJX

Website: http://www.ohjx.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	OuHua OHJX		
PLC I/F	RS-232		
Baud rate	9600	9600,19200	
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	R100	Dh	0 ~ 1f	
B	R101	Dh	0 ~ 1f	
B	R102	Dh	0 ~ 1f	
B	R103	Dh	0 ~ 1f	
B	R104	Dh	0 ~ 1f	
B	R105	Dh	0 ~ 1f	
B	R106	Dh	0 ~ 1f	
B	R107	Dh	0 ~ 1f	
B	R108	Dh	0 ~ 1f	
B	R109	Dh	0 ~ 1f	
B	R110	Dh	0 ~ 1f	
B	R210	Dh	0 ~ 1f	
B	R310	Dh	0 ~ 1f	
W	SV	DDDD	0 ~ 9999	
W	EV	DDDDD	0 ~ 65535	
W	DT	DDDDD	0 ~ 9999	
W	LD	DDDD	0 ~ 8447	
W	WX	DDDD	0 ~ 9999	
W	WY	DDDD	0 ~ 9999	
W	WR	DDDD	0 ~ 9999	

Bit/Word	Device type	Format	Range	Memo
W	WL	DDDD	0 ~ 9999	
W	FL	DDDDD	0 ~ 99999	

Wiring Diagram:

The following is the view from the soldering point of a cable.



RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		4P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	1 GND
			→	4 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	4P Mini-DIN Male
Rx	2	3 TX
Tx	3	2 RX
GND	5	1 GND
		4 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	4P Mini-DIN Male
Rx	9	3 TX
Tx	6	2 RX
GND	5	1 GND
		4 GND

Panasonic Eco-Power Meters

Supported Series: KW1M , KW1M-A , KW9M , KW9M-A
Website: https://www.panasonic-electric-works.com/eu/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Panasonic Eco-Power Meters		
PLC I/F	RS485 2W		
Baud rate	9600	9600 ~ 115200	
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	1		

Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit

Import Tags:

1. The file for import must be built in **Easy Build Pro\Data Type\PanasonicPowerMeter** folder. The user can build the file according to the device types in advance, as shown below.

   ★**Name :** User-defined tag name.


   ★**Data :**Type: Define according to the data length and range.

   ★**Address :** The address of the device.


   ★**Description :** The description about the address.

Data type	Data length and range
BOOL	Bit
BYTE	8-bits Unsigned
WORD	16-bits Unsigned
DWORD	32-bits Unsigned
UDINT	32-bits Unsigned
UINT	16-bits Unsigned
USINT	8-bits Unsigned
SINT	8-bits Signed
INT	16-bits Signed
DINT	32-bits Signed
REAL	32-bits Float


2. In EasyBuilder select **[Panasonic Eco-Power Meters]** driver, and then click **[Station No. and Device Model]**.

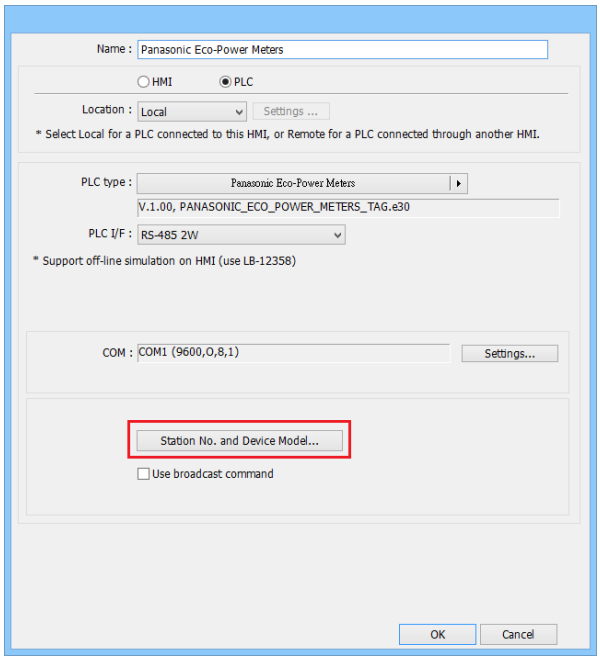

3. **[Station no.]**: Set the station number according to the device, the range is 1~99.
   [Name]: The name of the device.
   [Model]: The models with their address tag files saved in **Easy Build Pro\Data Type\PanasonicPowerMeter** can be found in the drop down list.
   [Add]: Add a new model.
   [Delete]: Delete a model. (At least one model should exist in the list.)
   [Import]: Import the .dat file of the model.
   [Export]: Export the .dat file of the model.
   [OK]: Save and leave.
   [Cancel]: Don't save and leave.

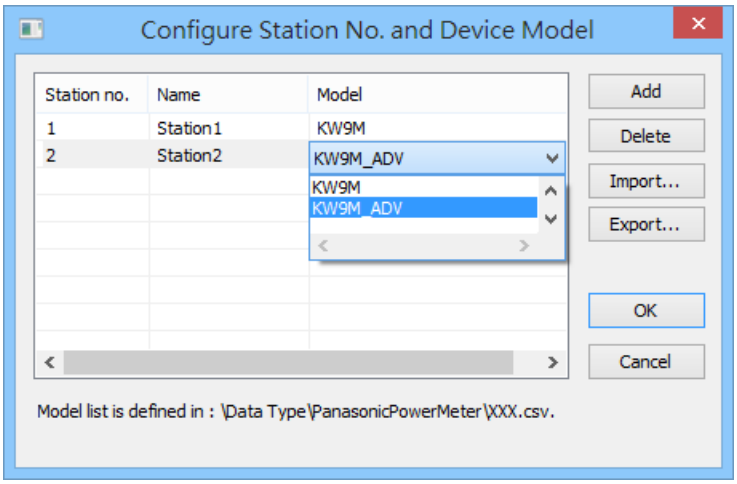

4. The imported address tags can be selected in object settings window.

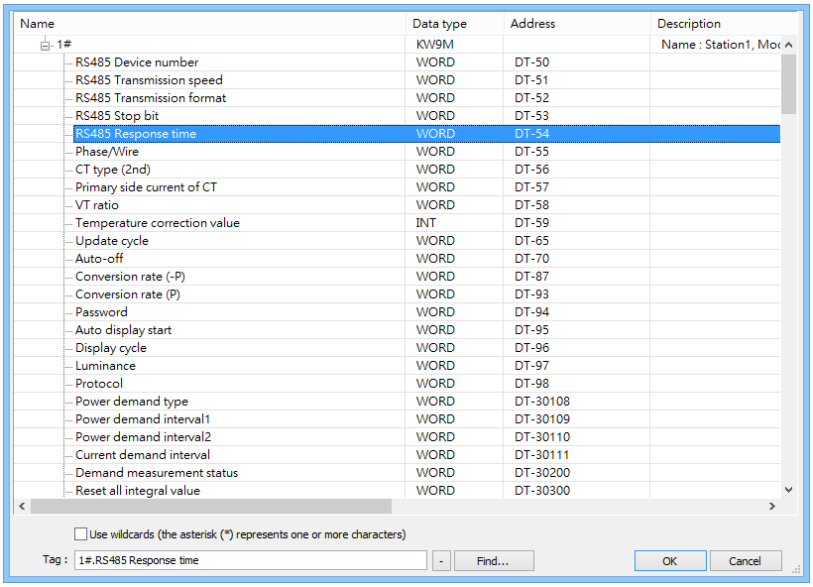

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	B-
Data+	2	9	⟷	A+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	B-
Data+	6	1	⟷	A+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	B-
Data+	2	8	⟷	A+
GND	**5**	**9**	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	B-
Data+	2	9	⟷	A+
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	↔	B-
Data+	2	8	↔	A+
GND	5	5	↔	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		PLC RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	↔	B-
Data+	2	↔	A+
GND	5	↔	

Panasonic FP/KW

Supported Series: NAIS (Matsushita) FP/KW series include FP-X, FP-XH, FP-Σ, FP0, FP1, FP2, FP2SH, FP10SH
Website:http://pewa.panasonic.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Panasonic FP/KW		
PLC I/F	RS232	RS232/RS485	
Baud rate	9600	9600, 19200, 38400,	
Data bits	8	7 or 8	
Parity	Odd	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	1	1-32	Must match the PLC port setting. FP3 must set to 0.

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDDh	0 ~ 9999f	Input (X)
B	Y	DDDDh	0 ~ 9999f	Output (Y)
B	R	DDDDh	0 ~ 9999f	Internal Relay (R)
B	L	DDDD	0 ~ 9999	Link Relay (L)
B	L_Bit	DDDDh	0 ~ 9999f	
B	T	DDDD	0 ~ 9999	Timer (T)
B	C	DDDD	0 ~ 9999	Counter (C)
W	SV	DDDD	0 ~ 9999	Timer/Counter Set Value (SV)
W	EV	DDDDD	0 ~ 65535	Timer/Counter Elapse Value (EV)
W	DT	DDDDD	0 ~ 99999	Data Register (DT)
W	LD	DDDD	0 ~ 8447	Link Register (LD)
W	WX	DDDD	0 ~ 9999	Input (WX) (read only)
W	WY	DDDD	0 ~ 9999	Output (WY)
W	WR	DDDD	0 ~ 9999	Internal Relay (WR)

Bit/Word	Device type	Format	Range	Memo
W	WL	DDDD	0 ~ 9999	Link Relay (WL)
W	FL	DDDDD	0 ~ 99999	File Register (FL)

Wiring Diagram:

The following is the view from the soldering point of a cable.

FP0, FP2, FP2SH, FPM CPU : 9P D-Sub to 5P Mini-DIN (Diagram 1 ~ Diagram 3)

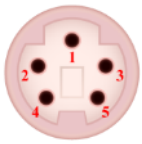


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 5P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 TXD
Tx	3	7	⟷	3 RXD
GND	5	5	⟷	1 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 5P Mini-DIN Male
Rx	2	⟷	2 TXD
Tx	3	⟷	3 RXD
GND	5	⟷	1 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 5P Mini-DIN Male
Rx	9	⟷	2 TXD
Tx	6	⟷	3 RXD
GND	5	⟷	1 GND

FP0 CPU : 9P D-Sub to 3P Terminal (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 3P Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	S
Tx	3	7	⟷	R
GND	5	5	⟷	G

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 3P Terminal
	RS232 9P Female		
Rx	2	⟷	S
Tx	3	⟷	R
GND	5	⟷	G

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 3P Terminal
Rx	9	S
Tx	6	R
GND	5	G

RS232 9P D-Sub Male (Diagram 7 ~ Diagram 9)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female	COM3 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	8	2 TXD
Tx	3	7	3 RXD
GND	5	5	7 GND
			4 RTS
			5 CTS
			8 CD
			9 ER

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


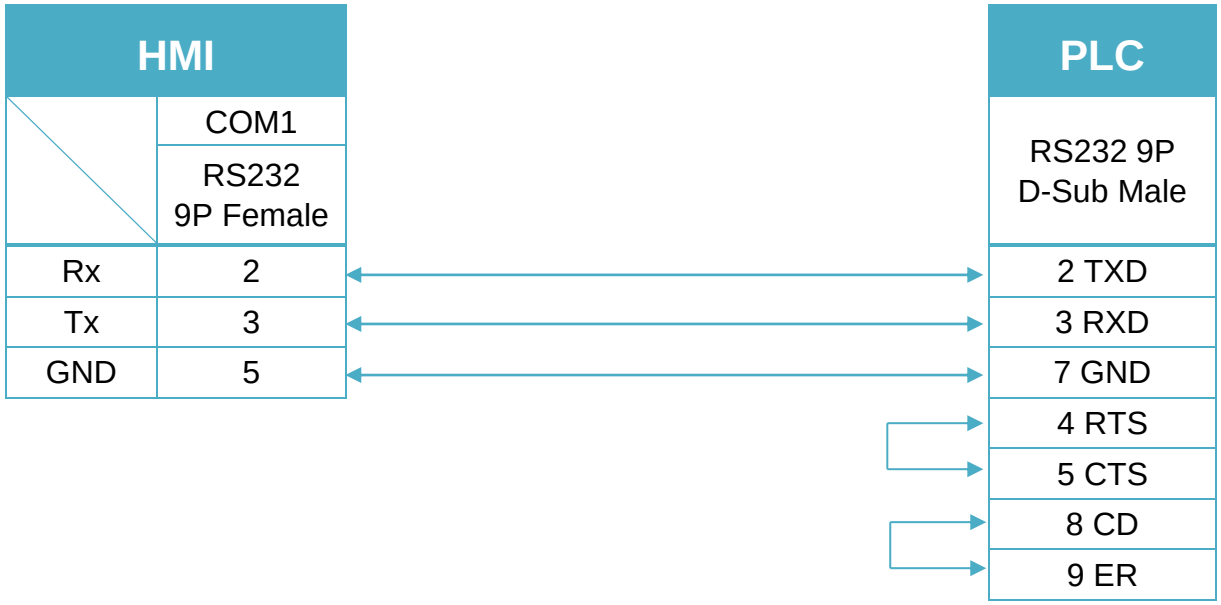


Diagram 9

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

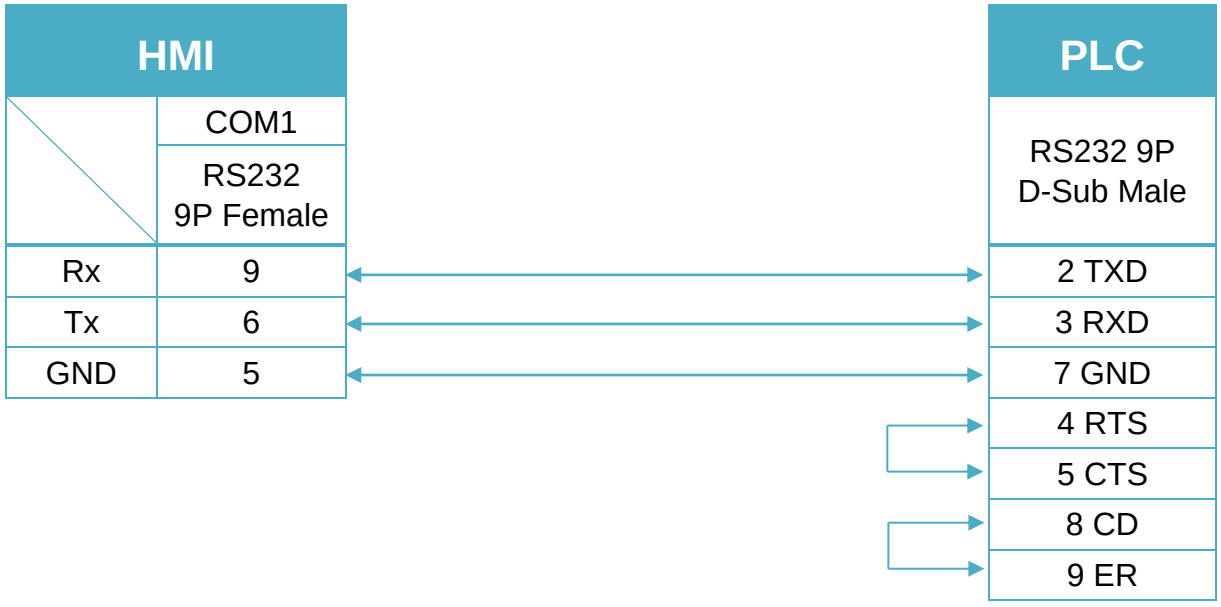

The following is the view from the soldering point of a cable.

FP1 CPU : 9P D-Sub to 8P MiniDIN (Diagram 10 ~ Diagram 13)



Diagram 10

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 8P Hirose Female socket
Rx-	1	⟷	2 TXDA
Rx+	2	⟷	5 TXDB
Tx-	3	⟷	3 RXDA
TX+	4	⟷	6 RXDB
GND	5	⟷	1 GND

Diagram 11

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P Hirose Female socket
Rx-	7	⟷	2 TXDA
Rx+	6	⟷	5 TXDB
Tx-	9	⟷	3 RXDA
TX+	8	⟷	6 RXDB
GND	5	⟷	1 GND

Diagram 12

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P Hirose Female socket
Rx-	1	↔	2 TXDA
Rx+	2	↔	5 TXDB
Tx-	3	↔	3 RXDA
TX+	4	↔	6 RXDB
GND	5	↔	1 GND

Diagram 13

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P Hirose Female socket
Rx-	1	↔	2 TXDA
Rx+	2	↔	5 TXDB
Tx-	3	↔	3 RXDA
TX+	4	↔	6 RXDB
GND	5	↔	1 GND

FP3 CPU : 9P D-Sub to 15P D-Sub (Diagram 14 ~ Diagram 17)

Diagram 14

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

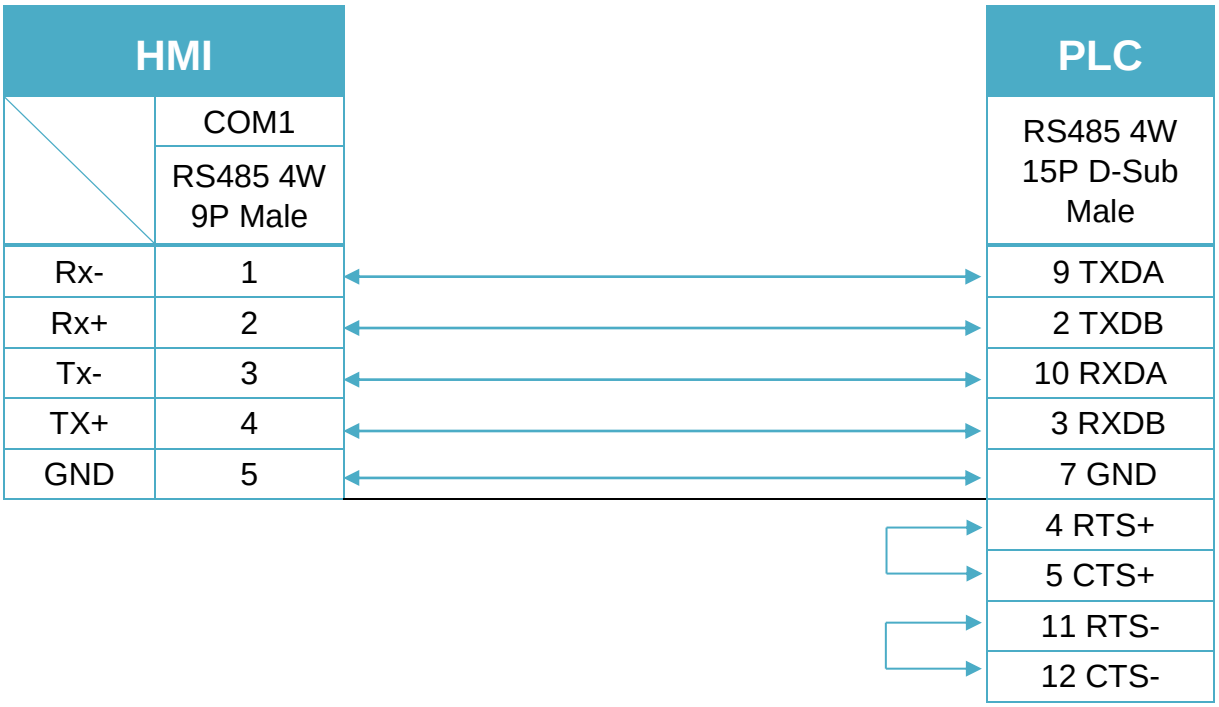


Diagram 15

cMT Series	***cMT-SVR***
mTV	***mTV***

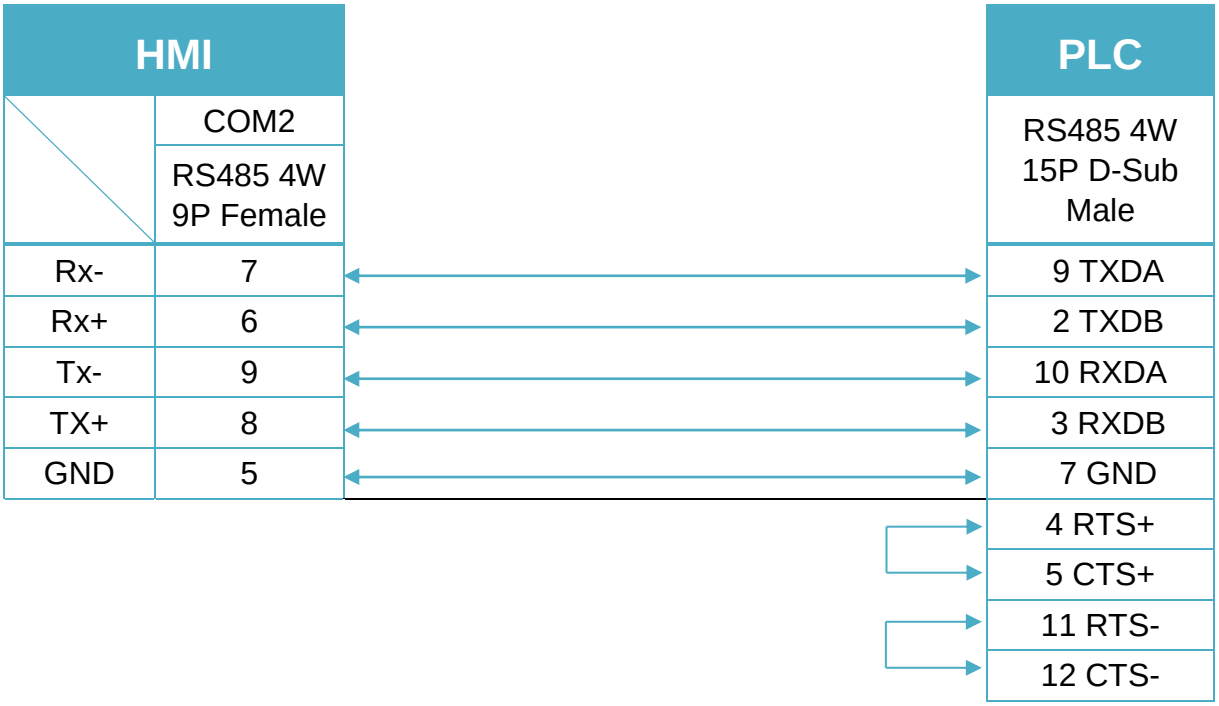


Diagram 16

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***


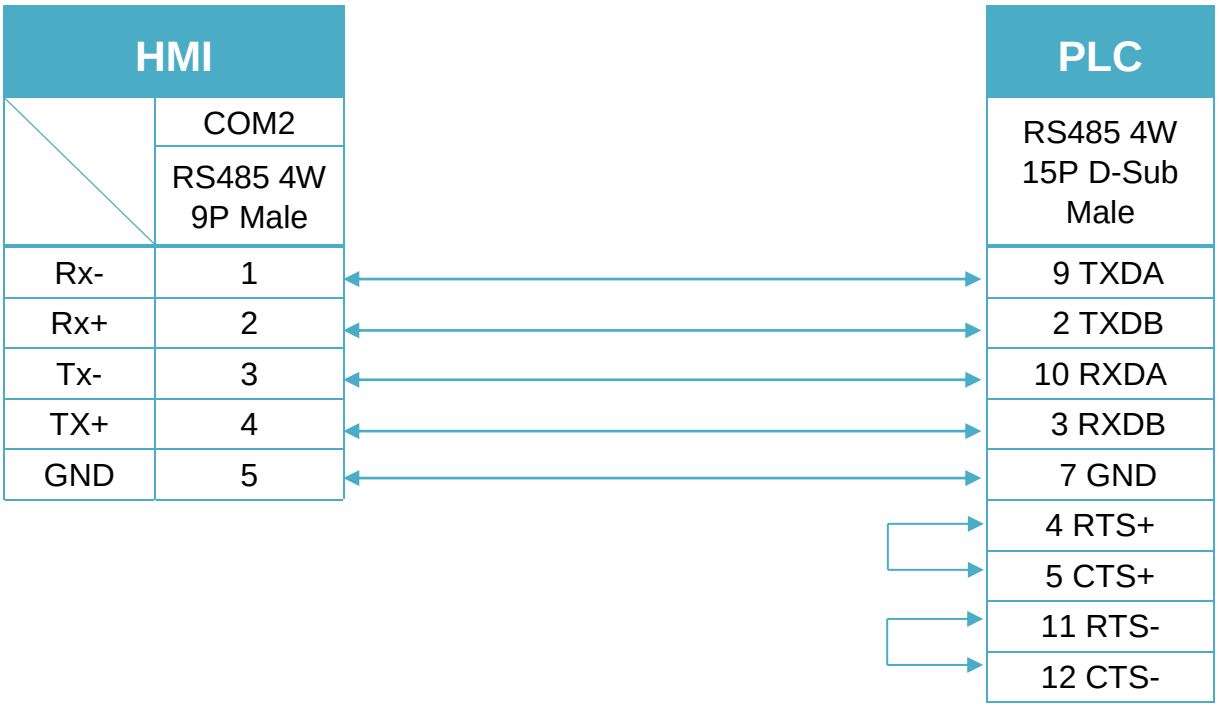


Diagram 17

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

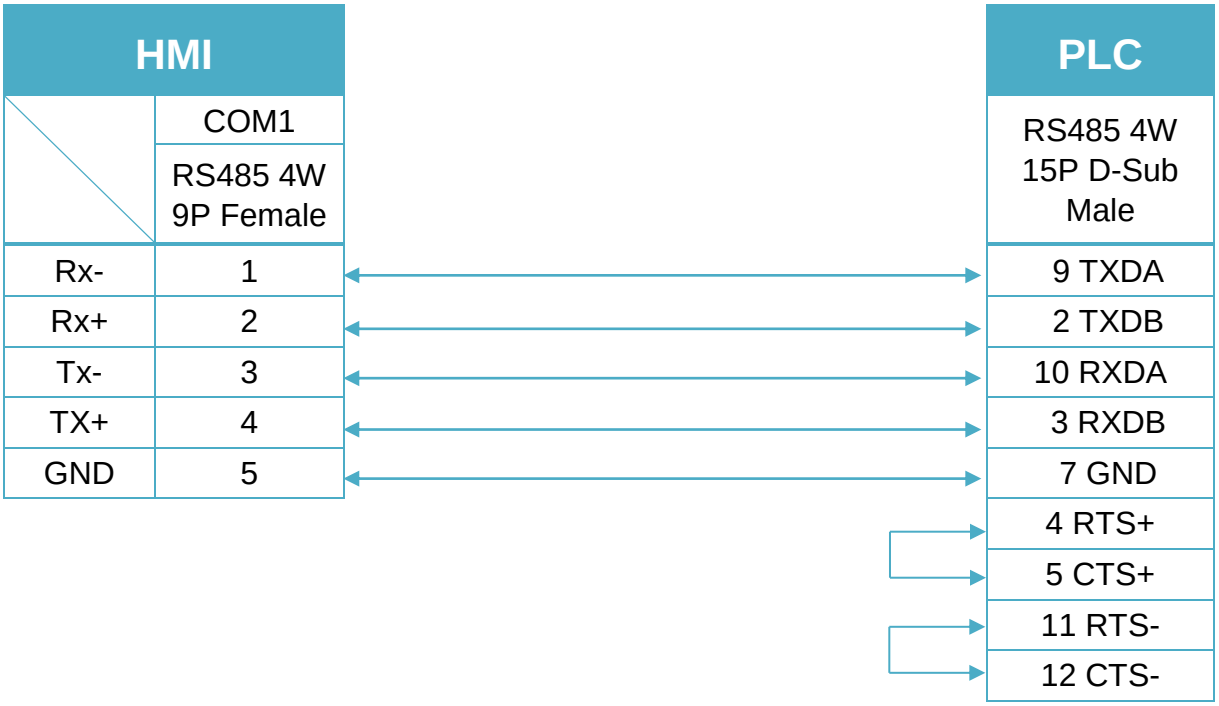

Panasonic FP (Ethernet)

Supported Series: FP-X with AFPX-COM5.
Website: http://pewa.panasonic.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Panasonic FP (Ethernet)		
PLC I/F	Ethernet		
Port no.	9094		
PLC sta. no.	1	0~255	

Device Address:

Bit/Word	Device	Format	Range	Memo
B	X	DDDDh	0 ~ 9999f	Input (X)
B	Y	DDDDh	0 ~ 9999f	Output (Y)
B	R	DDDDh	0 ~ 9999f	Internal Relay (R)
B	L	DDDD	0 ~ 9999	Link Relay (L)
B	L_Bit	DDDDh	0 ~ 9999f	
B	T	DDDD	0 ~ 9999	Timer (T)
B	C	DDDD	0 ~ 9999	Counter (C)
W	SV	DDDD	0 ~ 9999	Timer/Counter Set Value (SV)
W	EV	DDDDD	0 ~ 65535	Timer/Counter Elapse Value (EV)
W	DT	DDDDD	0 ~ 99999	Data Register (DT)
W	LD	DDDD	0 ~ 8447	Link Register (LD)
W	WX	DDDD	0 ~ 9999	Input (WX) (read only)
W	WY	DDDD	0 ~ 9999	Output (WY)
W	WR	DDDD	0 ~ 9999	Internal Relay (WR)
W	WL	DDDD	0 ~ 9999	Link Relay (WL)
W	FL	DDDDD	0 ~ 99999	File Register (FL)

Wiring Diagram:

Ethernet cable:



Ethernet Connection TCP Port: 9094



FP-X

Panasonic FP2 (Ethernet)

Supported Series: NAIS (Matsushita) FP2 series include FP2, FP2SH, and FP10SH CPU.
Website: http://pewa.panasonic.com/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Panasonic FP2 (Ethernet)		
PLC I/F	Ethernet		
Port no.	8500		
PLC sta. no.	2	0~255	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDDh	0 ~ 9999f	Input (X)
B	Y	DDDDh	0 ~ 9999f	Output (Y)
B	R	DDDDh	0 ~ 9999f	Internal Relay (R)
B	L	DDDD	0 ~ 9999	Link Relay (L)
B	L_Bit	DDDDh	0 ~ 9999f	
B	T	DDDD	0 ~ 9999	Timer (T)
B	C	DDDD	0 ~ 9999	Counter (C)
W	SV	DDDD	0 ~ 9999	Timer/Counter Set Value (SV)
W	EV	DDDDD	0 ~ 65535	Timer/Counter Elapse Value (EV)
W	DT	DDDDD	0 ~ 99999	Data Register (DT)
W	LD	DDDD	0 ~ 8447	Link Register (LD)
W	WX	DDDD	0 ~ 9999	Input (WX) (read only)
W	WY	DDDD	0 ~ 9999	Output (WY)
W	WR	DDDD	0 ~ 9999	Internal Relay (WR)
W	WL	DDDD	0 ~ 9999	Link Relay (WL)

Wiring Diagram:

Ethernet cable:

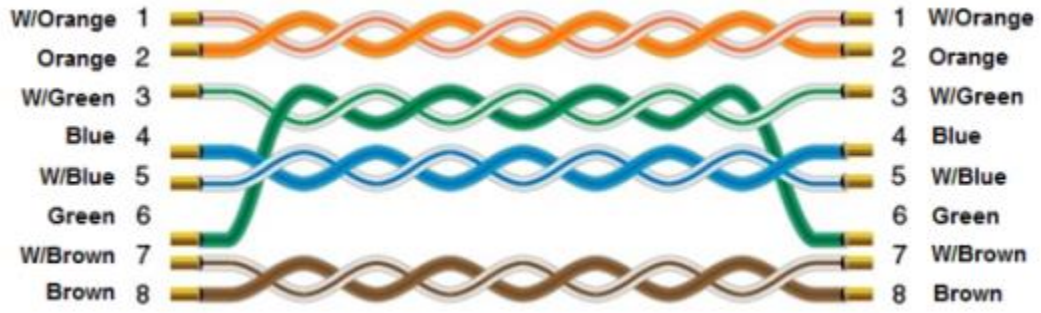

Panasonic MEWTOCOL7

Supported Series: Panasonic GT series FP7

Website: http://pewa.panasonic.com/


HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Panasonic MEWTOCOL7		
PLC I/F	RS232 / Ethernet		
Baud rate	9600	9600 ~ 115200	
Data bits	8	7,8	
Parity	Odd	Even,None,Odd	
Stop bits	1	1,2	
PLC sta. no.	1	1 ~ 256	
Port no.	60001	1 ~ 65535	

PLC Setting:


Communication type	TCP/IP
Open type	Server connection (any destination)
Communication mode	MEWTOCOL7-COM

Built-in ET-LAN setting

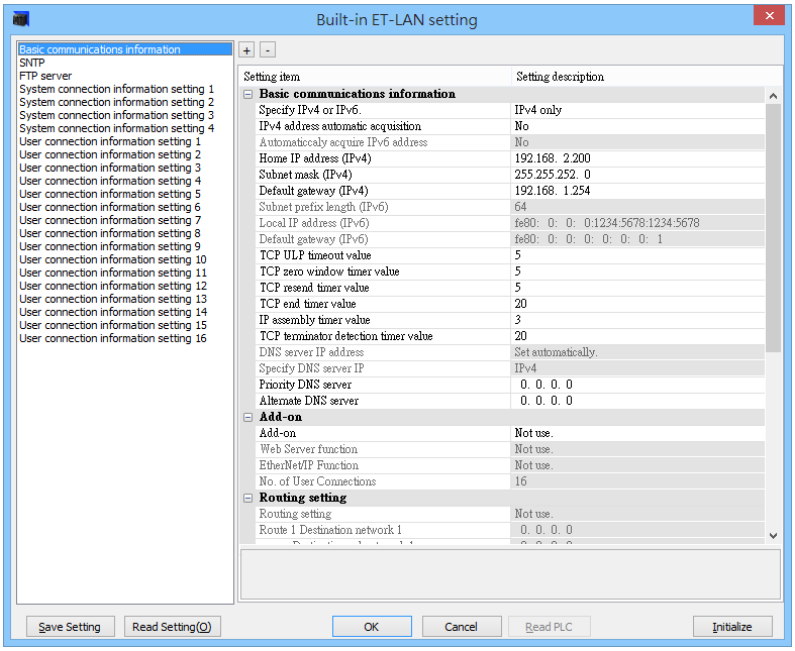

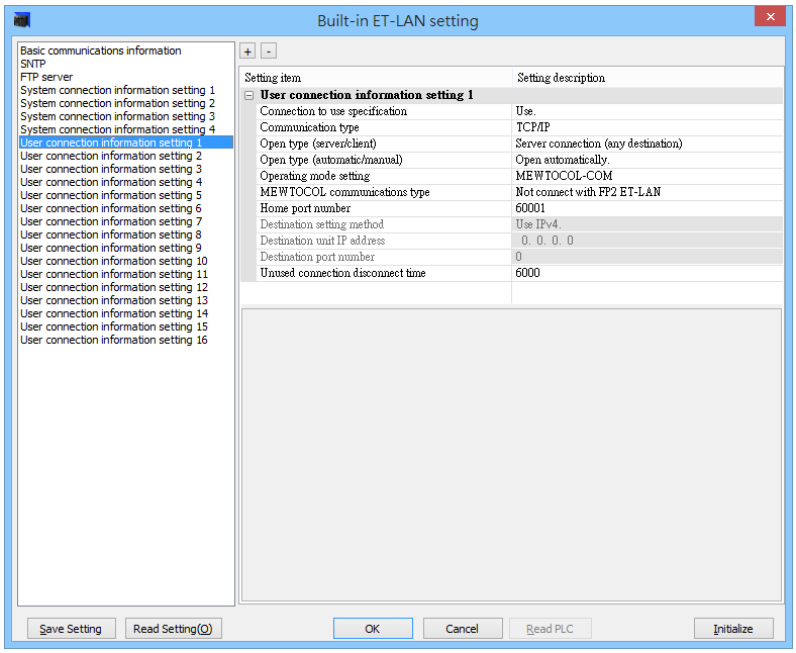

Built-in SCU setting

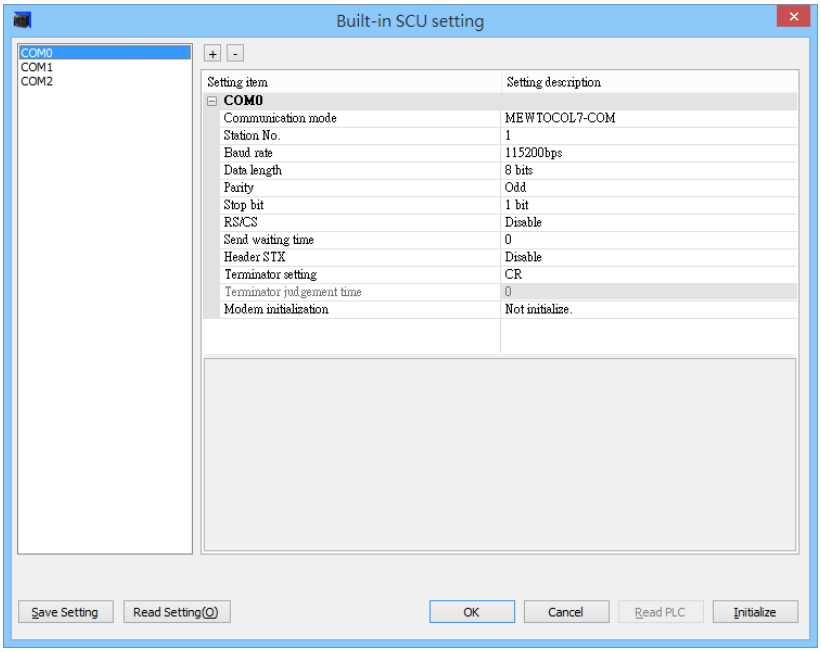

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDh	0 ~ 511f	External input
B	Y	DDDh	0 ~ 511f	External output
B	R	DDDDh	0 ~ 2047f	Internal relay
B	L	DDDDh	0 ~ 1023f	Link relay
B	T	DDDD	0 ~ 4095	Timer
B	C	DDDD	0 ~ 1023	Counter
B	P	DDDh	0 ~ 255f	Pulse relay
B	E	DDDD	0 ~ 4095	Error notification relay
B	SR	DDDh	0 ~ 223f	System relay
B	IN	SSDDh	1000 ~ 9962f	Direct input *note1
B	OT	SSDDh	1000 ~ 9962f	Direct output *note1
B	LD_Bit	DDDDD.h	0 ~ 16383.f	LD bit specification
B	DT_Bit	DDDDDD.h	0 ~ 999423.f	DT bit specification
B	UM_Bit	SSHHHHH.h	0 ~ 997FFFF.f	UM bit specification *note1
B	_X	LLLDDDh	10000 ~ 999511f	External input *note2
B	_Y	LLLDDDh	10000 ~ 999511f	External output *note2
B	_R	LLLDDDDh	100000 ~ 9992047f	Internal relay *note2
B	_L	LLLDDDDh	100000 ~ 9991023f	Link relay *note2
B	_T	LLLDDDD	10000 ~ 9994095	Timer *note2
B	_C	LLLDDDD	10000 ~ 9991023	Counter *note2
B	_P	LLLDDDh	10000 ~ 999255f	Pulse relay *note2
B	_LD_Bit	LLLDDDDD.h	100000.0 ~ 9991633.f	LD bit specification *note2
B	_DT_Bit	LLLDDDDDD.h	1000000.0 ~ 999999423.f	DT bit specification *note2
W	WX	DDD	0 ~ 511	External input word
W	WY	DDD	0 ~ 511	External output word
W	WR	DDDD	0 ~ 2047	Internal relay word
W	WL	DDDD	0 ~ 1023	Link relay word
W	WS	DDD	0 ~ 223	System relay word
W	LD	DDDDD	0 ~ 16383	Link register
W	DT	DDDDDD	0 ~ 999423	Data register
W	SD	DDD	0 ~ 255	System register
W	WI	SSDD	100 ~ 9962	Input register *note1
W	WO	SSDD	100 ~ 9962	Output register *note1
W	UM	SSHHHHH	100000 ~ 997FFFF	Unit memory *note1
DW	TS	DDDD	0 ~ 4095	Timer setting value

Bit/Word	Device type	Format	Range	Memo
DW	TE	DDDD	0 ~ 4095	Timer elapsed value
DW	CS	DDDD	0 ~ 1023	Counter setting value
DW	CE	DDDD	0 ~ 1023	Counter elapsed value
DW	I	H	0 ~ E	Index register
W	_WX	LLLDDD	1000 ~ 999511	External input word *note2
W	_WY	LLLDDD	1000 ~ 999511	External output word *note2
W	_WR	LLLDDDD	10000 ~ 9992047	Internal relay word *note2
W	_WL	LLLDDDD	10000 ~ 9991023	Link relay word *note2
W	_LD	LLLDDDDD	100000 ~ 99916383	Link register *note2
W	_DT	LLLDDDDDD	1000000 ~ 999999423	Data register *note2
DW	_TS	LLLDDDD	10000 ~ 9994095	Timer setting value *note2
DW	_TE	LLLDDDD	10000 ~ 9994095	Timer elapsed value *note2
DW	_CS	LLLDDDD	10000 ~ 9991023	Counter setting value *note2
DW	_CE	LLLDDDD	10000 ~ 9991023	Counter elapsed value *note2

*note1: SS = Slot address (1~99)

*note2: LLL= Local address (Program block)

Wiring Diagram:

RS-232 terminal (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070 / eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	SD
Tx	3	7	⟷	RD
GND	5	5	⟷	SG

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 Terminal
	RS232 9P Female		
Rx	2	⟷	SD
Tx	3	⟷	RD
GND	5	⟷	SG


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	9	⟷	SD
Tx	6	⟷	RD
GND	5	⟷	SG

Diagram 4

Ethernet cable:

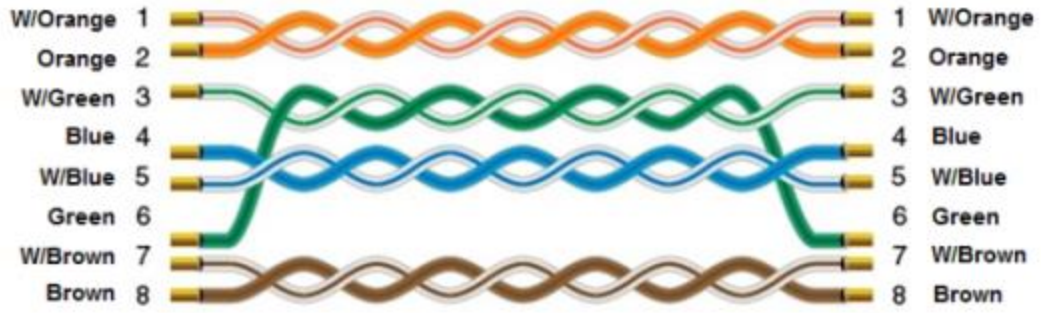

Panasonic MINAS A4

Supported Series: Panasonic MINAS A4 series Servo Drive.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Panasonic MINAS A4		
PLC I/F	RS232		
Baud rate	9600	2400 ~ 57600	
Data bits	8		
Parity	None		
Stop bits	1		
Axis no.	0 (master station only)	0 ~ F (slave)	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Command 20	D	0 ~ 7	States (Note 3)
B	Command 27	DD	0 ~ 31	Input Signal (Note 3)
B	Command 28	DD	0 ~ 31	Output Signal (Note 3)
W	Command 01	D	0	CPU Version (Numeric format:16-bit Hex)
W	Command 05	DD	0 ~ 11	Driver Version (ASCII / 12 words)
W	Command 06	DD	0 ~ 11	Motor Version (ASCII / 12 words)
W	Command 21	D	0 ~ 1	command pulse counter (Numeric format: 32-bit Signed)
W	Command 22	D	0 ~ 1	feedback pulse counter (Numeric format: 32-bit Signed)
W	Command 24	D	0	present speed (Numeric format: 16-bit Unsigned)
W	Command 25	D	0	present torque (Numeric format: 16-bit Unsigned)
W	Command 26	D	0 ~ 1	present deviation counter (Numeric format: 32-bit Signed)
W	Command 84	D	0	write parameter to EEPROM (Note 1)
W	Command 90	D	0	present Alarm Data

Bit/Word	Device type	Format	Range	Memo
				(Numeric format: 16-bit Unsigned)
W	Command 91	DD	1 ~ 14	Alarm History (Note 4) (Numeric format: 16-bit Unsigned)
W	Command 92	DD	1 ~ 14	Batch Alarm (Note 4) (Numeric format: 16-bit Unsigned)
W	Command 93	D	0	clear Alarm History (include EEPROM) (Note 1)
W	Command 94	D	0	Alarm Clear (Note 1)
W	Command 9B	D	0	Absolute Clear (Note 1)
W	Parameter	HH	0 ~ 7f	Individual Parameter (range: 0x00 ~ 0x7F) (Note 2)
W	Comm2D_S	D	0 ~ 1	Command 2D Signle turn data (Numeric format: 32-bit Signed)
W	Comm2D_M	D	0 ~ 1	Command 2D Multi-turn data (Numeric format: 32-bit Signed)

Note:

1. Command 84, Command 93, Command 94, and Command 9B are write only. (These commands are able to use Set Bit Object and execute the write command after triggering Set Bit Object.). Commands other than these four are read only.
2. Parameter read/write: Use device type to define address control from 00~7F.
   For example: “address_00” is mapping to “Parameter_00”.
   (Please refer to Panasonic MINAS A4 Series User Manual.)
3. Device address type can define MINAS A4 Driver’s command list.
   Command 20, Command 27, and Command 28 are Bit type, use “Operating range” to map communication order status.
   For example: “Command 20_3” means “Read state_CCW”.
   (Please refer to Panasonic MINAS A4 Series User Manual.)
4. Command 91 and Command 92 are word type, use “Operating range” to map the record of 14 alarms.
   For example: “Command 91_1” means “Read alarm data_First alarm”.

Wiring Diagram:

The following is the view from the soldering point of a cable.

MINAS A4 Driver CNX4 Port



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TXD
Tx	3	7	⟷	5 RXD
GND	5	5	⟷	4 GND

Diagram 2


cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-DIN Male
Rx	2	⟷	3 TXD
Tx	3	⟷	5 RXD
GND	5	⟷	4 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-DIN Male
Rx	9	⟷	3 TXD
Tx	6	⟷	5 RXD
GND	5	⟷	4 GND

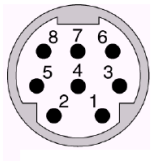	MINAS A4 Driver CNX3 Port	MINAS A4 Driver CNX4 Port
 8P Mini-Din Male MINAS A4 Driver CNX3 / CNX4 Port		3 TX
		5 RX
	4 GND	4 GND
	7 D-	7 D-
	8 D+	8 D+


RS485 cable / DVOP1970-005

MINAS A4 Driver 8p Mini-DIN Male	MINAS A4 Driver 8p Mini-DIN Male
7 D-	7 D-
8 D+	8 D+
4 GND	4 GND

RS232 cable / DVOP1960

MINAS A4 Driver 9P D-SUB Female	MINAS A4 Driver 8p Mini-DIN Male
3 RXD	5 RXD
2 TXD	3 TXD
5 GND	4 GND

HMI connect with one Device

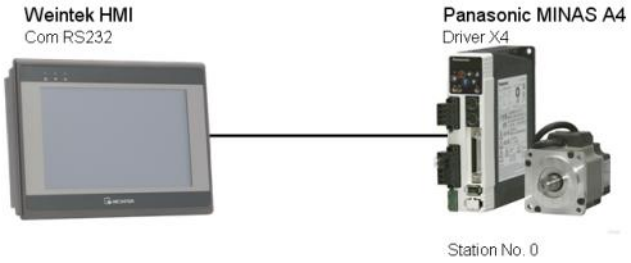

HMI connect with multi devices



Panasonic MINAS A5

Supported Series: Panasonic MINAS A5 series Servo Drive.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Panasonic MINAS A5		
PLC I/F	RS232	RS232/RS485 2W	
Baud rate	9600	2400~115200	
Data bits	8		
Parity	None		
Stop bits	1		
Axis no.	0 (master station only)	0 ~ 127 (slave)	

* When connecting with more than two devices, it is recommended to set timeout to more than 4 seconds. Set a longer timeout when connecting with more devices to maintain good communication.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Command 20	D	0 ~ 7	States (Note 3)
B	Command 27	DD	0 ~ 31	Input Signal (Note 3)
B	Command 28	DD	0 ~ 31	Output Signal (Note 3)
W	Command 01	D	0	CPU Version (Numeric format:16-bit Hex)
W	Command 05	DD	0 ~ 11	Driver Version (ASCII / 12 words)
W	Command 06	DD	0 ~ 11	Motor Version (ASCII / 12 words)
W	Command 21	D	0 ~ 1	command pulse counter (Numeric format: 32-bit Signed)
W	Command 22	D	0 ~ 1	feedback pulse counter (Numeric format: 32-bit Signed)
W	Command 24	D	0	present speed (Numeric format: 16-bit Unsigned)
W	Command 25	D	0	present torque (Numeric format: 16-bit Unsigned)
W	Command 26	D	0 ~ 1	present deviation counter (Numeric format: 32-bit Signed)

Bit/Word	Device type	Format	Range	Memo
W	Command2D_S	D	0 ~ 1	Command 2D Signle turn data (Numeric format: 32-bit Signed)
W	Command2D_M	D	0 ~ 1	Command 2D Multi-turn data (Numeric format: 32-bit Signed)
W	Parameter	HHH	0 ~ 639	Individual Parameter (range: 0x000 ~ 0x639) (Note 2)
W	Command 72	D	0	write parameter to EEPROM (Note 1)
W	Command 90	D	0	present Alarm Data (Numeric format: 16-bit Unsigned)
W	Command 92	DD	1 ~ 14	Batch Alarm (Note 4) (Numeric format: 16-bit Unsigned)
W	Command 93	D	0	clear Alarm History (include EEPROM) (Note 1)
W	Command 94	D	0	Alarm Clear (Note 1)
W	Command 9B	D	0	Absolute Clear (Note 1)

Note:

1. Command 72, Command 93, Command 94, and Command 9B are write only. (These commands are able to use Set Bit Object and execute the write command after triggering Set Bit Object.). Commands other than these four are read only.
2. Parameter read/write: Use device type to define address control from 000~639.
   For example: “address_000” is mapping to “Parameter_000”.
   (Please refer to Panasonic MINAS A5 Series User Manual.)
3. Device address type can define MINAS A5 Driver’s command list.
   Command 20, Command 27, and Command 28 are Bit type, use “Operating range” to map communication order status.
   For example: “Command 20_3” means “Read state_CCW”.
   (Please refer to Panasonic MINAS A5 Series User Manual.)
4. Command 92 are word type, use “Operating range” to map the record of 14 alarms.

Wiring Diagram:

The following is the view from the soldering point of a cable.

MINAS A5 Driver X2 Port RS232 Signal (Diagram 1 ~ Diagram 3)




Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P Connector
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TXD
Tx	3	7	⟷	4 RXD
GND	5	5	⟷	1 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Connector
Rx	2	⟷	3 TXD
Tx	3	⟷	4 RXD
GND	5	⟷	1 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Connector
Rx	9	⟷	3 TXD
Tx	6	⟷	4 RXD
GND	5	⟷	1 GND

The following is the view from the soldering point of a cable.

MINAS A5 Driver X2 Port RS485 Signal (Diagram 4 ~ Diagram 9)




Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	5,7 485-
Data+	2	9	⟷	6,8 485+
GND	5	5	⟷	1 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P Connector
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	5,7 485-
Data+	6	1	⟷	6,8 485+
GND	5	5	⟷	1 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	5,7 485-
Data+	2	8	⟷	6,8 485+
GND	**5**	**9**	⟷	1 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	5,7 485-
Data+	2	9	⟷	6,8 485+
GND	5	5	⟷	1 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 8P Connector
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	5,7 485-
Data+	2	8	⟷	6,8 485+
GND	5	5	⟷	1 GND

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 8P Connector
	RS485 2W 9P Female		
Data-	1	⟷	5,7 485-
Data+	2	⟷	6,8 485+
GND	5	⟷	1 GND

Parker ACR9000

Supported Series: Parker ACR9000.
Website: http://www.parkermotion.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Parker ACR9000		
PLC I/F	RS232	RS485 4W / RS232/Ethernet	
Baud rate	38400	1200 - 38400	
Data bits	8	7,8	
Parity	None	Even, Odd, None	
Stop bits	1	1,2	
Port no.	5006		
PLC sta. no.	0		

Online simulator	YES

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	P_Low16bit	DDDDDdd	0 ~ 9999915	
B	P_High16bit	DDDDDdd	0 ~ 9999915	
W	P_Int32	DDDDD	0 ~ 99999	
W	P_Float	DDDDD	0 ~ 99999	

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		Parker AC9000 RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TXD
Tx	3	7	⟷	2 RXD
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		Parker AC9000 RS232 9P D-Sub Male
Rx	2	⟷	3 TXD
Tx	3	⟷	2 RXD
GND	5	⟷	5 GND


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		Parker AC9000 RS232 9P D-Sub Male
Rx	9	⟷	3 TXD
Tx	6	⟷	2 RXD
GND	5	⟷	5 GND

Diagram 4

Ethernet cable:

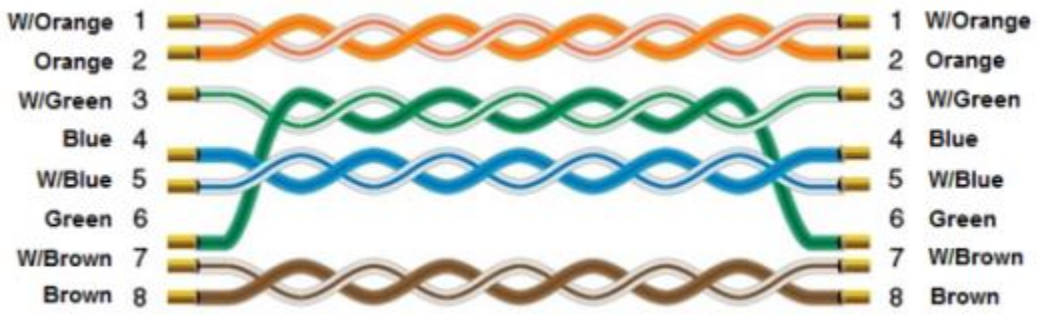

Parker Compax3

Supported Series: Parker Compax3 Servo Drive.
Website: http://www.parker.com

HMI Setting:

RS232

Parameters	Recommended	Options	Notes
PLC type	Parker Compax3		
PLC I/F	RS232		
Baud rate	115200		
Data bits	8	7 or 8	
Parity	None	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	0	0	Must be 0 for RS232


RS485

Parameters	Recommended	Options	Notes
PLC type	Parker Compax3		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8	7 or 8	
Parity	None	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	1	1-99	Range from 1 to 99 for RS485, according to the PLC setting.


PLC Setting:

How to set Compax 3 servo to RS485 mode?


1. Open C3 ServoManager2, select “Communication” => “RS-485 Settings”.

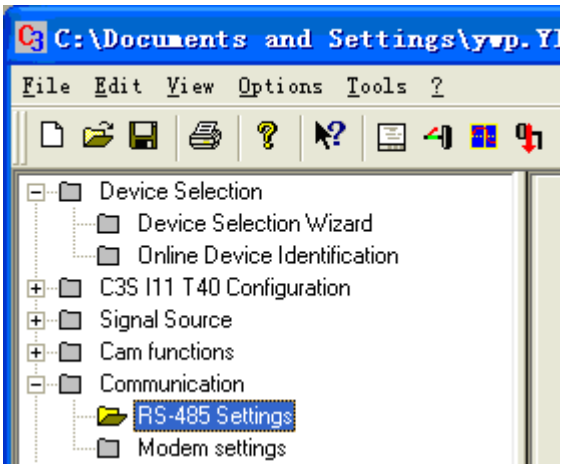

2. Click to Configure “RS-485/POP Settings”.

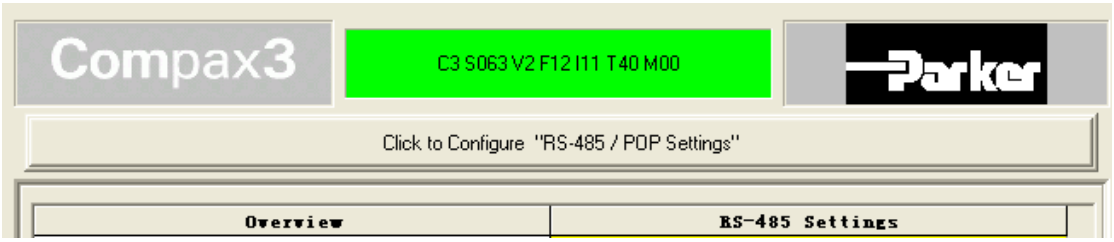

3. Set parameters as below:

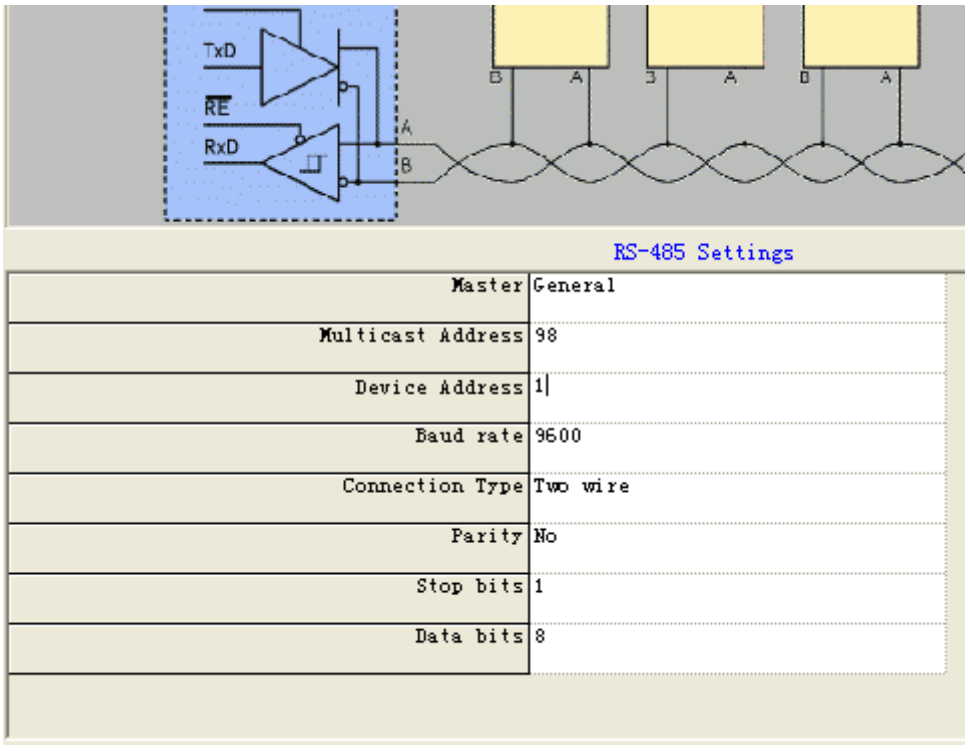

4. Download settings to Compax3 Servo.

5. Set EasyBuilder system parameter and connect with PLC for communication of HMI and Servo.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	R_Low16bit	DDDDDDDDh	0 ~ 99999999f	
B	R_High16bit	DDDDDDDDh	0 ~ 99999999f	
DW	Register_Int	DDDDDD	0 ~ 999999	For Register INT32, U32
DW	Register_float	DDDDDD	0 ~ 999999	For Register INT32, U32
W	Register_Short	DDDDDD	0 ~ 999999	For Register INT16, U16

The range of the address that can be operated depends on the address type.
(For more information, please see PLC Connection Guide)
For example:
If the read / write address is: 1901.2, please enter 190102
If the read / write address is: 400.1, please enter 40001

Wiring Diagram:

Parker Compax3 PLC X10 : RS232 (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TXD
Tx	3	7	⟷	2 RXD
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	3 TXD
Tx	3	⟷	2 RXD
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	9	3 TXD
Tx	6	2 RXD
GND	5	5 GND

Parker Compax3 PLC X10 : RS485 2W (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI			PLC
	COM1 RS485 2W 9P Male	COM3 RS485 2W 9P Male	RS485 2W 9P D-Sub Male
Data-	1	6	3 Data-
Data+	2	9	7 Data+
GND	5	5	5 GND
			1 Enable RS485
			9 +5V

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	3 Data-
Data+	6	1	⟷	7 Data+
GND	5	5	⟷	5 GND
			→	1 Enable RS485
			→	9 +5V

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	3 Data-
Data+	2	8	⟷	7 Data+
GND	**5**	**9**	⟷	5 GND
			→	1 Enable RS485
			→	9 +5V

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

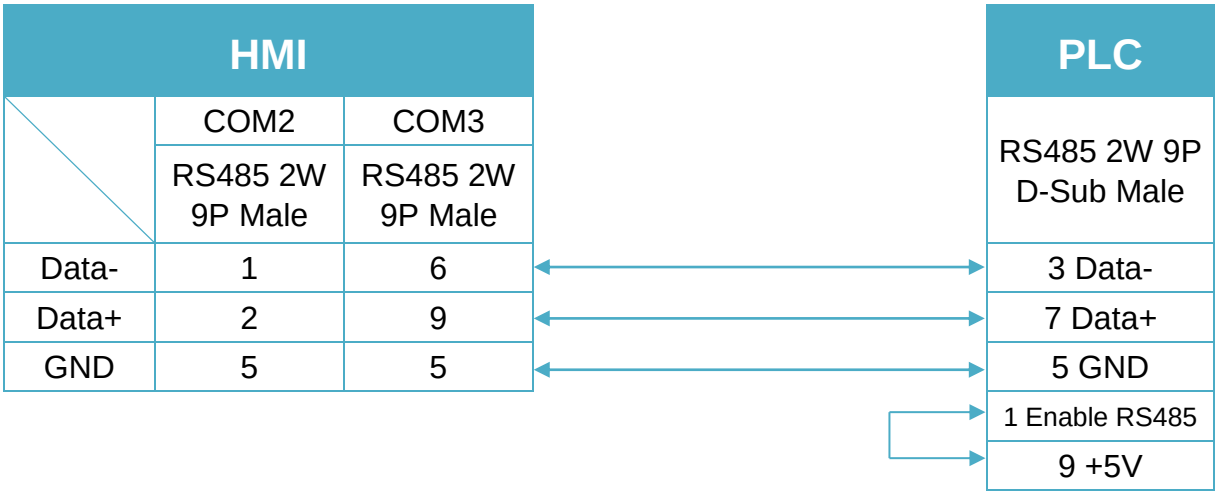


Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***


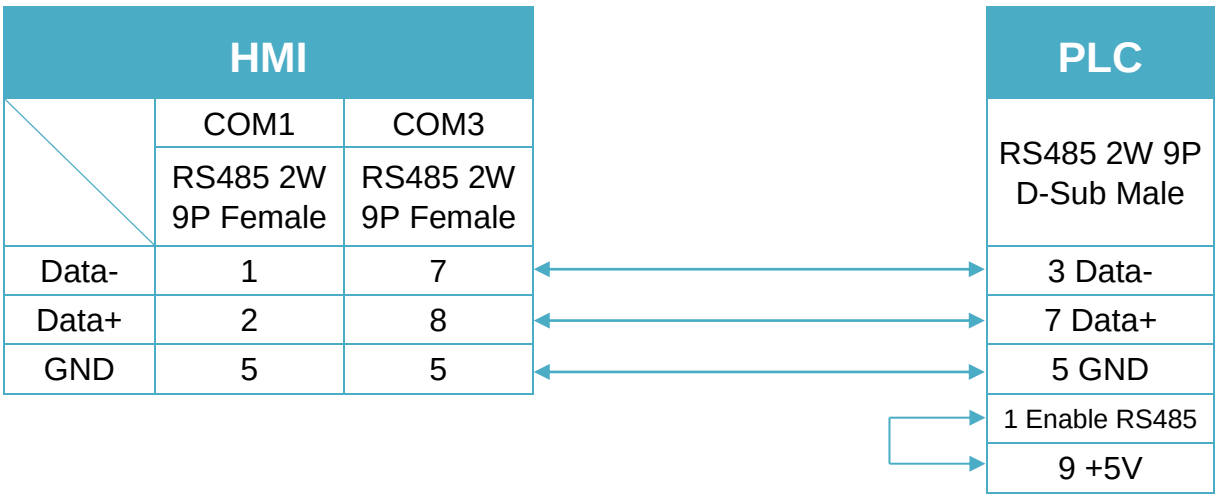


Diagram 9

MT-iP ***MT6071iP / MT8071iP***

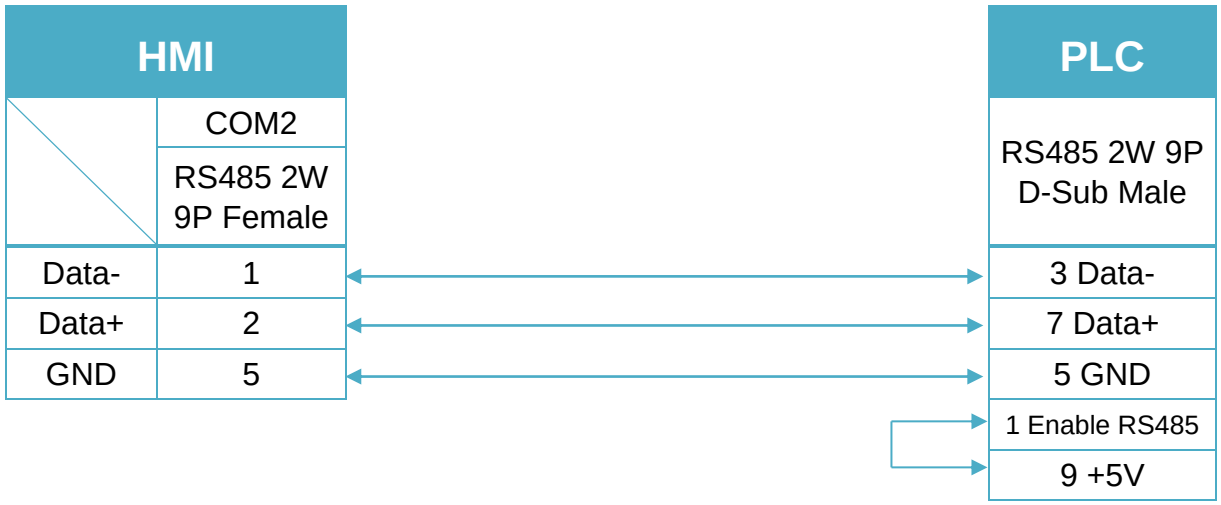

Parker Compumotor 6K Series

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Parker Compumotor 6K Series		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	VARB(L)	DDDdd	1 ~ 125	The lower 16 bits data of VARB
B	VARB(H)	DDDdd	1 ~ 125	The higher 16 bits data of VARB
D	RUN_PRG	D	0	
DW	VARI	DDD	1 ~ 125	
DW	VAR	DDD	1 ~ 125	Must select single float data mode.

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		PLC RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		PLC RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	3 TX
Tx	3	⟷	2 RX
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		PLC RS232 9P D-Sub Male
Rx	9	⟷	3 TX
Tx	6	⟷	2 RX
GND	5	⟷	5 GND

Parker SLVD Series

Supported Series : Parker SLVD Servo, SLVD1N, SLVD2N, SLVD5N, SLVD7N, SLVD10N, SLVD15N, SLVD17N.
Website: http://www.parker.com/portal/site/PARKER/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Parker SLVD Series		
PLC I/F	RS485 4W		
Baud rate	9600	9600/19200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	0		0-31

Online simulator	YES

Device Address:

Bit/Wor	Device type	Format	Range	Memo
B	Par_Binary	DDDDdd	0 ~ 999915	Set bit parameter
W	Par_One_Word	DDDD	0 ~ 9999	Set 2 bytes parameter
DW	Par_Two_Word	DDDD	0 ~ 9999	Set 4 bytes parameter
W	Par_One_Byte	DDDD	0 ~ 9999	Set 1 byte prarmeter
W	RESET	D	0	
W	RUN	D	0	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 15P D-Sub Male
Rx-	1	⟷	7 TX-
Rx+	2	⟷	12 TX+
Tx-	3	⟷	2 RX-
TX+	4	⟷	1 RX+
			6 TER
GND	5	⟷	3 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 15P D-Sub Male
Rx-	7	⟷	7 TX-
Rx+	6	⟷	12 TX+
Tx-	9	⟷	2 RX-
TX+	8	⟷	1 RX+
			6 TER
GND	5	⟷	3 GND

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 15P D-Sub Male
Rx-	1	⟷	7 TX-
Rx+	2	⟷	12 TX+
Tx-	3	⟷	2 RX-
TX+	4	⟷	1 RX+
		↕	6 TER
GND	5	⟷	3 GND

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 15P D-Sub Male
Rx-	1	⟷	7 TX-
Rx+	2	⟷	12 TX+
Tx-	3	⟷	2 RX-
TX+	4	⟷	1 RX+
		↕	6 TER
GND	5	⟷	3 GND

PATLITE VM/VMS Series

Supported Series: PATLITE VM/VMS Series
Website: http://www.patlite.co.jp

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	PATLITE VM/VMS Series		
PLC I/F	RS232	RS232 / RS485 2W / RS485 4W/ Ethernet	
Baud rate	38400	9600 ~ 115200	
Data bits	8	7 , 8	
Parity	Even	Even , Odd , None	
Stop bits	1	1 , 2	
PLC sta. no.	0	0 ~ 31	
Port no.	10600		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	LAW_bit	HHHHh	1 ~ 7FFE	h：Bit no.(0 ~ f)
W	LAW	HHHH	1 ~ 7FFE	
W	LAW6Mode	H	6	
W	LAW6Style	H	6	
W	LAW6Scale	H	6	
W	LAW6BG_c	H	6	
W	LAW6Chr_c	H	6	
W	UNI2sJIS	HHHH	1 ~ 7FFE	LAW：Unicode to shift-JIS
W	UNI2BIG5	HHHH	1 ~ 7FFE	LAW：Unicode to BIG5

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		PLC RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TX
Tx	3	7	⟷	2 RX
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		PLC RS232 9P D-Sub Female
Rx	2	⟷	3 TX
Tx	3	⟷	2 RX
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		PLC RS232 9P D-Sub Female
Rx	9	⟷	3 TX
Tx	6	⟷	2 RX
GND	5	⟷	5 GND

RS-485 2W Terminal (Diagram 4 ~ Diagram9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	11 Data-
Data+	2	9	⟷	10 Data+
GND	5	5	⟷	

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	11 Data-
Data+	6	1	⟷	10 Data+
GND	5	5	⟷	

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	11 Data-
Data+	2	8	⟷	10 Data+
GND	**5**	**9**	⟷	

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	11 Data-
Data+	2	9	⟷	10 Data+
GND	5	5	⟷	

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		PLC RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	↔	11 Data-
Data+	2	8	↔	10 Data+
GND	5	5	↔	

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		PLC RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	↔	11 Data-
Data+	2	↔	10 Data+
GND	5	↔	

RS-485 2W Terminal (Diagram 10 ~ Diagram 13)

Diagram 10

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		PLC RS485 4W Terminal
Rx-	1	⟷	12 TX-
Rx+	2	⟷	13 TX+
Tx-	3	⟷	11 RX-
TX+	4	⟷	10 RX+
GND	5	⟷	

Diagram 11

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		PLC RS485 4W Terminal
Rx-	7	⟷	12 TX-
Rx+	6	⟷	13 TX+
Tx-	9	⟷	11 RX-
TX+	8	⟷	10 RX+
GND	5	⟷	

Diagram 12

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		PLC RS485 4W Terminal
Rx-	1	⟷	12 TX-
Rx+	2	⟷	13 TX+
Tx-	3	⟷	11 RX-
TX+	4	⟷	10 RX+
GND	5	⟷	

Diagram 13

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		PLC RS485 4W Terminal
Rx-	1	⟷	12 TX-
Rx+	2	⟷	13 TX+
Tx-	3	⟷	11 RX-
TX+	4	⟷	10 RX+
GND	5	⟷	

Diagram 14

Ethernet cable:



Rockwell CompactLogix - Free Tag Names

Rockwell ControlLogix, CompactLogix, FlexLogix CH0 DF1.
Website: http://www.ab.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Rockwell CompactLogix - Free Tag Names		
PLC I/F	RS232		
Baud rate	19200	9600, 19200, 38400	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
Turn around delay	10	10 ~ 100	*Note
HMI sta. no.	0		
PLC sta. no.	1	1-31	

*Note：When the communication is not stable, please adjust the parameter of [turn around delay] till the communication is normal.


PLC Setting:

Communication mode	DF1 No Handshake protocol 19200, None, 8, 1 (default) Error Check: BCC, Station Address: 1

1. Create new tags (Controller Tags and Program Tags supported).

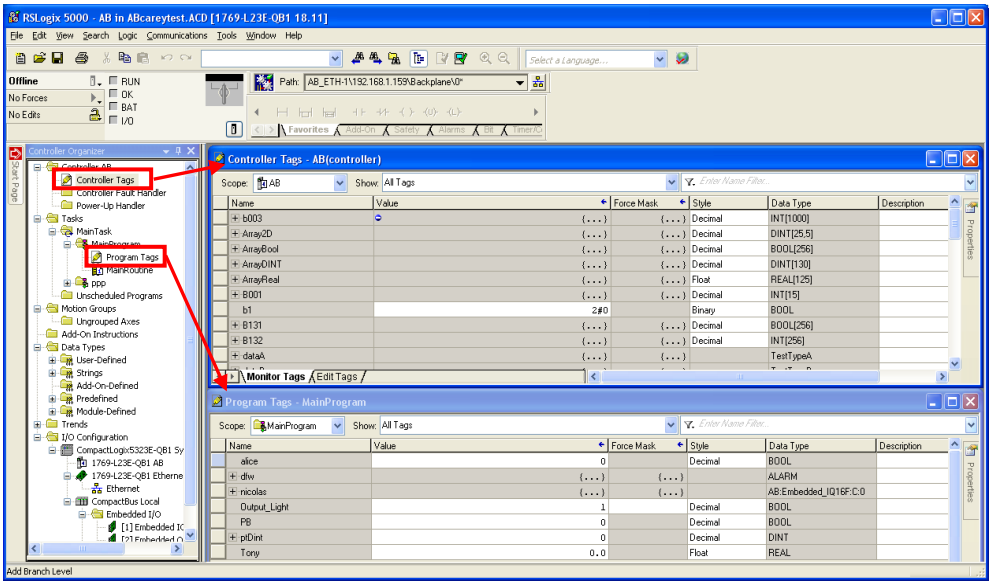

2. Export Tag data to CSV file. (**[Tools]** » **[Export]** » **[Tags and Logic Comments]**)

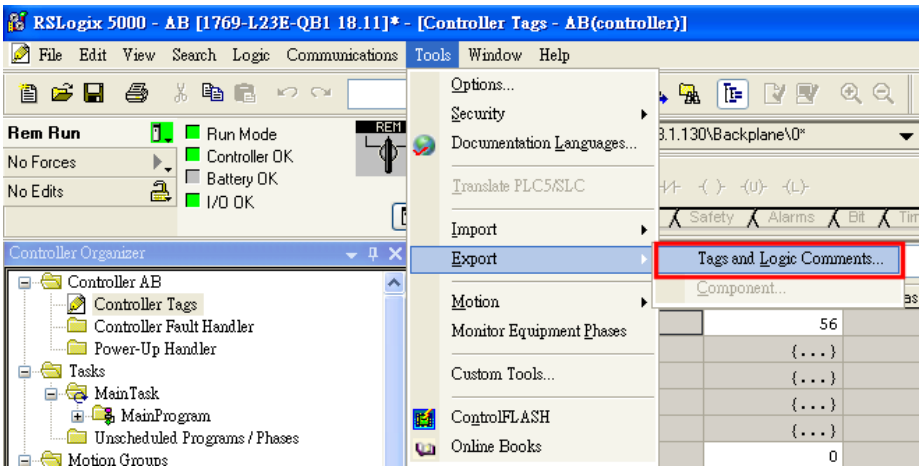


Note: The separator character in CSV file must be a comma “,” otherwise the file is invalid.

TAG		B003		INT[20]	(RADIX := Decimal, PLCMappingFile := 3, Constant := false, ExternalAccess := Read/Write)
TAG		B012		INT[32]	(RADIX := Decimal, PLCMappingFile := 12, Constant := false, ExternalAccess := Read/Write)
TAG		B015		BOOL	(RADIX := Binary, Constant := false, ExternalAccess := Read/Write)


The directory of changing system settings: [**Control Panel] » [Date, Time, Language, and Regional Options] » [Change the format of numbers, dates, and times] » [Customize] » [List separator]**. Please select “,” and export CSV file after setting.



3. Open EasyBuilder project file, select the driver and set communication parameter. Click **[Data Type]** to open **[Structure Editor]** and edit the data type of the tags.

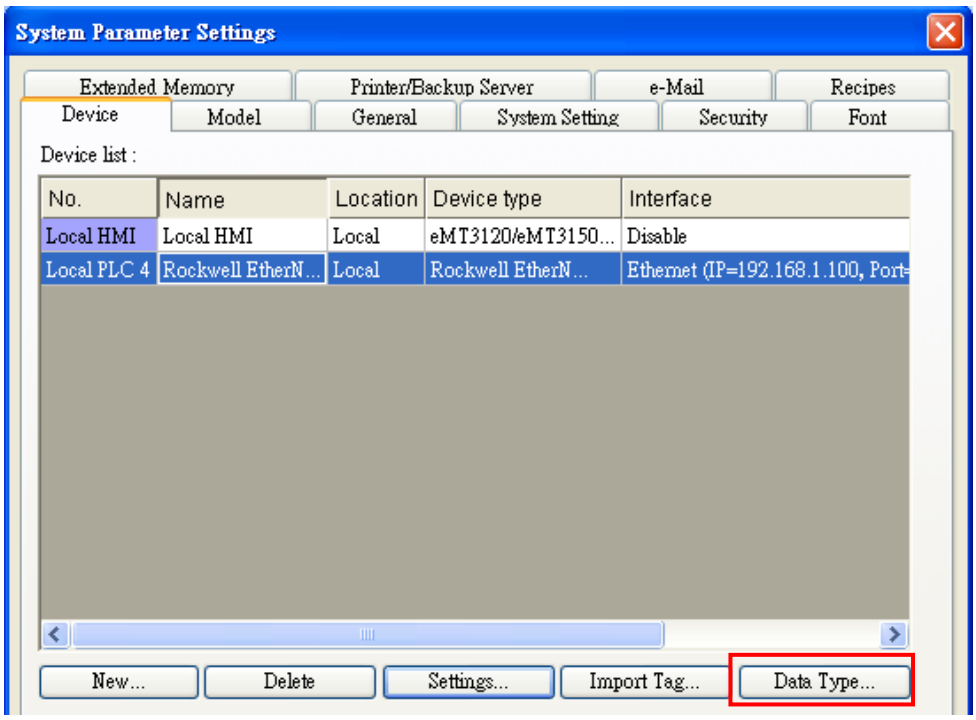

TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER	ATTRIBUTES
TAG		Local:1:C		AB:Embedded_IQ16F:C:0		
TAG		Local:1:I		AB:Embedded_IQ16F:I:0		
TAG		Local:2:C		AB:Embedded_OB16:C:0		
TAG		Local:2:I		AB:Embedded_OB16:I:0		
TAG		Local:2:O		AB:Embedded_OB16:O:0		

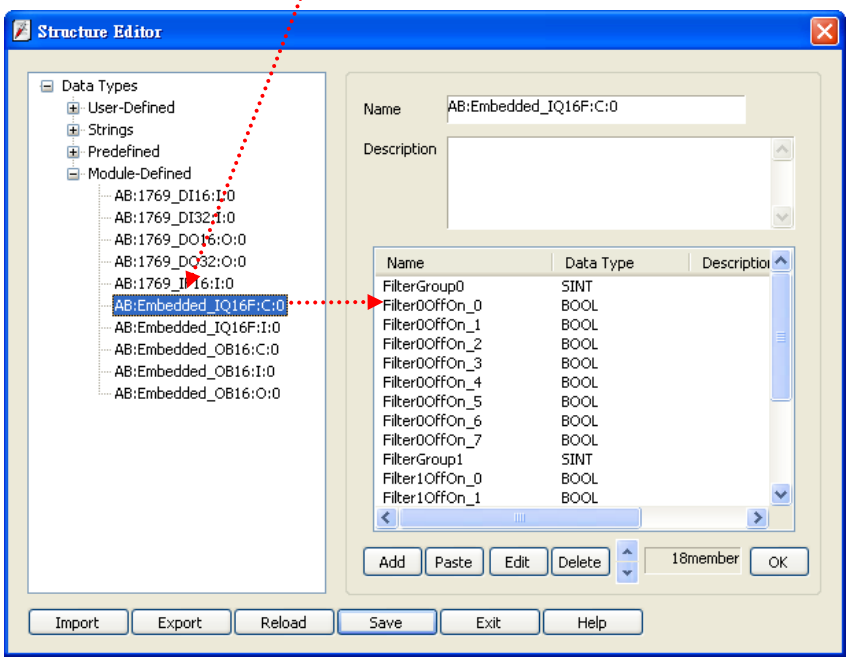


4. In **[Structure Editor]** edit the data type of **[Program Tag]**.
   The imported csv file is shown below:

Note: The Program Tag can directly be imported in EasyBuilder Pro V3.00.05, EasyBuilder 8000 V4.65.08, and the later versions. Please go to step 5 without editing manually.

7	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
8	TAG		Local:1:C		AB:Embedded_IQ16F:C:0	
9	TAG		Local:1:I		AB:Embedded_IQ16F:I:0	
10	TAG		Local:2:C		AB:Embedded_OB16:C:0	
11	TAG		Local:2:I		AB:Embedded_OB16:I:0	
12	TAG		Local:2:O		AB:Embedded_OB16:O:0	
13	TAG		PB_ControllerTag		BOOL	
14	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
15	TAG	ConveyorProgram	Output_Conveyor			Local:2:O.Data.2
16	TAG	ConveyorProgram	PB_Conveyor		BOOL	
17	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
18	TAG	MainProgram	Output_Light			Local:2:O.Data.1
19	TAG	MainProgram	PB		BOOL	

Step 1


Right click on **[Structure Editor]** » **[User-Defined]** to add a **[new data type]**.

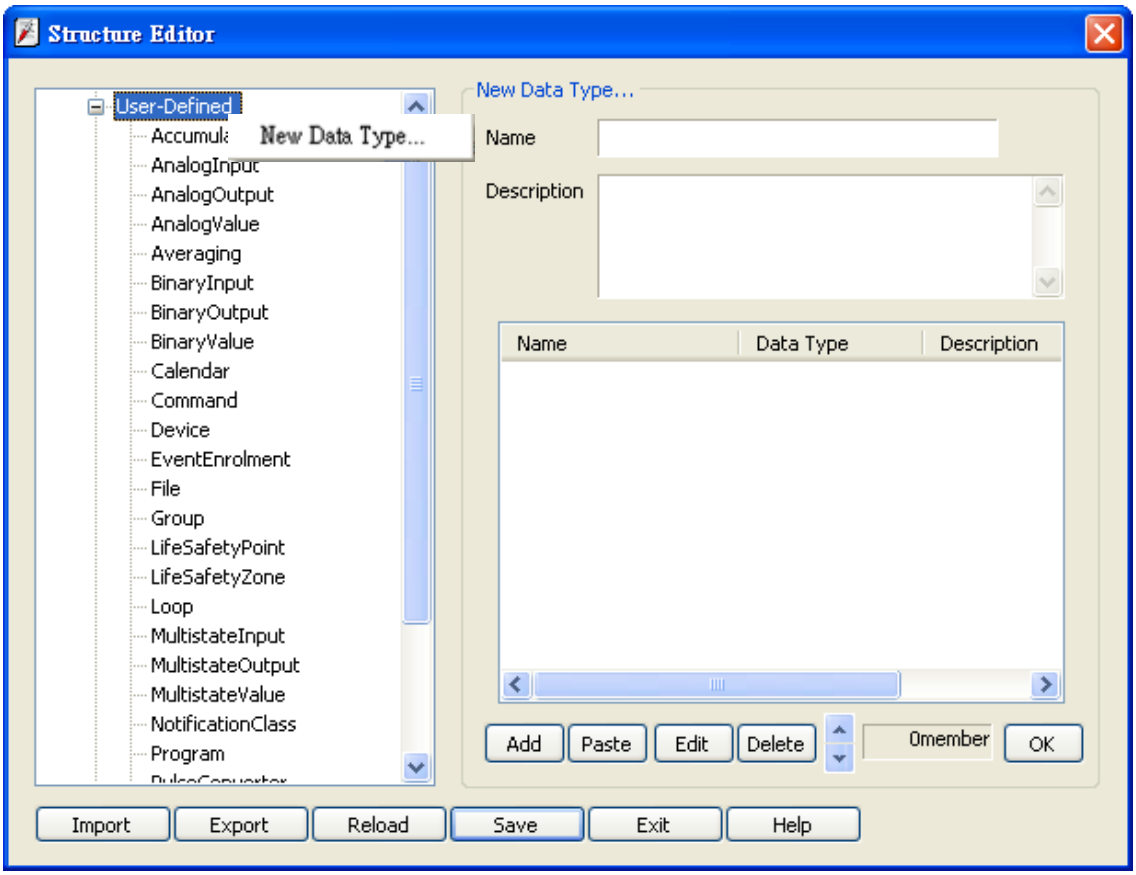


Step 2

After adding all Program Tags, click **[OK]** » **[Save]** » **[Exit]** to leave the editor dialog.


TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	ConveyorProgram	Output_Conveyor			Local:2:O.Data.2
TAG	ConveyorProgram	PB_Conveyor		BOOL	
TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	MainProgram	Output_Light			Local:2:O.Data.1
TAG	MainProgram	PB		BOOL	

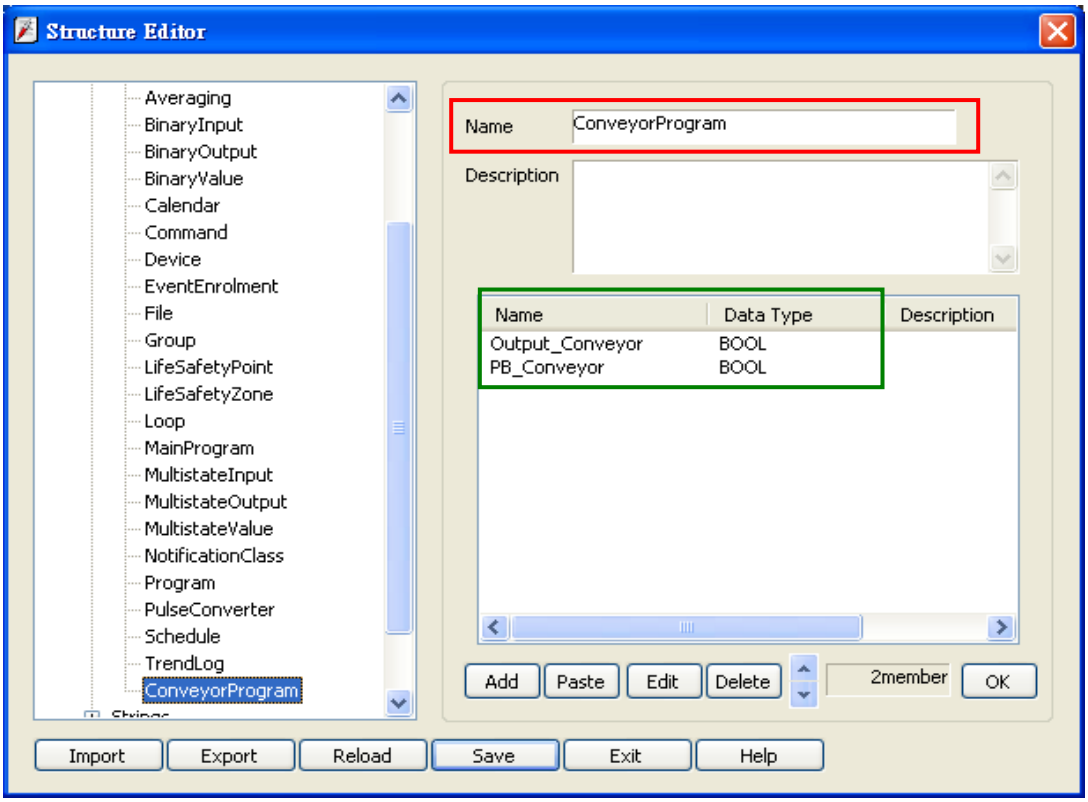

5. In **[System Parameter Settings]**, click **[Import Tag]**, select the csv file. After importing a message window is displayed.

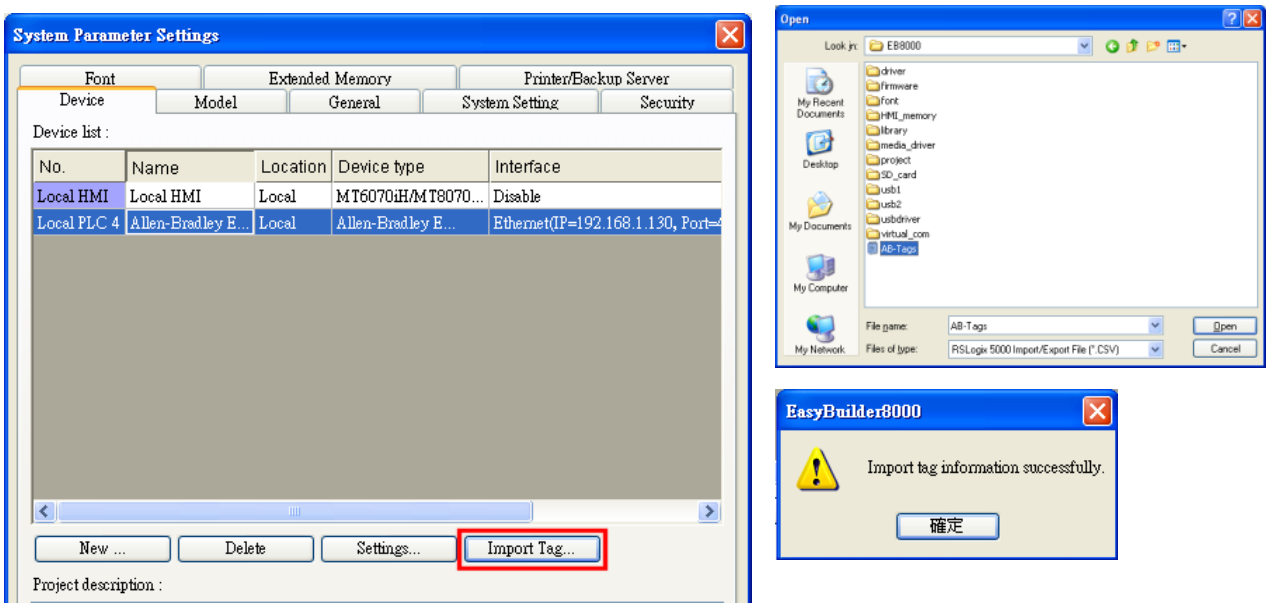

6. In the object property dialog, select PLC Tag address.

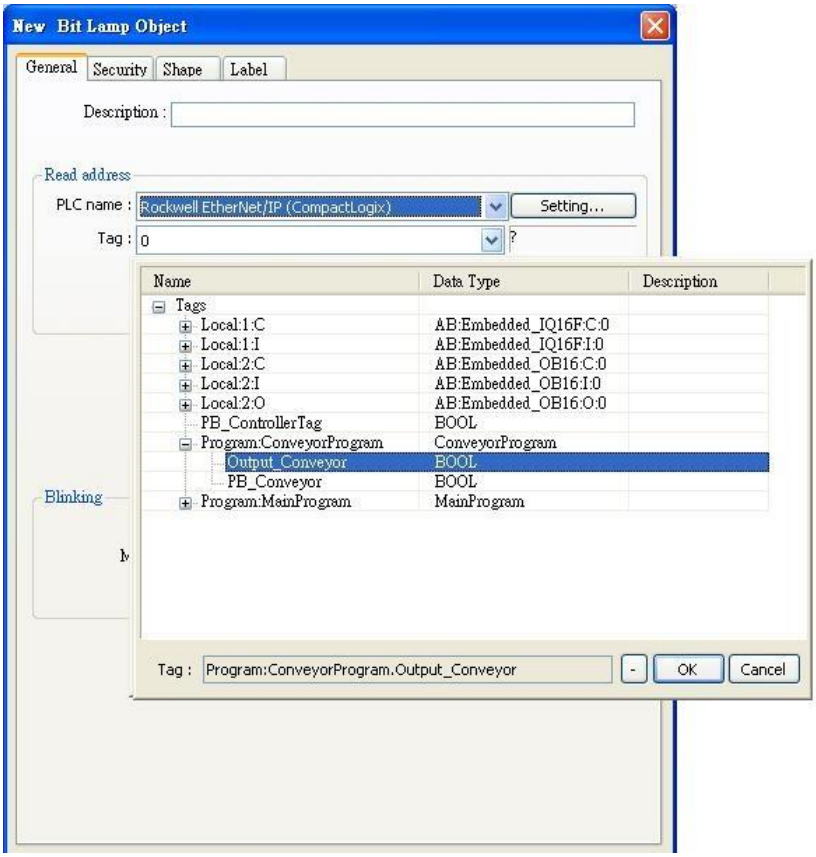

Device Address:

PLC Data Type	Bit/Word	EasyBuilder Data Format	Memo
BOOL	Boolean	Bit object	
BitArray			
SINT			
INT	Integer	16-bit signed, ASCII	-32768 ~ 32767
DINT	Double Integer	32-bit signed	-2^{31} ~ (2^{31}-1)
REAL	Single Precision Float	32-bit Float	IEEE 754

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		AB CPU CH0 RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TD
Tx	3	7	⟷	2 RD
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 9P D-Sub Female
Rx	2	⟷	3 TD
Tx	3	⟷	2 RD
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 9P D-Sub Female
Rx	9	⟷	3 TD
Tx	6	⟷	2 RD
GND	5	⟷	5 GND

Rockwell CompactLogix/FlexLogix


Supported Series: Rockwell ControlLogix, CompactLogix, FlexLogix CH0 DF1.
Website: http://www.ab.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Rockwell CompactLogix/FlexLogix		
PLC I/F	RS232		
Baud rate	19200	9600, 19200, 38400	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
HMI sta. no.	0		
PLC sta. no.	1	1-31	

PLC Setting:

Communication mode	DF1 No Handshake protocol 19200, None, 8, 1 (default) Error Check: BCC, Station Address: 1

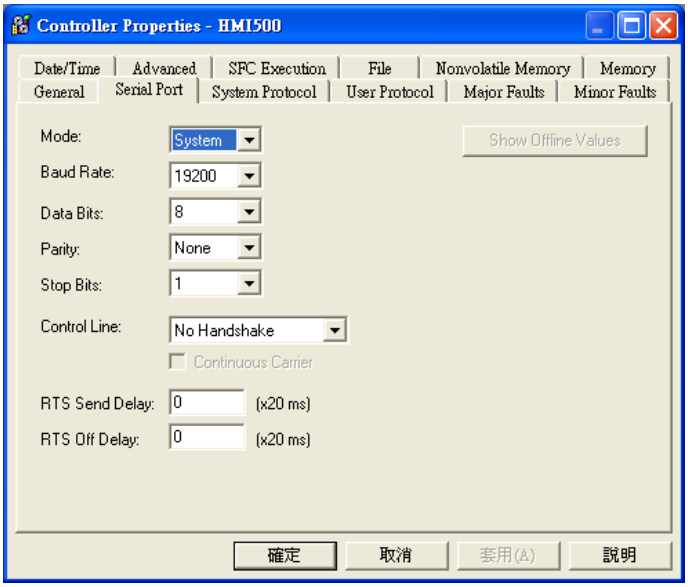



ControlLogix, CompactLogix CPU CH0 setting:

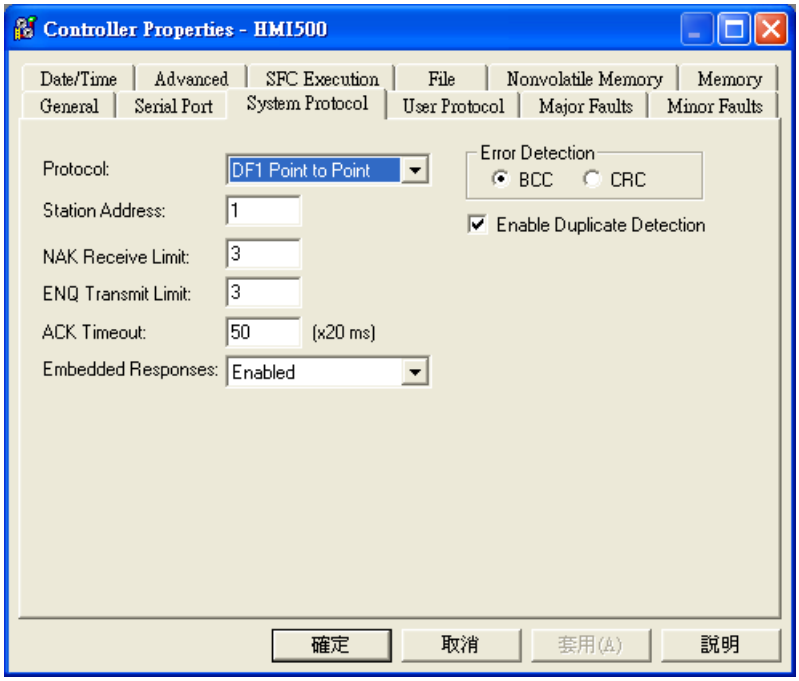

Create a Tag:

The name format must be 4 chars. For example: B003, T004, C005, N007, and F008. Two or three chars are not available. For example: B03 or B3.

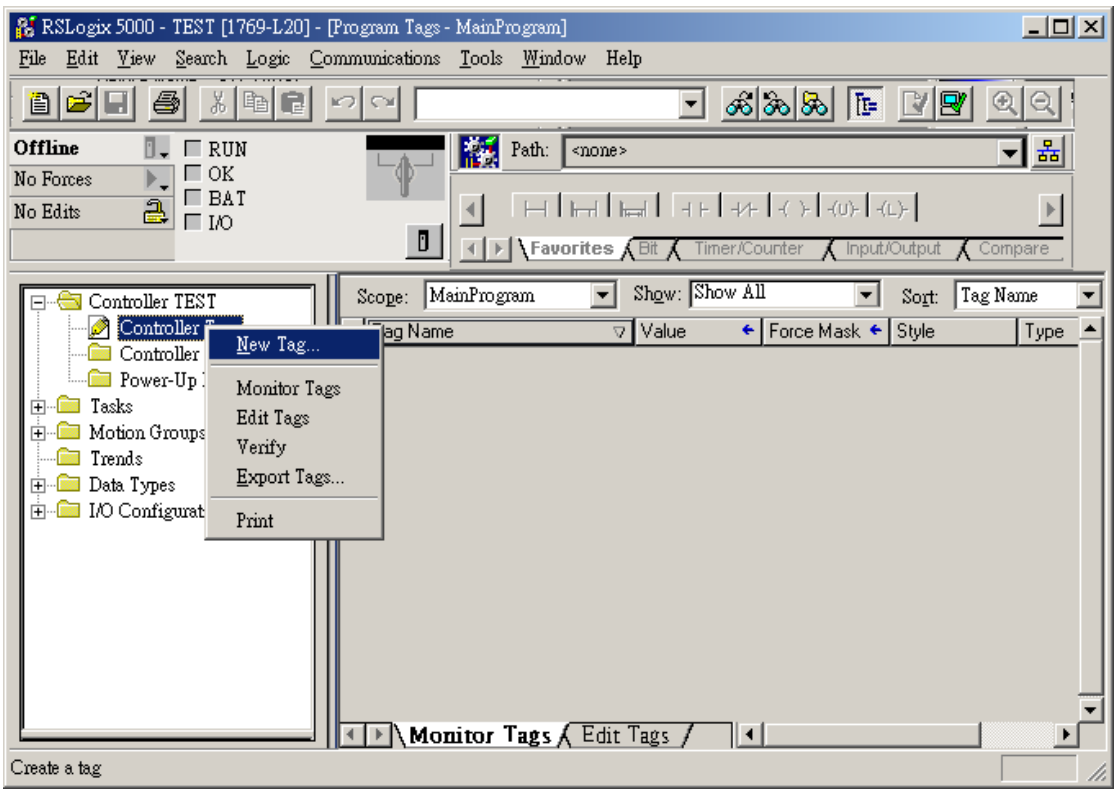

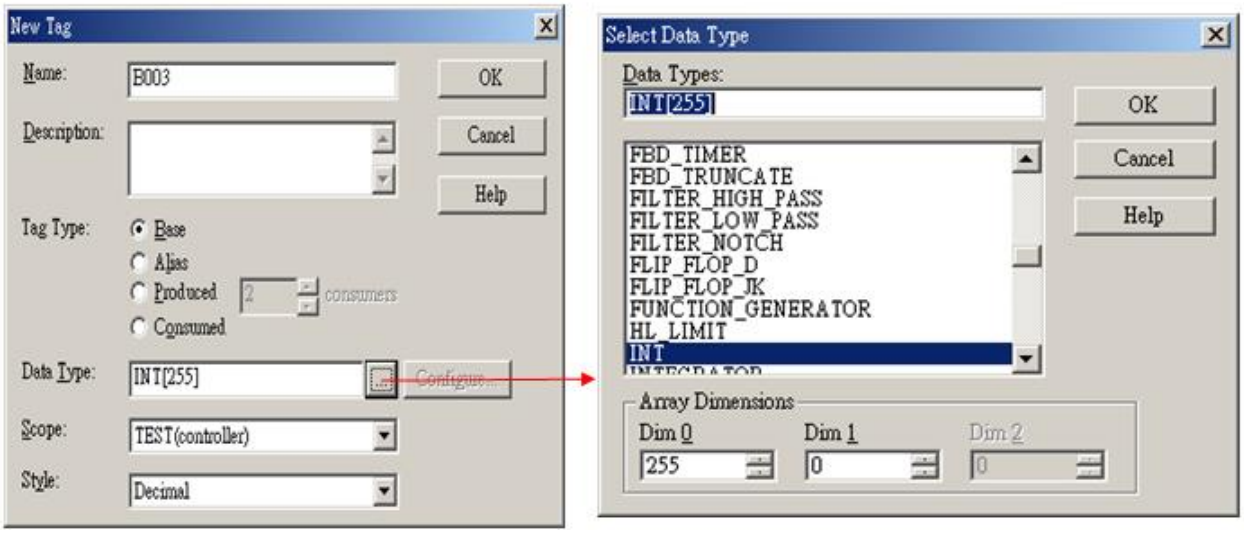

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	B_BOOL	FFFDDDdd	0 ~ 25525515	Bit data file
B	N_BOOL	FFFDDDdd	0 ~ 25525515	Integer data file bit level (N7, 10 ~ 255)
DW	Tx.ACC	FFFDDD	0 ~ 255255	Timer Accumulator Value (T4, T10 ~ 255)
DW	Tx.PRE	FFFDDD	0 ~ 255255	Timer Preset Value (T4, T10 ~ 255)
DW	Nx_INT	FFFDDD	0 ~ 255255	Integer data file (N7, 10 ~ 255)
W	Bx_INT	FFFDDD	0 ~ 255255	Bit data file word level
DW	Cx.ACC	FFFDDD	0 ~ 255255	Counter Accumulator Value (C5, C10 ~ 255)
DW	Cx.PRE	FFFDDD	0 ~ 255255	Counter Preset Value (C5, C10 ~ 255)
W	F8_REAL	DDD	0 ~ 255	Floating point data file (F8)
W	Fx_REAL	FFFDDD	0 ~ 255255	Floating point data file (F008, F010 ~ F255)

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		AB CPU CH0 RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TD
Tx	3	7	⟷	2 RD
GND	5	5	⟷	5 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		AB CPU CH0 RS232 9P D-Sub Female
	RS232 9P Female		
Rx	2	⟷	3 TD
Tx	3	⟷	2 RD
GND	5	⟷	5 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 9P D-Sub Female
Rx	9	⟷	3 TD
Tx	6	⟷	2 RD
GND	5	⟷	5 GND

Rockwell DF1

Supported Series: Rockwell MicroLogix 1000, 1100, 1200, 1400, 1500, SLC 5/01, 5/02, 5/03, 5/04, 5/05.
Website: http://www.ab.com
Note: Allen-Bradley DF1 driver uses CRC checksum.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Rockwell DF1		
PLC I/F	RS232		
Baud rate	19200	9600, 19200, 38400	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
HMI sta. no.	0		
PLC sta. no.	1	1-31	

PLC Setting:

Communication mode	DF1 Full Duplex protocol 19200, None, 8, 1 (default) Error Check: CRC

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I1	DDDdd	0 ~ 25515	Input (I)
B	O0	DDDdd	0 ~ 25515	Output (O)
B	B3	DDDdd	0 ~ 25515	Bit data file (B3)
B	B10 ~ 13	DDDdd	0 ~ 25515	Bit data file (B10 ~ 13)
B	S_Bit	DDDdd	0 ~ 25515	Status (S) bit level
B	Bfn	FFFDDDdd	0 ~ 25525515	Bit data file (B3, 10 ~ 254)
B	NfnBit	FFFDDDdd	0 ~ 25525515	Integer data file bit level (N7, 10 ~ 254)
W	T4SV	DDD	0 ~ 255	Timer Preset Value (T4)
W	T4PV	DDD	0 ~ 255	Timer Accumulator Value (T4)
W	C5SV	DDD	0 ~ 255	Counter Preset Value (C5)

Bit/Wor	Device type	Format	Range	Memo
W	C5PV	DDD	0 ~ 255	Counter Accumulator Value
W	TfnSV	FFFDDD	0 ~ 255255	Timer Preset Value
W	TfnPV	FFFDDD	0 ~ 255255	Timer Accumulator Value
W	CfnSV	FFFDDD	0 ~ 255255	Counter Preset Value
W	CfnPV	FFFDDD	0 ~ 255255	Counter Accumulator Value
W	N7	DDD	0 ~ 255	Integer data file (N7)
W	N10 ~ 15	DDD	0 ~ 255	Integer data file (N10 ~ 15)
W	Nfn	FFFDDD	0 ~ 255255	Integer data file (N7,10 ~ 254)
W	S	DDD	0 ~ 255	Status (S)
W	F8	DDD	0 ~ 255	Floating point data file (F8)
W	Ffn	FFFDDD	0 ~ 255255	
W	Lfn	FFFDDD	0 ~ 255255	
String	STfn	DDD.DDD.DD	0 ~ 255.255.40	File no.Element no.Data no.

Wiring Diagram:

The following is the view from the soldering point of a cable.

9P D-Sub to 8P Mini-DIN: MicroLogix 1000, 1100, 1200, 1400, 1500 (Diagram 1 ~ Diagram 3)



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		MicroLogix RS232 8P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	7 TXD
Tx	3	7	⟷	4 RXD
GND	5	5	⟷	2 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		MicroLogix RS232 8P Mini-DIN Male
	RS232 9P Female		
Rx	2	⟷	7 TXD
Tx	3	⟷	4 RXD
GND	5	⟷	2 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	MicroLogix RS232 8P Mini-DIN Male
Rx	9	7 TXD
Tx	6	4 RXD

9P D-Sub to 9P D-Sub: SLC5/03, 04, 05 CH0 (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female	COM3 RS232 9P Female	AB CPU CH0 RS232 9P D-Sub Female
Rx	2	8	3 TD
Tx	3	7	2 RD
GND	5	5	5 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 9P D-Sub Female
Rx	2	⟷	3 TD
Tx	3	⟷	2 RD
GND	5	⟷	5 GND

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 9P D-Sub Female
Rx	9	⟷	3 TD
Tx	6	⟷	2 RD
GND	5	⟷	5 GND

Rockwell DF1 (BCC)

Supported Series: Rockwell MicroLogix 1000, 1100, 1200, 1400, 1500, SLC 5/01, 5/02, 5/03, 5/04, 5/05.
Website: http://www.ab.com
Note: Allen-Bradley DF1 (BCC) and Allen-Bradley DF1 are the same; the only difference is the use of BCC checksum.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Rockwell DF1 (BCC)		
PLC I/F	RS232		
Baud rate	19200	9600, 19200, 38400	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
HMI sta. no.	0		
PLC sta. no.	1	1-31	

PLC Setting:

Communication mode	DF1 Full Duplex protocol 19200, None, 8, 1 (default) Error Check: BCC

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I1	DDDdd	0 ~ 25515	Input (I)
B	O0	DDDdd	0 ~ 25515	Output (O)
B	B3	DDDdd	0 ~ 25515	Bit data file (B3)
B	B10 ~ 13	DDDdd	0 ~ 25515	Bit data file (B10 ~ 13)
B	S_Bit	DDDdd	0 ~ 25515	Status (S) bit level
B	Bfn	FFFDDDdd	0 ~ 25525515	Bit data file (B3, 10 ~ 254)
B	NfnBit	FFFDDDdd	0 ~ 25525515	Integer data file bit level (N7, 10 ~ 254)
W	T4SV	DDD	0 ~ 255	Timer Preset Value (T4)
W	T4PV	DDD	0 ~ 255	Timer Accumulator Value (T4)
W	C5SV	DDD	0 ~ 255	Counter Preset Value (C5)

Bit/Word	Device type	Format	Range	Memo
W	C5PV	DDD	0 ~ 255	Counter Accumulator Value (C5)
W	TfnSV	FFFDDD	0 ~ 255255	Timer Preset Value
W	TfnPV	FFFDDD	0 ~ 255255	Timer Accumulator Value
W	CfnSV	FFFDDD	0 ~ 255255	Counter Preset Value
W	CfnPV	FFFDDD	0 ~ 255255	Counter Accumulator Value
W	N7	DDD	0 ~ 255	Integer data file (N7)
W	N10~15	DDD	0 ~ 255	Integer data file (N10 ~ 15)
W	Nfn	FFFDDD	0 ~ 255255	Integer data file (N7, 10 ~ 254)
W	S	DDD	0 ~ 255	Status (S)
W	F8	DDD	0 ~ 255	Floating point data file (F8)
W	Ffn	FFFDDD	0 ~ 255255	
W	Lfn	FFFDDD	0 ~ 255255	
W	STfn	DDD.DDD.DD	0 ~ 255.255.40	

Wiring Diagram:

The following is the view from the soldering point of a cable.

9P D-Sub to 8P Mini-DIN: MicroLogix 1000, 1100, 1200, 1500 (Diagram 1 ~ Diagram 3)



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		MicroLogix RS232 8P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	7 TXD
Tx	3	7	⟷	4 RXD
GND	5	5	⟷	2 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		MicroLogix RS232 8P Mini-DIN Male
	RS232 9P Female		
Rx	2	⟷	7 TXD
Tx	3	⟷	4 RXD
GND	5	⟷	2 GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	MicroLogix RS232 8P Mini-DIN Male
Rx	9	7 TXD
Tx	6	4 RXD
GND	5	2 GND

9P D-Sub to 9P D-Sub: SLC5/03, 04, 05 CH0 (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female	COM3 RS232 9P Female	AB CPU CH0 RS232 9P D-Sub Female
Rx	2	8	3 TD
Tx	3	7	2 RD
GND	5	5	5 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 9P D-Sub Female
Rx	2	⟷	3 TD
Tx	3	⟷	2 RD
GND	5	⟷	5 GND

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 9P D-Sub Female
Rx	9	⟷	3 TD
Tx	6	⟷	2 RD
GND	5	⟷	5 GND

Rockwell DH485

Supported Series: Rockwell MicroLogix 1000, 1100, 1200, 1400, 1500, SLC 5/01, 5/02, 5/03, 5/04, 5/05.
Website: http://www.ab.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Rockwell DH485		
PLC I/F	RS485 2W	RS232	
Baud rate	19200	9600, 19200	
Data bits	8		
Parity	Even		
Stop bits	1		
HMI sta. no.	0	2	
PLC sta. no.	1	1-31	

Online simulation	YES
Extend address mode	NO

PLC Setting:

Communication mode	DH485 protocol 19200 (default) Set the Max. Node Address to the number of PLCs in use.



Device Address:

Bit/Word	Device	Format	Range	Memo
B	I1	DDDdd	0 ~ 25515	Input (I)
B	O0	DDDdd	0 ~ 25515	Output (O)
B	B3	DDDdd	0 ~ 25515	Bit data file (B3)
B	B10 ~ 13	DDDdd	0 ~ 25515	Bit data file (B10 ~ 13)
B	Bfn	FFFDDDdd	0 ~ 25525515	Bit data file (B3, 10 ~ 254)
B	NfnBit	FFFDDDdd	0 ~ 25525515	Integer data file bit level (N7,10 ~ 254)
B	S_Bit	DDDdd	0 ~ 25515	Status file
W	T4SV	DDD	0 ~ 255	Timer Preset Value (T4)
W	T4PV	DDD	0 ~ 255	Timer Accumulator Value (T4)
W	C5SV	DDD	0 ~ 255	Counter Preset Value (C5)
W	C5PV	DDD	0 ~ 255	Counter Accumulator Value (C5)
W	TfnSV	FFFDDD	0 ~ 255255	Timer Preset Value
W	TfnPV	FFFDDD	0 ~ 255255	Timer Accumulator Value
W	CfnSV	FFFDDD	0 ~ 255255	Counter Preset Value
W	CfnPV	FFFDDD	0 ~ 255255	Counter Accumulator Value
W	F8	DDD	0 ~ 255	Floating point data file (F8)
W	N7	DDD	0 ~ 255	Integer data file (N7)
W	N10 ~ 15	DDD	0 ~ 255	Integer data file (N10 ~ 15)
W	Nfn	FFFDDD	0 ~ 255255	Integer data file (N7,10 ~ 254)
W	S	DDD	0 ~ 255	Status file

Wiring Diagram:

RS-485: SLC500 Fixed type, SLC5/01, 02, 03 CH1. (Diagram 1 ~ Diagram 6)
HMI can't connect to 1747-AIC peripheral port.

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		AB SLC500 DH485 RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2 SDB
Data+	2	9	⟷	1 SDA
GND	5	5	⟷	7 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		AB SLC500 DH485 RJ45 Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2 SDB
Data+	6	1	⟷	1 SDA
GND	5	5	⟷	7 GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		AB SLC500 DH485 RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2 SDB
Data+	2	8	⟷	1 SDA
GND	**5**	**9**	⟷	7 GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		AB SLC500 DH485 RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2 SDB
Data+	2	9	⟷	1 SDA
GND	5	5	⟷	7 GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		AB SLC500 DH485 RJ45 Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2 SDB
Data+	2	8	⟷	1 SDA
GND	5	5	⟷	7 GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2 RS485 2W 9P Female	AB SLC500 DH485 RJ45 Male
Data-	1	2 SDB
Data+	2	1 SDA
GND	5	7 GND

The following is the view from the soldering point of a cable.

9P D-Sub to 8P Mini-DIN: MicroLogix 1000, 1100, 1200, and 1500 must set DH485 protocol. (Diagram 7 ~ Diagram 9)



Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1 RS232 9P Female	COM3 RS232 9P Female	MicroLogix RS232 8P Mini-DIN Male
Rx	2	8	7 TXD
Tx	3	7	4 RXD
GND	5	5	2 GND

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		MicroLogix RS232 8P Mini-DIN Male
Rx	2	⟷	7 TXD
Tx	3	⟷	4 RXD
GND	5	⟷	2 GND

Diagram 9

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		MicroLogix RS232 8P Mini-DIN Male
Rx	9	⟷	7 TXD
Tx	6	⟷	4 RXD
GND	5	⟷	2 GND

9P D-Sub to 9P D-Sub: SLC5/03, 04, 05 CH0 must set DH485 protocol. (Diagram 10 ~ Diagram 12)

Diagram 10

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		AB CPU CH0 RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3 TD
Tx	3	7	⟷	2 RD
GND	5	5	⟷	5 GND


Diagram 11

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		AB CPU CH0 RS232 9P D-Sub Female
	RS232 9P Female		
Rx	2	⟷	3 TD
Tx	3	⟷	2 RD
GND	5	⟷	5 GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

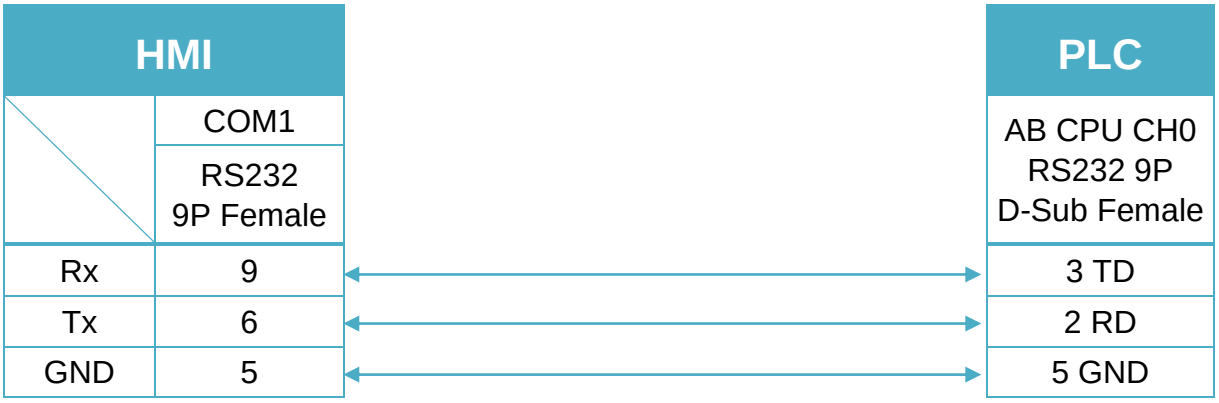

Rockwell EtherNet/IP (CompactLogix)


Supported Series: Rockwell ControlLogix, CompactLogix, FelxLogix Ethernet.
Website: http://www.ab.com


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Rockwell EtherNet/IP (CompactLogix)		
PLC I/F	Ethernet		
Port no.	44818		
PLC sta. no.	1		

PLC Setting:

RSLogix 5000 setting
Create a Tag:
The name format must be 4 chars. For example: B003, T004, C005, N007, and F008. Two or three chars are not available. For example: B03 or B3.

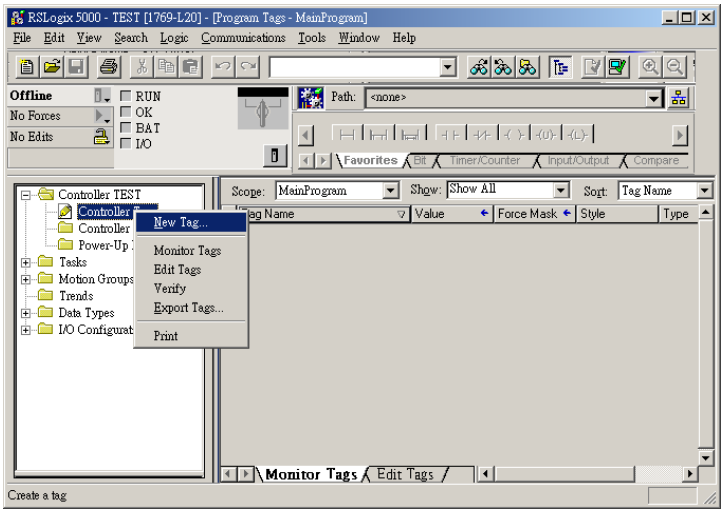

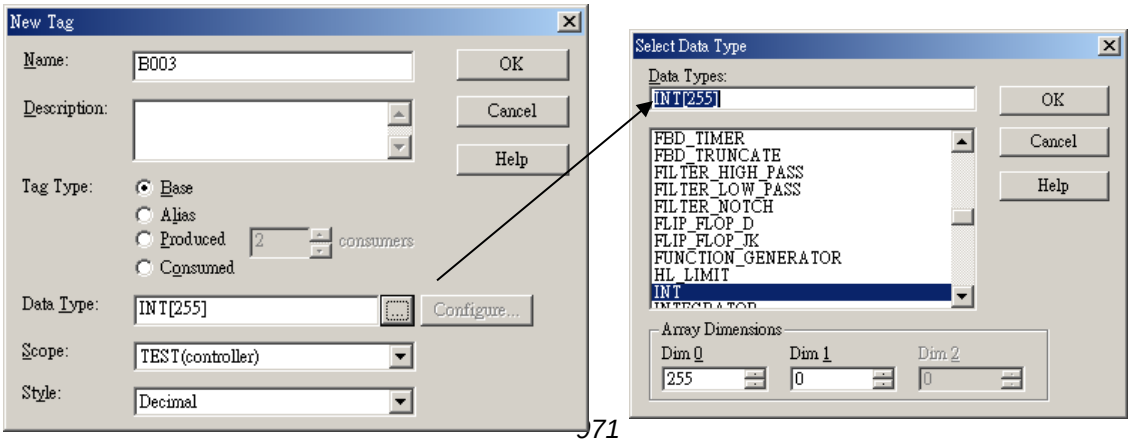

Device Address:

Bit/Word	Device	Format	Range	Memo
B	Bx_BOOL	FFFDDDdd	0 ~ 25525515	Bit data file
B	Nx_BOOL	FFFDDDdd	0 ~ 25525515	Integer data file bit level (N7, 10 ~ 99)
W	Bx_INT	FFFDDD	0 ~ 255255	Bit data file word level
W	Nx_INT	FFFDDD	0 ~ 255255	Integer data file (N7, 10 ~ 99)
DW (F)	F8_REAL	DDD	0 ~ 255	Floating point data file (F8)
DW (F)	Fx_REAL	FFFDDD	0 ~ 255255	Floating point data file (F8)
DW	Cx.ACC	FFFDDD	0 ~ 255255	Counter Accumulator Value (C5, C10 ~ 255)
DW	Cx.PRE	FFFDDD	0 ~ 255255	Counter Preset Value (C5, C10 ~ 255)
DW	Tx.ACC	FFFDDD	0 ~ 255255	Timer Accumulator Value (T4, T10 ~ 255)
DW	Tx.PRE	FFFDDD	0 ~ 255255	Timer Preset Value (T4, T10 ~ 255)
DW	Lx.DINT	FFFDDD	0 ~ 255255	

Wiring Diagram:

Diagram 1

Ethernet cable:



Rockwell EtherNet/IP (CompactLogix) – Free Tag Names


Supported Series: Rockwell CompactLogix, FelxLogix Ethernet
Website: http://www.ab.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Rockwell EtherNet/IP (CompactLogix) – Free Tag Names		
PLC I/F	Ethernet		
Port no.	44818		
PLC sta. no.	1		

PLC Setting:


1. Set PLC IP address.

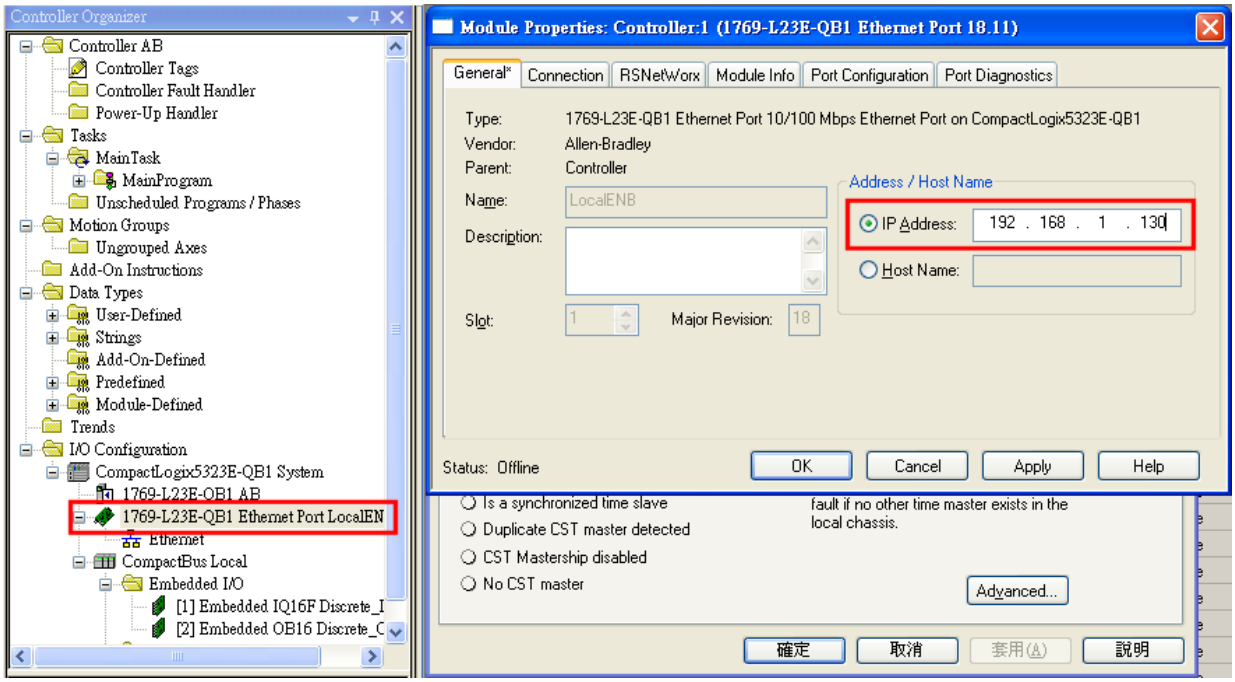

2. Create new tags (Controller Tags and Program Tags supported).

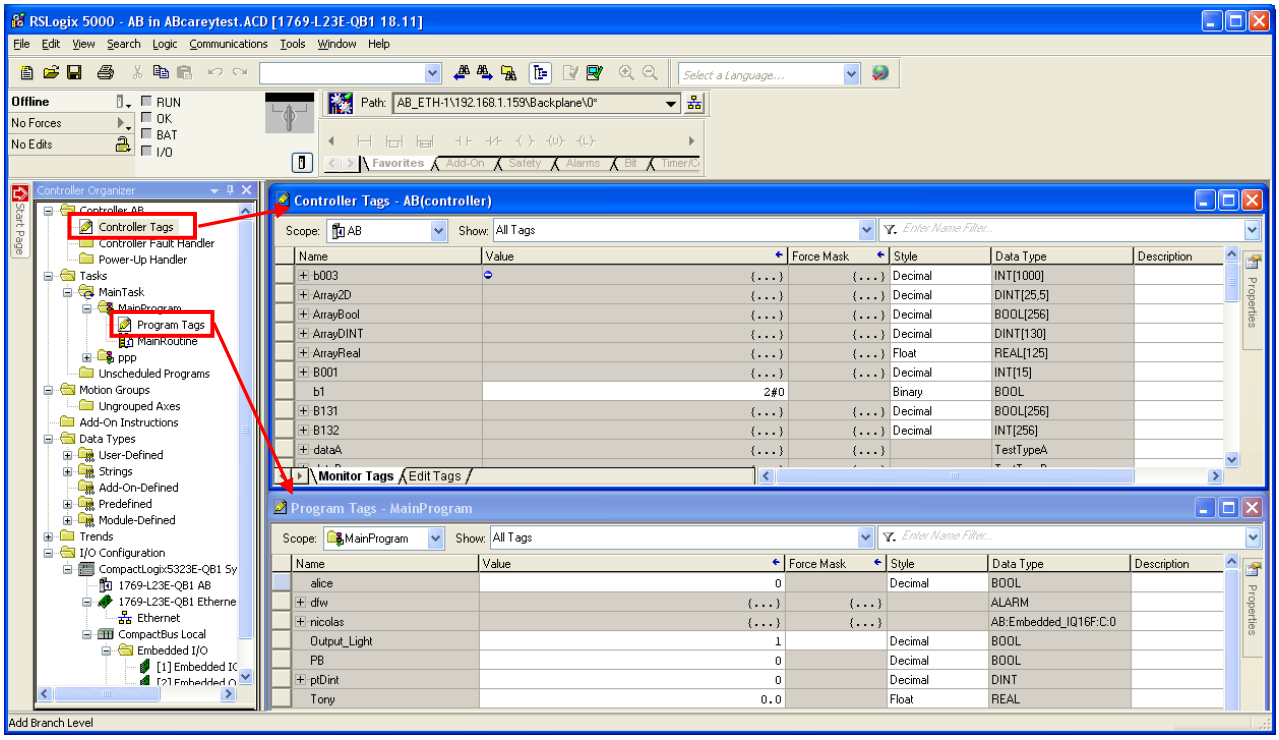

3. Export Tag data to CSV file. (**[Tools]** » **[Export]** » **[Tags and Logic Comments]**)

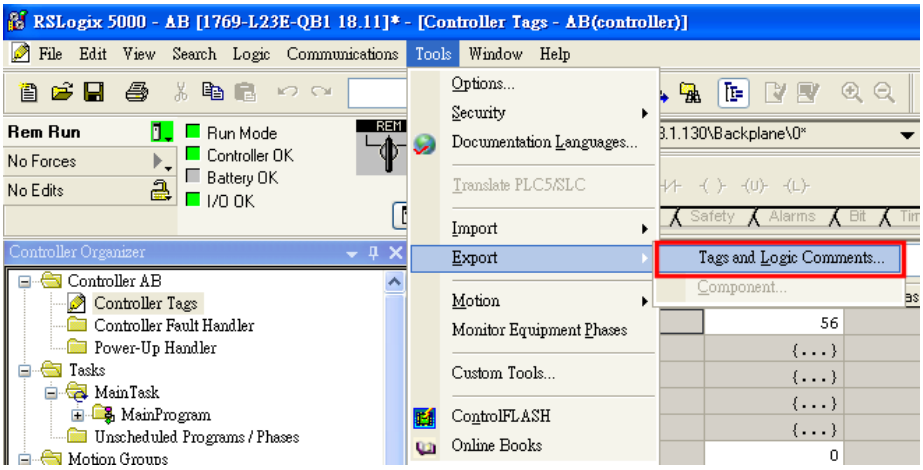

Note: The separator character in CSV file must be a comma “,” otherwise the file is invalid.

The directory of changing system settings: [**Control Panel] » [Date, Time, Language, and Regional Options] » [Change the format of numbers, dates, and times] » [Customize] » [List separator]**. Please select “,” and export CSV file after setting.



4. Open EasyBuilder project file, select the driver and set IP address. Click **[Data Type]** to open **[Structure Editor]** and edit the data type of the tags.

TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER	ATTRIBUTES
TAG		Local:1:C		AB:Embedded_IQ16F:C:0		
TAG		Local:1:I		AB:Embedded_IQ16F:I:0		
TAG		Local:2:C		AB:Embedded_OB16:C:0		
TAG		Local:2:I		AB:Embedded_OB16:I:0		
TAG		Local:2:O		AB:Embedded_OB16:O:0		

TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	ConveyorProgram	Output_Conveyor			Local:2:O.Data.2
TAG	ConveyorProgram	PB_Conveyor		BOOL	
TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	MainProgram	Output_Light			Local:2:O.Data.1
TAG	MainProgram	PB		BOOL	


5. In **[Structure Editor]** edit the data type of **[Program Tag]**.
   The imported csv file is shown below:

Note: The Program Tag can directly be imported in EasyBuilder Pro V3.00.05, EasyBuilder 8000 V4.65.08, and the later versions. Please go to step 6 without editing manually.

7	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
8	TAG		Local:1:C		AB:Embedded_IQ16F:C:0	
9	TAG		Local:1:I		AB:Embedded_IQ16F:I:0	
10	TAG		Local:2:C		AB:Embedded_OB16:C:0	
11	TAG		Local:2:I		AB:Embedded_OB16:I:0	
12	TAG		Local:2:O		AB:Embedded_OB16:O:0	
13	TAG		PB_ControllerTag		BOOL	
14	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
15	TAG	ConveyorProgram	Output_Conveyor			Local:2:O.Data.2
16	TAG	ConveyorProgram	PB_Conveyor		BOOL	
17	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
18	TAG	MainProgram	Output_Light			Local:2:O.Data.1
19	TAG	MainProgram	PB		BOOL	

Step 1


Right click on **[Structure Editor]** » **[User-Defined]** to add a **[new data type]**.




Step 2


After adding all Program Tags, click **[OK]** » **[Save]** » **[Exit]** to leave the editor dialog.

TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	ConveyorProgram	Output_Conveyor			Local:2:O.Data.2
TAG	ConveyorProgram	PB_Conveyor		BOOL	
TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	MainProgram	Output_Light			Local:2:O.Data.1
TAG	MainProgram	PB		BOOL	

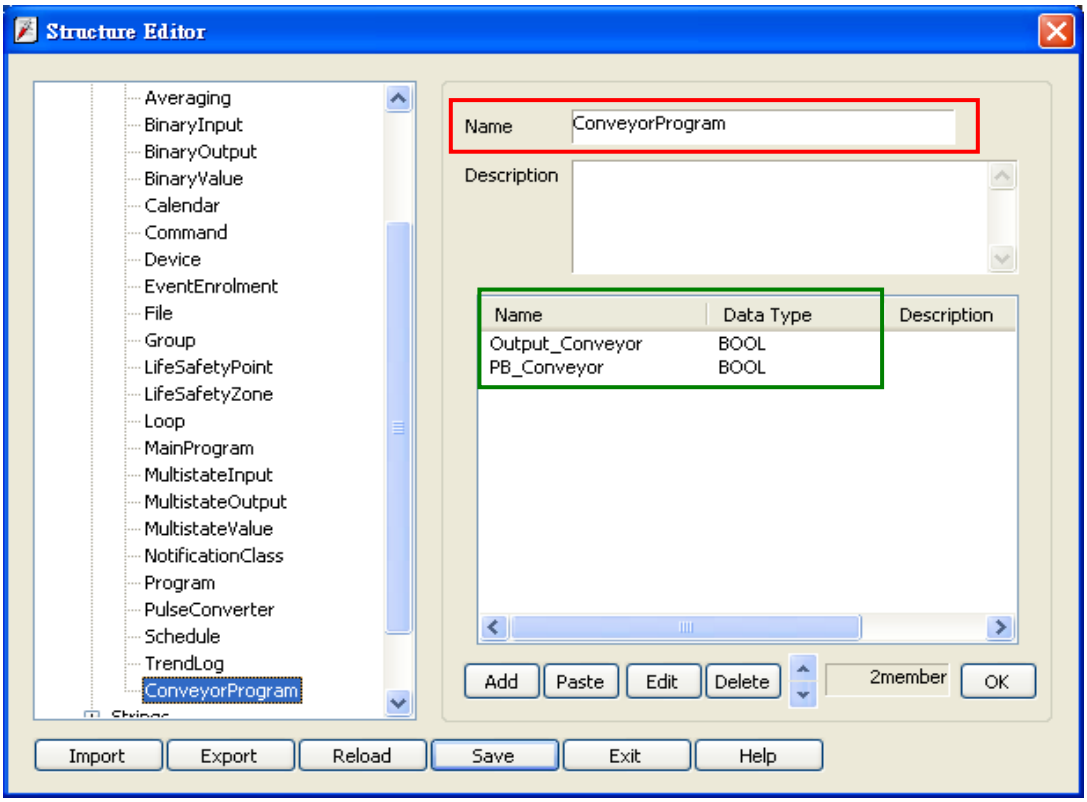


6. In **[System Parameter Settings]**, click **[Import Tag]**, select the csv file. After importing a message window is displayed.

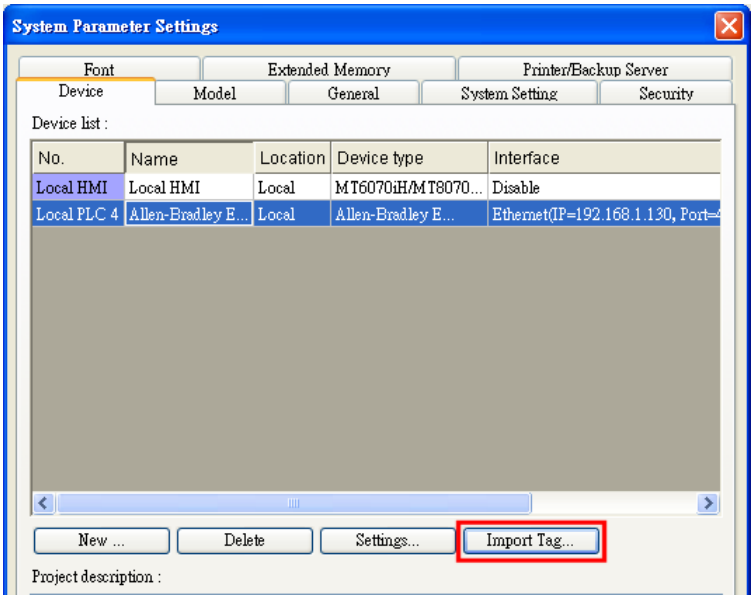

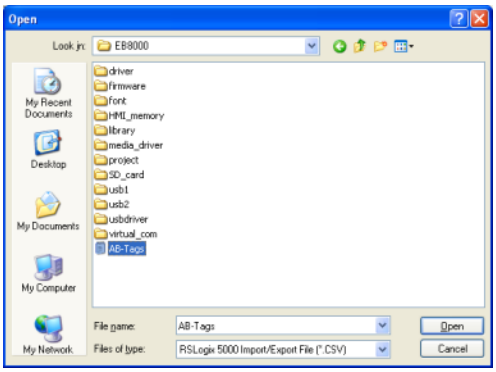



7. In the object property dialog, select PLC Tag address.

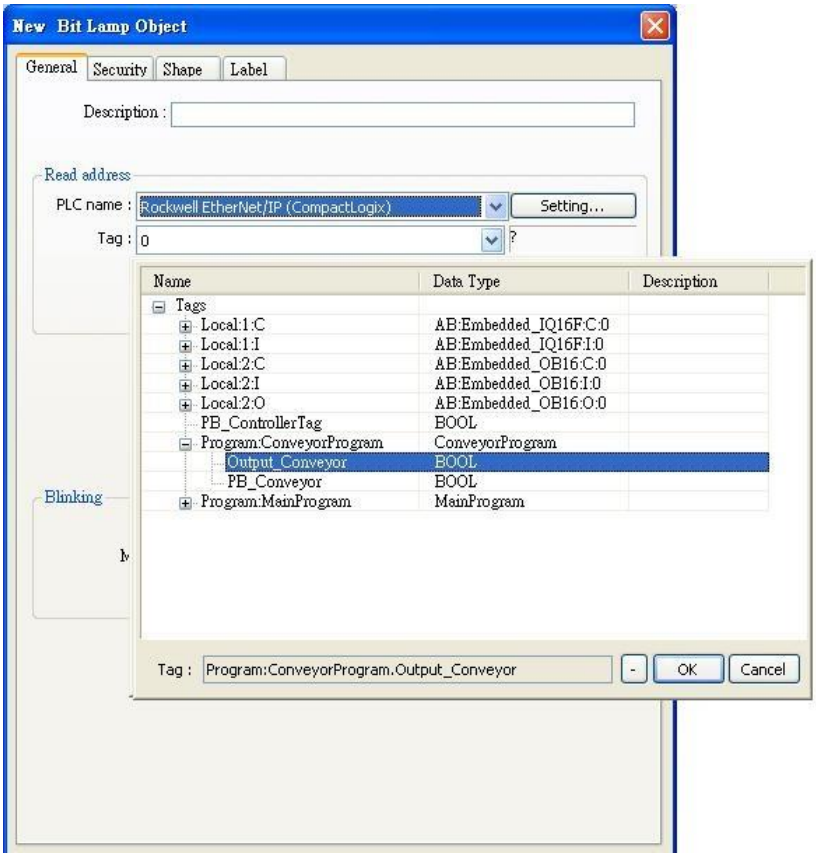

Device Address:

PLC data type name	Bit/Word	EasyBuilder data format	Memo
BOOL	Boolean	Bit object	
BitArray			
SINT			
INT	Integer	16-bit signed, ASCII	-32768 ~ 32767
DINT	Double Integer	32-bit signed	-2^{31} ~ (2^{31}-1)
REAL	Single Precision Float	32-bit Float	IEEE 754

Wiring Diagram:

Diagram 1

Ethernet cable:



Rockwell EtherNet/IP (ControlLogix) – Free Tag Names


Supported Series: Rockwell ControlLogix, CompactLogix, FelxLogix Ethernet, CompactLogix 1768-L43 1768-L45 with 1768-ENBT/A Ethernet module
Website: http://www.ab.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Rockwell EtherNet/IP (ControlLogix) – Free Tag Names		
PLC I/F	Ethernet		
Port no.	44818		
PLC sta. no.	The same as CPU Slot No.		

PLC Setting:


1. Set PLC IP address.

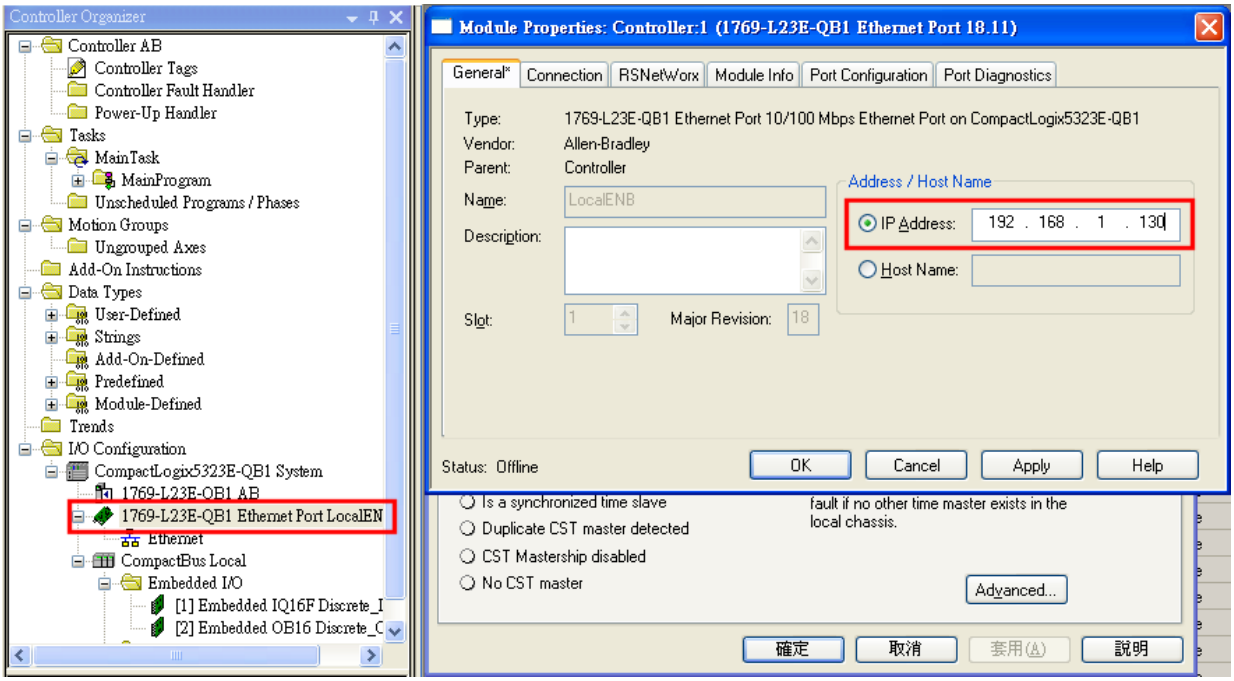

2. Create new tags (Controller Tags and Program Tags supported).

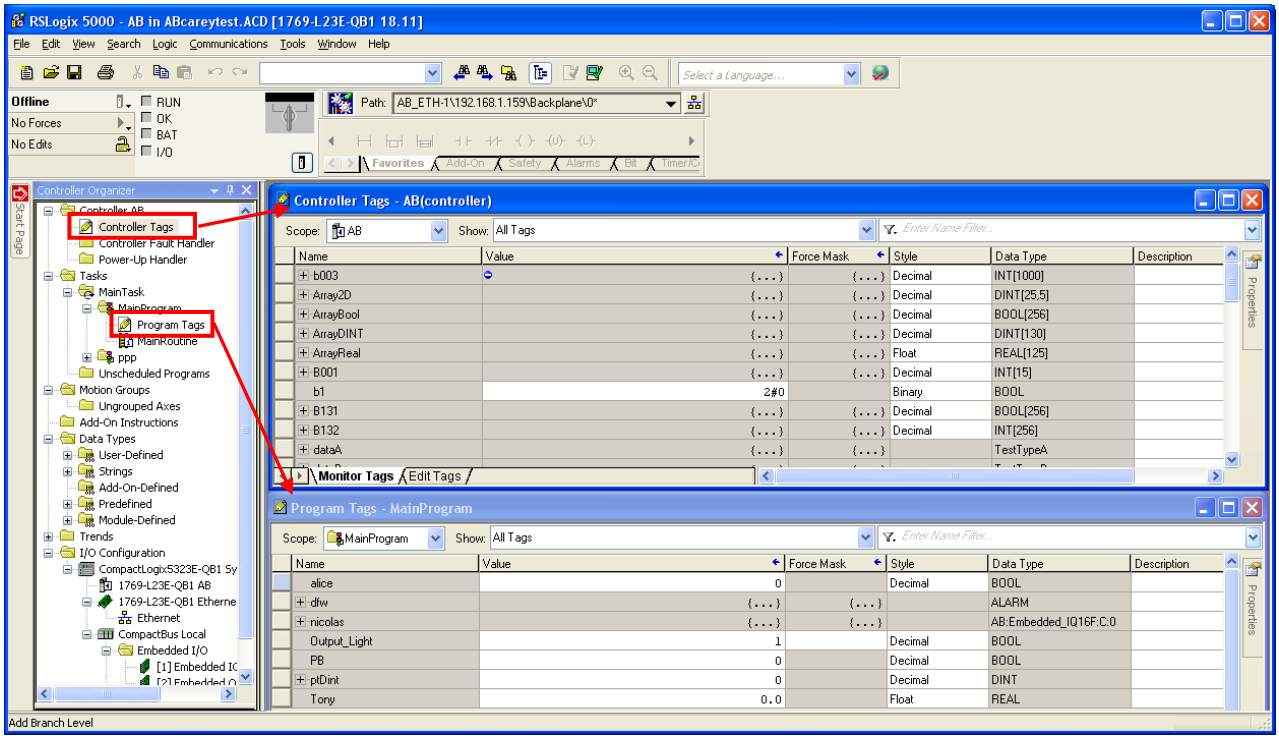

3. Export Tag data to CSV file. (**[Tools]** » **[Export]** » **[Tags and Logic Comments]**)

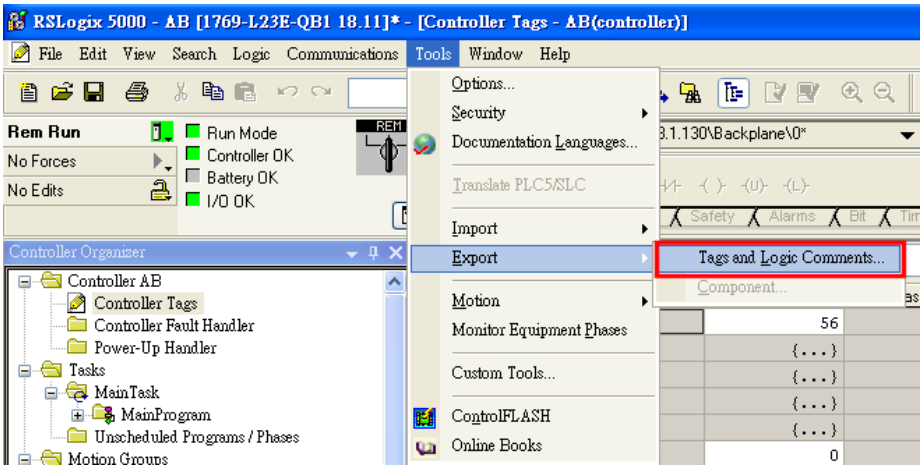

Note: The separator character in CSV file must be a comma “,” otherwise the file is invalid.

The directory of changing system settings: [**Control Panel] » [Date, Time, Language, and Regional Options] » [Change the format of numbers, dates, and times] » [Customize] » [List separator]**. Please select “,” and export CSV file after setting.



4. Open EasyBuilder project file, select the driver and set IP address. Click **[Data Type]** to open **[Structure Editor]** and edit the data type of the tags.

TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER	ATTRIBUTES
TAG		Local:1:C		AB:Embedded_IQ16F:C:0		
TAG		Local:1:I		AB:Embedded_IQ16F:I:0		
TAG		Local:2:C		AB:Embedded_OB16:C:0		
TAG		Local:2:I		AB:Embedded_OB16:I:0		
TAG		Local:2:O		AB:Embedded_OB16:O:0		

TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	ConveyorProgram	Output_Conveyor			Local2:0.Data.2
TAG	ConveyorProgram	PB_Conveyor		BOOL	
TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	MainProgram	Output_Light			Local2:0.Data.1
TAG	MainProgram	PB		BOOL	

5. In **[Structure Editor]** edit the data type of **[Program Tag]**.
   The imported csv file is shown below:

Note: The Program Tag can directly be imported in EasyBuilder Pro V3.00.05, EasyBuilder 8000 V4.65.08, and the later versions. Please go to step 6 without editing manually.

7	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
8	TAG		Local:1:C		AB:Embedded_IQ16F:C:0	
9	TAG		Local:1:I		AB:Embedded_IQ16F:I:0	
10	TAG		Local:2:C		AB:Embedded_OB16:C:0	
11	TAG		Local:2:I		AB:Embedded_OB16:I:0	
12	TAG		Local:2:O		AB:Embedded_OB16:O:0	
13	TAG		PB_ControllerTag		BOOL	
14	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
15	TAG	ConveyorProgram	Output_Conveyor			Local2:0.Data.2
16	TAG	ConveyorProgram	PB_Conveyor		BOOL	
17	TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
18	TAG	MainProgram	Output_Light			Local2:0.Data.1
19	TAG	MainProgram	PB		BOOL	

Step 1


Right click on **[Structure Editor]** » **[User-Defined]** to add a **[new data type]**.




Step 2

After adding all Program Tags, click **[OK]** » **[Save]** » **[Exit]** to leave the editor dialog.


TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	ConveyorProgram	Output_Conveyor			Local:2:O.Data.2
TAG	ConveyorProgram	PB_Conveyor		BOOL	
TYPE	SCOPE	NAME	DESCRIPTION	DATATYPE	SPECIFIER
ALIAS	MainProgram	Output_Light			Local:2:O.Data.1
TAG	MainProgram	PB		BOOL	

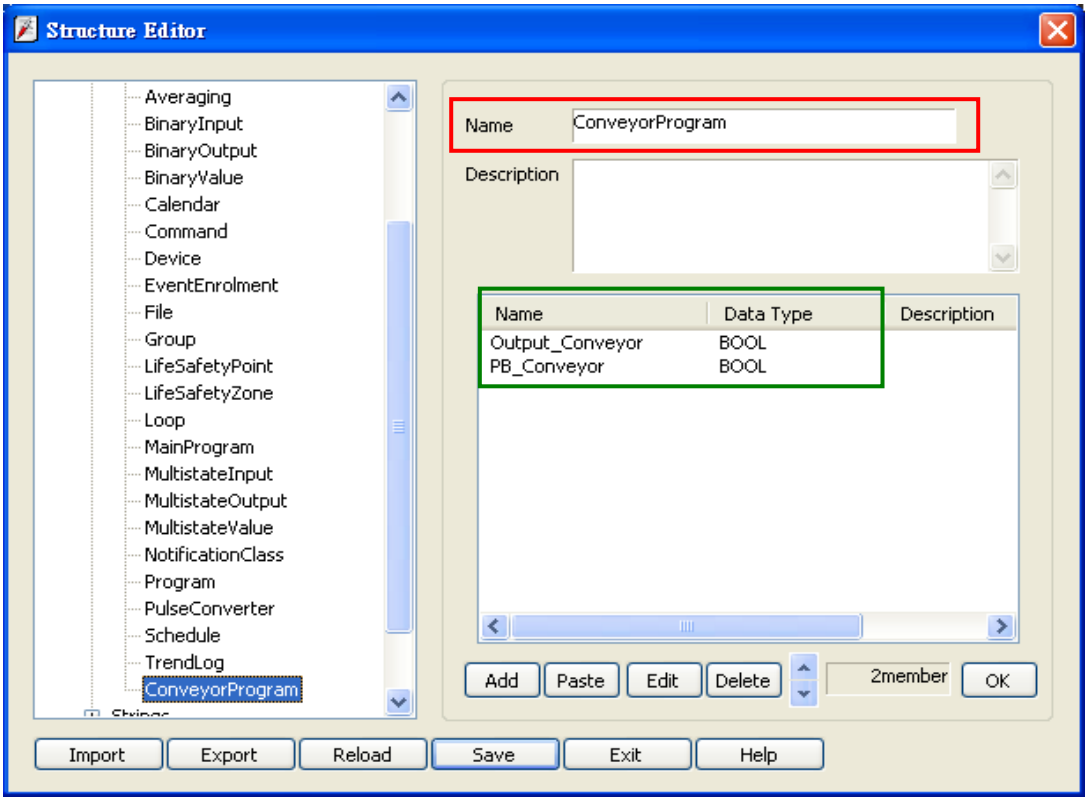


6. In **[System Parameter Settings]**, click **[Import Tag]**, select the csv file. After importing a message window is displayed.

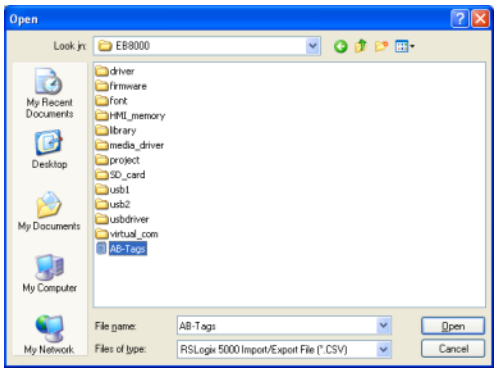



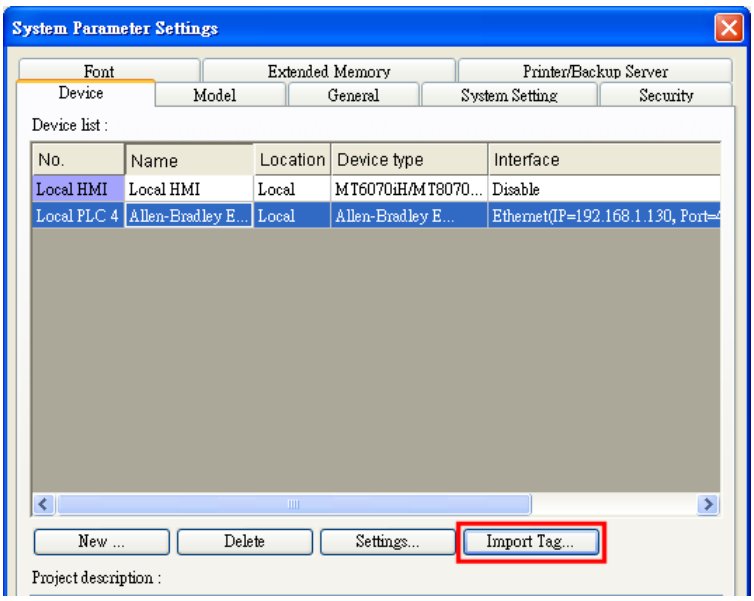

7. In the object property dialog, select PLC Tag address.

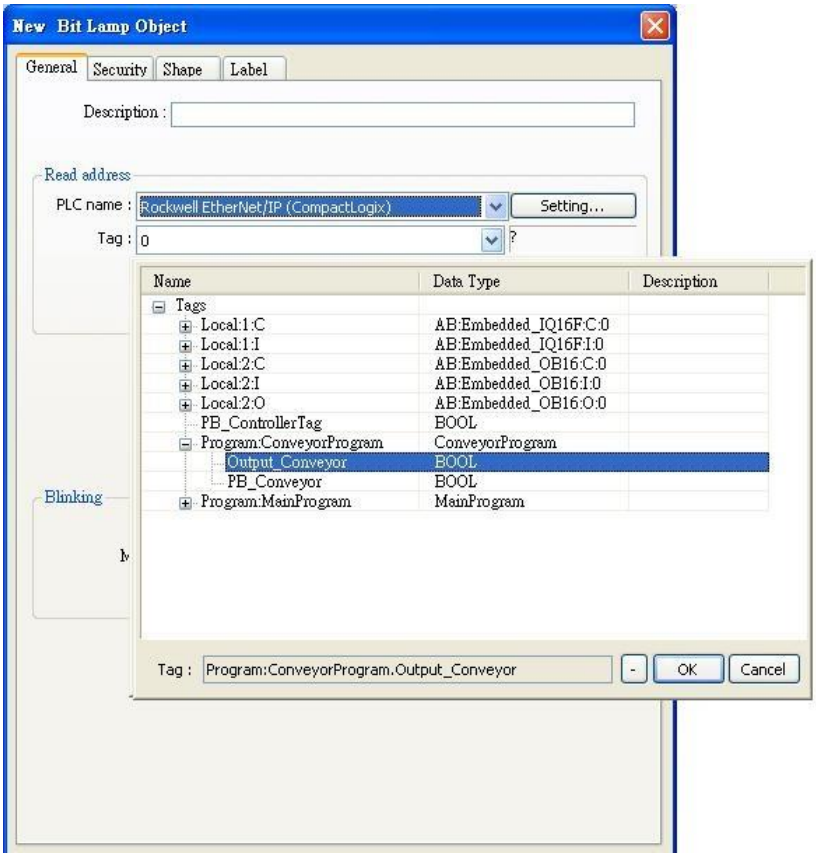

Device Address:

PLC data type name	Bit/Word	EasyBuilder data format	Memo
BOOL	Boolean	Bit object	
BitArray			
SINT			
INT	Integer	16-bit signed, ASCII	-32768 ~ 32767
DINT	Double Integer	32-bit signed	$-2^{31} \sim (2^{31}-1)$
REAL	Single Precision Float	32-bit Float	IEEE 754

Wiring Diagram:

Diagram 1

Ethernet cable:



Rockwell EtherNet/IP (DF1)

Supported Series: Rockwell MicroLogix 1100, 1400, SLC5/05 Ethernet port.
MicroLogix1000, 1200, 1500, SLC 5/03, 5/04 with 1761-NET-ENI
Website: http://www.ab.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Rockwell EtherNet/IP (DF1)		
PLC I/F	Ethernet		
Port no.	44818		
HMI sta. no.	0		
PLC sta. no.	1		

PLC Setting:

Communication mode	Port Setting: 10/100 Mbps Full Duplex/Half Duplex


Device Address:

Bit/Word	Device	Format	Range	Memo
B	I1	DDDdd	0 ~ 25515	Input (I)
B	O0	DDDdd	0 ~ 25515	Output (O)
B	I1n_Bit	SSEEdd	0 ~ 303115	SS: slot, EE: sub element, dd:bit
B	O0n_Bit	SSEEdd	0 ~ 303115	SS: slot, EE: sub element, dd:bit
B	B3	DDDdd	0 ~ 25515	Bit data file (B3)
B	S_Bit	DDDDDDdd	0 ~ 25525515	Status file
B	Bfn	FFFDDDdd	0 ~ 25525515	Bit data file (B3, 10 ~ 254)
B	NfnBit	FFFDDDdd	0 ~ 25525515	Integer data file bit level (N7, 10 ~ 254)
W	I1n	SSEE	0 ~ 3031	SS: slot, EE: sub element
W	O0n	SSEE	0 ~ 3031	SS: slot, EE: sub element
W	T4SV	DDD	0 ~ 255	Timer Preset Value (T4)
W	T4PV	DDD	0 ~ 255	Timer Accumulator Value (T4)
W	C5SV	DDD	0 ~ 255	Counter Preset Value (C5)
W	C5PV	DDD	0 ~ 255	Counter Accumulator Value (C5)
W	TfnSV	FFFDDD	0 ~ 255255	
W	TfnPV	FFFDDD	0 ~ 255255	


Bit/Word	Device	Format	Range	Memo
W	CfnSV	FFFDDD	0 ~ 255255	
W	CfnPV	FFFDDD	0 ~ 255255	
W	S	DDD	0 ~ 255	
W	N7	DDD	0 ~ 255	Integer data file (N7)
W	Nfn	FFFDDD	0 ~ 255255	Integer data file (N7, 10 ~ 254)
DW (F)	F8	DDD	0 ~ 255	Floating point data file (F8)
DW (F)	Ffn	FFFDDD	0 ~ 255255	Floating point data file (F8, 10 ~ 254)
DW	Lfn	FFFDDD	0 ~ 255255	Driver version 2.00 or later supported
W	STfn	DDD.DDD.DD	0 ~ 255.255.40	

Wiring Diagram:

Direct connect (crossover cable):

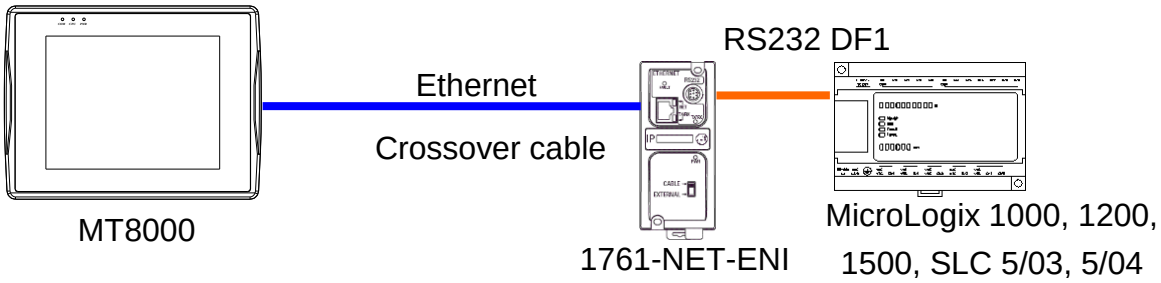

Through a hub:

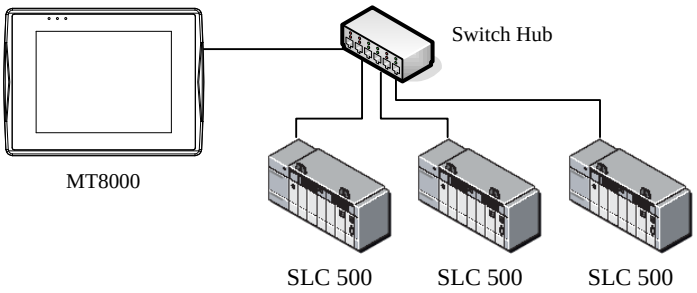



Rockwell Micro850 (Ethernet) - Free Tag Names

Supported Series: Rockwell Micro820/850 Ethernet Module.
Website: http://www.ab.com

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Rockwell Micro850 (Ethernet) - Free Tag Names		
PLC I/F	Ethernet		
Port no.	44818		
HMI sta. no.	0		
PLC sta. no.	1		

Support Device Type:


Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
String	ASCII Object	Length=word

How to Import Tags:


1. Click [Tag Editor].

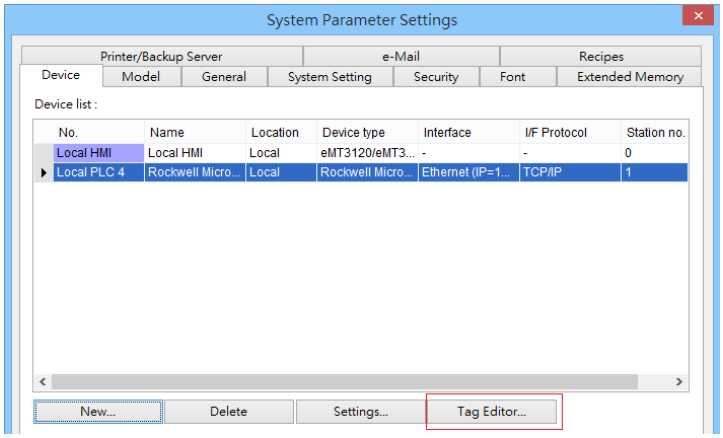


2. Right-click [Global-Variables] and select [New data type].

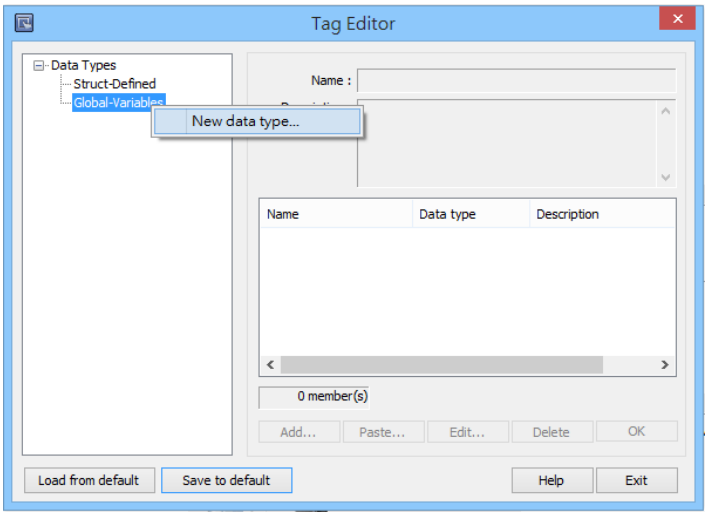


3. Click [Paste].

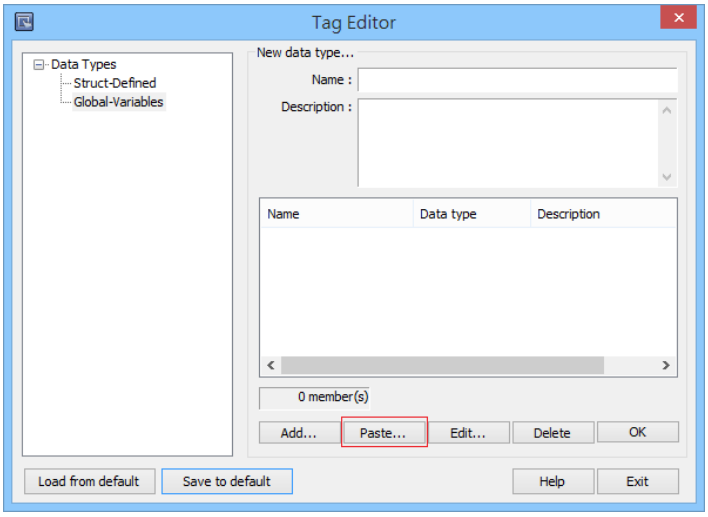


4. Launch “Connected Components Workbench” software, select and copy the tags under [Global Variables]. Note that the IO address cannot be copied and can only be manually created.

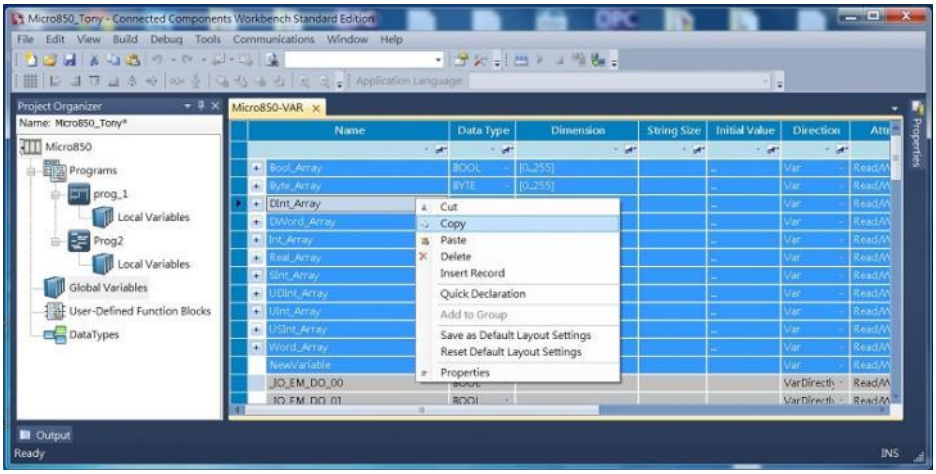

5. Paste the copied tags and click [OK].

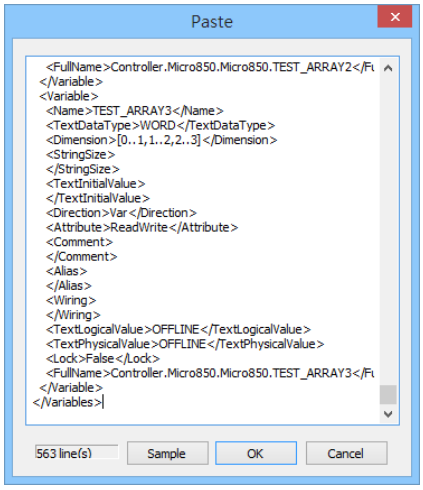


6. Enter [Name], click [OK], and then click [Save to default]. The tags are now successfully created.

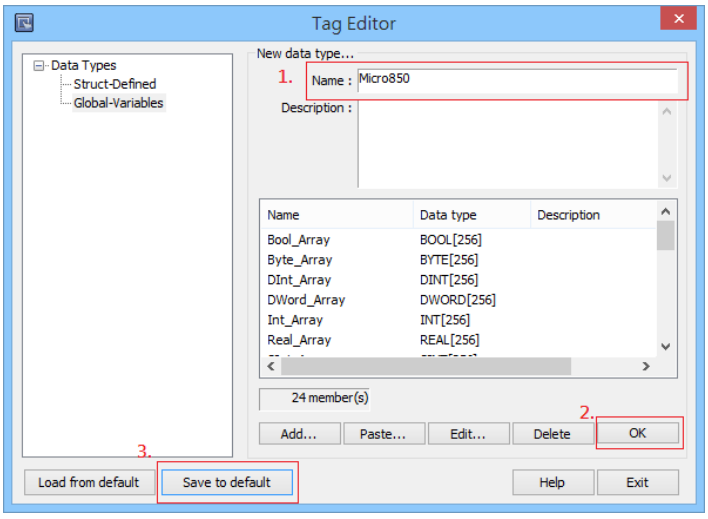


Building Struct:


1. After importing the tags, the data type of Struct is shown as in the following figure, please build the corresponding tag under Struct-Defined.

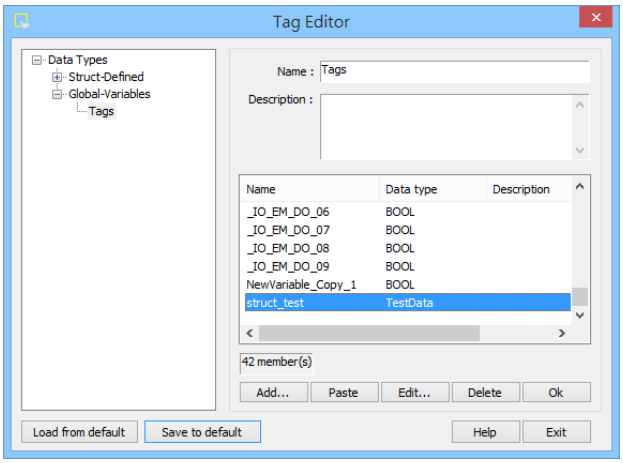


2. Right click on [Struct-Definded] and then select [New data type].

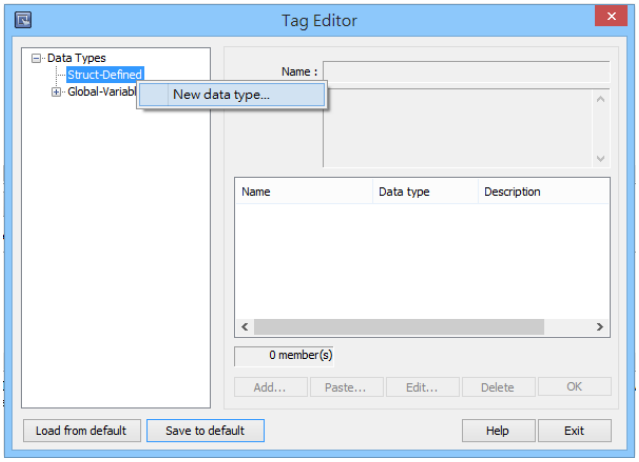


3. Enter the [Data type] in the [Name] field, and then click [Add].

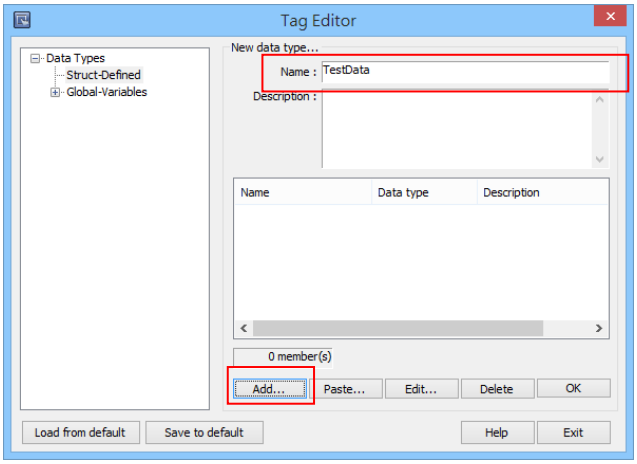

4. Enter the same information in the [Name] and [Data Type] fields as shown in the original factory software, and then click [OK].

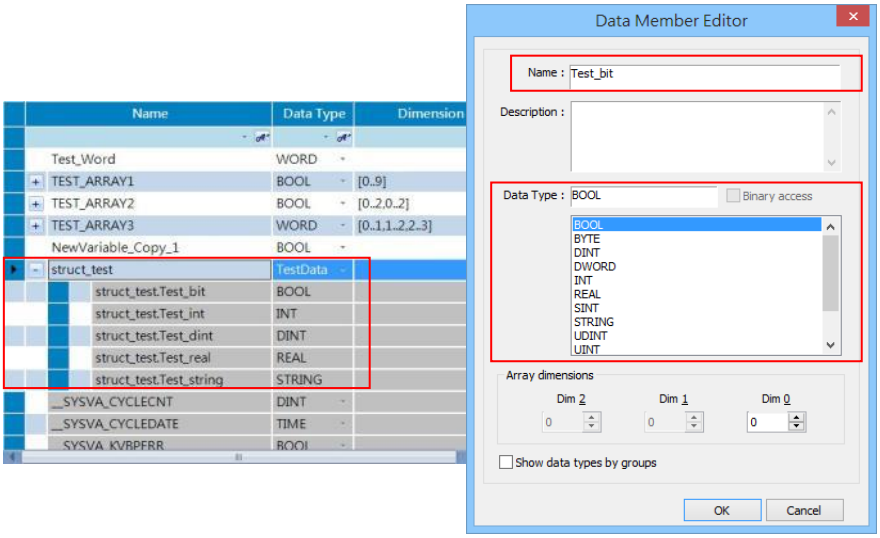


5. Upon completion click [OK] and then click [Save to default] to finish building Struct.

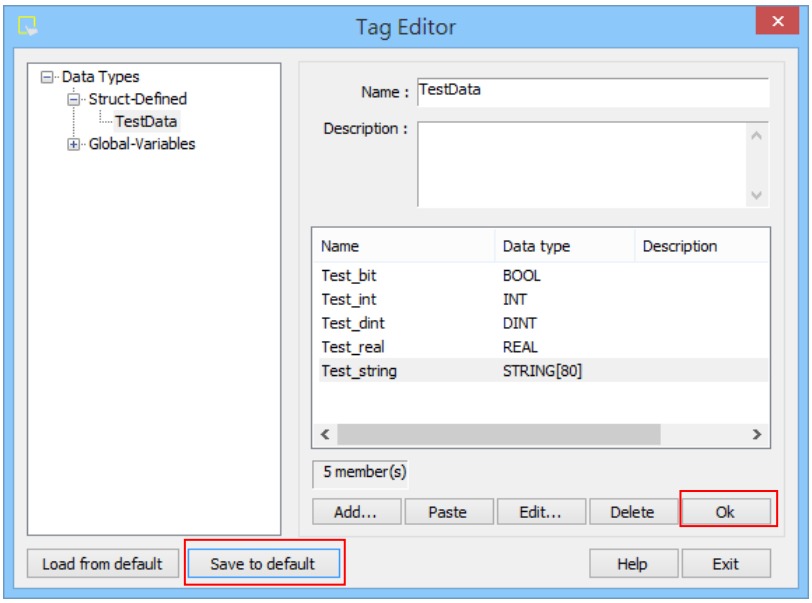

Wiring Diagram:

Ethernet cable:

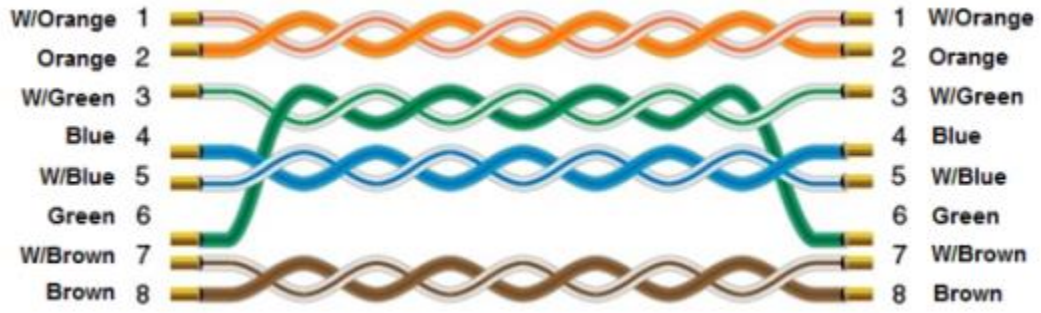

Rockwell Micro850 - Free Tag Names


Supported Series: Rockwell Micro820/850

Website: http://www.ab.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Rockwell Micro850 - Free Tag Names		
PLC I/F	RS232		
Baud rate	38400	1200 ~ 38400	
Data bits	8		
Parity	None	None,Even,Odd	
Stop bits	1		
PLC sta. no.	1	0 ~ 254	

PLC Setting:

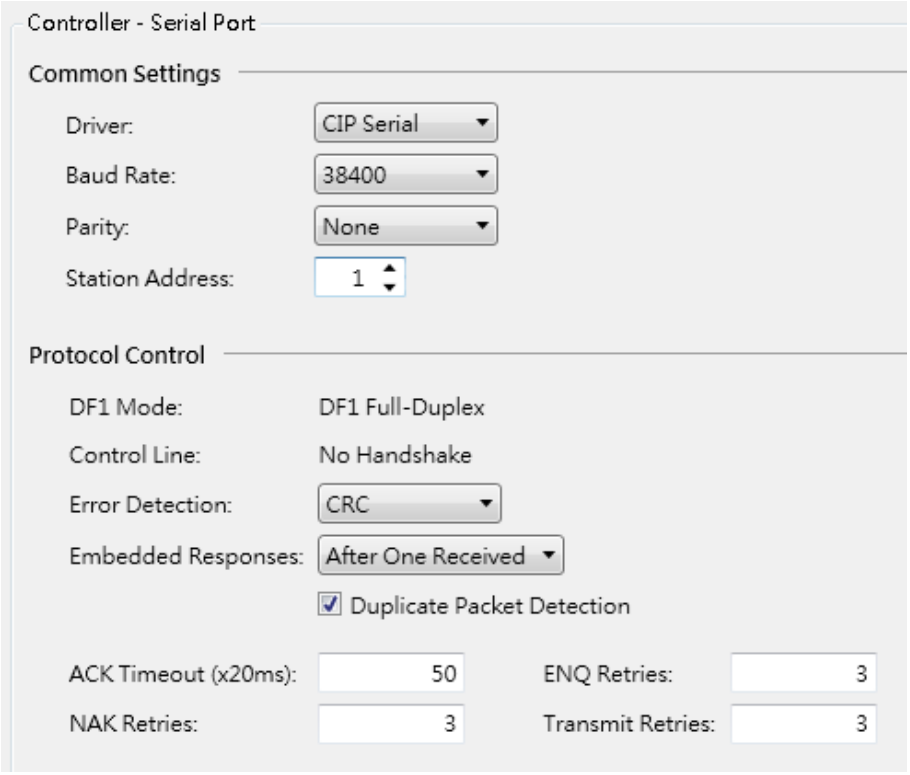


Support Device Type:


Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
String	ASCII Object	Length=word

How to Import Tags:


1. Click [Tag Editor].

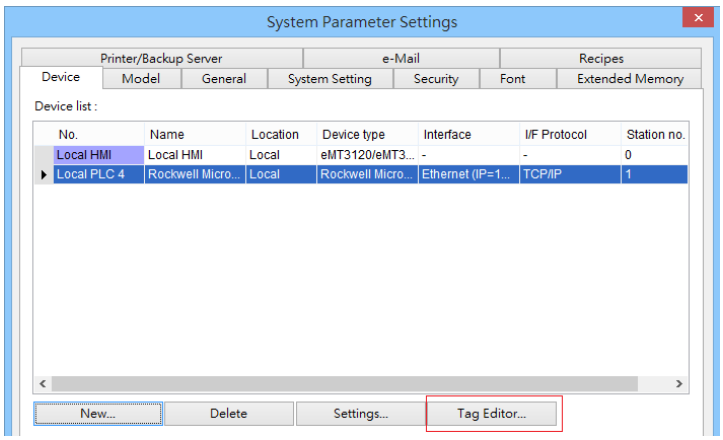


2. Right-click [Global-Variables] and select [New data type].

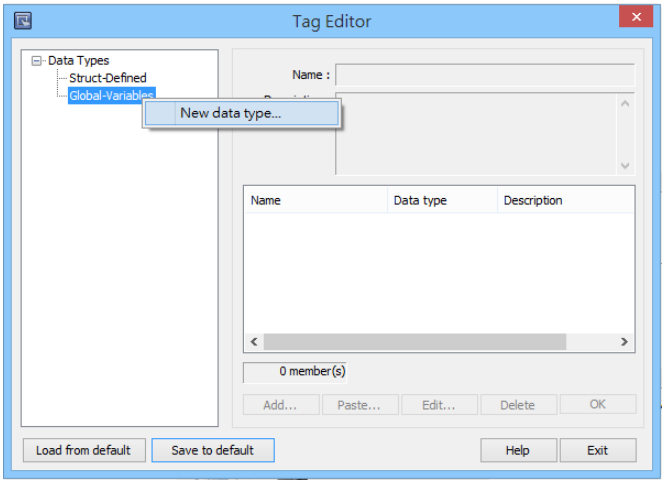


3. Click [Paste].

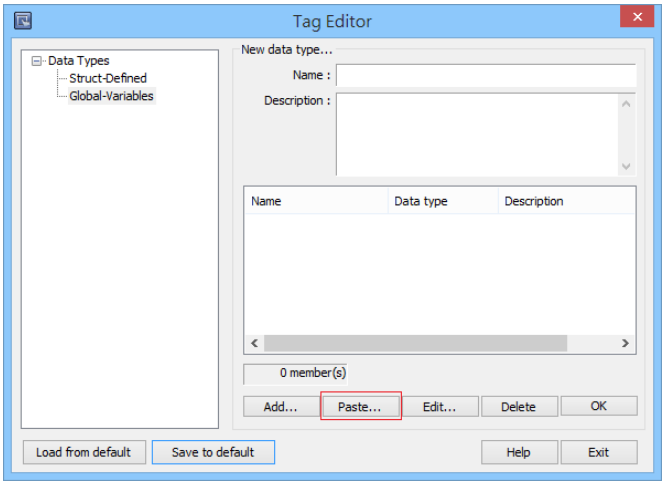


4. Launch “Connected Components Workbench” software, select and copy the tags under [Global Variables]. Note that the IO address cannot be copied and can only be manually created.

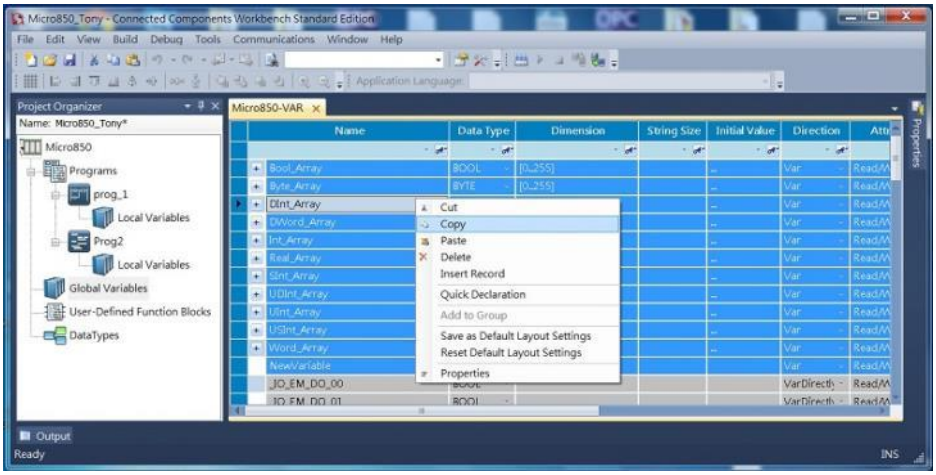

5. Paste the copied tags and click [OK].

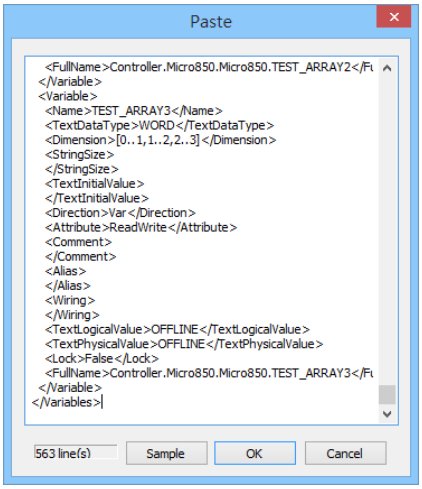


6. Enter [Name], click [OK], and then click [Save to default]. The tags are now successfully created.

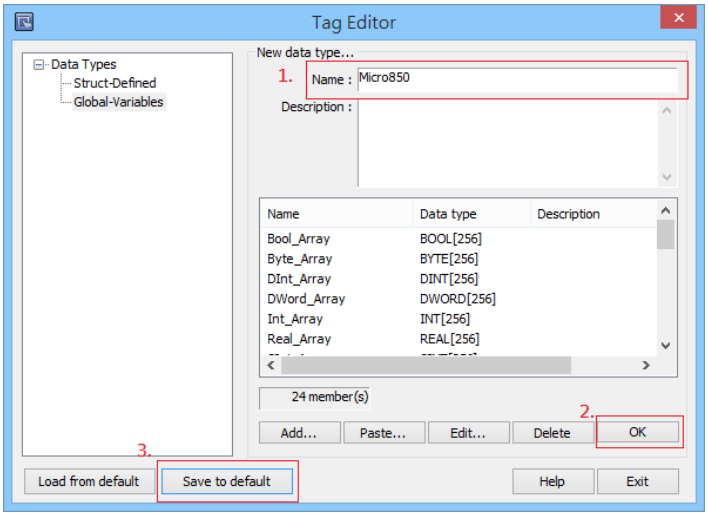


Building Struct:


1. After importing the tags, the data type of Struct is shown as in the following figure, please build the corresponding tag under Struct-Defined.

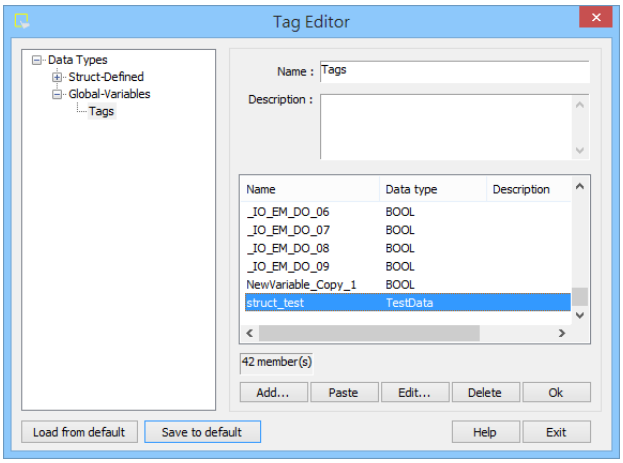


2. Right click on [Struct-Definded] and then select [New data type].

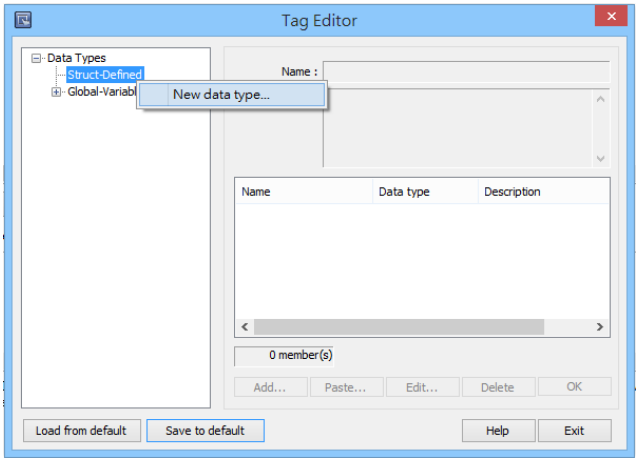


3. Enter the [Data type] in the [Name] field, and then click [Add].

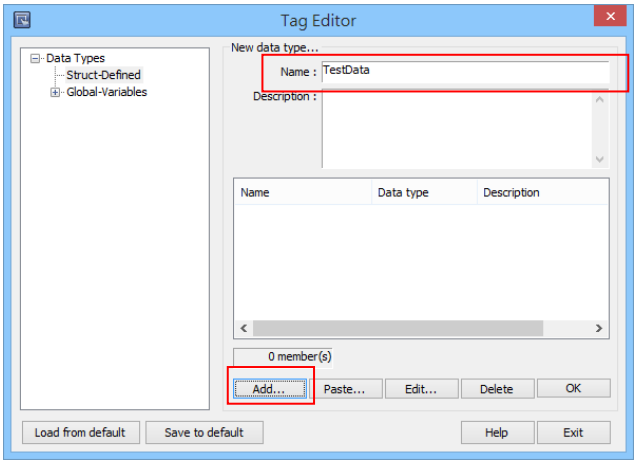

4. Enter the same information in the [Name] and [Data Type] fields as shown in the original factory software, and then click [OK].

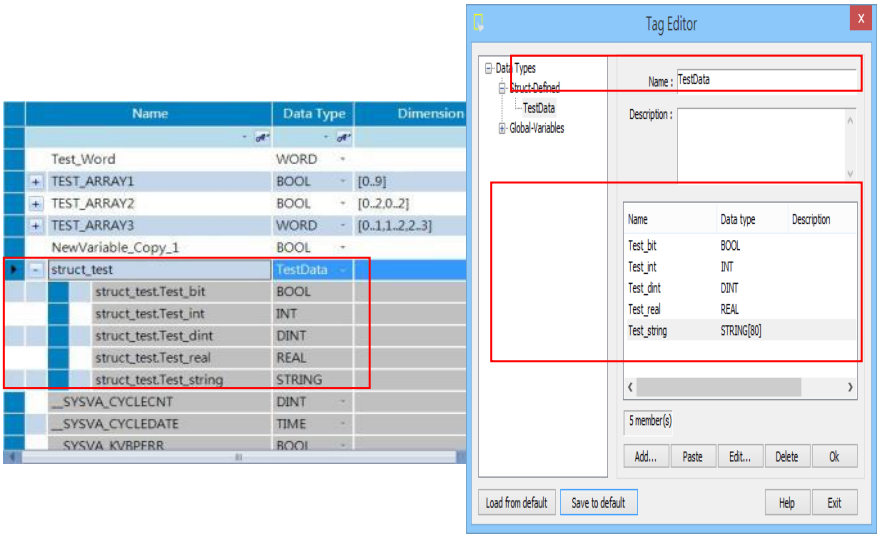

5. Upon completion click [OK] and then click [Save to default] to finish building Struct.

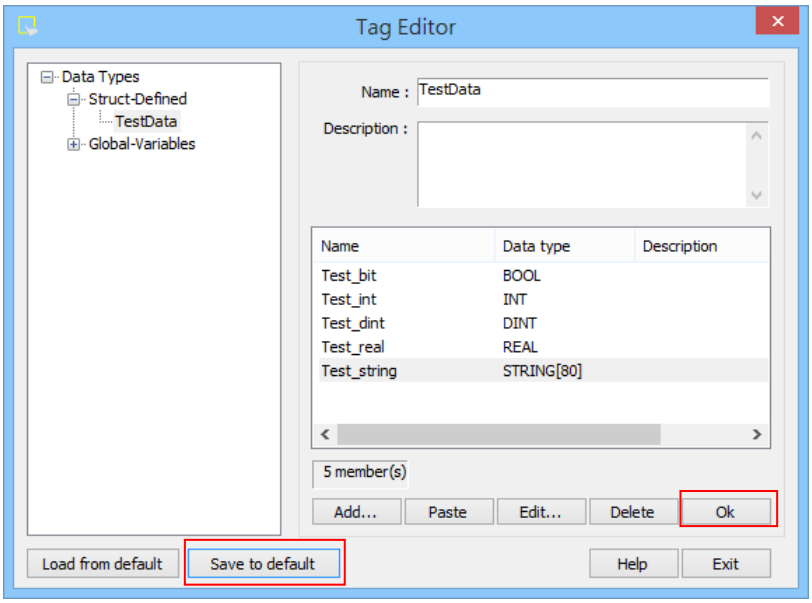

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P Mini-Din Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	7
Tx	3	7	⟷	4
GND	5	5	⟷	2

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 8P Mini-Din Male
	RS232 9P Female		
Rx-	2	⟷	7
Tx+	3	⟷	4
GND	5	⟷	2

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-Din Male
Rx-	9	⟷	7
Tx+	6	⟷	4
GND	5	⟷	2

Rockwell PLC5

Website: http://www.ab.com

Note: Rockwell PLC5 driver uses CRC checksum.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Rockwell PLC5		
PLC I/F	RS232		
Baud rate	19200	9600, 19200	
Data bits	8	8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
HMI sta. no.	0		
PLC sta. no.	1	1-31	

PLC Setting:

Communication mode	DF1 Full Duplex protocol 19200, None, 8, 1 (default)

Allen-Bradley PLC-5 Family PLCs use DF1 Full Duplex protocol.

For PLC-5/10, PLC-5/15 and PLC-5/25, MT8000 should be connected to the DF1 port on the 1785-KE module.

For PLC-5/11, PLC-5/20, PLC-5/30 and PLC-5/40, MT8000 should be connected to the Channel 0 Port on the PLC.

Device Address:

Bit/Word	Device	Format	Range	Memo
B	I1	DDDdd	0 ~ 25515	Input (I)
B	O0	DDDdd	0 ~ 25515	Output (O)
B	B3	DDDdd	0 ~ 99915	Bit data file (B3)
B	B10 ~ 13	DDDdd	0 ~ 99915	Bit data file (B10 ~ 13)
B	S_Bit	DDDDDDdd	0 ~ 25599915	
B	Bfn	FFFDDDdd	0 ~ 25599915	
B	NfnBit	FFFDDDdd	0 ~ 25599915	
W	T4SV	DDD	0 ~ 999	Timer Preset Value (T4)

Bit/Word	Device	Format	Range	Memo
W	T4PV	DDD	0 ~ 999	Timer Accumulator Value (T4)
W	C5SV	DDD	0 ~ 999	Counter Preset Value (C5)
W	C5PV	DDD	0 ~ 999	Counter Accumulator Value (C5)
W	TfnSV	FFFDDD	0 ~ 255999	
W	TfnPV	FFFDDD	0 ~ 255999	
W	CfnSV	FFFDDD	0 ~ 255999	
W	CfnPV	FFFDDD	0 ~ 255999	
W	N7	DDD	0 ~ 999	Integer data file (N7)
W	N10 ~ 15	DDD	0 ~ 999	Integer data file (N10 ~ 15)
W	Nfn	FFFDDD	0 ~ 255999	Integer data file (V2.5.0 or newer)
W	S	DDD	0 ~ 255	
W	F8	DDD	0 ~ 999	Floating point data file (F8)
W	Ffn	FFFDDD	0 ~ 255999	Floating point data file (V2.5.0 or newer)

Wiring Diagram:

9P D-Sub to 25P D-Sub: PLC5 CPU CH0

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		AB CPU CH0 RS232 25P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 25P D-Sub Male
Rx-	2	⟷	2
Tx+	3	⟷	3
GND	5	⟷	7


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***


HMI			PLC
	COM1 RS232 9P Female		AB CPU CH0 RS232 25P D-Sub Male
Rx-	9	⟷	2
Tx+	6	⟷	3
GND	5	⟷	7

Note:

The default error checking of Rockwell PLC5 is BCC, whereas our driver is CRC.

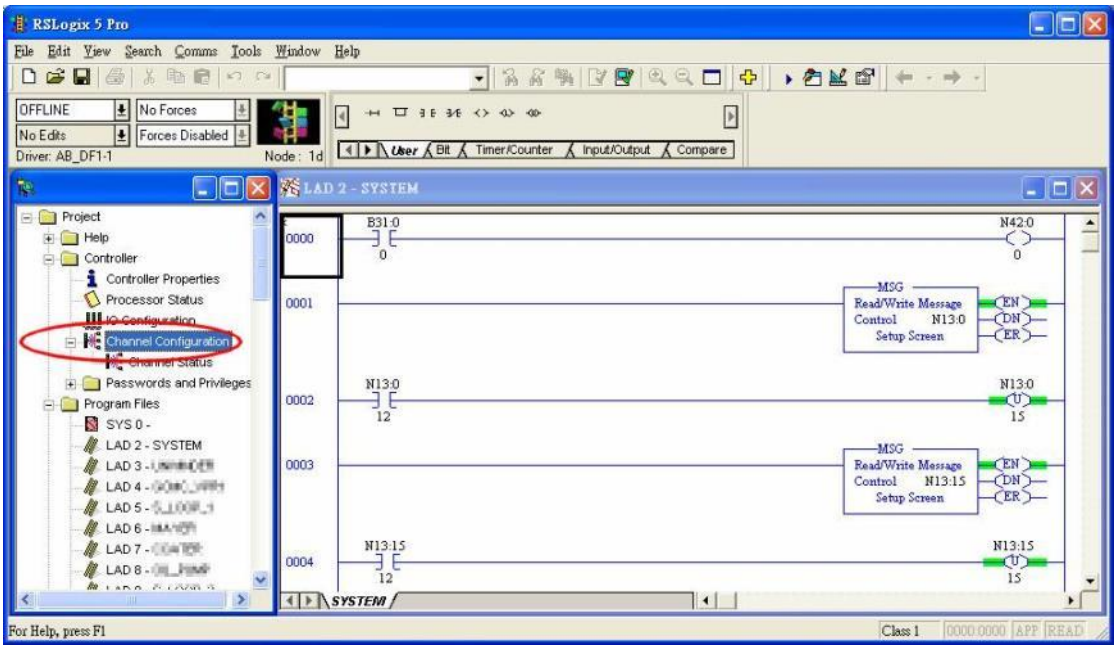

Access [Channel Configuration] from RSLogix5, under Channel 0 tab, please select “CRC” for [Error Detect].

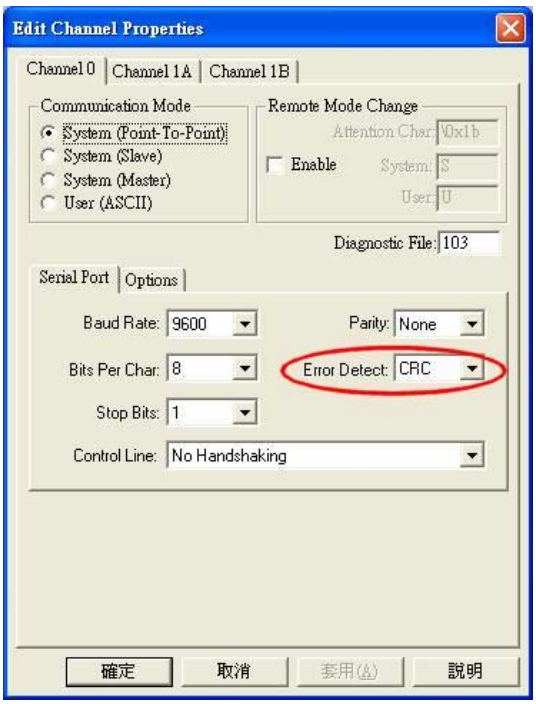

RS Automation OEMAX Series

Supported Series: OEMax NX7/NX7s Controllers.
Website: http://www.oemax.co.kr

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	RS Automation OEMAX Series		
PLC I/F	RS232		
Baud rate	9600	9600, 19200, 38400	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	0		
HMI sta. no.	225	0 ~ 255	*Please correctly set HMI station number.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	R	DDDdd	0 ~ 25515	
B	L	DDDdd	0 ~ 25515	
B	M	DDDDdd	0 ~ 199915	
B	K	DDDdd	0 ~ 25515	Keep Contact
B	F	DDDdd	0 ~ 99115	Special Contact
B	TC	DDD	0 ~ 255	Timer/Counter
W	W	DDDD	0 ~ 7999	Data Register
W	SV	DDD	0 ~ 255	Timer/Counter Set Value
W	PV	DDD	0 ~ 255	Timer/Counter Preset Value
W	SR	DDD	0 ~ 255	Special Register
W	WR	DDD	0 ~ 255	
W	WL	DDD	0 ~ 255	
W	WM	DDDD	0 ~ 1999	
W	WK	DDD	0 ~ 255	
W	WF	DDD	0 ~ 991	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		Port1 RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		Port1 RS232 9P D-Sub Male
	RS232 9P Female		
Rx-	2	⟷	2
Tx+	3	⟷	3
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		Port1 RS232 9P D-Sub Male
Rx-	9	⟷	2
Tx+	6	⟷	3
GND	5	⟷	5

RS Automation X8 Series

Supported Series: RS-X8 Series PLC
Website: http://www.rsautomation.biz/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	RS Automation X8 Series		
PLC I/F	RS232/Ethernet	RS232/ Ethernet	
Baud rate	115200	9600~115200	
Data bits	8	7,8	
Parity	None	None,Even,ODD	
Stop bits	1	1,2	
Port no.	50000		
PLC sta. no.	1	0 ~ 255	

PLC Setting:

Communication mode	Xnet Slave

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Y_bit	DD.DDDdd	0 ~ 96.25515	Output
B	X_bit	DD.DDDdd	0 ~ 96.25515	Input
B	SR_bit	DDDdd	0 ~ 12715	Status
B	B_bit	DDDD.DDDDdd	0 ~ 1535.153515	Bit
B	N_bit	DDDD.DDDDdd	0 ~ 1535.153515	Integer
B	A_bit	DDDD.DDDDdd	0 ~ 1535.153515	ASCII
B	TM_Done	DDDD.DDDDdd	0 ~ 1535.153515	Timer_Done
B	CT_Done	DDDD.DDDDdd	0 ~ 1535.153515	Counter_Done
B	CR_Done	DDDD.DDDDdd	0 ~ 1535.153515	Control_Done
W	Y	DD.DDD	0 ~ 96.255	Output
W	X	DD.DDD	0 ~ 96.255	Input
W	SR	DDD	0 ~ 127	Status
W	B	DDDD.DDDD	0 ~ 1535.1535	Bit
W	N	DDDD.DDDD	0 ~ 1535.1535	Integer

Bit/Word	Device type	Format	Range	Memo
W	A	DDDD.DDDD	0 ~ 1535.1535	ASCII
W	ST_Length	DDDD.DDD	0 ~ 1535.779	String_Length
W	ST_Data	DDDD.DDD.DD	0 ~ 1535.779.42	String_Data
W	CR_Length	DDDD.DDDD	0 ~ 1535.1535	Control_Length
W	CR_Pos	DDDD.DDDD	0 ~ 1535.1535	Control_Postion
W	F	DDDD.DDDD	0 ~ 1535.1535	Float
W	L	DDDD.DDDD	0 ~ 1535.1535	Long
W	TM_Preset	DDDD.DDDD	0 ~ 1535.1535	Timer_Preset
W	TM_Acc	DDDD.DDDD	0 ~ 1535.1535	Timer_Accumulator
W	CT_Preset	DDDD.DDDD	0 ~ 1535.1535	Counter_Preset
W	CT_Acc	DDDD.DDDD	0 ~ 1535.1535	Counter_Accumulator

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx-	2	⟷	3
Tx+	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx-	9	⟷	3
Tx+	6	⟷	2
GND	5	⟷	5

Diagram 4

Etehernet cable:



SAIA PCD PGU Mode

Supported Series : SAIA PCD series PGU mode.
Website :http://www.saia-burgess.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SAIA PCD PGU Mode		PDS driver
PLC I/F	RS232	RS232, RS485	
Baud rate	9600	9600, 19200	
Data bits	7	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	0-255	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Flag	DDDD	0 ~ 8191	
B	Output	DDD	0 ~ 511	
B	Input	DDD	0 ~ 511	
W	Register	DDDD	0 ~ 4095	
W	Counter	DDDD	0 ~ 1599	
W	Timer	DDDD	0 ~ 1599	
W	Reg_Float	DDDD	0 ~ 4095	support single float point
W	Reg_Word	DDDD	0 ~ 4095	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE / MT8092XE***
MT-iP	***MT6103iP***


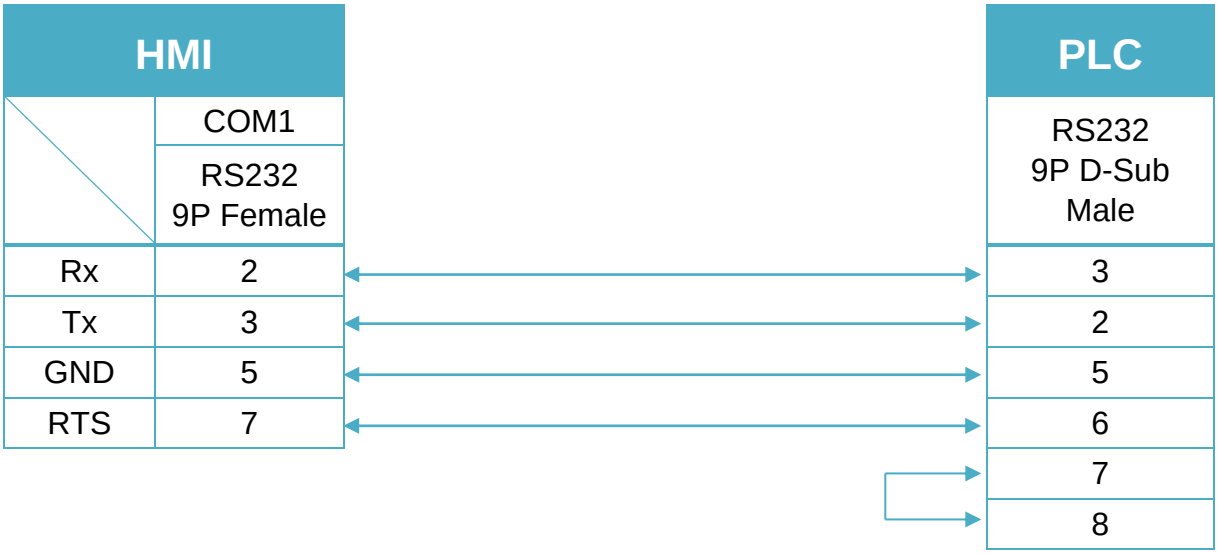


Diagram 2

MT-iP ***MT6071iP / MT8071iP***

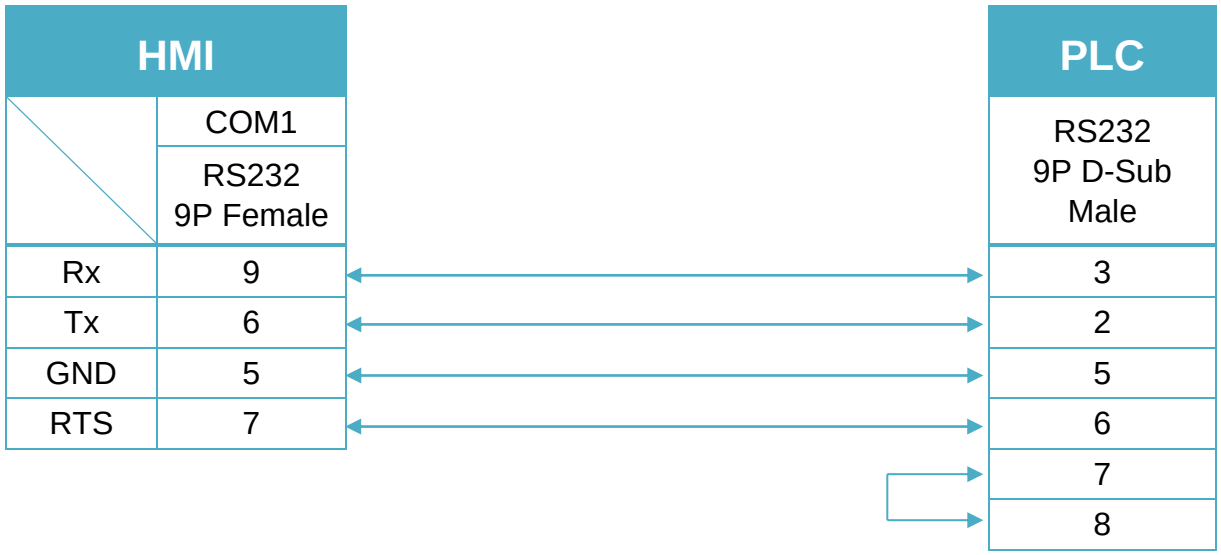

6 DSR (Of PGU Port): PGU connected.

SAIA PCD S-BUS Mode

Supported Series: SAIA PCD series S-Bus mode.
Website: http://www.saia-burgess.com/


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SAIA PCD S-BUS Mode		PDS driver
PLC I/F	RS232	RS232, RS485	
Baud rate	9600	9600, 19200, 38400	
Data bits	8	7,8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta.	0	0-255	


PLC Setting:

Communication mode	9600,N,8,1 (default)
RS232	Port 0-Type: RS232
RS485 2W	S-BUS Mode: Data(S2), Port 1-Type: RS485


1. Open Saia Project Manager SP2.0.150 and create a new project.

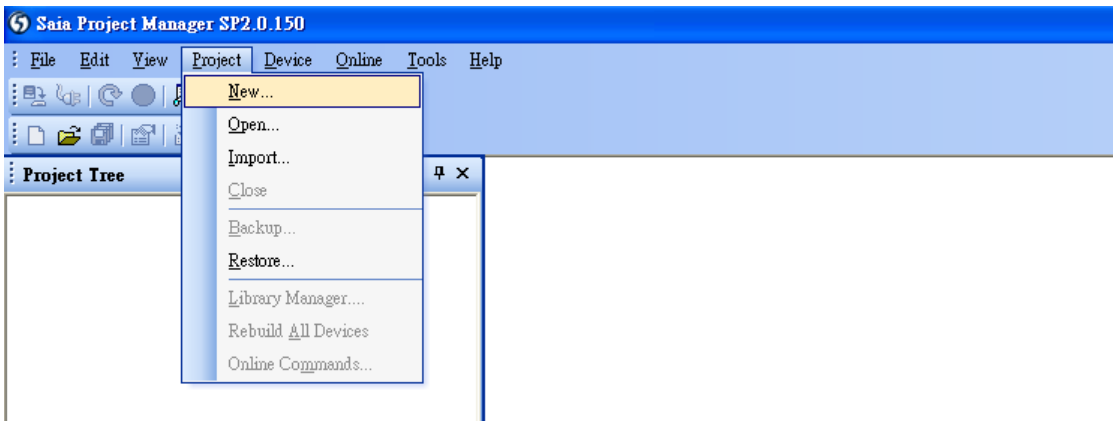


2. Give a project name.

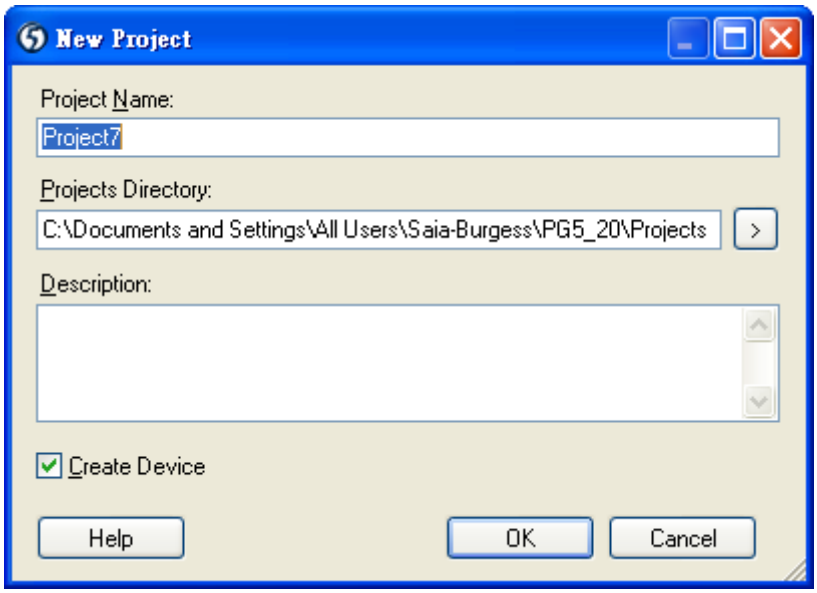


3. Create a new project as below.

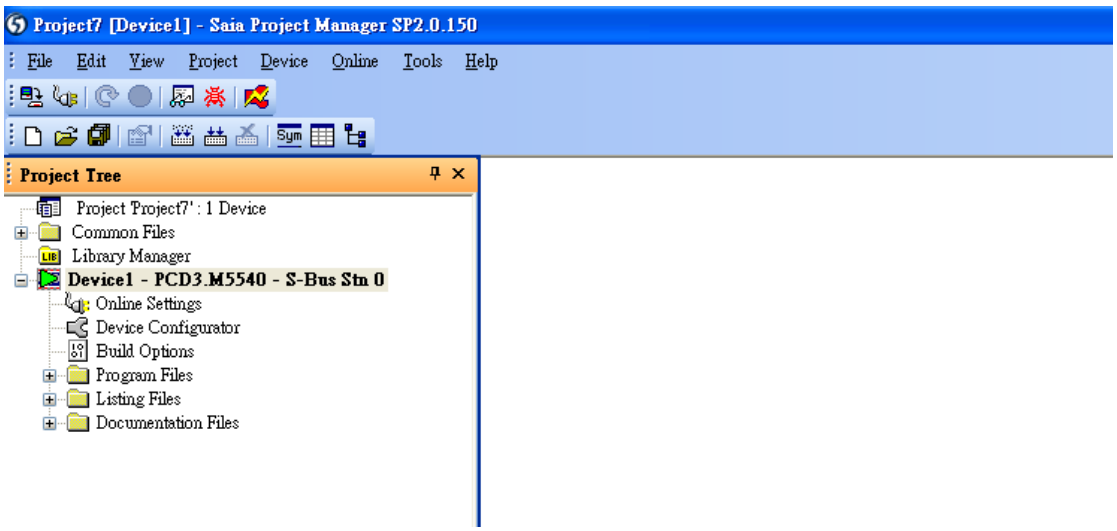


4. Go to “Online Setting”.

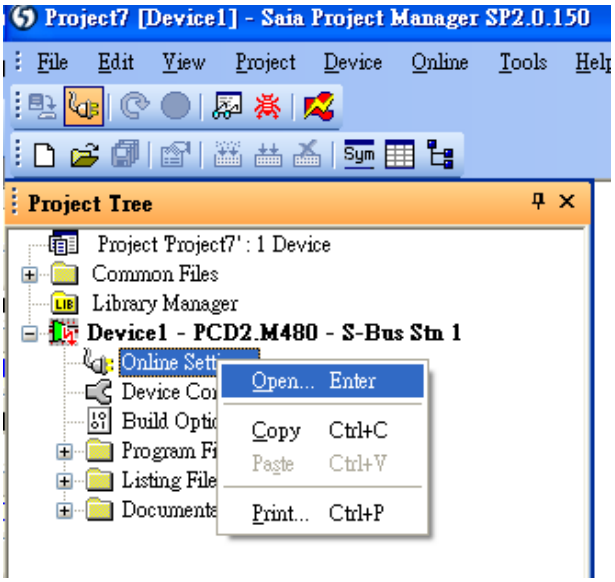


5. Select “PGU”.

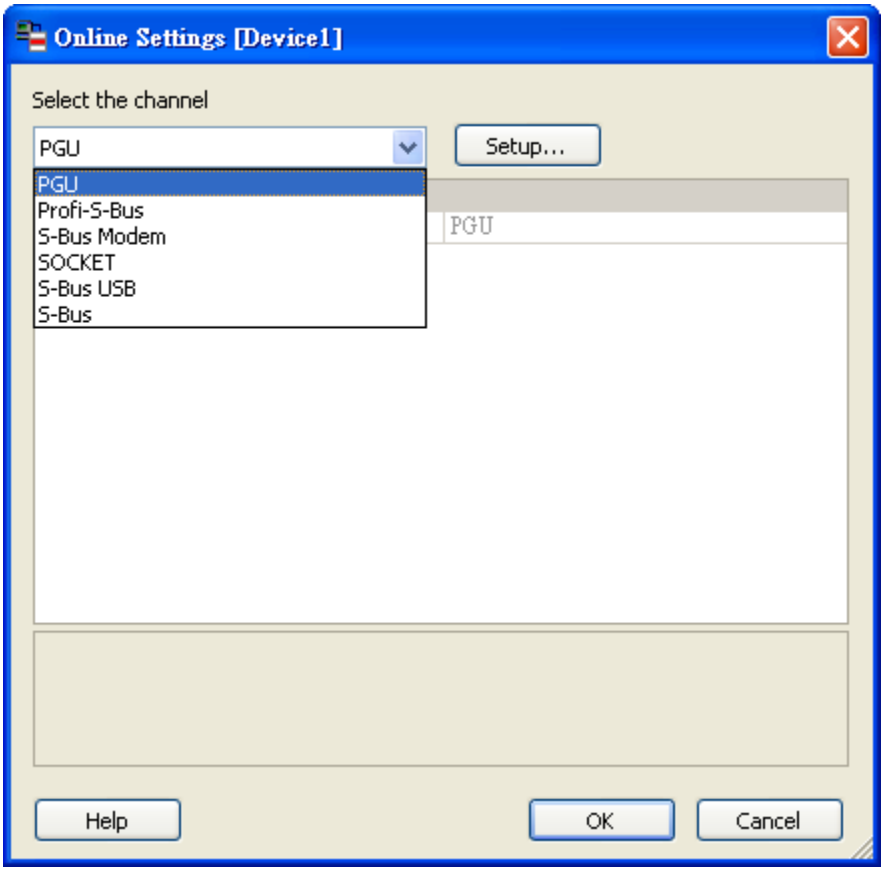


6. Go to ”Device Configurator”.

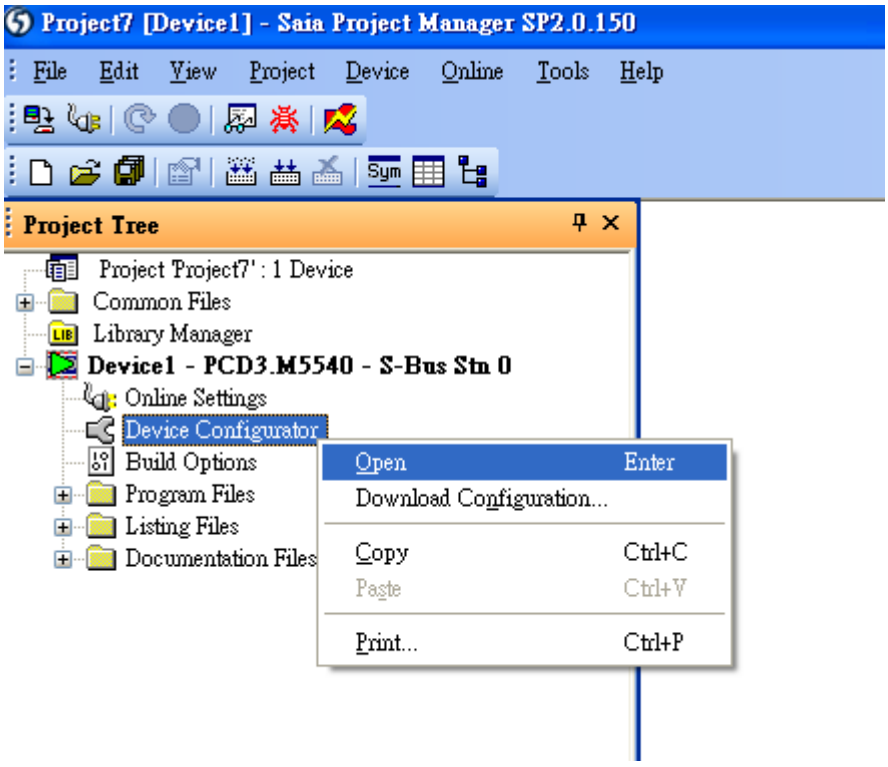


7. Click ” Change Device Type” to select your PLC model.

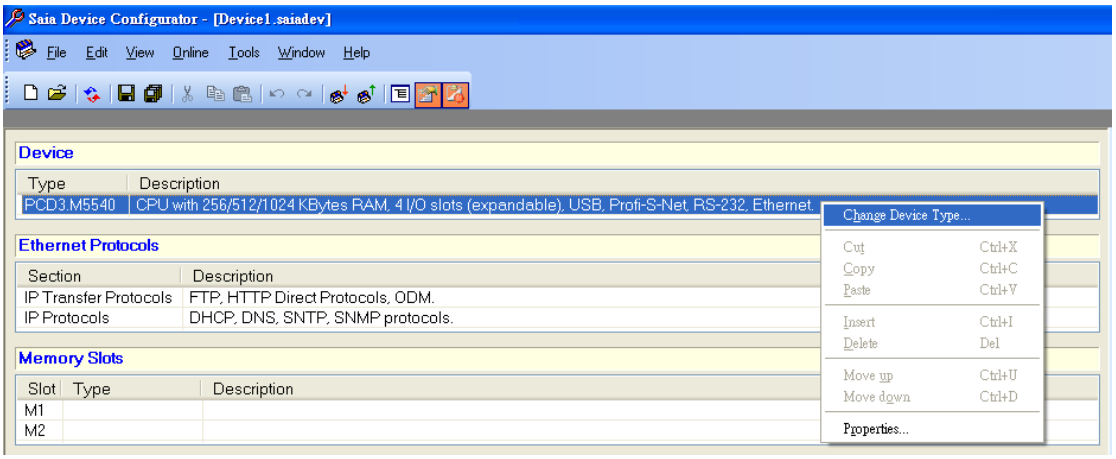


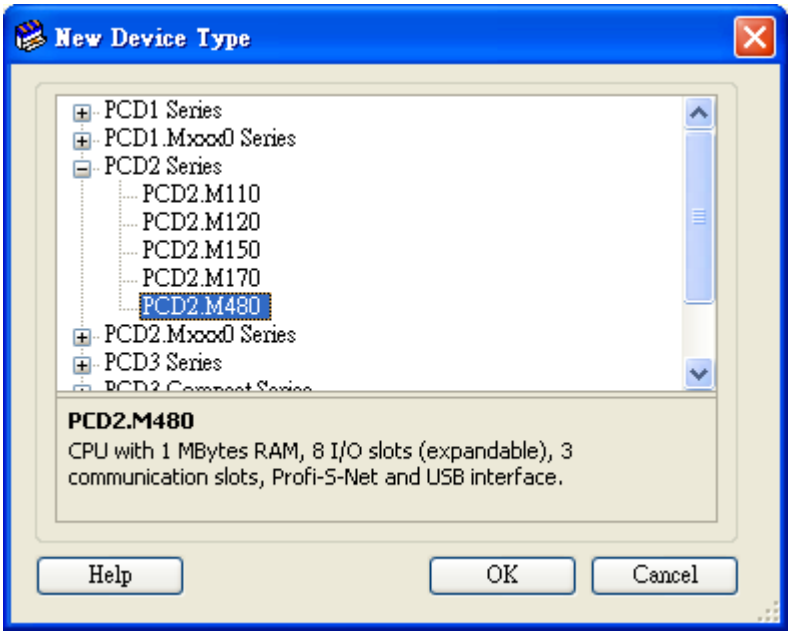


8. Select RS232 (PGU) in Type and then right click mouse on Onboard Communications and select ” Properties”.

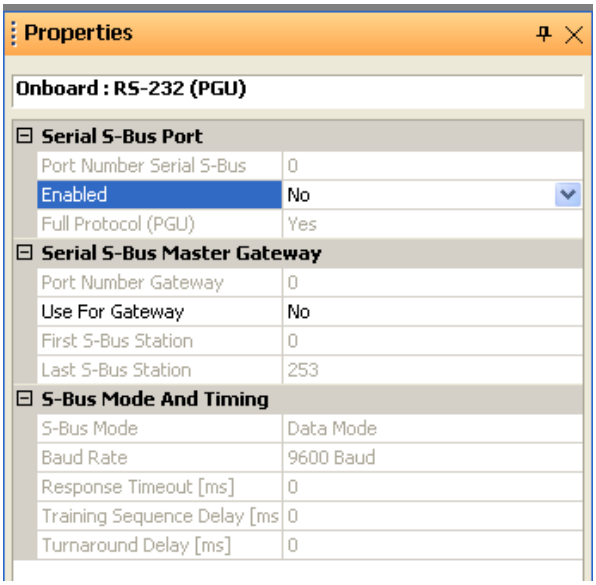


9. Select “Yes” in Series S-Bus Port: Enabled.

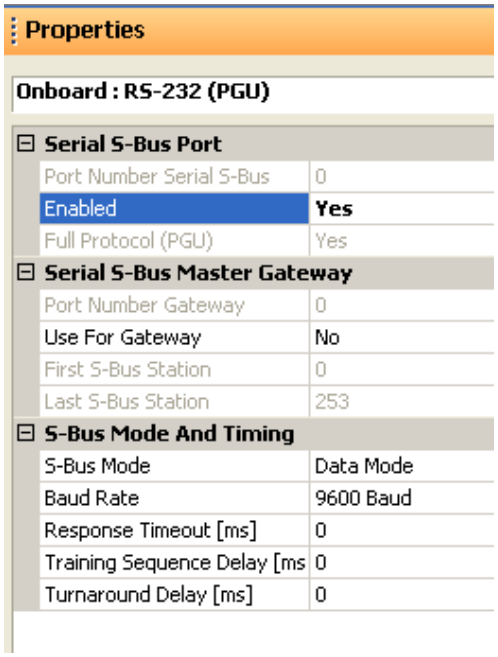



10. Set parameters in S-Bus Mode and Timing then upload to PLC.

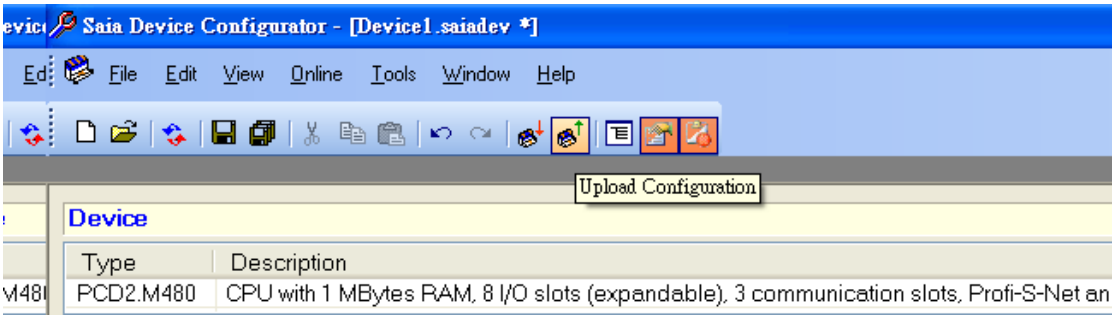


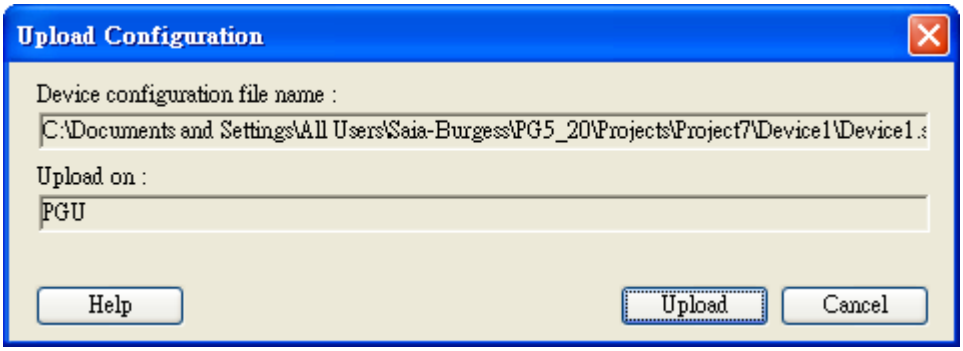

11. Go to Online Settings >> Open to select S-Bus for finishing the PLC settings.

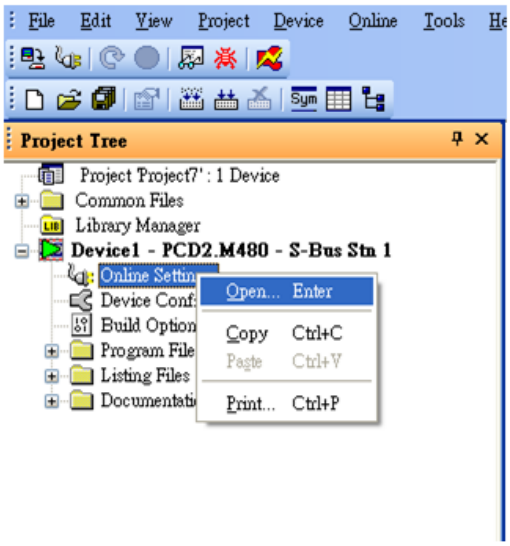

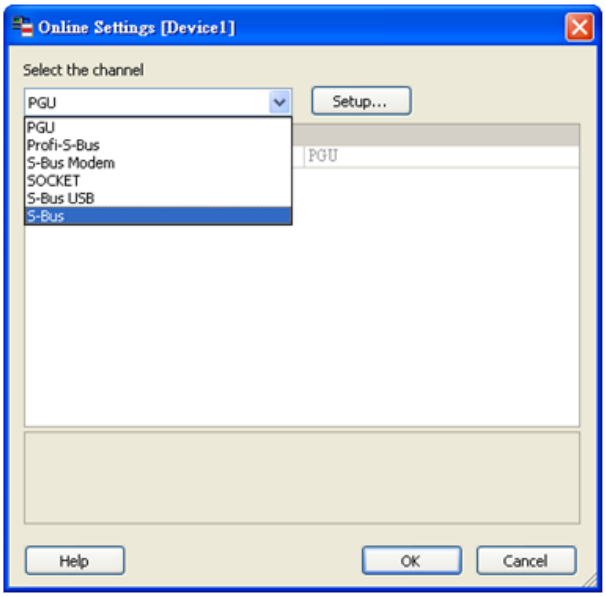

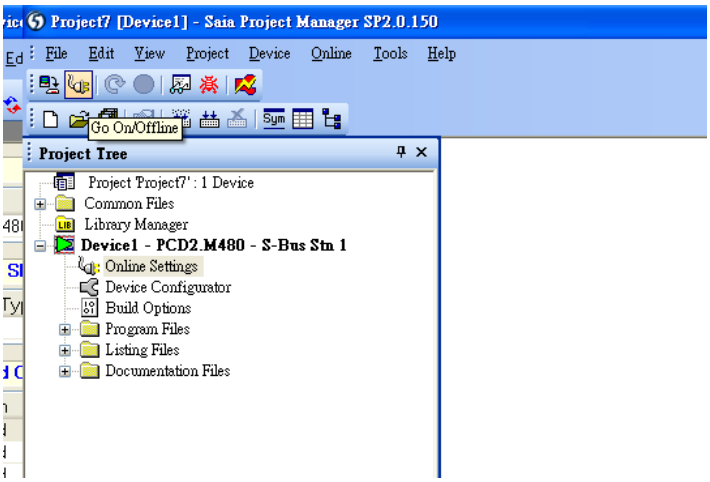

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Flag	DDDD	0 ~ 8191	
B	Output	DDDD	0 ~ 1023	
B	Input	DDDD	0 ~ 1023	
B	Reg_Bit	DDDDdd	0 ~ 1638331	dd: Bit no. (00~31)
DW	Register	DDDDD	0 ~ 16383	
DW	Counter	DDDD	0 ~ 1599	
DW	Timer	DDDD	0 ~ 1599	
DW	Reg_Float	DDDDD	0 ~ 16383	support single float point
DW	DBn	DDDDDDDDD	0 ~ 536016383	

Wiring Diagram:

SAIA PCD PGU Port RS232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5
			↔	7
			↔	8

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	3
Tx	3	2
GND	5	5
		7
		8

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	9	3
Tx	6	2
GND	5	5
		7
		8

SAIA PCD1 Port #1 (Port #0) Terminal (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		SAIA PCD1 Port #1 (Port #0) Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	↔	11(29)
Data+	2	9	↔	12(28)
GND	5	5		

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		SAIA PCD1 Port #1 (Port #0) Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	↔	11(29)
Data+	6	1	↔	12(28)
GND	5	5		

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		SAIA PCD1 Port #1 (Port #0) Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	11(29)
Data+	2	8	⟷	12(28)
GND	**5**	**9**		

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		SAIA PCD1 Port #1 (Port #0) Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	11(29)
Data+	2	9	⟷	12(28)
GND	5	5		

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		SAIA PCD1 Port #1 (Port #0) Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	11(29)
Data+	2	8	⟷	12(28)
GND	5	5		

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		SAIA PCD1 Port #1 (Port #0) Terminal
	RS485 2W 9P Female		
Data-	1	⟷	11(29)
Data+	2	⟷	12(28)
GND	5		

SAIA S-BUS (Ethernet)


Supported Series : SAIA PCD series Ethernet-TCP/IP.


Website : http://www.saia-burgess.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SAIA S-BUS (Ethernet)		
PLC I/F	Ethernet		
Port no.	5050		
PLC sta. no.	0		

PLC Setting:

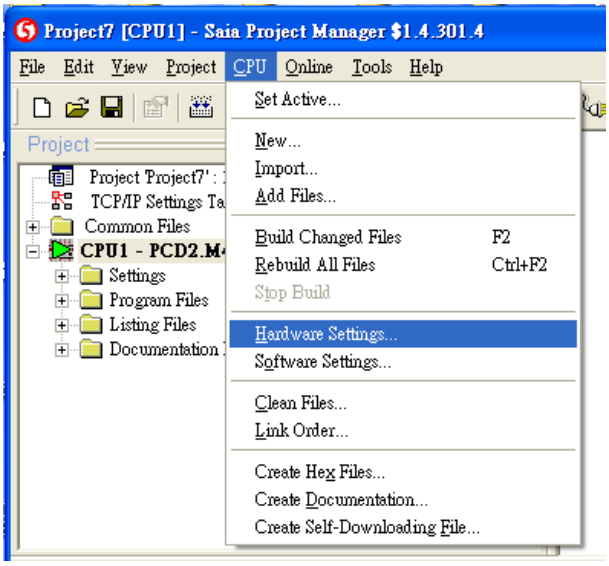

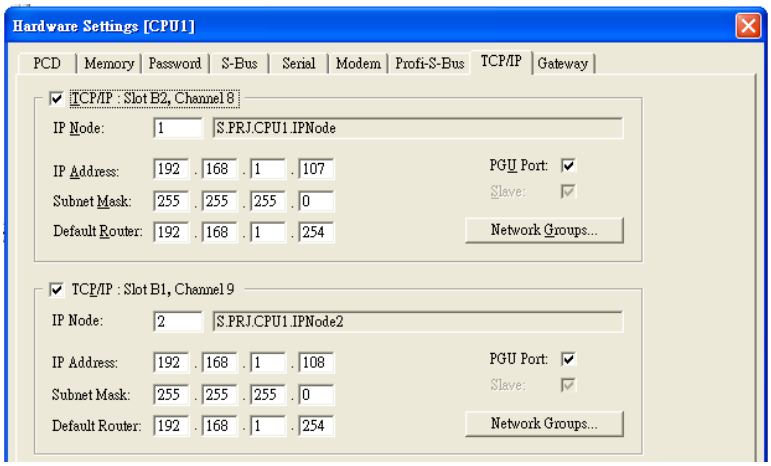

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Flag	DDDD	0 ~ 8191	
B	Output	DDDD	0 ~ 1023	
B	Input	DDDD	0 ~ 1023	
B	Reg_Bit	DDDDdd	0 ~ 1638331	dd: Bit no. (00 ~ 31)
B	DBn_Bit	DDDDDDDdd	0 ~ 399938331	
DW	Register	DDDDD	0 ~ 16383	
DW	Counter	DDDD	0 ~ 1599	
DW	Timer	DDDD	0 ~ 1599	
DW	Reg_Float	DDDDD	0 ~ 16383	support single float point
DW	DBn	DDDDDDDDD	0 ~ 536016383	
DW	DB_String	DDDDDDDDD	0 ~ 536016383	
DW	R_String	DDDDD	0 ~ 16383	
DW	DB_Float	DDDDDDDDD	0 ~ 536016383	

Wiring Diagram:

Ethernet cable:



Samsung SPC-10

Supported Series: Samsung SPC-10

Website: http://www.samsungelectronics.com/factory_automation/controller/plc/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Samsung SPC-10		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	None		
Parity	8		
Stop bits	1		
PLC sta. no.	192		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	R	DDDDdd	0 ~ 999915	
B	K	DDDDdd	0 ~ 999915	
B	M	DDDDdd	0 ~ 999915	
B	F	DDDDdd	0 ~ 999915	
W	W	DDDD	0 ~ 9999	

Wiring Diagram:

The following is the view from the soldering point of a cable.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	6
Data+	2	9	⟷	7
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	6
Data+	6	1	⟷	7
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	6
Data+	2	8	⟷	7
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	6
Data+	2	9	⟷	7
GND	5	5	⟷	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		
	RS485 2W 9P Female	RS485 2W 9P Female		RS485 2W 8P Mini-DIN Male
Data-	1	7	⟷	6
Data+	2	8	⟷	7
GND	5	5	⟷	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		
	RS485 2W 9P Female		RS485 2W 8P Mini-DIN Male
Data-	1	⟷	6
Data+	2	⟷	7
GND	5	⟷	5

SCENE6 Controller

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SCENE6 Controller		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	2		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Word	DD	0 ~ 99	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 Terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TD
Tx	3	7	⟷	RD
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	2	⟷	TD
Tx	3	⟷	RD
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 Terminal
Rx	9	⟷	TD
Tx	6	⟷	RD
GND	5	⟷	GND

Schleicher XCS 20C

Supported Series: Schleicher XCx-Systems Ethernet port. Schleicher XCS series, 20C model.
Website: http://www.schleicher-electronic.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Schleicher XCS 20C		
PLC I/F	RS232		
Baud rate	38400		
Data bits	8		
Parity	N		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	IX	DDDDDo	0 ~ 655357	Input %IX
B	QX	DDDDDo	0 ~ 655357	Output %QX
B	MX	DDDDDo	0 ~ 655357	%MX
W	IW	DDDDD	0 ~ 65535	%IW
W	QW	DDDDD	0 ~ 65535	%QW
W	MW	DDDDD	0 ~ 65535	%MW
DW	ID	DDDDD	0 ~ 65535	%ID
DW	QD	DDDDD	0 ~ 65535	%QD
DW	MD	DDDDD	0 ~ 65535	%WD

- Word address must be even.

Wiring Diagram:

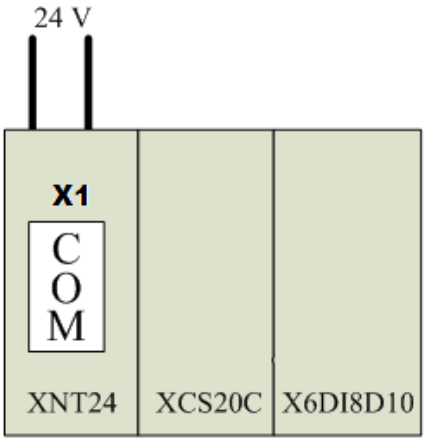


Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		Schleicher XCS20 RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		Schleicher XCS20 RS232 9P D-Sub Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		Schleicher XCS20 RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

Schleicher XCX 300


Website: http://www.schleicher-electronic.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Schleicher XCX 300		
PLC I/F	Ethernet	RS232, RS422, Ethernet	
Port no.	20547		
PLC sta. no.	2		

PLC Setting:

A variable must be created for HMI access.

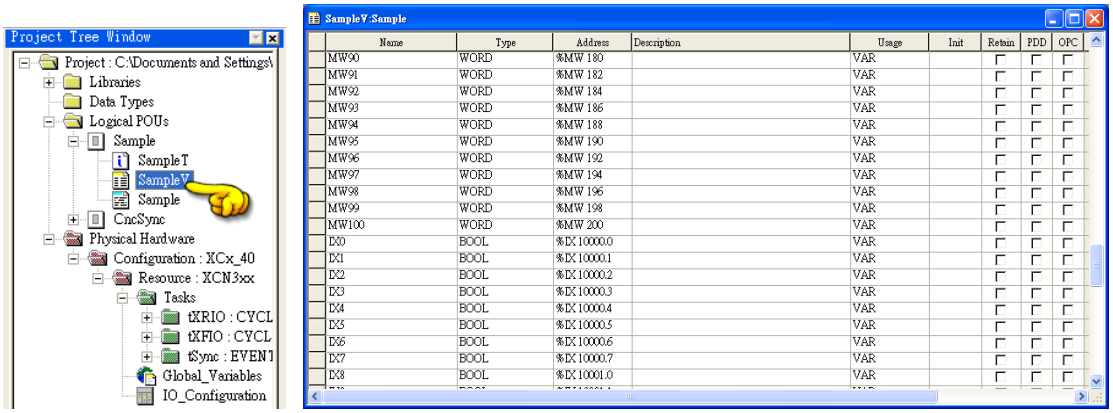

Device Address:


Bit/Word	Device type	Format	Range	Memo
B	IX	DDDDDo	0 ~ 655357	Input %IX
B	QX	DDDDDo	0 ~ 655357	Output %QX
B	MX	DDDDDo	0 ~ 655357	%MX
W	IW	DDDDD	0 ~ 65535	%IW
W	QW	DDDDD	0 ~ 65535	%QW
W	MW	DDDDD	0 ~ 65535	%MW
DW	ID	DDDDD	0 ~ 65535	%ID
DW	QD	DDDDD	0 ~ 65535	%QD
DW	MD	DDDDD	0 ~ 65535	%WD

- Word address must be even.

Wiring Diagram:

Diagram 1

Etehernet cable:

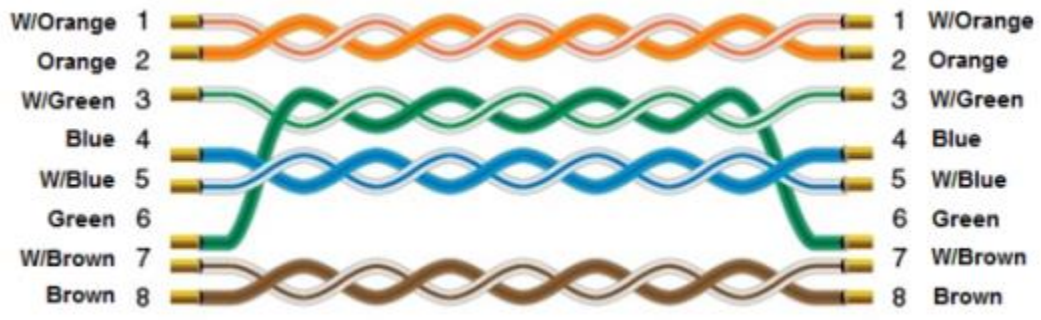

Schleicher XCX300 RS232 Port (Diagram 2 ~ Diagram 4)

Diagram 2

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Female
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 3

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

Schleicher XCX300 RS485 4W Terminal (Diagram 5 ~ Diagram 8)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W Terminal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W Terminal
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W Terminal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W Terminal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Schneider IMS SERVO

Supported Series : Schneider IMS SERVO
Website: http://www.schneider-electric.com/site/home/index.cfm/ww/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Schneider IMS SERVO		
PLC I/F	RS232		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	BIT	HHHHo	0 ~ FFFF7	
W	WORD	HHHH	0 ~ FFFF	
DW	DWORD	HHHH	0 ~ FFFF	
Byte	BYTE	HHHH	0 ~ FFFF	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		
	RS232 9P Female	RS232 9P Female		RS232 9P D-Sub Female
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		
	RS232 9P Female		RS232 9P D-Sub Female
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

Schneider MODBUS RTU

Supported Series : Schneider MODBUS RTU CONTROLLER
Website: http://www.schneider-electric.com/site/home/index.cfm/ww/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Schneider MODBUS RTU		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	1	0-255	

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

PLC Setting:

Communication mode	Modbus RTU protocol

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	%IX	DDDDDo	0 ~ 655357	Input bit (read only)
B	%QX	DDDDDo	0 ~ 655357	Write multiple coils
B	%MX	DDDDDDo	0 ~ 9999997	Output register bit (octal)
B	%M	DDDDD	0 ~ 65535	Output bit
B	%MW_Bit	DDDDDdd	0 ~ 6553515	Output register bit (decimal)
B	1x	DDDDD	0 ~ 65535	Input bit (read only)
B	0x_multi_coils	DDDDD	0 ~ 65535	Write multiple coils
B	3x_Bit	DDDDDdd	0 ~ 6553515	Input register bit (read only)
W	%MW	DDDDDD	0 ~ 999999	Output register
DW	%MD	DDDDDD	0 ~ 999999	Output register
W	3x	DDDDD	0 ~ 65535	Input Register (read only)
DW	5x	DDDDD	0 ~ 65535	4x double word swap

Bit/Word	Device type	Format	Range	Memo
DW	6x	DDDDD	0 ~ 65535	4x single word write

Wiring Diagram:

RS232 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		
	RS232 9P Female	RS232 9P Female		RS232 9P D-Sub Female
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Female
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

The following is the view from the soldering point of a cable.



9P D-Sub to 8P Mini-DIN : RS485 2W (Diagram 4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	5
			⟷	7

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2
Data+	6	1	⟷	1
GND	5	5	⟷	5
			⟷	7

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	**5**	**9**	⟷	5
			⟷	7

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	5
			⟷	7

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	2
Data+	2	8	1
GND	5	5	5
			7

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Female	
Data-	1	2
Data+	2	1
GND	5	5
		7

RS485 2W 3P Terminal (Diagram 10 ~ Diagram 15)

Diagram 10

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 3P Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	B-
Data+	2	9	⟷	A+
GND	5	5	⟷	GND

Diagram 11

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 3P Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	B-
Data+	6	1	⟷	A+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 3P Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	B-
Data+	2	8	⟷	A+
GND	**5**	**9**	⟷	GND

Diagram 13

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 3P Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	B-
Data+	2	9	⟷	A+
GND	5	5	⟷	GND

Diagram 14

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 3P Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	B-
Data+	2	8	⟷	A+
GND	5	5	⟷	GND

Diagram 15

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 3P Terminal
	RS485 2W 9P Female		
Data-	1	⟷	B-
Data+	2	⟷	A+
GND	5	⟷	GND

Schneider MODBUS TCP/IP

Supported Series : Schneider Modbus RTU TCP/IP Device.
Website: http://www.schneider-electric.com/site/home/index.cfm/ww/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Schneider MODBUS TCP/IP		
PLC I/F	Ethernet		
Port no.	502		
PLC sta. no.	1	0~255	

PLC Setting:


Ethernet frame format	Ethernet II format

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	%IX	DDDDo	0 ~ 81927	Input bit (read only)
B	%QX	DDDDo	0 ~ 81927	Write multiple coils
B	%MX	DDDDDDo	0 ~ 1310707	Output register bit (octal)
B	%M	DDDDD	0 ~ 65535	Output bit
B	%MW_Bit	DDDDDdd	0 ~ 6553515	Output register bit (decimal)
B	1x	DDDDD	0 ~ 65535	Input bit (read only)
B	0x_multi_coils	DDDDD	0 ~ 65535	Write multiple coils
B	3x_Bit	DDDDDdd	0 ~ 6553515	Input register bit (read only)
W	%MW	DDDDD	0 ~ 65535	Output register
DW	%MD	DDDDD	0 ~ 32767	Output register
W	3x	DDDDD	0 ~ 65535	Input Register (read only)
DW	5x	DDDDD	0 ~ 65535	4x double word swap
DW	6x	DDDDD	0 ~ 65535	4x single word write

Wiring Diagram:

Etehernet cable:

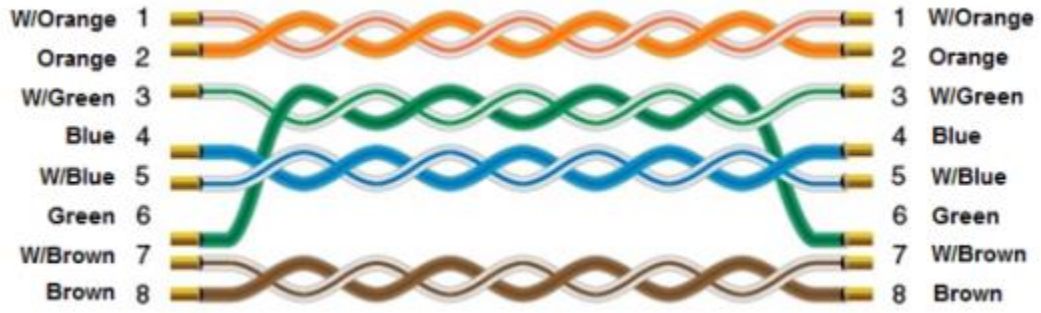

Schneider PowerLogic Modbus RTU

Supported Series : Schneider PowerLogic Modbus RTU
Website : https://www.schneider-electric.com/ww/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Schneider PowerLogic Modbus RTU		
PLC I/F	RS485	RS232/RS485	
Baud rate	9600	9600~115200	
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1,2	
PLC sta. no.	1	0-255	

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	0x	DDDDD	0 ~ 65535	Output bit
B	1x	DDDDD	0 ~ 65535	Input bit (read only)
B	3x_Bit	DDDDDdd	0 ~ 6553515	Input Register bit (read only)
B	4x_Bit	DDDDDdd	0 ~ 6553515	Output Register bit
B	0x_multi_coils	DDDDD	0 ~ 65535	Write multiple coils
W	3x	DDDDD	0 ~ 65535	Input Register (read only)
W	4x	DDDDD	0 ~ 65535	Output Register
DW	5x	DDDDD	0 ~ 65535	4x double word swap
W	6x	DDDDD	0 ~ 65535	4x single word write
W	UMod10_4_ASCII	DDDDDDD	100 ~ 6553500	Read 4 unsigned data
W	UMod10_3_ASCII	DDDDDDD	100 ~ 6553500	Read 3 unsigned data
W	Mod10_2	DDDDD	1 ~ 65535	Read 2 data
W	UINT64_ASCII	DDDDDDD	100 ~ 6553500	Read 64 bits unsigned data

Bit/Word	Device type	Format	Range	Memo
W	Mod10_4_ASCII	DDDDDDD	100 ~ 6553500	Read 4 signed data
W	Mod10_3_ASCII	DDDDDDD	100 ~ 6553500	Read 3 signed data
W	INT64_ASCII	DDDDDDD	100 ~ 6553500	Read 64 bits signed data

Wiring Diagram:

RS232 terminal (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 terminal
Rx	2	⟷	TXD
Tx	3	⟷	RXD
GND	5	⟷	GND

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 terminal
Rx	9	⟷	TXD
Tx	6	⟷	RXD
GND	5	⟷	GND

RS485 4W terminal (Diagram 4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W terminal
Rx-	1	↔	TX-
Rx+	2	↔	TX+
Tx-	3	↔	RX-
TX+	4	↔	RX+
GND	5	↔	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W terminal
Rx-	7	↔	TX-
Rx+	6	↔	TX+
Tx-	9	↔	RX-
TX+	8	↔	RX+
GND	5	↔	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W terminal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W terminal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS485 2W terminal (Diagram 8 ~ Diagram 13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	↔	D-
Data+	2	8	↔	D+
GND	5	5	↔	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W terminal
	RS485 2W 9P Female		
Data-	1	↔	D-
Data+	2	↔	D+
GND	5	↔	GND

Schneider SoMachine M Series (Ethernet)


Supported series: Schneider SoMachine M238/M241/M251/M258

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Schneider SoMachine M Series		
PLC I/F	Ethernet		Use UDP
Port no.	1740		
Source port no.	1742	1740/1742	M258: 1740 Other: 1742

How to Import Tags:


8. In System Parameter Settings click **[New]** to add Schneider SoMachine M Series driver into the device list and then click **[Import Tag]**.

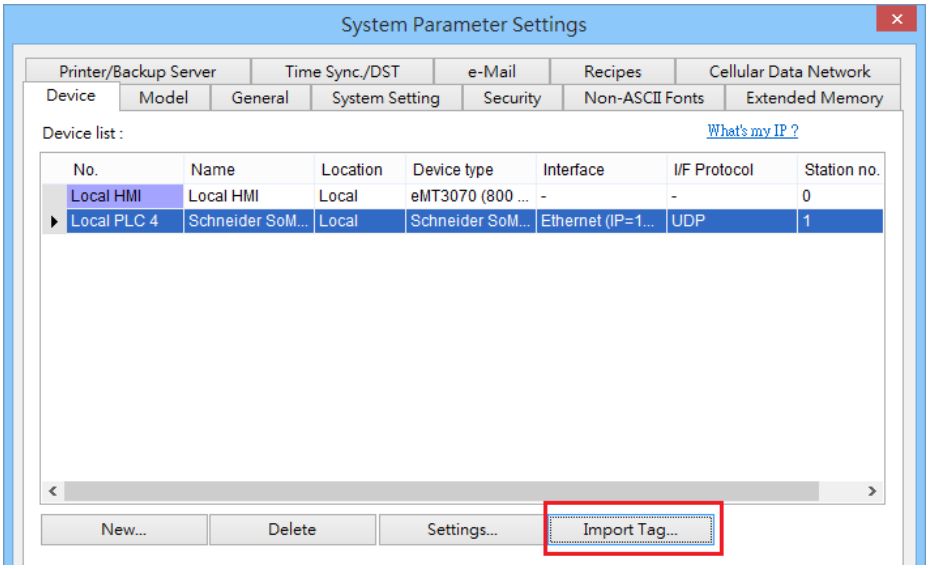

9. In Tag Manager click **Get tag** -> **Import Tag**, and then select the tag file (.xml) generated by the PLC software.

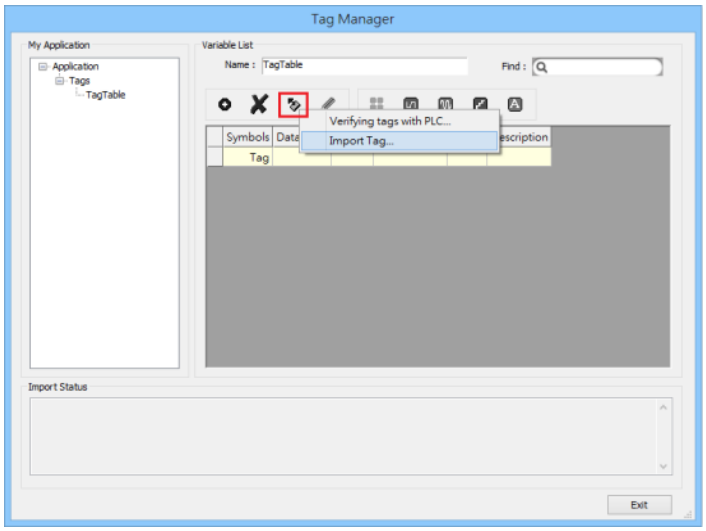

10. When the tags are imported successfully, click **[Exit]** to leave.

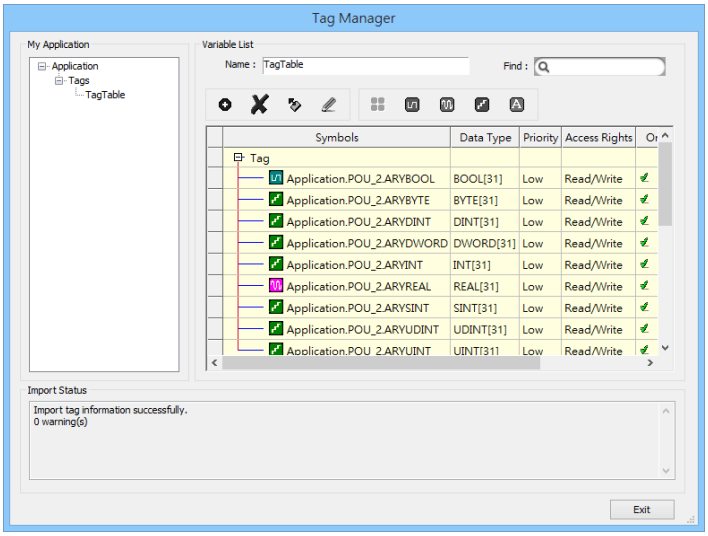

Wiring Diagram:

Etehernet cable:



Schneider UniTelway

Supported Series: Modicon TSX Micro&Nano&Neza series PLC.
Website: http://www.modicon.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Schneider UniTelway		
PLC I/F	RS485 2W	RS232/RS485	
Baud rate	19200	9600~115200	
Data bits	8	7,8	Must set to 8 for this protocol
Parity	Odd	Even, Odd, None	
Stop bits	1	1, 2	
HMI sta. no.	5	1-8	
PLC sta. no.	0	0-3	

Online simulator	YES	**Extend address mode**	YES
Broadcast command	NO		

PLC Setting:

Communication mode	UniTelWay protocol, set PLC as master

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	S	DDDDD	0 ~ 32767	Internal relay
B	M	DDDDD	0 ~ 32767	Auxiliary relay
B	MW.B	DDDDDdd	0 ~ 3276715	Data register bit
W	MW	DDDDD	0 ~ 32767	Data register

Wiring Diagram:

The following is the view from the soldering point of a cable.



TSX37-XX/TSX07-XX CPU : 9P D-Sub to 9P D-Sub

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2
Data+	6	1	⟷	1
GND	5	5	⟷	7

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	**5**	**9**	⟷	7

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2
Data+	2	9	⟷	1
GND	5	5	⟷	7

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2
Data+	2	8	⟷	1
GND	5	5	⟷	7

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 8P Mini-DIN Male
	RS485 2W 9P Female		
Data-	1	⟷	2
Data+	2	⟷	1
GND	5	⟷	7

SERVO BLDC (400/750WD)

Supported Series: BLDC(400/750WD)
Website: http://www.servoind.net/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SERVO BLDC (400/750WD)		
PLC I/F	RS232		
Baud rate	19200		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SET_SERVO	D	0	
B	SET_DIRECTION	D	0	
B	SET_BERAK	D	0	
B	RESET	D	0	
B	DRIVER_FAULT	D	0	
B	SERVO_OFF_ERROR	D	0	
B	BREAK_ON_ERROR	D	0	
W	SET_RPM	D	0	
W	RPM	D	0	
W	CUR_RPM	D	0	
W	CUR_ERROR	D	0	
W	PARAMETER1_W	D	0 ~ 7	
W	PARAMETER1_R	D	0 ~ 7	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		CN3 RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		CN3 RS232 9P D-Sub Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		CN3 RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

SEUNGIL AHU

Supported Series: SENUGIL AVDP-NH-K1
Website : http://seungil.en.ec21.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SEUNGIL AHU		
PLC I/F	RS-485 2W	RS232, RS485 2W/4W	
Baud rate	9600	9600 ~ 115200	
Data bits	8	7,8	
Parity	None	Even, Odd, None	
Stop bits	1	1	
PLC sta. no.	1	0 ~ 99	
Turn around delay(ms)	0 (Normal) 30 (cMT Series)		

Online simulator	YES	**Extend address**	NO

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	BIT	DDD.DDD.DDDdd	0 ~ 255.255.25515	
W	WORD	DDD.DDD.DDD	0 ~ 255.255.255	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	1
GND	5	5		

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8
Data+	6	1	⟷	1
GND	5	5		

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	1
GND	**5**	**9**		

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	1
GND	5	5		

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	8
Data+	2	8	1
GND	5	5	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	RS485 2W Terminal
	RS485 2W 9P Female	
Data-	1	8
Data+	2	1
GND	5	

SEW Movilink

Supported Series: SEW Eurodrive series, model MOVITRAC-07 inverter, MovitracB.
Website: http://sg.sew-eurodrive.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SEW Movilink		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	0	0~255	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	INDEX_Bit	DDDDDDDDdd	0 ~ 2552500031	
W	INDEX	DDDDDDDD	0 ~ 25525000	

- The MOVITRAC-07 doesn't support Sub index（other series may support）, please input 000.
- When input D and d, the correct format：Sub index 15, Index 8359, Format is 01508359.

Wiring Diagram:

The following is the view from the soldering point of a cable.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		Movitrac-07 RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-(Green)
Data+	2	9	⟷	D+(Red)
GND	5	5		

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		Movitrac-07 RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-(Green)
Data+	6	1	⟷	D+(Red)
GND	5	5		

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		Movitrac-07 RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-(Green)
Data+	2	8	⟷	D+(Red)
GND	**5**	**9**		

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		Movitrac-07 RS485 2W
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-(Green)
Data+	2	9	⟷	D+(Red)
GND	5	5		

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		Movitrac-07 RS485 2W
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-(Green)
Data+	2	8	⟷	D+(Red)
GND	5	5		

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		Movitrac-07 RS485 2W
	RS485 2W 9P Female		
Data-	1	⟷	D-(Green)
Data+	2	⟷	D+(Red)
GND	5		

SEW MOVITRAC LTE

Website : http://www.seweurodrive.com/index.php

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SEW MOVITRAC LTE		
PLC I/F	RS-485 2W		
Baud rate	115200		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Online simulator	YES	**Extend address mode**	NO

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	P-1	D	0 ~ 1	Max. speed limit
W	P-2	D	0 ~ 1	Min. speed limit
W	P-3	D	0 ~ 1	Acceleration ramp time
W	P-4	D	0 ~ 1	Deceleration ramp time
W	P-5	D	0 ~ 1	Stop mode select
W	P-6	D	0 ~ 1	Energy optimizer
W	P-7	D	0 ~ 1	Motor rated voltage
W	P-8	D	0 ~ 1	Motor rated current
W	P-9	D	0 ~ 1	Motor rated frequency
W	P-10	D	0 ~ 1	Motor rated speed
W	P-11	D	0 ~ 1	Voltage boost
W	P-12	D	0 ~ 1	Terminal / Keypad control
W	P-13	D	0 ~ 1	Trip log
W	P-14	D	0 ~ 1	Extended menu access code
W	P-15	D	0 ~ 1	Digital input function set
W	P-16	D	0 ~ 1	Analog input V / mA
W	P-17	D	0 ~ 1	Output switching frequency

Bit/Word	Device type	Format	Range	Memo
W	P-18	D	0 ~ 1	User relay output select
W	P-19	D	0 ~ 1	User relay output limit
W	P-20	D	0 ~ 1	Preset speed 1
W	P-21	D	0 ~ 1	Preset speed 2
W	P-22	D	0 ~ 1	Preset speed 3
W	P-23	D	0 ~ 1	Preset speed 4
W	P-24	D	0 ~ 1	Deceleration ramp time 2
W	P-25	D	0 ~ 1	Analog output function select
W	P-26	D	0 ~ 1	Skip frequency hysteris band
W	P-27	D	0 ~ 1	Skip frequency
W	P-28	D	0 ~ 1	V/F characteristic adjustment voltage
W	P-29	D	0 ~ 1	V/F characteristic adjustment frequency
W	P-30	D	0 ~ 1	Terminal mode restart function
W	P-31	D	0 ~ 1	Keypad mode restart function
W	P-32	D	0 ~ 1	DC injection enable / duration
W	P-33	D	0 ~ 1	Spin start
W	P-34	D	0 ~ 1	Brake chopper enable
W	P-35	D	0 ~ 1	Analog input scaling factor
W	P-36	D	0 ~ 1	Comms address; SBus enable/baudrate select; Trip enable / delay
W	P-37	D	0 ~ 1	Access code definition
W	P-38	D	0 ~ 1	Parameter access lock
W	P-39	D	0 ~ 1	Analog input off-set
W	P-40	D	0 ~ 1	Display speed scaling factor
W	P-00-01	D	0 ~ 1	Analog input 1 value
W	P-00-02	D	0 ~ 1	Analog input 2 value
W	P-00-03	D	0 ~ 1	Speed reference input
W	P-00-04	D	0 ~ 1	Digital input status
W	P-00-05	D	0 ~ 1	Reserved
W	P-00-06	D	0 ~ 1	Reserved
W	P-00-07	D	0 ~ 1	Applied motor voltage
W	P-00-08	D	0 ~ 1	DC bus voltage log
W	P-00-09	D	0 ~ 1	Heatsink temperature
W	P-00-10	D	0 ~ 1	Hours run meter
W	P-00-11	D	0 ~ 1	Run time since last trip (1)
W	P-00-12	D	0 ~ 1	Run time since last trip (2)
W	P-00-13	D	0 ~ 1	Run time since last disable

Bit/Word	Device type	Format	Range	Memo
W	P-00-14	D	0 ~ 1	Reserved
W	P-00-15	D	0 ~ 1	DC bus voltage log
W	P-00-16	D	0 ~ 1	Thermistor temperature log
W	P-00-17	D	0 ~ 1	Motor current
W	P-00-18	D	0 ~ 1	Software ID,IO and motor control
W	P-00-19	D	0 ~ 1	Drive serial number
W	P-00-20	D	0 ~ 1	Drive identifier

P-00-01 ~ P-00-20 read only.

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		PLC RS485 2W 8P RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	4-
Data+	2	9	⟷	5+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		PLC RS485 2W 8P RJ45 Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	4-
Data+	6	1	⟷	5+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		PLC RS485 2W 8P RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	4-
Data+	2	8	⟷	5+
GND	**5**	**9**	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		PLC RS485 2W 8P RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	4-
Data+	2	9	⟷	5+
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		PLC RS485 2W 8P RJ45 Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	4-
Data+	2	8	⟷	5+
GND	5	5	⟷	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		PLC RS485 2W 8P RJ45 Male
	RS485 2W 9P Female		
Data-	1	⟷	4-
Data+	2	⟷	5+
GND	5	⟷	

SHIMADEN MR13/FP93


Supported Series: MR13, FP93 devices
Website: http://www.shimaden.co.jp

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SHIMADEN MR13/FP93		
PLC I/F	RS485 2W		
Baud rate	9600	1200-19200	
Data bits	7	7 or 8	
Parity	E	None/Even	
Stop bits	1	1	
PLC sta. no.	1	1~255	
Start Character Mode	Select 3：@_:_CR	0, 1 : STX_ETX_CR 2 : STX_ETX_CR LF 3 : @_:_CR	For FP93, select 0,1
BCC Operation Method	Select 3：XOR	0, 1 : Addition 2 : Addition +2's complement 3 : XOR 4 : None	

Note：

Address 018C is a communication control register, only when it is set to 1 can this register be allowed to write to other registers.

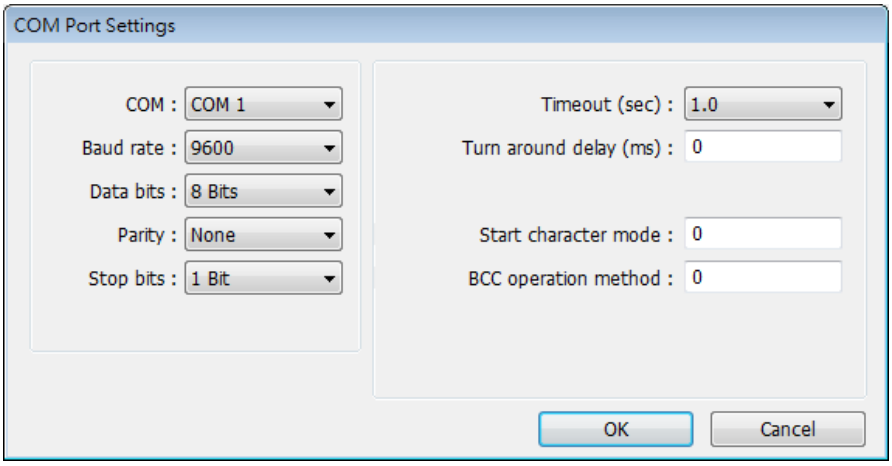

Device Address:

Bit/Word	Device	Format	Range	Memo
W	Channel 1	HHHH	0 ~ ffff	Read/Write 1st Channel Register
W	Channel 2	HHHH	0 ~ ffff	Read/Write 2nd Channel Register
W	Channel 3	HHHH	0 ~ ffff	Read/Write 3rd Channel Register

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		MR13/FP93 RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	25-
Data+	2	9	⟷	24+
GND	5	5	⟷	23 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		MR13/FP93 RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	25-
Data+	6	1	⟷	24+
GND	5	5	⟷	23 GND

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		MR13/FP93 RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	25-
Data+	2	8	⟷	24+
GND	**5**	**9**	⟷	23 GND

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		MR13/FP93 RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	25-
Data+	2	9	⟷	24+
GND	5	5	⟷	23 GND

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		MR13/FP93 RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	25-
Data+	2	8	⟷	24+
GND	5	5	⟷	23 GND

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		MR13/FP93 RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	⟷	25-
Data+	2	⟷	24+
GND	5	⟷	23 GND

MR13 Communication Parameter Settings

Data Address	Parameter	Details of Parameter	R /W
0100	PV Value	Within measuring range	R
0101	E_SV Execution SV Value	Within setting range	R
0102	OUT Control Output Value	Within range 0.0～100.0%	R
0103	Reserved		

0104	Action Flag	（See detailed explanation below.）	R
0105	Event Output Flag	（See detailed explanation below.）	R
0106	Reserved		
0107	Reserved		
0108	REM Value	Within setting range	R
0109	Reserved		
010A	Reserved		
010B	DI Input State Flag	（See detailed explanation below.）	R
Data Address (hex)	Parameter	Details of Parameter	R /W
0111	RANGE	Refer to the measuring range code list.	R
0112	Reserved		
0113	DP Decimal Point	Position of decimal point（0:Without decimal point 1:With decimal point）	R
0114	PV Sc_L Lower Limit	For Linear Imput:-1999～9999 unit For Thermocouple, and RTD Input: Measuring range to be displayed.	R
0115	PV Sc_H Higher Limit		R

Data Address (hex)	Parameter	Details of Parameter	R/W
0120	E_PRG	Program Action Flag	R
0121	Reserved		
0122	Reserved		
0123	E_PRT	The number of execution patterns （When program is reset, value=7FFEH）	R
0124	E_STP	Execution step number （When program is reset, value=7FFEH）	R
0125	E_TIM	Remaining time of execution step （When program is reset, value=7FFEH）	R
0126	E_PID	Execution PID number （When program is reset, value=7FFEH）	R

Data Address	Parameter	Details of Parameter	R/W
0184	AT Auto Tuning	0:No execution 1:Execution	W
018C	Operation	0:Local 1:COM	W
0190	PROG RUN/RST Program Run/Reset	0：RST, 1：RUN （Writing is possible only in CH1）	W
0191	PROG HLD Program Hold	0：Release, 1：HLD （Writing is possible only in CH1）	W
0300	SV	Local SV Value, within set value limiter	R/W

Data AddresS	Parameter	Details of Parameter	R/W
030A	SV Limt_L Lower Limit	Within measuring range, On condition that SV Limt_L<SV Limt_H	R/W
030B	SV Limt_h Higher Limit		
0314	REM SC_L	Within measuring range On condition that REM SC_L≠REM SC_H	R/W
0315	REM SC_H		
0316	REM Bias	Range: -1999～5000 unit	R/W
0317	REM Filt	Range: 0～100 seconds	R/W
031A	REM-CH	Remote channel assignment 0：OFF，1：CH1，2：CH2，3：CH3	R/W

Data Address	Parameter	Details of Parameter	R/W
0320	SV Follow SW	CH2 & CH3 SV follow setting flag 1: Follow 0:No	R/W

Data Address	Parameter	Details of Parameter	R/W
0321	SV Follow	Follow type deviation SV set value: 1999～5000 unit	R/W
0400	FIX P	Control Output Proportional Baud Range: 0.0～999.9%(0.0:OFF)	R/W
0401	FIX I	Control Output Integral Time Range: 0～6000 Seconds (0.0:OFF)	R/W
0402	FIX D	Control Output Derivative Time Range 0～3600 Seconds (0.0:OFF)	R/W
0403	FIX MR	Manual Reset Range: -50.0～50.0%	R/W
0404	FIX DF	Hysteresis Range: 1～999 unit	R/W
0405	FIX OUT Limt_L	Control Output Lower Limit Output Limiter Range: 0.0～99.9%	R/W
0406	FIX OUT Limt_H	Control Output Higher Limit Output Limiter Range: 0.1～100.0%	R/W
0407	FIX SF	Control Output Target Value Function Range: OFF，0.01～1.00	R/W
0408	Prog P1	PROG mode PB1 Range: 0.0～999.9% (0.0:OFF)	R/W
0409	Prog I1	PROG mode IT1 Range: 0～6000 seconds (0.0:OFF)	R/W
040A	Prog D1	PROG mode DT1 Range: 0～3600 seconds (0.0:OFF)	R/W
040B	Prog MR1	PROG mode MR1 Range: -50.0～50.0%	R/W
040C	Prog DF1	PROG mode DF1 Range: 1～999 unit	R/W
040D	Prog O_Lmt_L1	PROG mode lower limit side output limiter 1 Range: 0.0～99.9%	R/W
040E	Prog O_Lmt_H1	PROG mode higher limit side output limiter 1 Range: 0.1～100.0%	R/W
040F	Prog SF1	PROG mode target value function 1 Range: OFF,0.01～1.00	R/W
0410	Prog P2	PROG mode PB2 Range: 0.0～999.9% (0.0:OFF)	R/W

0411	Prog I2	PROG mode IT2 Range: 0～6000 seconds (0.0:OFF)	R/W
0412	Prog D2	PROG mode DT2 Range: 0～3600 seconds (0.0:OFF)	R/W
0413	Prog MR2	PROG mode MR2 Range: -50.0～50.0%	R/W
0414	Prog DF2	PROG mode DF2 Range: 1～999 unit	R/W
0415	Prog O_Lmt_L2	PROG mode lower limit side output limiter 2 Range: 0.0～99.9%	R/W
0416	Prog O_Lmt_H2	PROG mode higher limit side output limiter 2 Range: 0.1～100.0%	R/W
0417	Prog SF2	PROG mode target value function 2 Range: OFF,0.01～1.00	R/W
0418	Prog P3	PROG mode PB3 Range: 0.0～999.9% (0.0:OFF)	R/W
0419	Prog I3	PROG mode IT3 Range: 0～6000 seconds (0.0:OFF)	R/W
041A	Prog D3	PROG mode DT3 Range: 0～3600 seconds (0.0:OFF)	R/W
041B	Prog MR3	PROG mode MR3 Range: -50.0～50.0%	R/W
041C	Prog DF3	PROG mode DF3 Range: 1～999 unit	R/W
041D	Prog O_Lmt_L3	PROG mode lower limit side output limiter 3 Range: 0.0～99.9%	R/W
041E	Prog O_Lmt_H3	PROG mode higher limit side output limiter 3 Range: 0.1～100.0%	R/W
041F	Prog SF3	PROG mode target value function 3 Range: OFF,0.01～1.00	R/W

0500	EV1_MODE	0:Not assigned 1:Higher limit deviation value 2:Lower limit deviation value 3:Out of range between higher & lower limits 4:Within range between higher & lower limits 5:Higher limit absolute value 6:Lower limit absolute value 7:Scaleover 8:Program RUN 9:Program END 10:Program STEP Only when Subaddress=EV1_CH.	R/W
0501	EV1 Set Point	1. Higher limit deviation value alarm: 0～1999 unit 2. Lower limit deviation value alarm: 0～-1999 unit 3. Out of range between higher & lower limits value alarm: 0～1999 unit 4. Within range between higher and lower limits value alarm: 0～1999 unit 5. Higher limit absolute value alarm: Within measuring range 6. Lower limit absolute value alarm: Within measuring range Only when Subaddress=EV1_CH.	R/W
0502	EV1 Diffrnt	Alarm hysteresis 1～999 unit Only when Subaddress=EV1_CH.	R/W
0503	EV1 Inhibit	Alarm stand by 1～4 Only when Subaddress=EV1_CH.	R/W
0504	EV1 Delay	Alarm delay time 0～9999 seconds Only when Subaddress=EV1_CH.	R/W

0506	EV1_CH	Channel number setting 1:CH1, 2:CH2, 3:CH3	R/W

0510	EV2_MODE	0:Not assigned 1:Higher limit deviation value 2:Lower limit deviation value 3:Out of range between higher & lower limits 4:Within range between higher & lower limits 5:Higher limit absolute value 6:Lower limit absolute value 7:Scaleover 8:Program RUN 9:Program END 10:Program STEP Only when Subaddress=EV2_CH.	R/W
0511	EV2 Set Point	1. Higher limit deviation value alarm: 0～1999 unit 2. Lower limit deviation value alarm: 0～-1999 unit 3. Out of range between higher & lower limits value alarm: 0～1999 unit 4. Within range between higher and lower limits value alarm: 0～1999 unit 5. Higher limit absolute value alarm: Within measuring range 6. Lower limit absolute value alarm: Within measuring range Only when Subaddress=EV2_CH.	R/W
0512	EV2 Diffrnt	Alarm hysteresis 1～999 unit Only when Subaddress=EV2_CH.	R/W
0513	EV2 Inhibit	Alarm stand by 1～4 Only when Subaddress=EV2_CH.	R/W
0514	EV2 Delay	Alarm delay time 0～9999 seconds Only when Subaddress=EV2_CH.	R/W

0516	EV2_CH	Channel number setting 1:CH1, 2:CH2, 3:CH3	R/W

0520	EV3_MODE	0:Not assigned 1:Higher limit deviation value 2:Lower limit deviation value 3:Out of range between higher & lower limits 4:Within range between higher & lower limits 5:Higher limit absolute value 6:Lower limit absolute value 7:Scaleover 8:Program RUN 9:Program END 10:Program STEP Only when Subaddress=EV3_CH.	R/W
0521	EV3 Set Point	1. Higher limit deviation value alarm: 0～1999 unit 2. Lower limit deviation value alarm: 0～-1999 unit 3. Out of range between higher & lower limits value alarm: 0～1999 unit 4. Within range between higher and lower limits value alarm: 0～1999 unit 5. Higher limit absolute value alarm: Within measuring range 6. Lower limit absolute value alarm: Within measuring range Only when Subaddress=EV3_CH	R/W
0522	EV3 Diffrnt	Alarm hysteresis 1～999 unit Only when Subaddress=EV3_CH.	R/W
0523	EV3 Inhibit	Alarm stand by 1～4 Only when Subaddress=EV3_CH.	R/W
0524	EV3 Delay	Alarm delay time 0～9999 seconds Only when Subaddress=EV3_CH.	R/W

0526	EV3_CH	Channel number setting 1:CH1, 2:CH2, 3:CH3	R/W

0580	DI	DI setting flag 0:NON 1:FLW 2:RUN 3:HLD 4:ADV	R/W

05B0	MEM	1:EEP Program Memory 0:RAM Random Memory	R/W

0600	Out Actn	Output characteristic setting flag 0:Rev Act. 1:Dir Act	R/W
0601	Out Cyc	Control output cycle (Unit:0.5 seconds) Range: 0.5～120.0 seconds	R/W
0602	Reserved		
0603	SOFTSW	Soft start setting flag 0:OFF 1:ON	

0610	AT Point	AT pointer Range: 0～5000 unit	R/W
0611	Key Lock	0:OFF 1:LOCK1 2:LOCK2 3:LOCK3	R/W

- When Out_Cyc is written, writing data is adjusted to 0.5 sec as one unit.
- The write command lock by keylock is the same as the screen lock. (Refer to the manual of the instrument.)
- If there is a change in EV1_CH,EV2_CH,EV3_CH, the related parameters are initialized.

0701	PV Bias	PV bias Range: -1999～1999 unit	R/W
0702	PV Filt	PV filter Range: 0～100 seconds	R/W

0710	PFLW	Setting of CH2, CH3 PV input follow 0:OFF 1:ON	R/W
0711	CH_P	Selection of CH2, CH3 PV display or not 0-0 Window 0: Without 1: With	R/W

0800	FP_MOD	Selection between FIX and PROG 0:FIX 1:PROG (Writing possible only in CH1)	R/W
0801	PV_ST	Setting of PV start 0:OFF 1:ON (Writing possible only in CH1)	R/W

0882	STP	The number of steps 1～9 (Writing possible only in CH1)	R/W
0883	RPT	The number of execution repetitions 1～9999 (Writing possible only in CH1)	R/W
0884	ST_SV	Start SV (Writing possible only in CH1)	R/W

- For CH1, PFLW (window 1~30), CH_P (window1-29）display- - - -.The read value is: 7FFEH, To a write command, error（0BH）is returned.

08A0	Step1 SV	Step No. 1 SV Value (Writing possible only in CH1)	R/W
08A1	Step1 Time	Step No. 1 Step Time (Writing possible only in CH1)	R/W
08A2	Step1 PID No	Step No. 1 PID No.	R/W
08A3	Reserved		
08A4	Step2 SV	Step No. 2 SV Value (Writing possible only in CH1)	R/W
08A5	Step2 Time	Step No. 2 Step Time (Writing possible only in CH1)	R/W
08A6	Step2 PID No	Step No. 2 PID No.	R/W
08A7	Reserved		
08A8	Step3 SV	Step No. 3 SV Value (Writing possible only in CH1)	R/W
08A9	Step3 Time	Step No. 3 Step Time (Writing possible only in CH1)	R/W
08AA	Step3 PID No	Step No. 3 PID No.	R/W
08AB	Reserved		
08AC	Step4 SV	Step No. 4 SV Value (Writing possible only in CH1)	R/W
08AD	Step4 Time	Step No. 4 Step Time (Writing possible only in CH1)	R/W
08AE	Step4 PID No	Step No. 4 PID No.	R/W
08AF	Reserved		
08B0	Step5 SV	Step No. 5 SV Value (Writing possible only in CH1)	R/W

08B1	Step5 Time	Step No. 5 Step Time (Writing possible only in CH1)	R/W
08B2	Step5 PID No	Step No. 5 PID No.	R/W
08B3	Reserved		
08B4	Step6 SV	Step No. 6 SV Value (Writing possible only in CH1)	R/W
08B5	Step6 Time	Step No. 6 Step Time (Writing possible only in CH1)	R/W
08B6	Step6 PID No	Step No. 6 PID No.	R/W
08B7	Reserved		
08B8	Step7 SV	Step No. 7 SV Value (Writing possible only in CH1)	R/W
08B9	Step7 Time	Step No. 7 Step Time (Writing possible only in CH1)	R/W
08BA	Step7 PID No	Step No. 7 PID No.	R/W
08BB	Reserved		
08BC	Step8 SV	Step No. 8 SV Value (Writing possible only in CH1)	R/W
08BD	Step8 Time	Step No. 8 Step Time (Writing possible only in CH1)	R/W
08BE	Step8 PID No	Step No. 8 PID No.	R/W
08BF	Reserved		
08C0	Step9 SV	Step No. 9 SV Value (Writing possible only in CH1)	R/W
08C1	Step9 Time	Step No. 9 Step Time (Writing possible only in CH1)	R/W
08C2	Step9 PID No	Step No. 9 PID No.	R/W

SHJ-A

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SHJ-A		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	**0**		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Word	DD	0 ~ 89	

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5		

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5		

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**		

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	RS485 terminal
	RS485 2W 9P Male	RS485 2W 9P Male	
Data-	1	6	D-
Data+	2	9	D+
GND	5	5	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 terminal
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	D-
Data+	2	8	D+
GND	5	5	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	RS485 terminal
	RS485 2W 9P Female	
Data-	1	D-
Data+	2	D+
GND	5	

SICK FLEXI SOFT

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SICK FLEXI SOFT		
PLC I/F	RS232		
Baud rate	115200	9600,19200,38400,57600,115200	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDo	0 ~ 127	Input
B	Q	DDo	0 ~ 127	Output
B	Logic result	DDo	0 ~ 47	Logic Result
B	RS-232	DDo	0 ~ 37	RS-232
B	Flexi soft to RS-232_Bit	DDo	0 ~ 997	
B	Module Status Bit Array_Bit	DDo	0 ~ 597	
B	Operating Data Block_Bit	Do	0 ~ 97	
B	Configuration CRCs_Bit	DDo	0 ~ 197	
B	CPU Module Type Key_Bit	DDo	0 ~ 177	
B	Extension Modules Type_Bit	DDDo	0 ~ 3377	
W	RS-232 to Flexi soft	D	0 ~ 2	
W	Flexi soft to RS-232	DD	0 ~ 98	
W	Module Status Bit Array	DD	0 ~ 58	
W	Operating Data Block	D	0 ~ 8	
W	Configuration CRCs	DD	0 ~ 18	
W	CPU Module Type Key	DD	0 ~ 16	
W	Extension Modules Type	DDD	0 ~ 336	

Wiring Diagram:

The following is the view from the soldering point of a cable.



Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		CPU0 Port0 4P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	4

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	CPU0 Port0 4P Mini-DIN Male
Rx	2	3
Tx	3	2
GND	5	4

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	CPU0 Port0 4P Mini-DIN Male
Rx	9	3
Tx	6	2
GND	5	4

Siemens LOGO (Ethernet)

Supported Series: Siemens LOGO! 0BA7,0BA8
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	Siemens LOGO (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
PLC sta. no.	1	1~99	
Local TSAP	1000		Must be greater than 1000
Remote TSAP	2100		Range:2000~2700

★ For TSAP settings please refer to PLC Setting below.


PLC Setting:

Siemens LOGO! multi connection setting requires LOGO! Soft Comfort software to set PLC to identify the connected devices. The following introduces LOGO! Soft Comfort settings.

Step 1. Tools -> Ethernet Connections

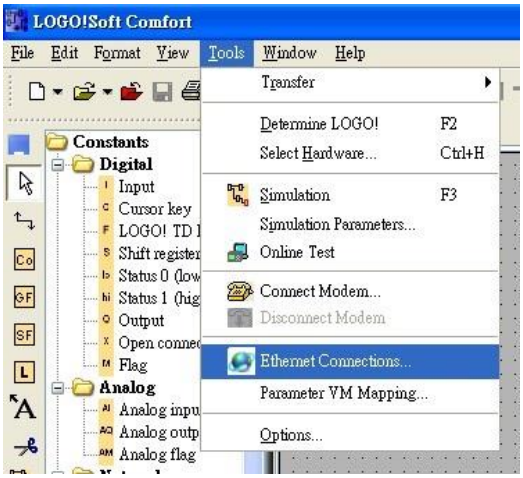

Step 2. Right click on ”Ethernet Connections” and click ”Add connections” to add a connection, up to eight connections are allowed.

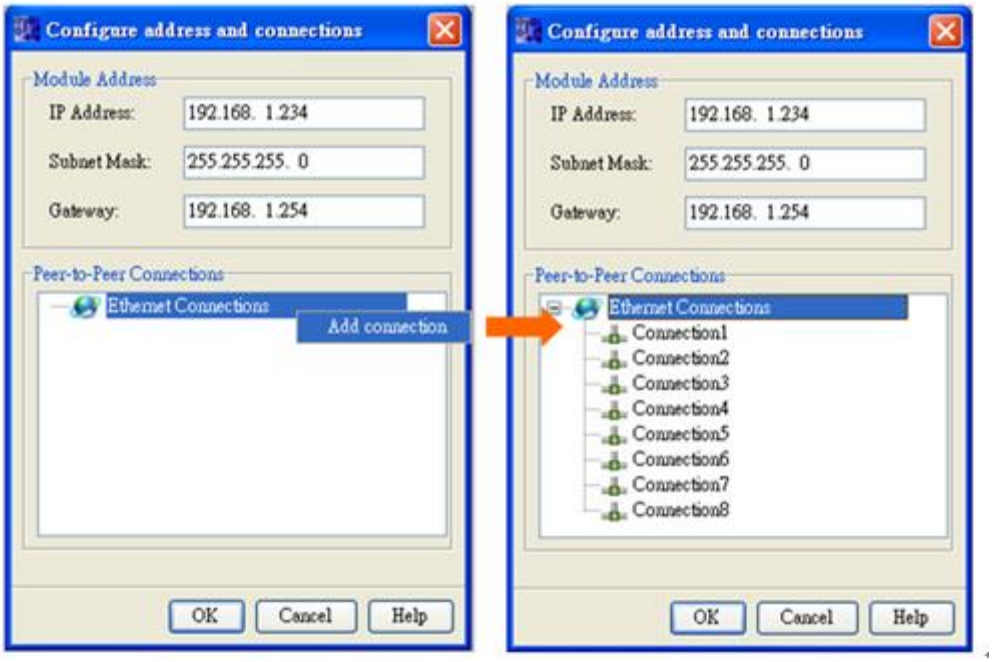


Step 3. Setting Server

I. Double click on Connection1, then select ”Server Connection”.


II. Local TSAP is system default and can’t be modified. Tick ”Accept all connection requests” to connect to any IP.

III. Remote TSAP set to ”10.00”.


IV. Connection 2~8 can all be set as above.

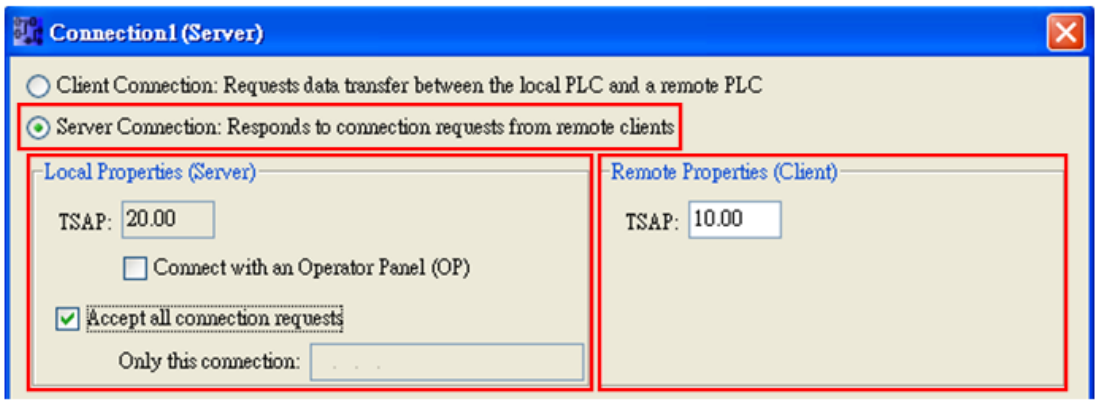

Note: The value of Local TSAP and Remote TSAP must be set oppositely in EasyBuilder for communication.

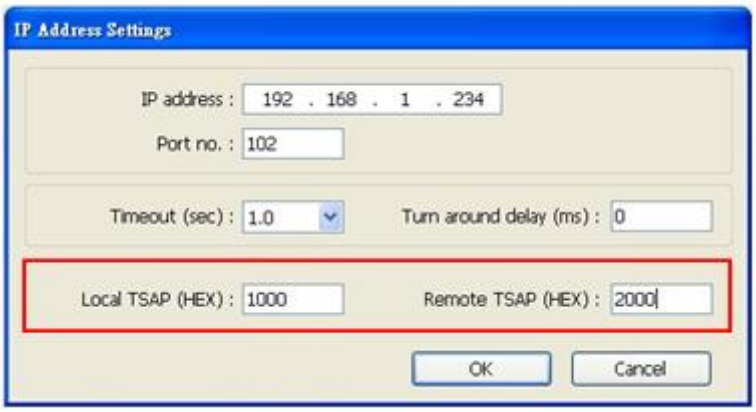

Step 4. Complete settings, download connection to Siemens LOGO!

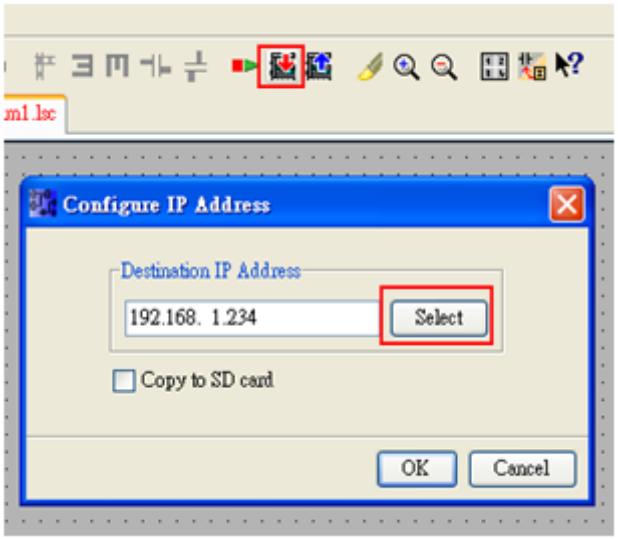

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DD	1~64	Read Only
B	Q	DD	1~64	
B	M	DD	1~112	
B	NI	DDD	1~128	
B	NQ		1~128	
B	V	DDDDo	0~14697	VW_Bit
W	AI	D	1~16	
W	AQ	D	1~16	
W	AM	DD	1~64	
W	NAI		1~64	

Bit/Word	Device type	Format	Range	Memo
W	NAQ		1~32	
W	VW	DDDD	0~1468	See Table 1&2 Address Mapping
DW	VD	DDDD	0~1466	

Table 1 Address Mapping (LOGO! 0BA7)

I	VW	Q	VW	M	VW	AI	VW	AQ	VW	AM	VW
I1	V923.0	Q1	V942.0	M1	V948.0	AI1	VW926	AQ1	VW944	AM1	VW952
I2	V923.1	Q2	V942.1	M2	V948.1	AI2	VW928	AQ2	VW946	AM2	VW954
I3	V923.2	Q3	V942.2	M3	V948.2	AI3	VW930			AM3	VW956
I4	V923.3	Q4	V942.3	M4	V948.3	AI4	VW932			AM4	VW958
I5	V923.4	Q5	V942.4	M5	V948.4	AI5	VW934			AM5	VW960
I6	V923.5	Q6	V942.5	M6	V948.5	AI6	VW936			AM6	VW962
I7	V923.6	Q7	V942.6	M7	V948.6	AI7	VW938			AM7	VW964
I8	V923.7	Q8	V942.7	M8	V948.7	AI8	VW940			AM8	VW966
I9	V924.0	Q9	V943.0	M9	V949.0					AM9	VW968
I10	V924.1	Q10	V943.1	M10	V949.1					AM10	VW970
I11	V924.2	Q11	V943.2	M11	V949.2					AM11	VW972
I12	V924.3	Q12	V943.3	M12	V949.3					AM12	VW974
I13	V924.4	Q13	V943.4	M13	V949.4					AM13	VW976
I14	V924.5	Q14	V943.5	M14	V949.5					AM14	VW978
I15	V924.6	Q15	V943.6	M15	V949.6					AM15	VW980
I16	V924.7	Q16	V943.7	M16	V949.7					AM16	VW982
I17	V925.0			M17	V950.0						
I18	V925.1			M18	V950.1						
I19	V925.2			M19	V950.2						
I20	V925.3			M20	V950.3						
I21	V925.4			M21	V950.4						
I22	V925.5			M22	V950.5						
I23	V925.6			M23	V950.6						
I24	V925.7			M24	V950.7						
				M25	V951.0						
				M26	V951.1						
				M27	V951.2						

Table 2 Address Mapping (LOGO! 0BAB)

Device Type	VM (From)	VM (To)	Range
I	1024	1031	8 Bytes
AI	1032	1063	32 Bytes
Q	1064	1071	8 Bytes
AQ	1072	1103	32 Bytes
M	1104	1117	14 Bytes
AM	1118	1245	128 Bytes
NI	1246	1261	16 Bytes
NAI	1262	1389	128 Bytes
NQ	1390	1405	16 Bytes
NAQ	1406	1469	64 Bytes

Wiring Diagram:

Ethernet cable:



Siemens S7-1200 (symbolic addressing) (Ethernet)

Supported Series: Siemens S7-1200 series Ethernet.
Website: http://www.siemens.com/entry/cc/en/


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Siemens S7-1200 (symbolic addressing) (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
PLC sta. no.	2		
Rack	0		
CPU slot	1		


On-line simulator	Yes	**Multi-HMI connect**	Yes (Max:3 HMI)

PLC Setting:


1. In S7-1200 program software create PLC program and tag and then download to PLC.
2. Select Go offline, EasyBuilder will connect to PLC and get tag data. In PLC type select “SIEMENS S7-1200 (Ethernet)”.

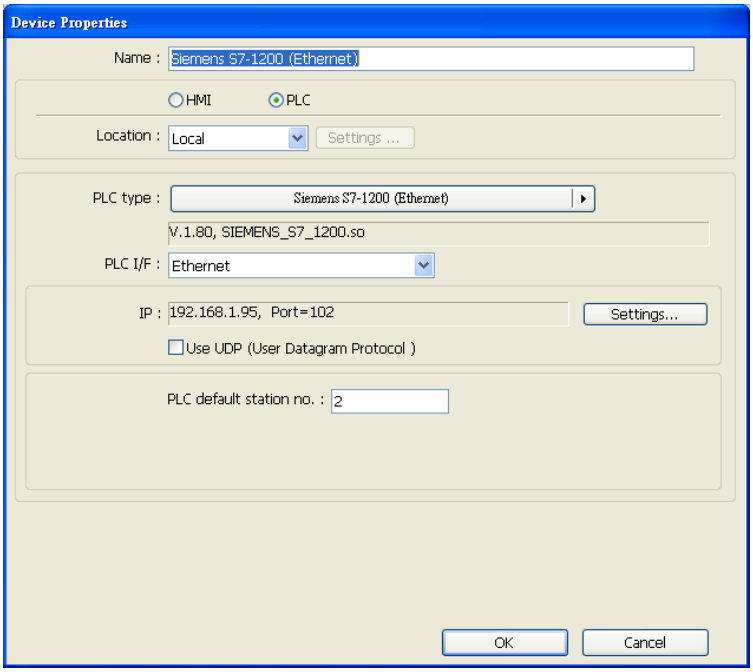

3. Click “Settings…”, input PLC IP address.

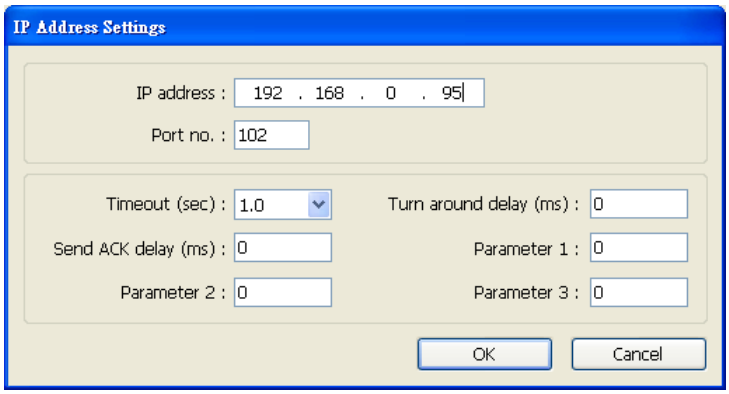



4. Check the PLC that is not connected to any PC. Click “Get tag info…”.
5. Supported by firmware V3.X and previous versions. For V4.0 or later, please see **How to Connect With S7-1200 Firmware V4.0**)

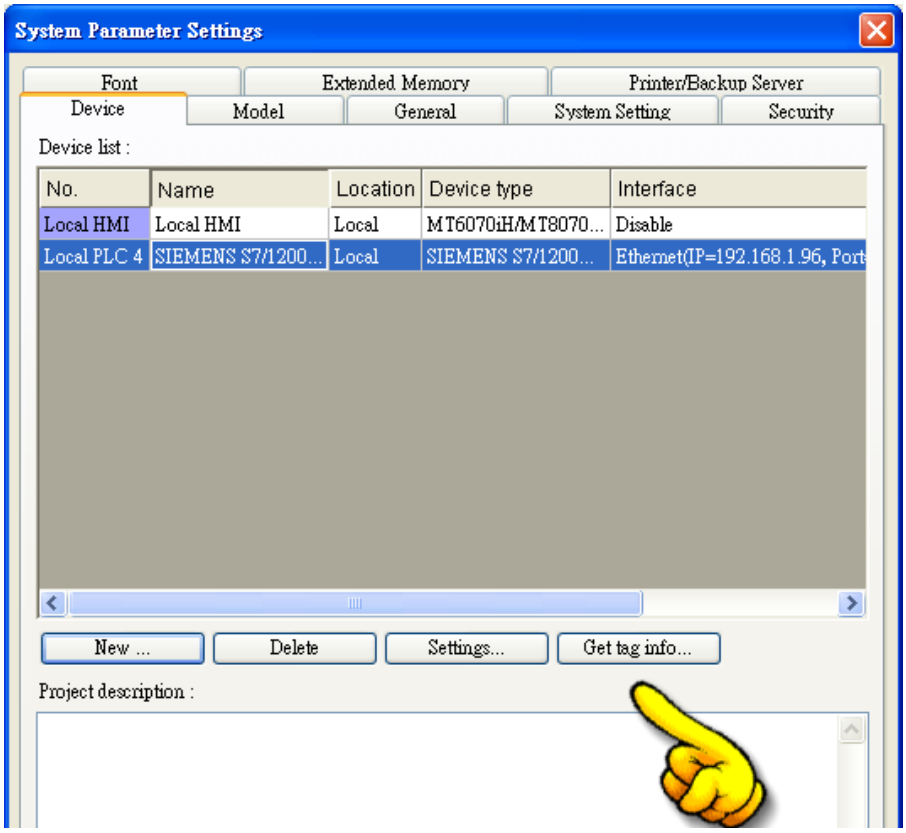


6. If the software used is a version later than TIA Portal V11，SP2, a dialog of FunctionBlock directory will be shown, users have to define the mapping from FB to DB in this directory then click “Check OK”. The tag information will be gained and a successful message is shown.




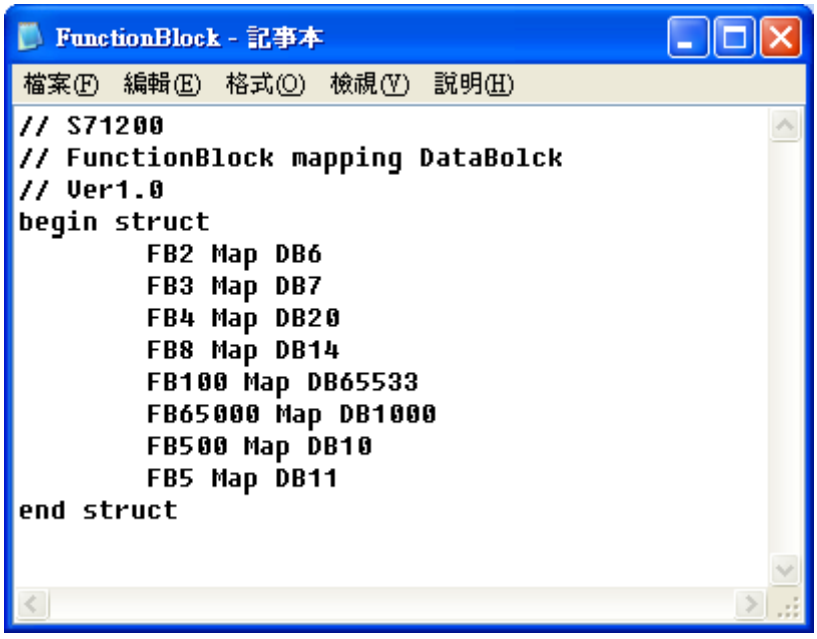

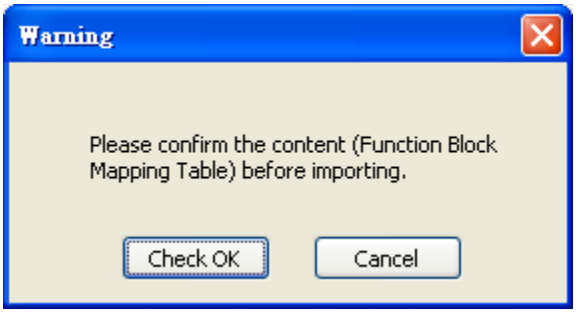


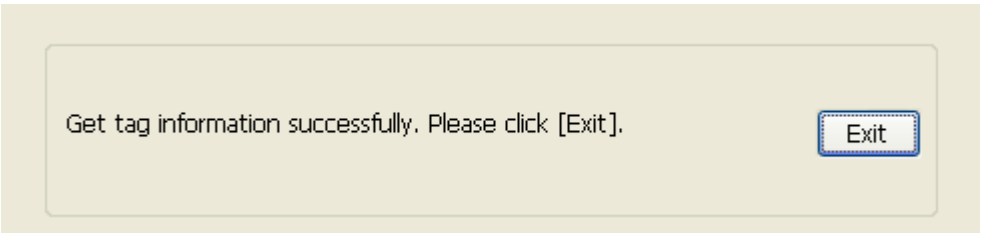


7. When opening an existing project and get the tag information again, if the PLC software used is TIA Portal V12 and later versions, the DB name must be entered again in order to compile the project.

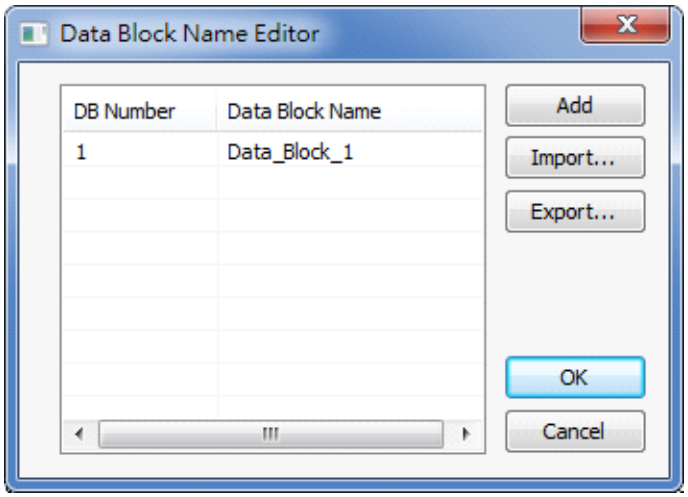


8. Added Tag Manager that allows selecting the Siemens S7-1200 PLC tags to be imported.

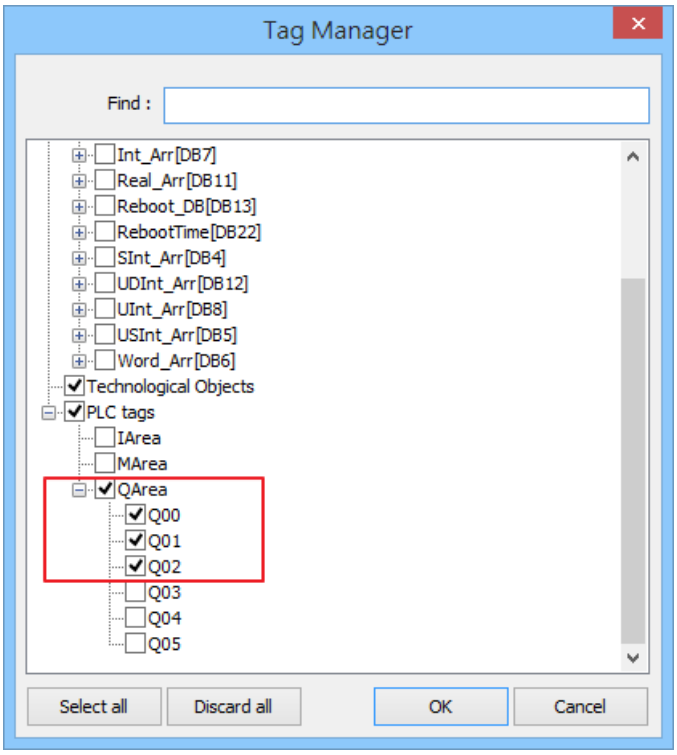


9. Create an object and click read address “Setting…”

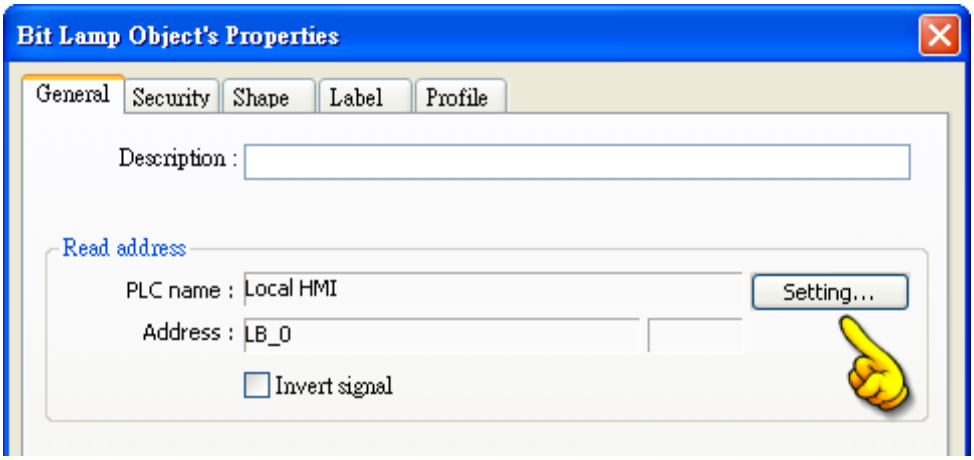

10. In PLC name select S7-1200 then click Tag.

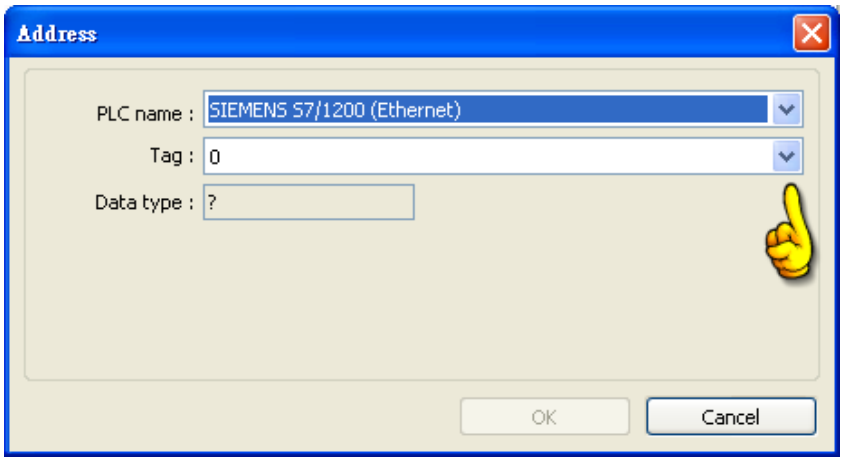


11. Select PLC tag.

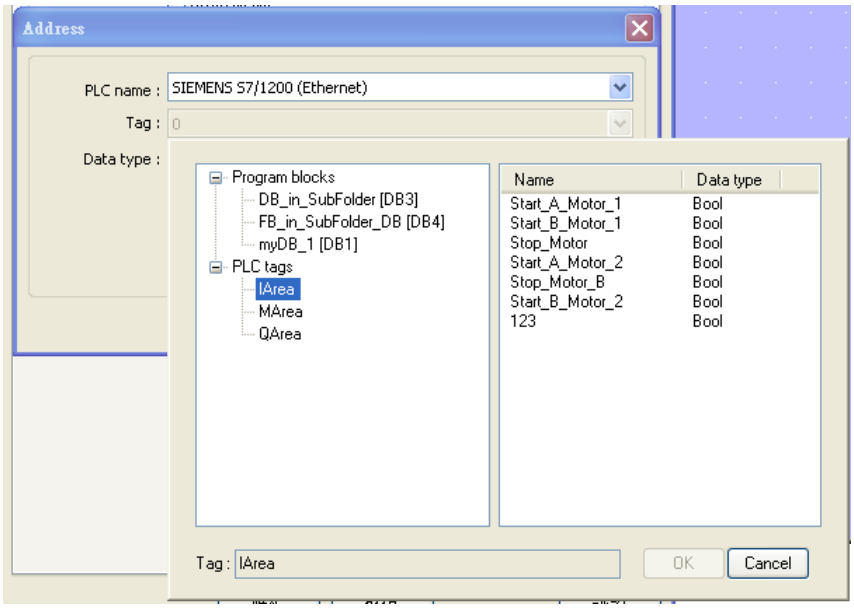


How to Connect With S7-1200 Firmware V4.0

There are certain restrictions in S7-1200 firmware V4.0, therefore, to avoid communication errors, please follow the steps to set up.(EasyBuilder8000 does not support Siemens S7-1200 firmware V4.0 and later versions).

Right click on the PLC program, and then click **[Properties]**.

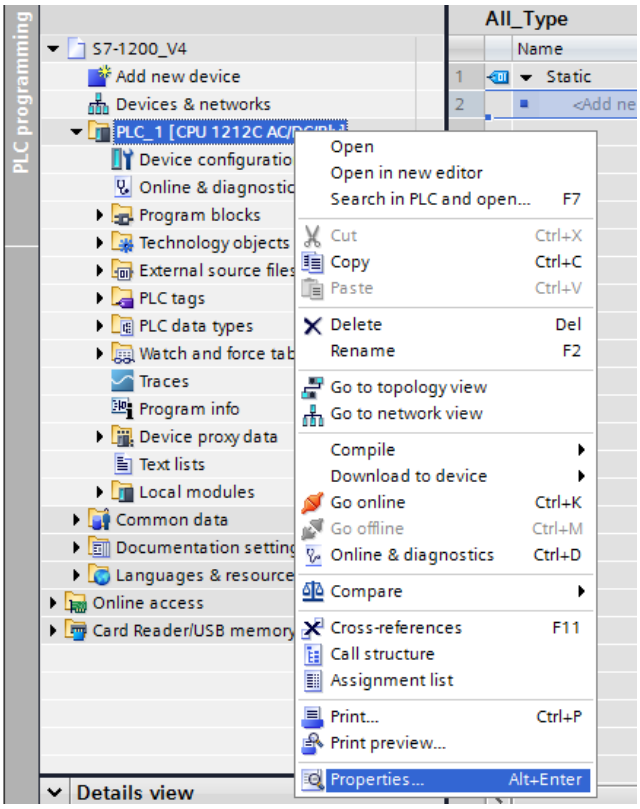


Select **[Protection]**, and then select **[Permit access with PUT/GET communication from remote partner (PLC,HMI,OPC,…]**.

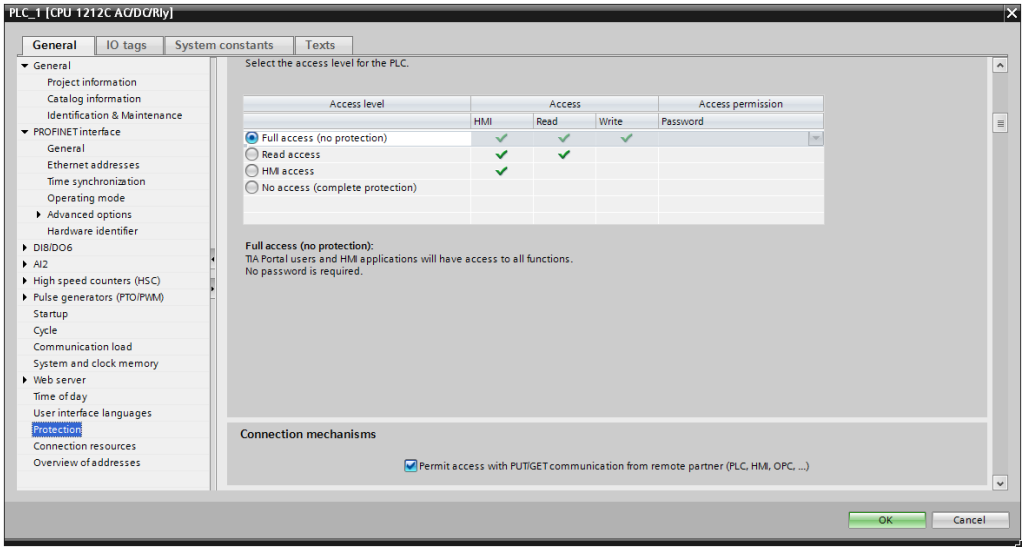


The following part introduces how to export S7-1200 PLC Tags and Program Blocks.

Exporting PLC Tags (I,Q,M tags)


1. Under **[PLC tags]** select **[Show all tags]**.

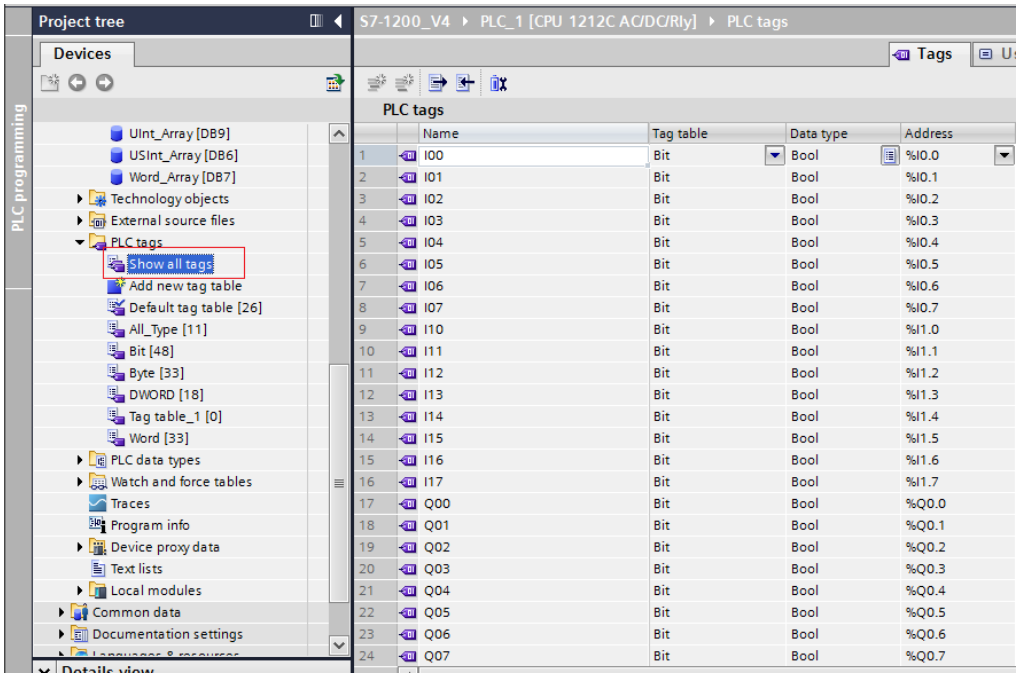

2. Click **[Export]** to export the tags.

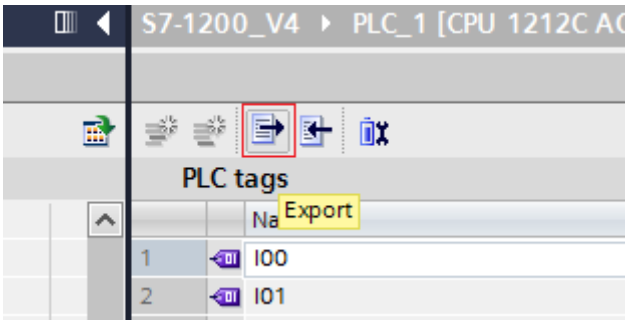


3. Browse for the directory to save the exported file and then click **[OK]**.

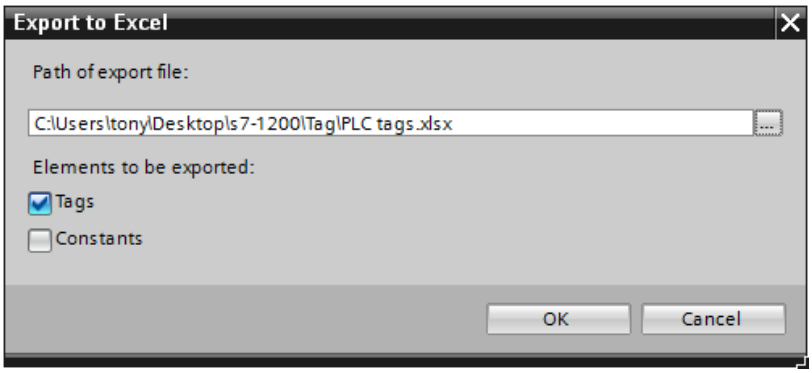


Exporting Program Blocks(DB)


1. When the database contains Struct data type, please note the following restrictions.
   Please at least add one data member that doesn't belong to Struct data type into DB, otherwise, the data cannot be imported to EasyBuilder.
   Multidimensional Arrays and Multilayer Structs are not supported.
   After building DB, please do the following actions for Struct address:
   (1) Copy the complete Struct data.
   (2) Delete data.
   (3) Add a new row.
   (4) Paste data.

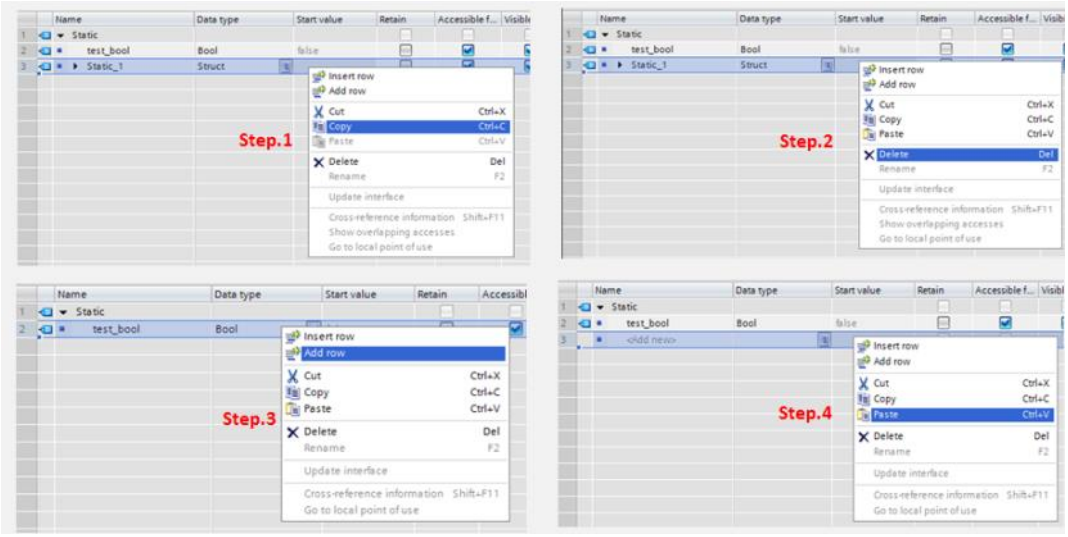

2. Right click on DB, click **[Generate source from blocks]**, and then enter the file name to save.

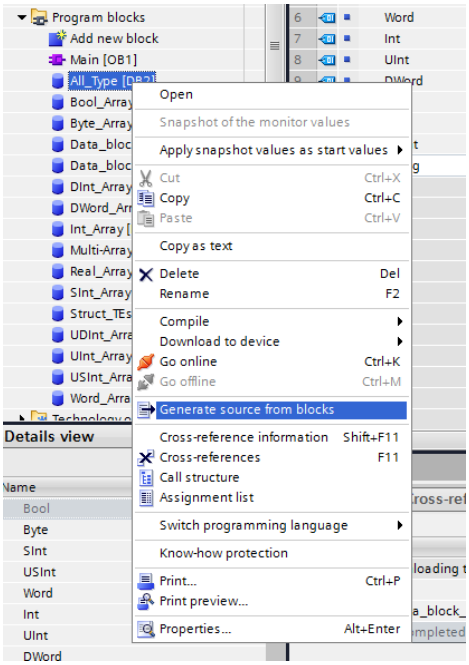


After building and importing PLC Tags and Program Blocks, click **[Download to device]**.

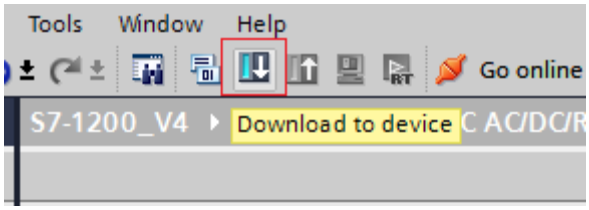


Importing PLC Tags and Program Blocks(DB)


1. Launch EasyBuilder and set the IP address.

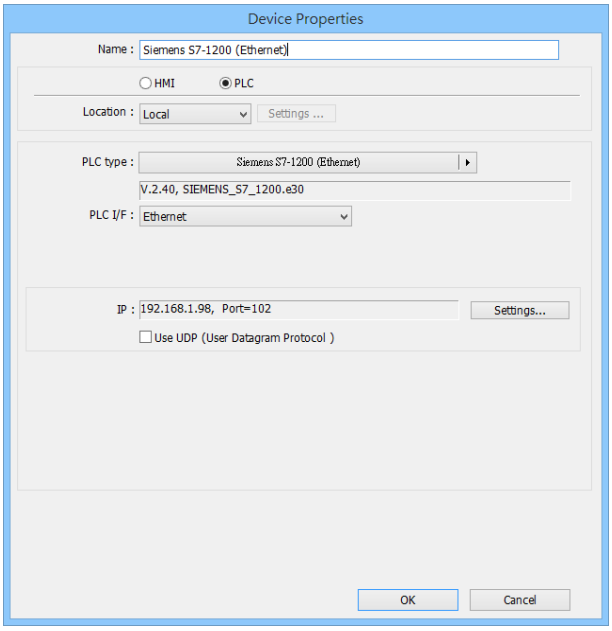


2. Click **[Import Tag…]**.

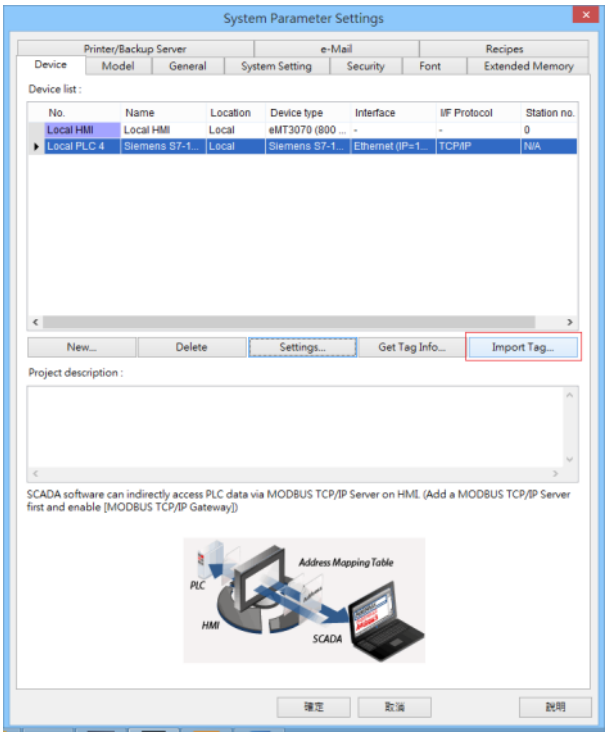


3. Select the PLC Tags and Program Blocks to be imported. Please remember to change DB number, and select **[Use S7-1200 firmware version 4.0 or later versions]**. Click **[Import]** to import the files. The I, Q, and M addresses will be checked, if an error occurs, the communication will fail. If this happens, please check your communication environment, and try to import again.

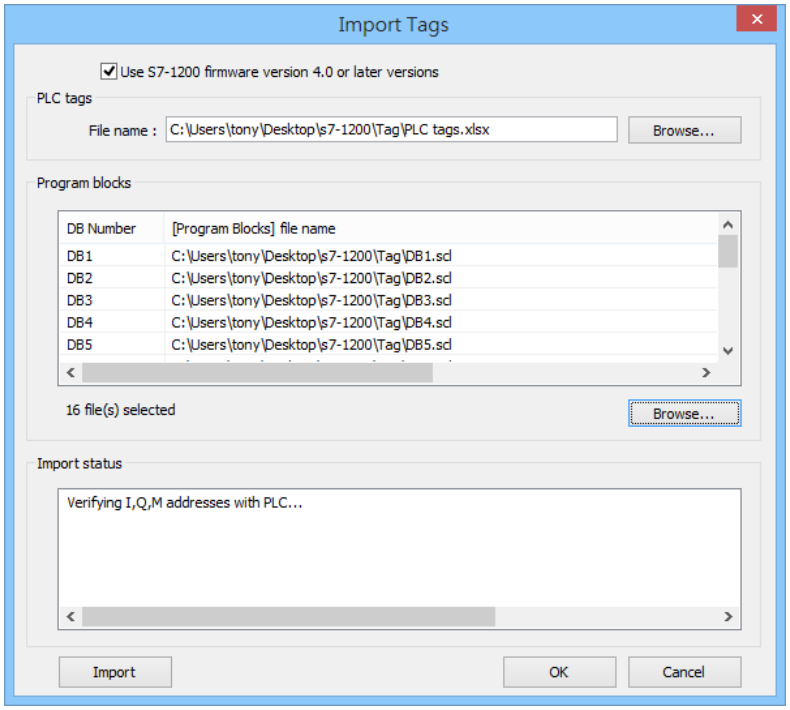


4. The “Import status” field will display the result, click **[OK]**.

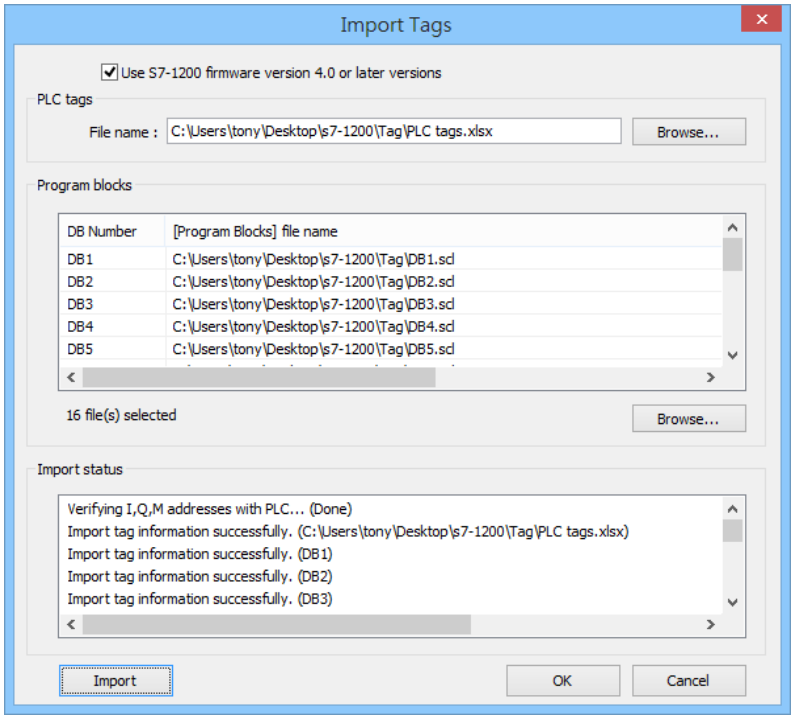

5. Select the tags to be imported and then click **[OK]**.

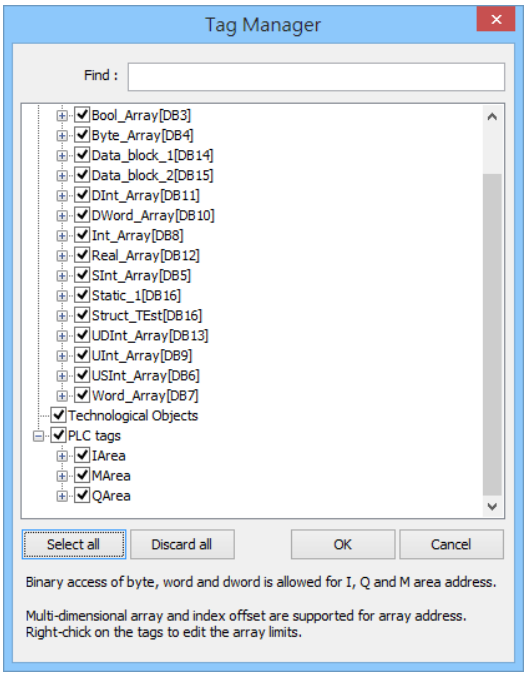

6. The following message is displayed when the import has succedded.

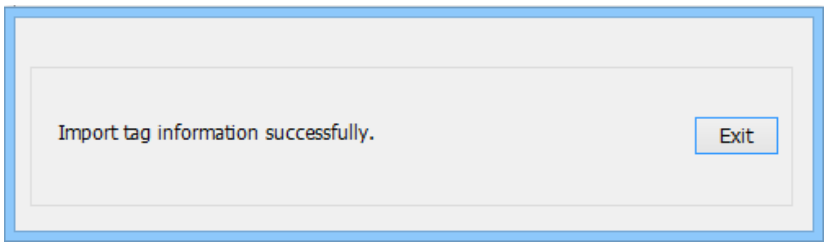

Support Device Type:

S7-1200 data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
String	Word array for ASCII input and display	Length=word
Char	16-bit BCD, Hex, Binary, Unsigned	USInt
CREF		Struct
Date	16-bit BCD, Hex, Binary, Unsigned	UInt
DTL		
ErrorStruct		
IEC_COUNTER		
IEC_DCOUNTER		
IEC_SCOUNTER		
IEC_TIMER		
IEC_UCOUNTER		
IEC_UDCOUNTER		
IEC_USCOUNTER		
NREF		
Time	32-bit BCD, Hex, Binary, Unsigned	DWord
Time_Of_Day	32-bit BCD, Hex, Binary, Unsigned	DWord

S7-1200 data type	EasyBuilder data format	Memo
Array		Bool, Byte, SINT, USInt, Word, Int, UInt, DWord, Dint, Real, UDInt
Struct		Bool, Byte, SINT, USInt, Word, Int, UInt, DWord, Dint, Real, UDInt

Wiring Diagram:

Ethernet cable:



Siemens S7-1200/S7-1500 (absolute addressing) (Ethernet)

Supported Series: Siemens S7-1500/1200 series Ethernet.
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Siemens S7-1200/S7-1500 (absolute addressing) (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
PLC sta. no.	2		
Rack	0		
CPU slot	1		

On-line simulator	Yes	**Multi-HMI connect**	Yes (Max:3 HMI)

Support Device Type:

S7-1200 data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
Array		
String	Word array for ASCII input and display	Length=word

Device Address:


Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFFDDDDo	0 ~ 6553599997	
B	DB1Bit-DB99Bit	DDDDDo	0 ~ 655327	Data Register Bit
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	Bit Memory Double Word
W	DBn	FFFFFDDDD	0 ~ 655359999	Data Register (must be even)
DW	DBDn	FFFFFDDDD	0 ~ 655359999	Data Register Double Word
W	DBn_String	FFFFFDDDD	0 ~ 655359999	Char array
W	DBn_String1	FFFFFDDDD	0 ~ 655359999	String
DW	DBDn_String	FFFFFDDDD	0 ~ 655359999	Char array
W	DB1 ~ DB99	DDDDD	0 ~ 65532	Data Register(must be even)
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
Byte	DBBn	FFFFFDDDD	0 ~ 655359999	Data Register Byte
DW	ID	DDDD	0 ~ 4094	
Byte	IB	DDDD	0 ~ 9095	
DW	QD	DDDD	0 ~ 4094	
Byte	QB	DDDD	0 ~ 4095	
DW	S5TIME_10Ms	FFFFFDDDD	0 ~ 655359999	
DW	S5TIME_100Ms	FFFFFDDDD	0 ~ 655359999	
DW	S5TIME_10S	FFFFFDDDD	0 ~ 655359999	
DW	S5TIME_10S	FFFFFDDDD	0 ~ 655359999	

- Double word and floating point value must use DBDn device type.


PLC Setting:

Note: Please follow the settings below, or the communication may fail.

1. Do not check [DB UTILITAIRES] -> [Attributes] -> [Optimized block access]

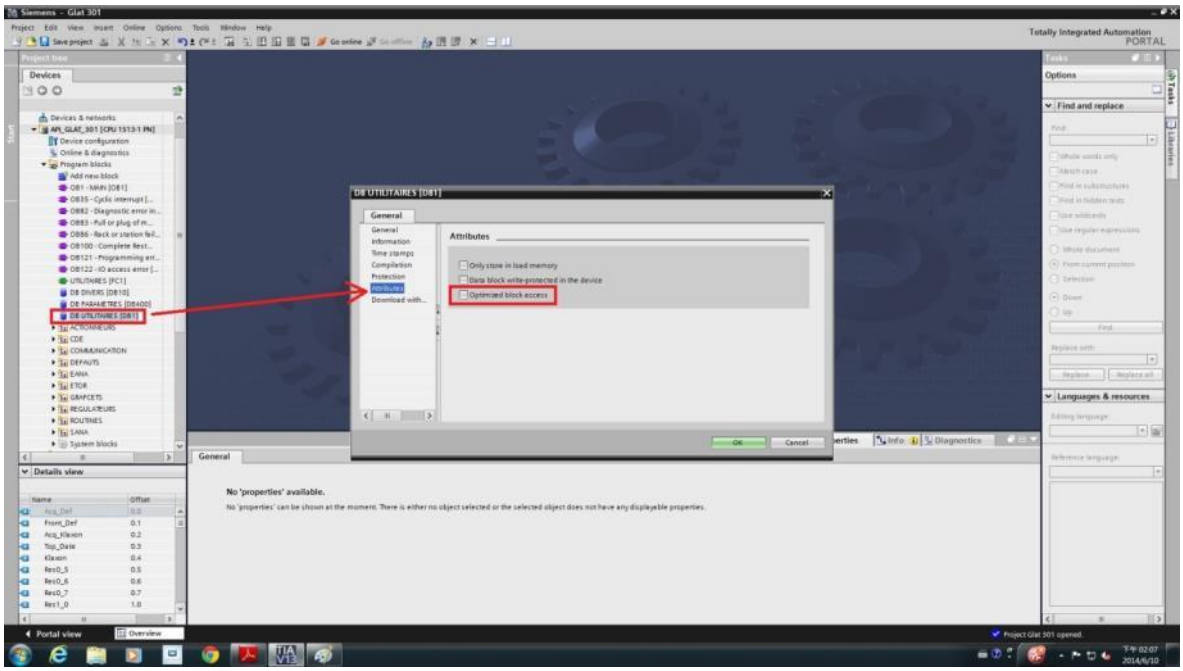


2. Check [General] -> [Protection] -> [Permit access with PUT/GET communication from remote partner]

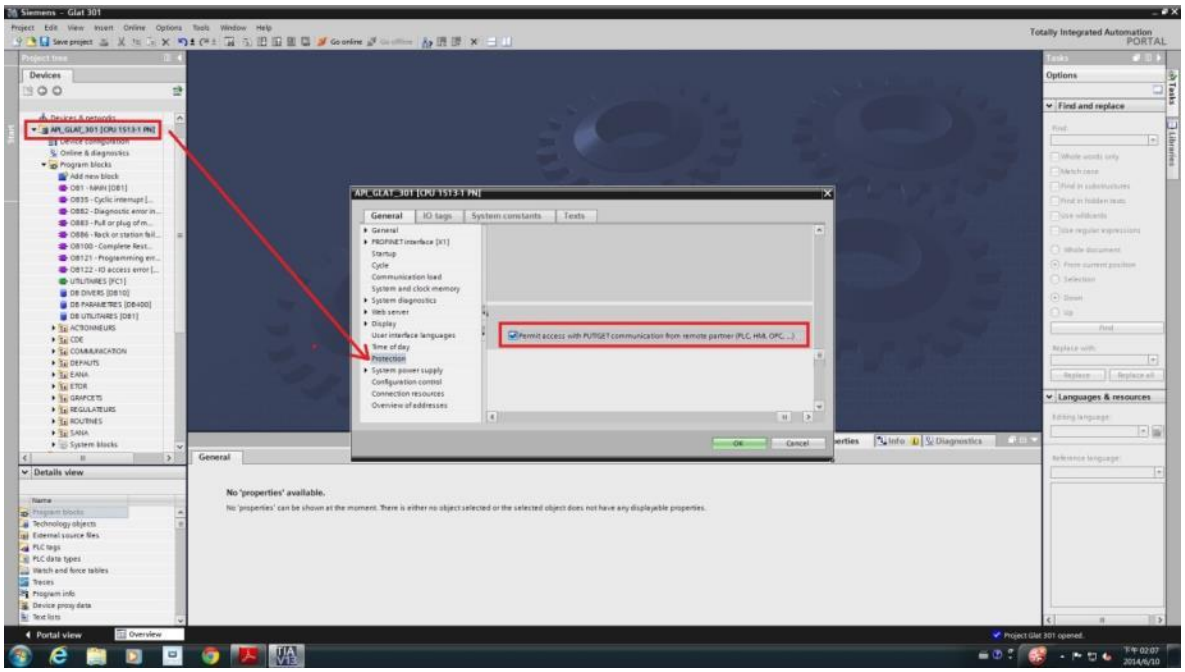


How to import address tags using TIA portal?

1. Exporting PLC Tags (.xlsx file format).

1.1 Under [PLC tags] create the address tags and then click the Export icon.

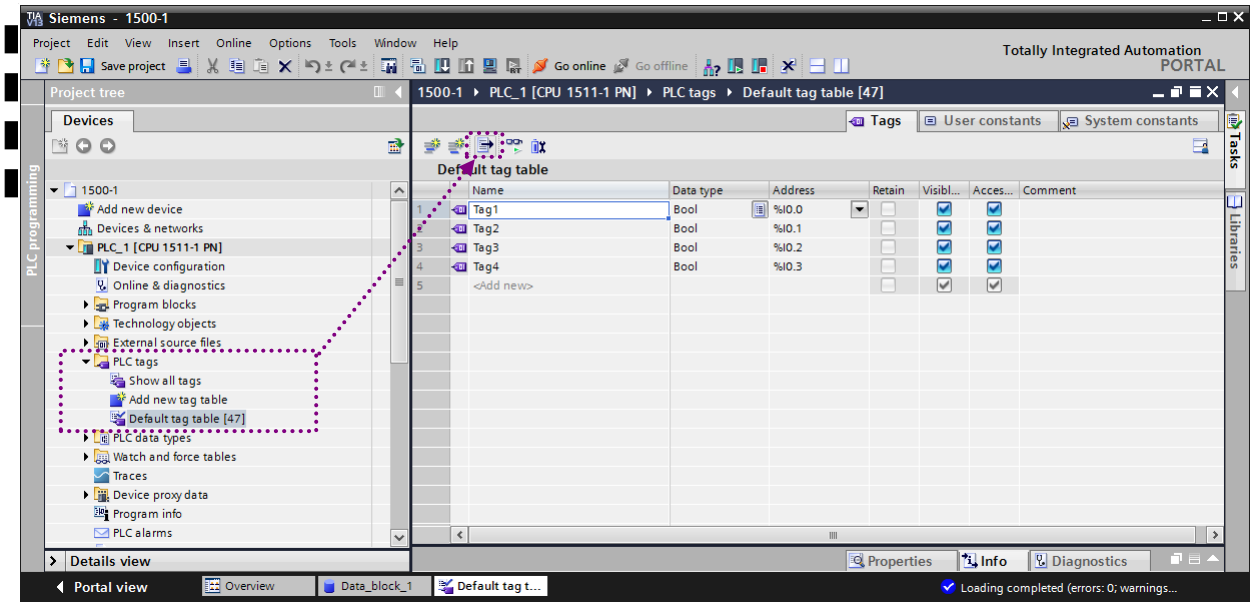


1.2 Designate the directory to save the file and click OK button.

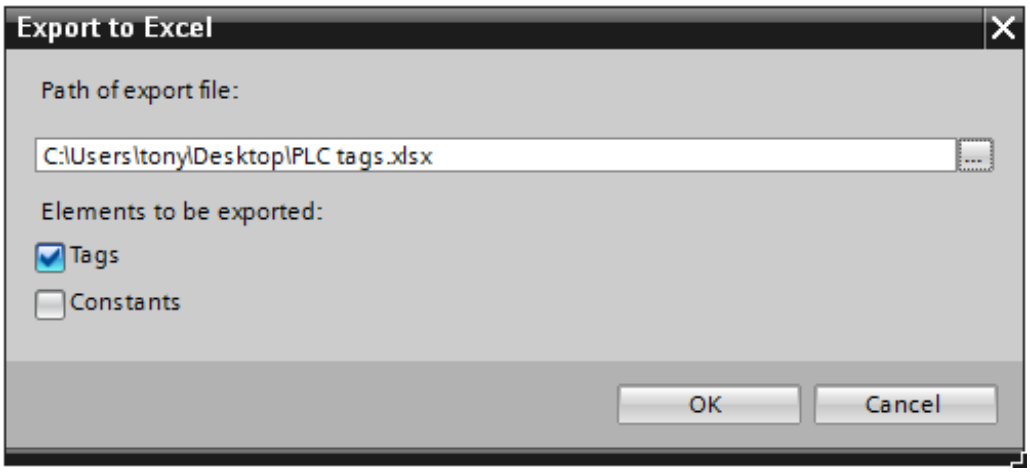


2. Exporting Program Blocks (.scl file format).


2.1 Under [Program blocks] create “Data_block_1 [DB1]” as shown in the following figure. Click the right mouse button on [DB1] and then click [Generate source from blocks].

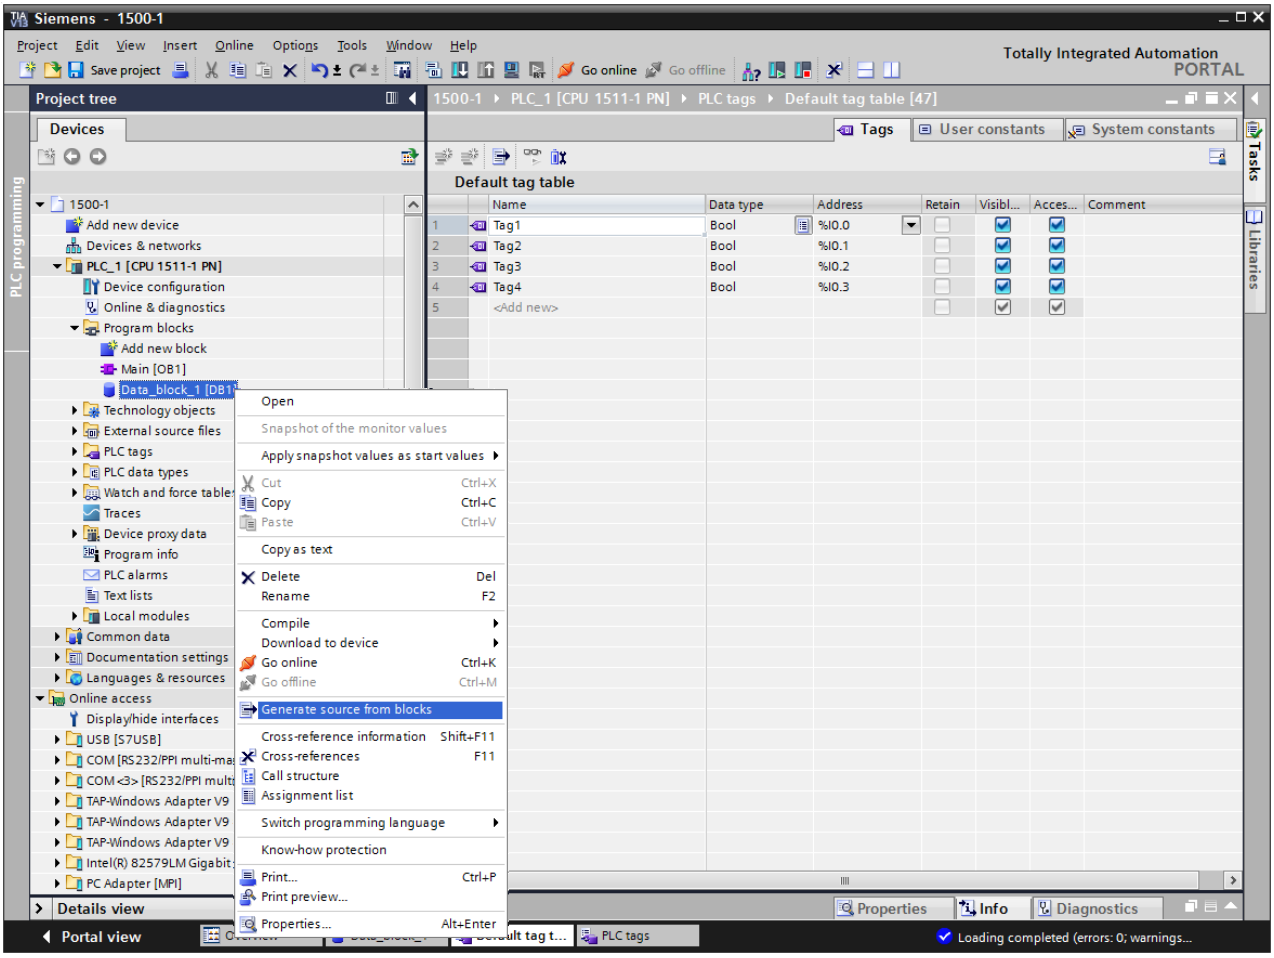


2.2 Designate the directory to save the file.

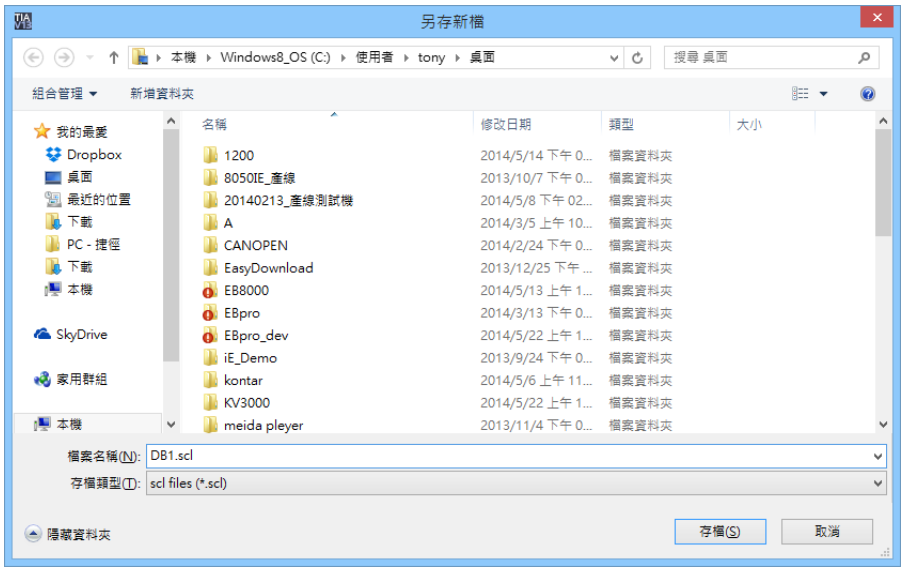


3. In EasyBuilder click [New PLC…], select *Siemens S7-1500 (Ethernet)* PLC type, and then click [Settings…] to set the parameters.

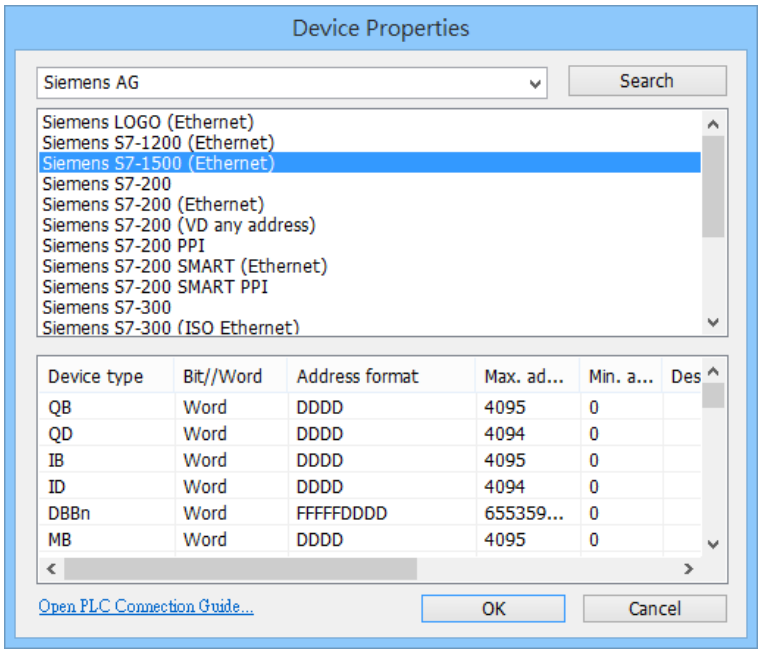


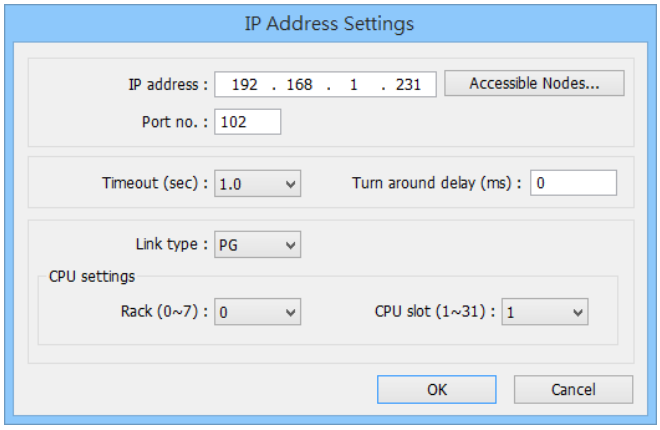


4. Click [Import Tag…] button.

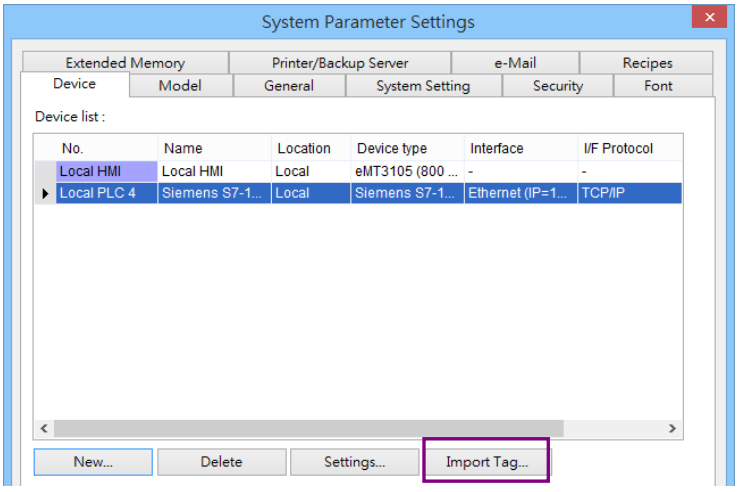

5. Select the PLC Tags and Program Blocks to be imported, click [Import] button, and then click [OK] to leave when the tags are imported successfully.

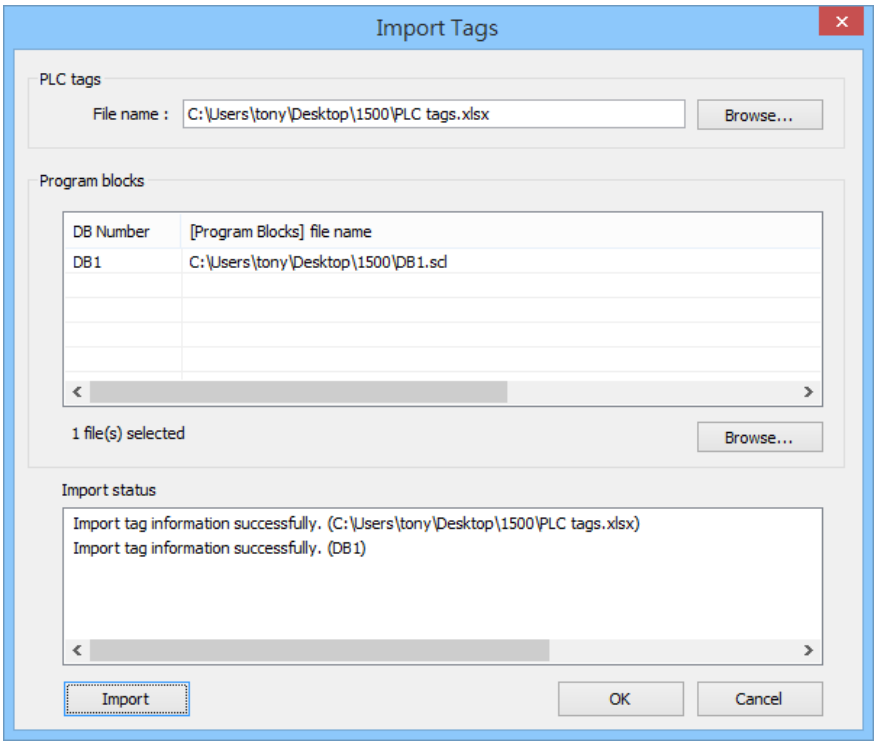

6. The following message window is shown if the import has succeeded.

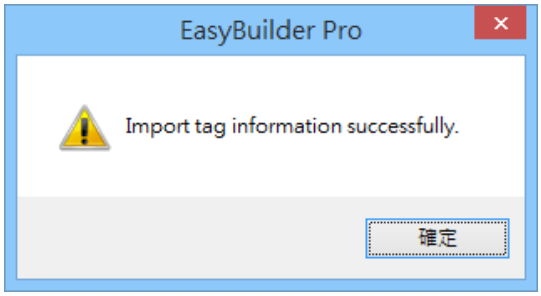

Wiring Diagram:

Ethernet cable:



Siemens S7-200

Supported Series: Siemens S7-200 series PLC
(CPU212/214/215/216/221/222/224/226/226XM)
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommen	Options	Notes
PLC type	SIEMENS S7-200		
PLC I/F	RS485 2w	RS485 2w	
Baud rate	9600	9600, 19200, 187.5K	The HMI which has a sticker "MPI187.5" on the rear cover supports 187.5K
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	2	1 ~ 126	
Turn around delay	5		
Send ACK delay(ms)	30		

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

PLC Setting:

Communication	Set station number to 2

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
B	S	DDDDo	0 ~ 40957	SCR
B	SM	DDDDo	0 ~ 40957	Special Memory
B	T_Bit	DDD	0 ~ 255	Timer
B	C_Bit	DDD	0 ~ 255	Counter


Bit/Word	Device type	Format	Range	Memo
Byte	VB	DDDDD	0 ~ 10239	V Memory
W	VW	DDDDD	0 ~ 10239	V Memory
W	VW_Odd	DDDDD	0 ~ 10239	V Memory
DW	VD	DDDDD	0 ~ 10239	V Memory Double Word
DW	VD_Odd	DDDDD	0 ~ 10239	V Memory Double Word
W	VW_String	DDDDD	0 ~ 10239	String
W	VW_String_Odd	DDDDD	0 ~ 10239	String
DW	VD_String	DDDDD	0 ~ 10239	String
DW	VD_String_Odd	DDDDD	0 ~ 10239	String
Byte	MB	DDDDD	0 ~ 10239	Byte Memory
W	MW	DDDDD	0 ~ 10239	Word Memory
W	MW_Odd	DDDDD	0 ~ 10239	Word Memory
DW	MD	DDDDD	0 ~ 10239	Word Memory
Byte	SB	DDDDD	0 ~ 10239	SCR
W	SW	DDDDD	0 ~ 10239	SCR
DW	SD	DDDDD	0 ~ 10239	SCR
Byte	SMB	DDDDD	0 ~ 10239	Special Memory
W	SMW	DDDDD	0 ~ 10239	Special Memory
DW	SMD	DDDDD	0 ~ 10239	Special Memory
W	T	DDD	0 ~ 255	Timer
W	C	DDD	0 ~ 255	Counter

- Double word and floating point value must use VD device type.


How to Import Tag:

The tags created in the Symbol Table in Step7-MicroWIN software can be imported to EasyBuilder.


1. In **Symbol Table** create the tags. Select all the tags and click the right mouse button then **copy** the tags.

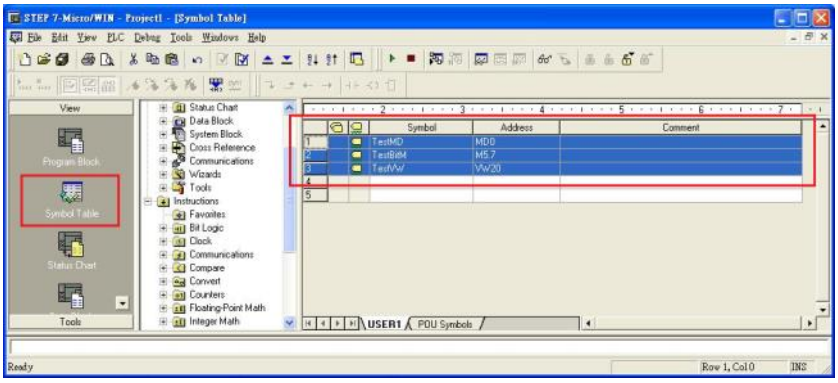


2. Launch EasyBuilder, add the driver in the device list in **System Parameter Settings**, and then click **Import Tag** button.

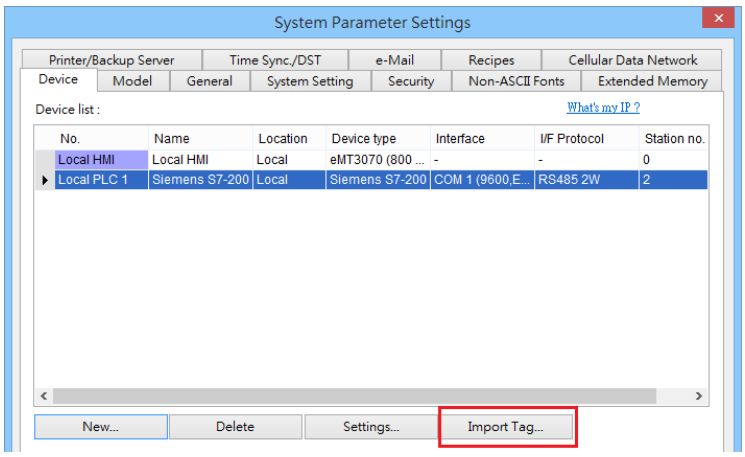


3. **Paste** the tags copied in step 1 and then click **OK**.

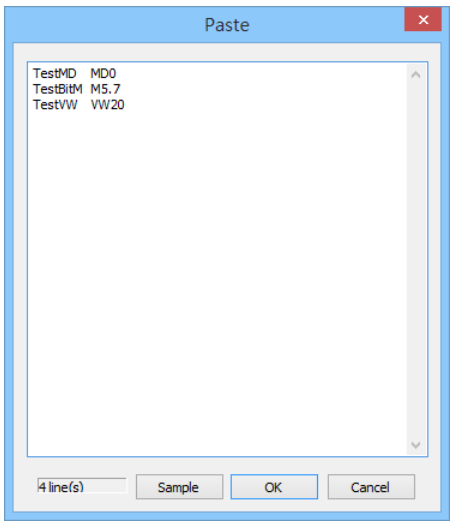

4. Select all the tags and then click **OK**.

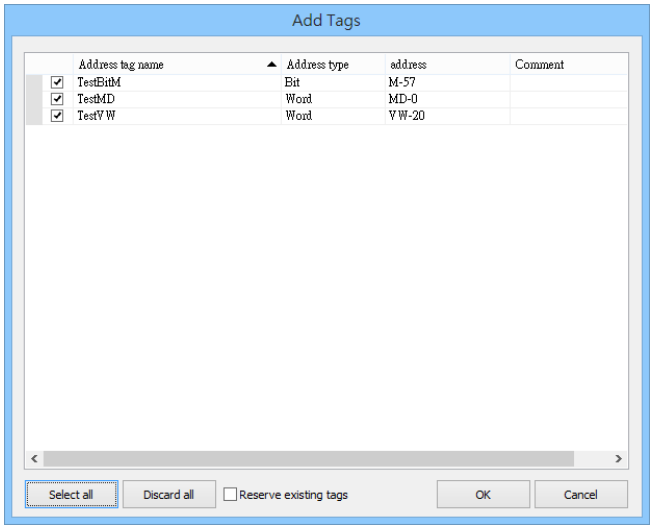

5. If succeeded, the following message window shows.

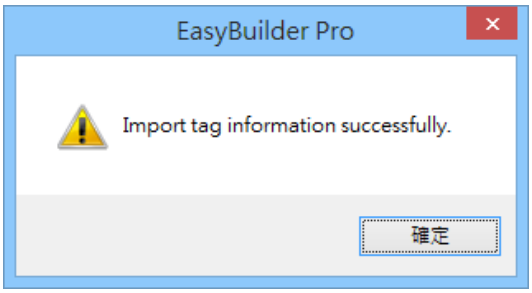

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8
Data+	6	1	⟷	3
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	5	5	⟷	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	8
Data+	2	⟷	3
GND	5	⟷	5

Siemens S7-200 (Ethernet)

Supported Series: Siemens S7/200 Ethernet Series PLC
(CPU212/214/215/216/221/222/224/226/226XM) with CP243-1 Ethernet module
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	SIEMENS S7-200 (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
PLC sta. no.	1	0-31	

PLC Setting:


S7/200 Ethernet Multi-Connection Settings

Step 1: Launching the Ethernet Wizard


1. In the Micro/WIN main menu, click **Tools** / **Ethernet Wizard**.

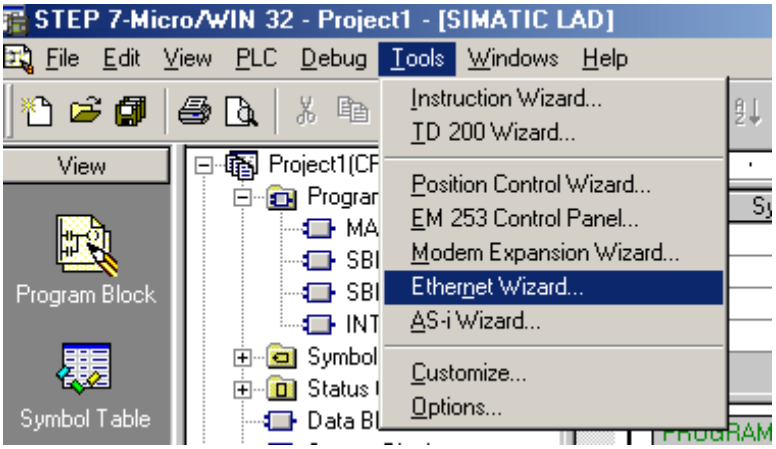

2. Then, click **Next**.

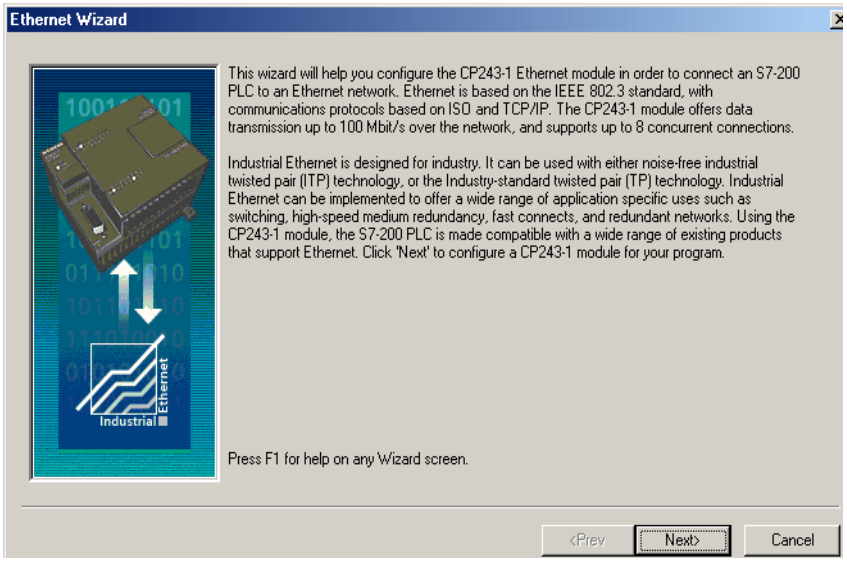


3. Click **Yes** to proceed.

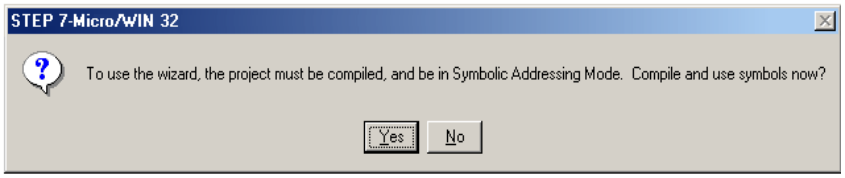


Step 2: Setting CP243-1 Module Position

1. Click **Read Modules**.

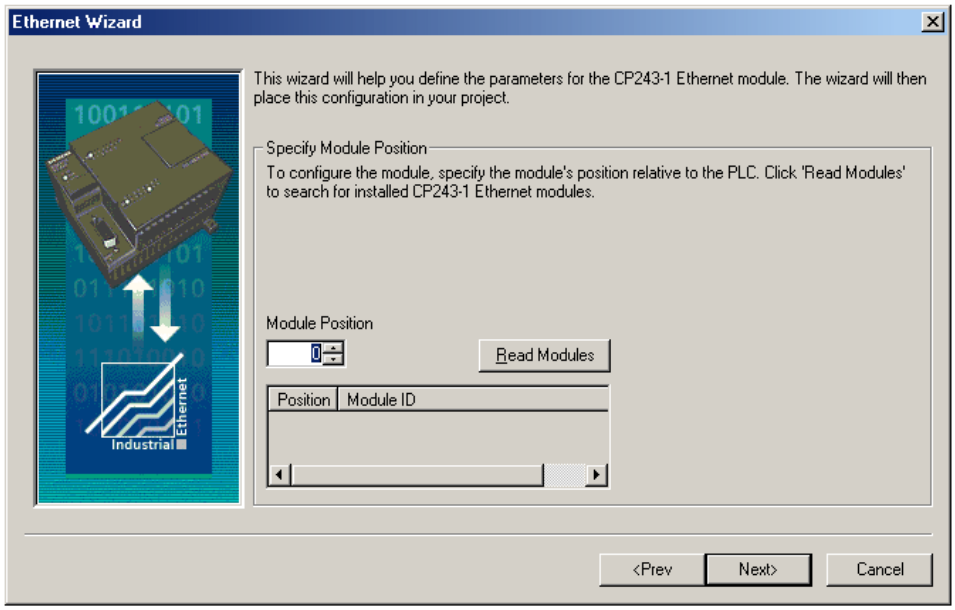


2. To view the results of Read Modules, select the **Ethernet module**. Click **Next**.

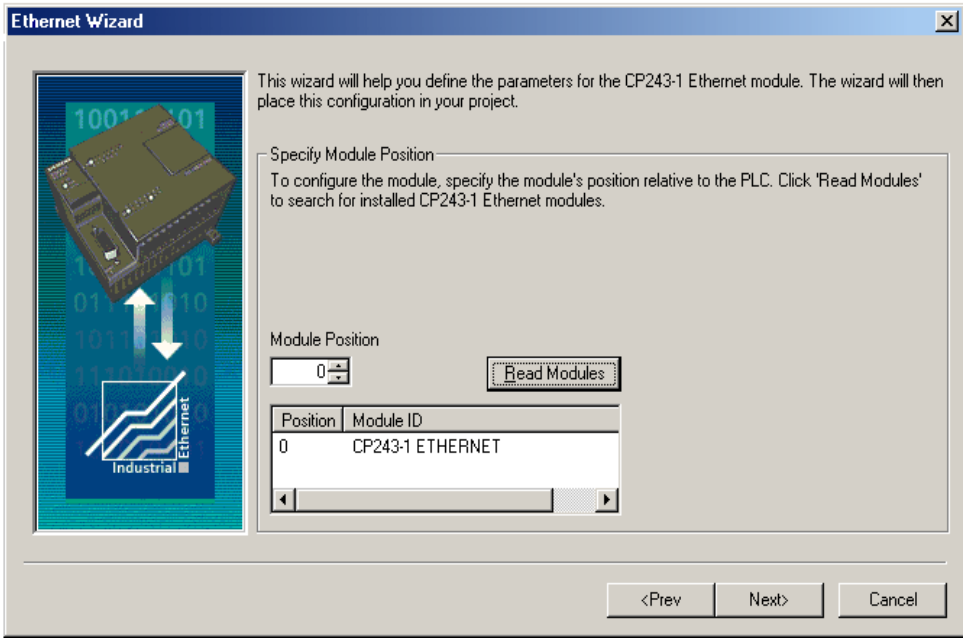


Step 3: Assigning Module Address


1. Click **Next**.

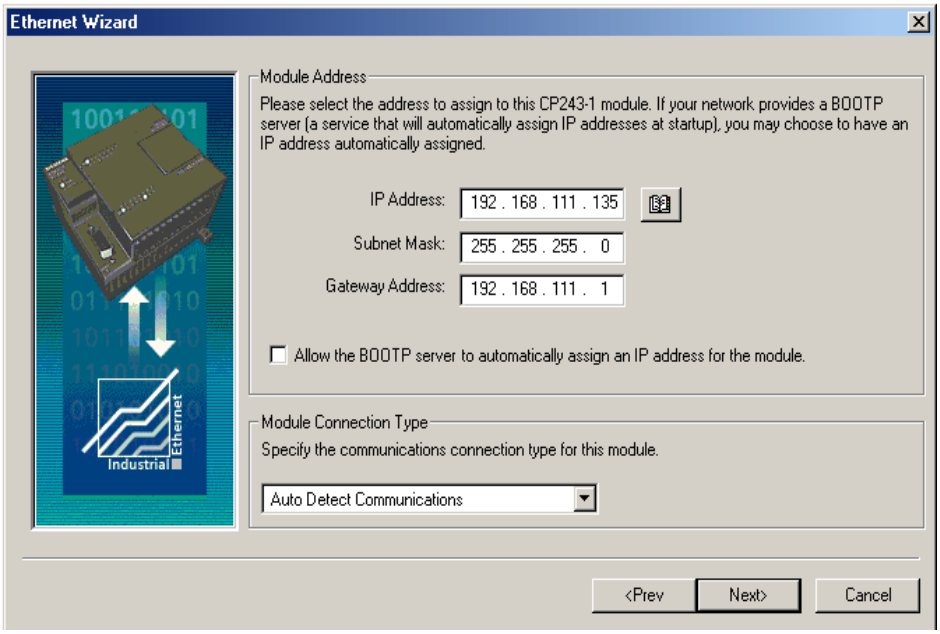


2. Enter the number of desired available connections for this device. If 0 is entered, the only connection available will be the PG mode. The image below shows there are 4 connections for this module.

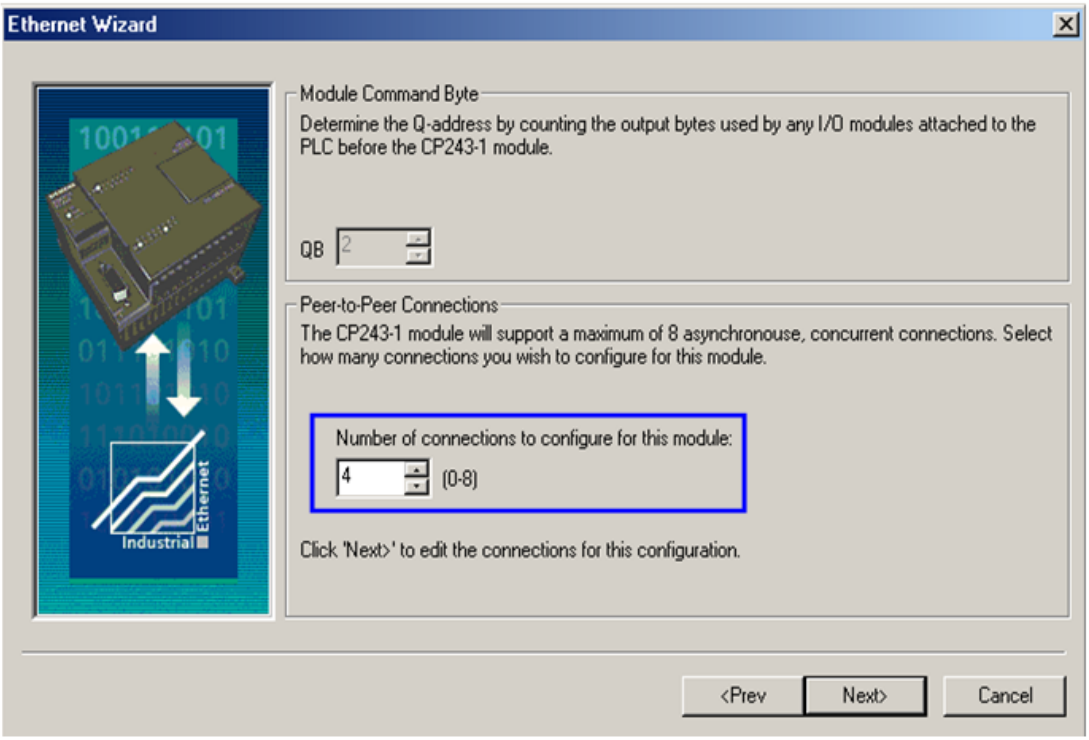


3. Connection0 -> Select **This is a Server Connection...**.
   Notice the **Local TSAP** automatically incremented to **10.00**.

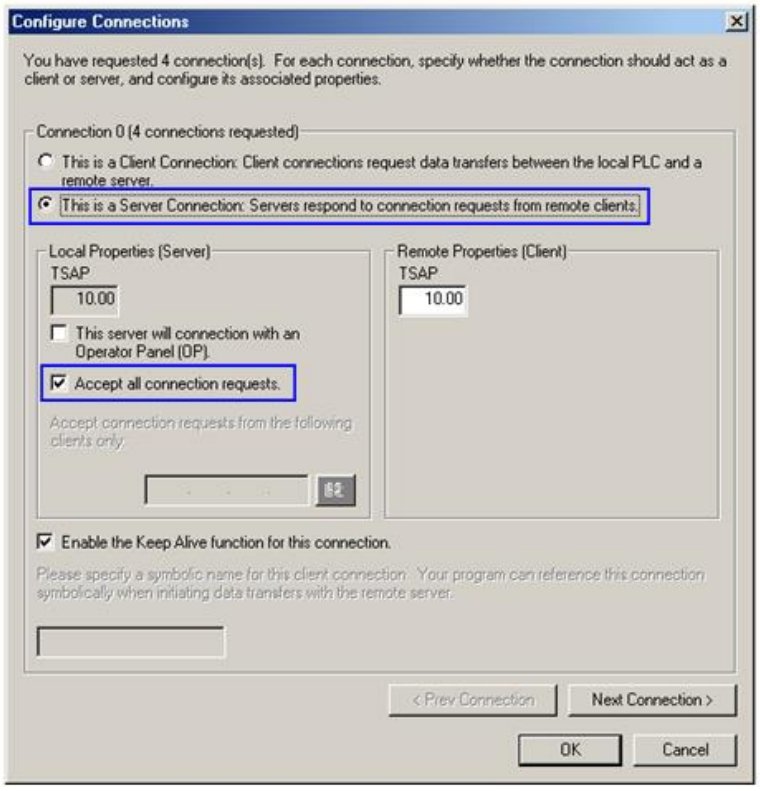

4. Connection1，Select **This is a Server Connection...**.
   Notice the **Local TSAP** automatically incremented to **11.00**.

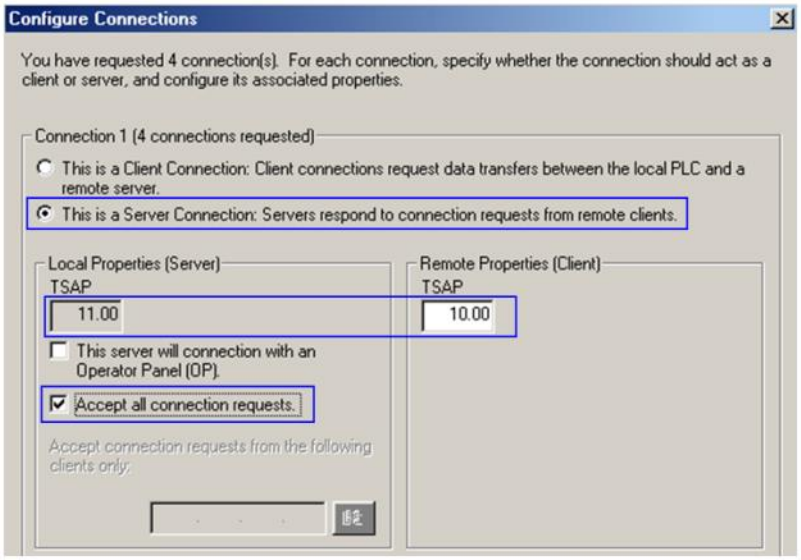


5. Upon completion of the settings above, set parameters in EasyBuilder. Set the value of Local TSAP here to the value of Remote TSAP in Micro/WIN and vice versa to realize multi-connection.

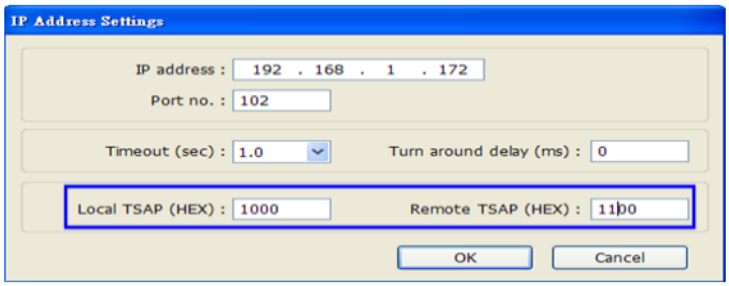


How to Import Tag:

The tags created in the Symbol Table in Step7-MicroWIN software can be imported to EasyBuilder.


1. In **Symbol Table** create the tags. Select all the tags and click the right mouse button then **copy** the tags.

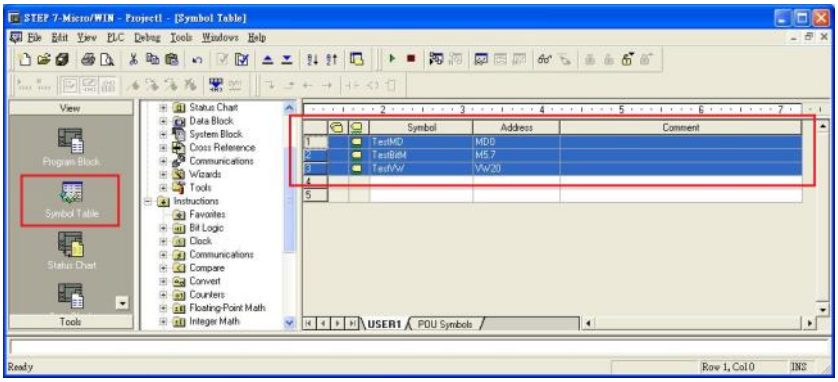


2. Launch EasyBuilder, add the driver in the device list in **System Parameter Settings**, and then click **Import Tag** button.

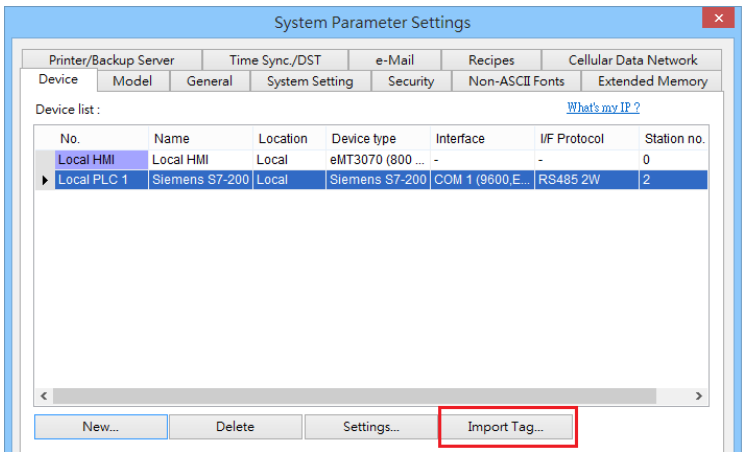


3. **Paste** the tags copied in step 1 and then click **OK**.

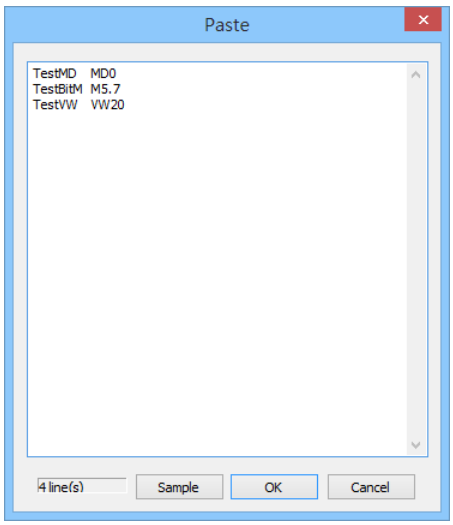

4. Select all the tags and then click **OK**.

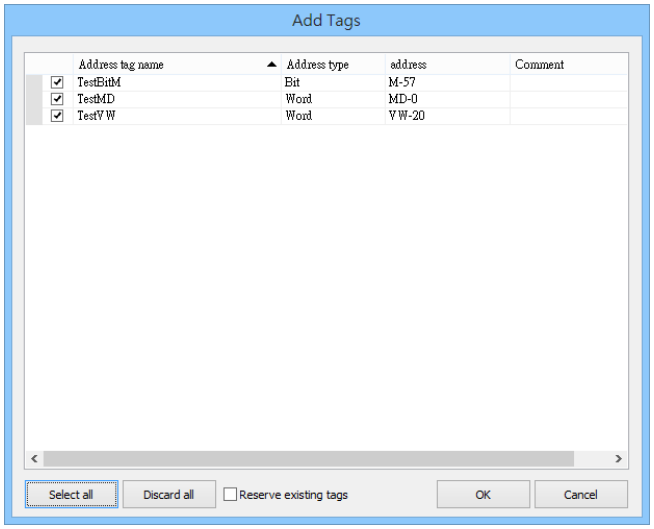

5. If succeeded, the following message window shows.

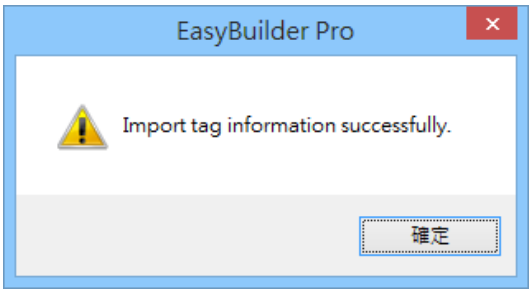


Device Address:

Bit/Word	Device	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
B	S	DDDDo	0 ~ 40957	SCR
B	SM	DDDDo	0 ~ 40957	Special Memory
W	VW	DDDDD	0 ~ 10239	V Memory
DW	VD	DDDDD	0 ~ 10239	V Memory Double Word
W	VW_String	DDDDD	0 ~ 10239	String
DW	VD_String	DDDDD	0 ~ 10239	String
DW	MD	DDDDD	0 ~ 10239	Word Memory
Byte	VB	DDDDD	0 ~ 10239	V Memory Byte
Byte	SB	DDDDD	0 ~ 10239	SCR
W	SW	DDDDD	0 ~ 10239	SCR
DW	SD	DDDDD	0 ~ 10239	SCR
Byte	SMB	DDDDD	0 ~ 10239	Special Memory
W	SMW	DDDDD	0 ~ 10239	Special Memory
DW	SMD	DDDDD	0 ~ 10239	Special Memory

- Double word and floating point value must use VD device type.

Wiring Diagram:

Ethernet cable:

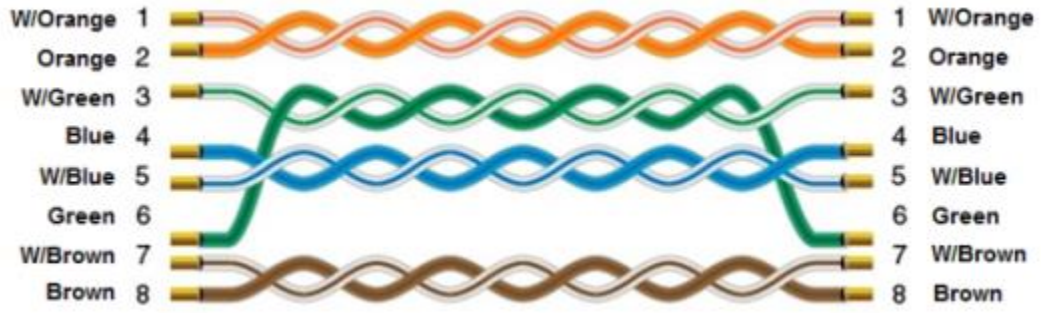

Siemens S7-200 (VD any address)

Supported Series: Siemens S7-200 series PLC
(CPU212/214/215/216/221/222/224/226/226XM)
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommen	Options	Notes
PLC type	Siemens S7-200 (VD any address)		
PLC I/F	RS485 2w	RS485 2w	
Baud rate	9600	9600, 19200, 187.5K	The HMI which has a sticker "MPI187.5" on the rear cover supports 187.5K
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	2	1 ~ 126	
Turn around delay	5		
Reserved 1	30		ACK delay time

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

PLC Setting:

Communication mode	Set station number to 2

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
B	S	DDDDo	0 ~ 40957	SCR
B	SM	DDDDo	0 ~ 40957	Special Memory
W	VW	DDDDD	0 ~ 10239	V Memory


Bit/Word	Device type	Format	Range	Memo
DW	VD	DDDDD	0 ~ 10239	V Memory Double Word
W	VW_String	DDDDD	0 ~ 10239	String
DW	VD_String	DDDDD	0 ~ 10239	String
W	MW	DDDDD	0 ~ 10239	Word Memory
W	T	DDD	0 ~ 255	Timer
W	C	DDD	0 ~ 255	Counter
DW	MD	DDDDD	0 ~ 10239	Word Memory
Byte	SB	DDDDD	0 ~ 10239	SCR
W	SW	DDDDD	0 ~ 10239	SCR
DW	SD	DDDDD	0 ~ 10239	SCR
Byte	SMB	DDDDD	0 ~ 10239	Special Memory
W	SMW	DDDDD	0 ~ 10239	Special Memory
DW	SMD	DDDDD	0 ~ 10239	Special Memory

- Double word and floating point value must use VD device type.
- VD register can set to any value, not necessarily a multiple of 4.


How to Import Tag:

The tags created in the Symbol Table in Step7-MicroWIN software can be imported to EasyBuilder.


1. In **Symbol Table** create the tags. Select all the tags and click the right mouse button then **copy** the tags.

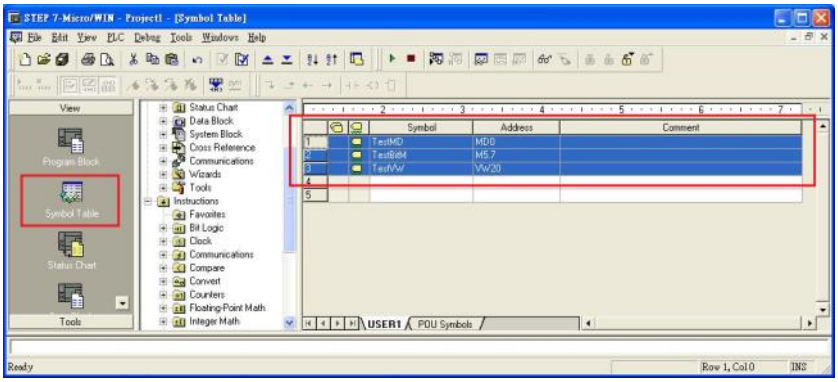


2. Launch EasyBuilder, add the driver in the device list in **System Parameter Settings**, and then click **Import Tag** button.

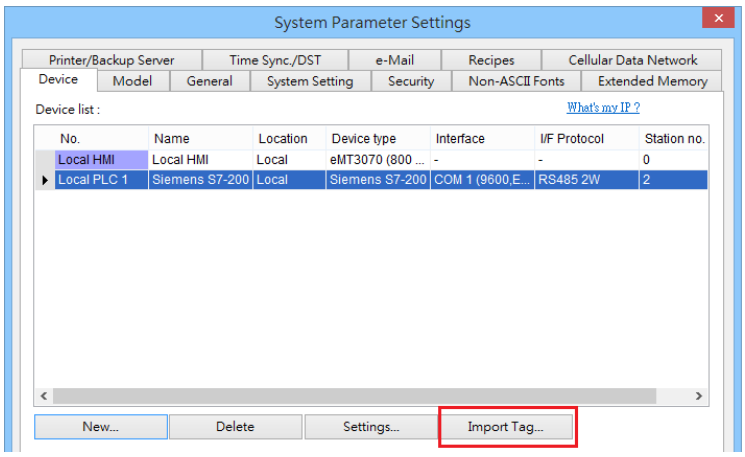


3. **Paste** the tags copied in step 1 and then click **OK**.

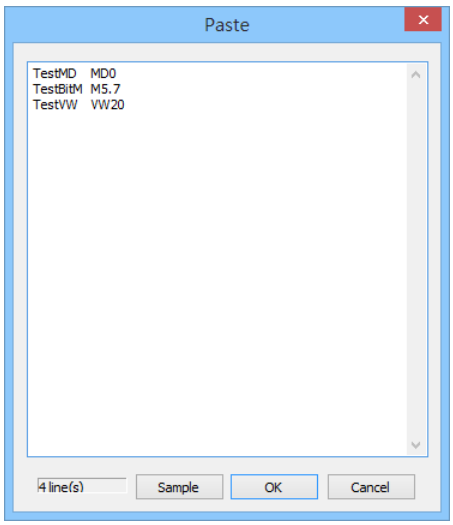

4. Select all the tags and then click **OK**.

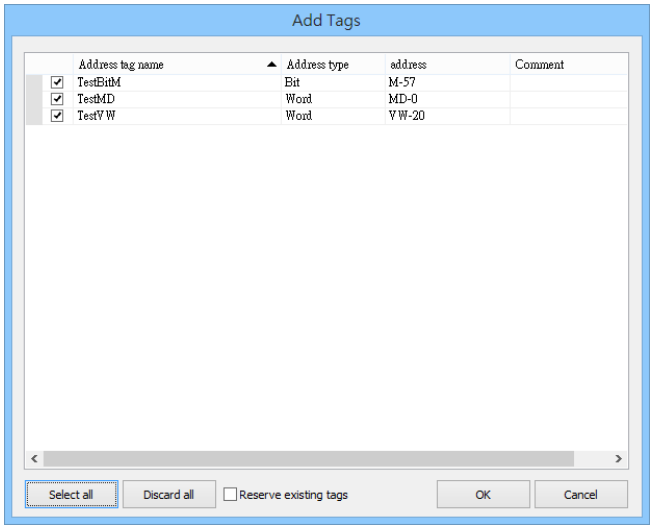

5. If succeeded, the following message window shows.

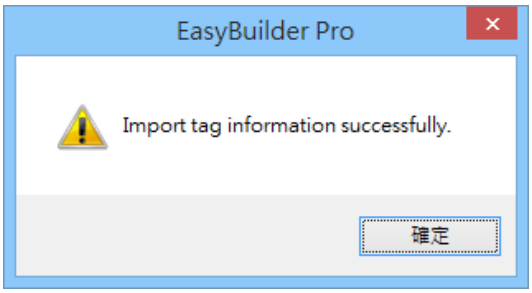

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8
Data+	6	1	⟷	3
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	5	5	⟷	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	8
Data+	2	⟷	3
GND	5	⟷	5

Siemens S7-200 PPI

Supported Series: Siemens S7-200 series PLC
(CPU212/214/215/216/221/222/224/226/226XM)
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SIEMENS S7-200 PPI		
PLC I/F	RS485 2w	RS485 2w	
Baud rate	9600	9600, 19200, 187.5K	Only MT6000/8000V2 support baud rate 187.5 K
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
Turn around delay	5		
ACK delay time (ms)	30		
PLC sta. no.	2	1 ~ 126	

Online simulator	YES	**Extend address mode**	YES
Broadcast command	NO		

PLC Setting:

PLC setting	PLC sta. no. can not be the same as HMI sta. no.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
B	S	DDDDo	0 ~ 40957	SCR
B	SM	DDDDo	0 ~ 40957	Special Memory
B	T_Bit	DDD	0 ~ 255	Timer
B	C_Bit	DDD	0 ~ 255	Counter
Byte	VB	DDDDD	0 ~ 10239	

Bit/Word	Device type	Format	Range	Memo
W	VW	DDDDD	0 ~ 10239	V Memory
W	VW_Odd	DDDDD	0 ~ 10239	V Memory
DW	VD	DDDDD	0 ~ 10239	V Memory Double Word
DW	VD_Odd	DDDDD	0 ~ 10239	V Memory Double Word
W	VW_String	DDDDD	0 ~ 10239	String
W	VW_String_Odd	DDDDD	0 ~ 10239	String
DW	VD_String	DDDDD	0 ~ 10239	String
DW	VD_String_Odd	DDDDD	0 ~ 10239	String
Byte	MB	DDDDD	0 ~ 10239	Byte Memory
W	MW	DDDDD	0 ~ 10239	Word Memory
W	MW_Odd	DDDDD	0 ~ 10239	Word Memory
W	T	DDD	0 ~ 255	Timer
W	C	DDD	0 ~ 255	Counter
DW	MD	DDDDD	0 ~ 10239	Word Memory
Byte	SB	DDDDD	0 ~ 10239	SCR
W	SW	DDDDD	0 ~ 10239	SCR
DW	SD	DDDDD	0 ~ 10239	SCR
Byte	SMB	DDDDD	0 ~ 10239	Special Memory
W	SMW	DDDDD	0 ~ 10239	Special Memory
DW	SMD	DDDDD	0 ~ 10239	Special Memory


- Double Word and floating point value must use VD device type.

Multi-HMIs-Multi-PLCs Communication Setting:



For S7-200 PLC, Multi-HMIs-Multi-PLCs communication can be achieved using S7/200 PPI driver, please refer to the settings below.

IN EasyBuilder COM Port Settings, two important parameters must be set:

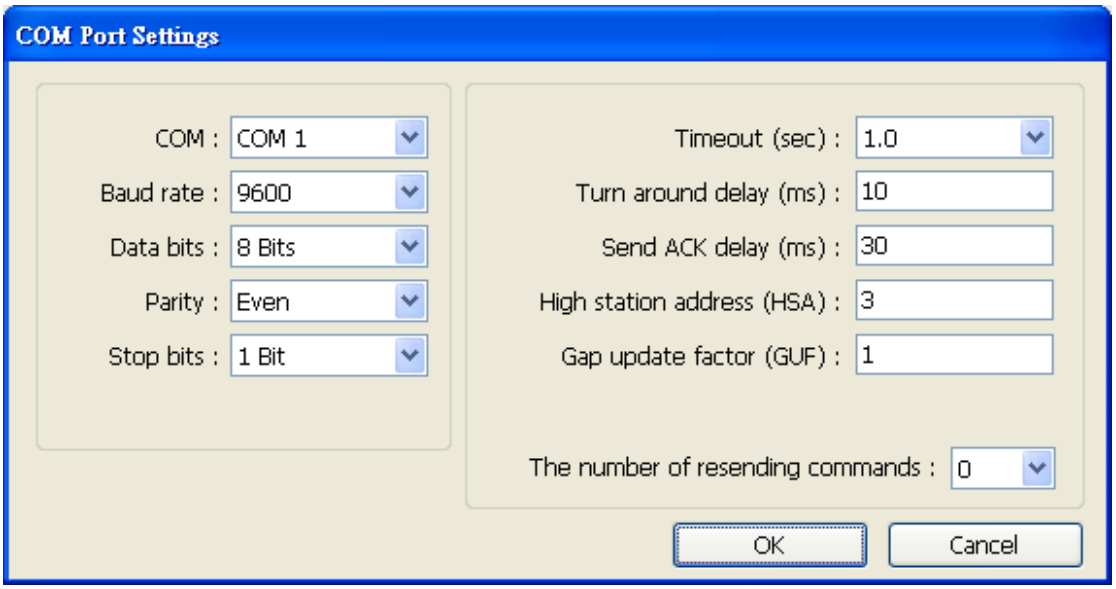


3. [High station address (HSA)]:

Setting Max. Station Number of HMI in PPI network.

For the effectiveness of system operation, it is highly recommended that the HMI station number starts from zero and go on sequentially. If there are 4 HMI in PPI network, set station no. from 0~3, and [High station address (HSA)] to 3.

Set HMI station number in [System Parameters] / [Model] / [HMI station no.]:

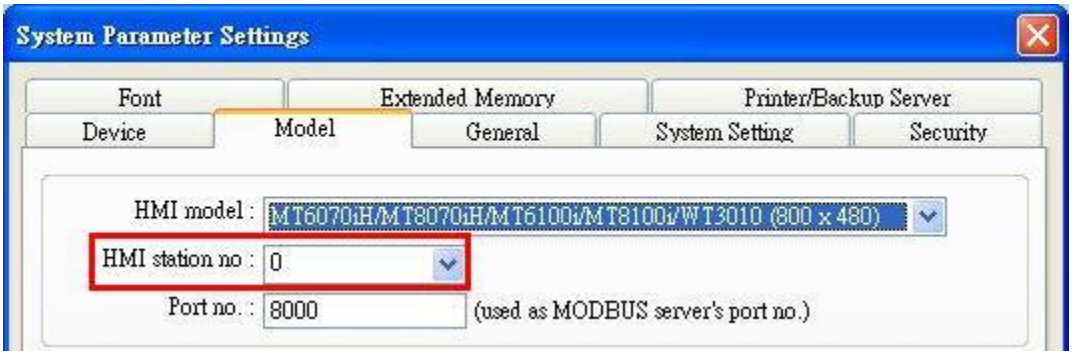

4. [Gap update factor(GUF)]:

The condition to pass a Token. In PPI network only HMI can hold a Token, PLC can only be controlled.

When the HMI that holds Token communicates with PLC for a number of times that equals to the value set here, HMI will pass the Token (control of PLC) to the next HMI. For example, if GUF is set to “1”, HMI will pass the control of PLC to the next HMI when read or write the value in an address.

If GUF is set to a bigger value, the HMI that holds Token will control the PLC for a longer time and therefore the Token won't be passed to another HMI and cause failure in communicating with PLC.

A complete communication means HMI reads / writes PLC value for one time.


Note:

- HMI sta. no. can not be the same as PLC sta. no.
- Highly recommended that HMI sta. no. starts from 0 and go on sequentially for the effectiveness of operation.
- Available for EasyBuilder V4.50 and later.


How to Import Tag:

The tags created in the Symbol Table in Step7-MicroWIN software can be imported to EasyBuilder.


1. In **Symbol Table** create the tags. Select all the tags and click the right mouse button then **copy** the tags.

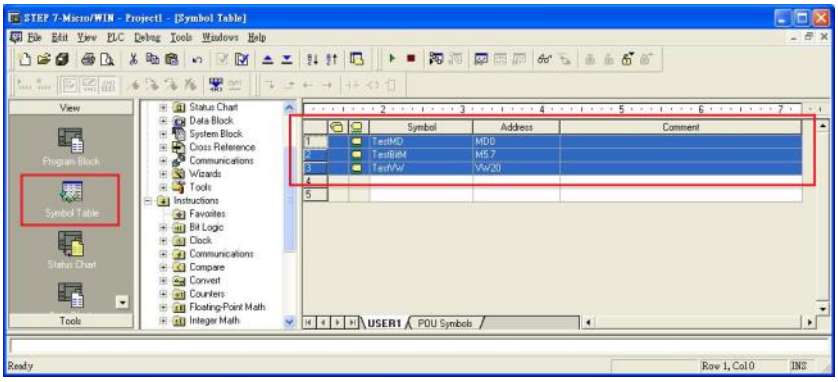


2. Launch EasyBuilder, add the driver in the device list in **System Parameter Settings**, and then click **Import Tag** button.

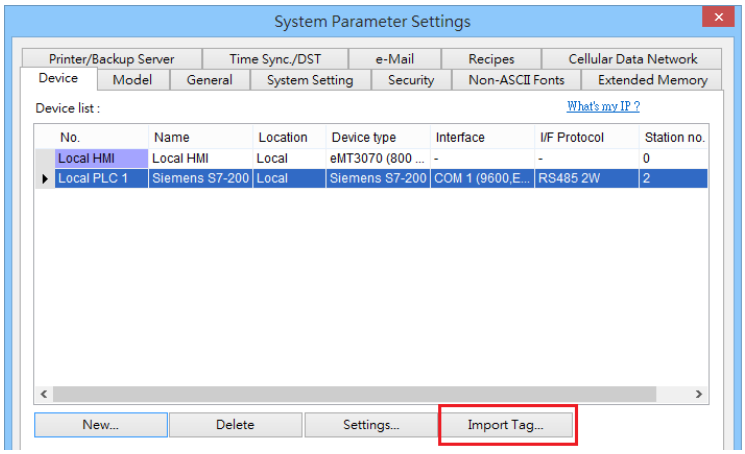


3. **Paste** the tags copied in step 1 and then click **OK**.

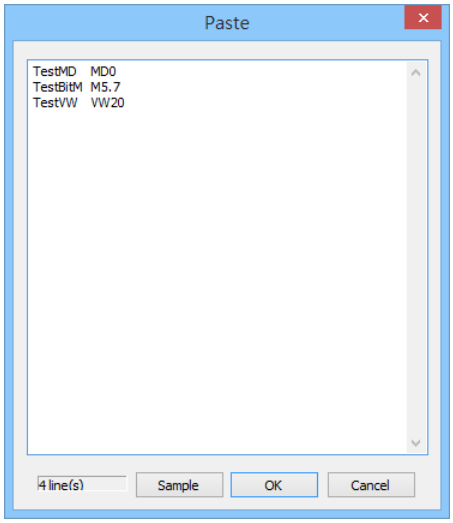

4. Select all the tags and then click **OK**.

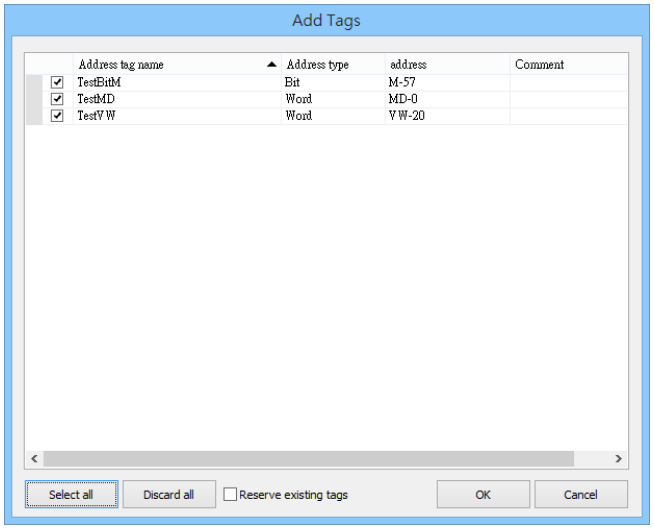


5. If succeeded, the following message window shows.

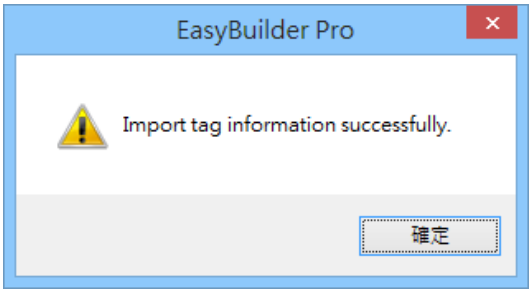

Pass-Through Settings:

[Designate client IP]: In Pass-through mode designate the client IP address to connect HMI. The “client” usually refers to Siemens Step 7 application.

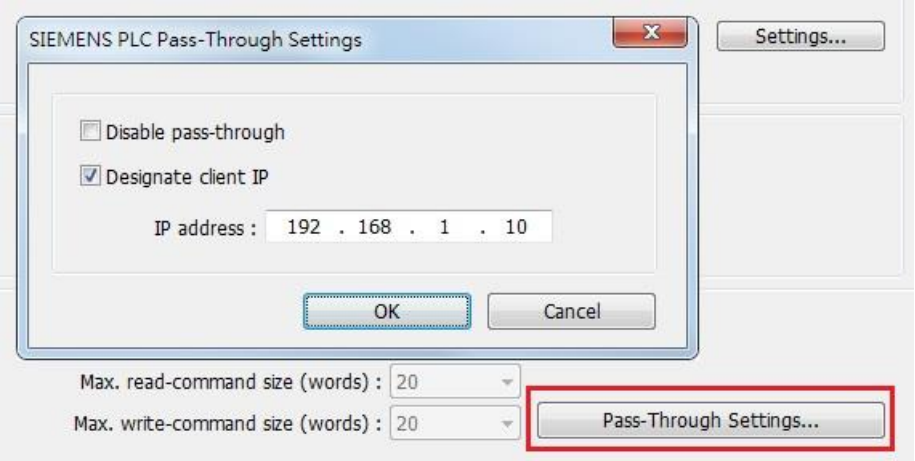

The following lists the system registers relevant to Siemens S7-200 PPI and Siemens S7-300 MPI Pass-through feature.

- [LW-10850: disable/enable (0 : disable, 1 : normal, 2 : IP limited) (siemens pass-through)]
- [LW-10851: destination COM port (siemens pass-through)]: Generally refers to the COM port connected with PLC.
- [LW-10852: destination PLC station no. (siemens pass-through)]
- [LW-10853: communication protocol (0 : invalid, 1 : PPI, 2 : MPI) (siemens pass-through)]
- [LW-10854 to LW-10857: IP of connecting client (siemens pass-through)]: Displays current client IP address connected with HMI.
- [LW-10858 to LW-10861: IP of designated client (siemens pass-through)]: If LW-10850 is set to 1, the system registers can be used to designate the client IP connected with HMI.
- [LW-10862: connection status (0 : ready, 1 : client connecting) (siemens pass-through)]
- [LW-10863: execution status (0 : normal, 1 : error) (siemens pass-through)]
- [LW-10864: the last error (siemens pass-through)]

The following table lists the error codes, the description of each code, and the possible reason.

Error Code	Description	Possible Reason
0	Successfully executed	
1	Prohibit client from connecting HMI	HMI is already running pass-through and won't accept any request from other client.
2	Prohibit client from connecting HMI	When LW-10850 is set to 1, the client IP for connecting HMI is different from the IP specified in LW-10858 ~ LW-10861.
3	Invalid communication protocol	Invalid setting in LW-10853.
4	Invalid PLC station number	The PLC station number specified in LW-10852 does not exist.
5	Delayed communication	PLC connection failure.
6	Busy communication	PLC does not accept pass-through request, please confirm PLC settings.
7	Invalid pass-through request	Environment setup failure.

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8
Data+	6	1	⟷	3
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	
	RS485 2W 9P Male	RS485 2W 9P Male	RS485 2W 9P D-Sub Male
Data-	1	6	8
Data+	2	9	3
GND	5	5	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	
	RS485 2W 9P Female	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	7	8
Data+	2	8	3
GND	5	5	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	
	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	8
Data+	2	3
GND	5	5

Siemens S7-200 SMART (Ethernet)

Supported Series: Siemens S7/200 SMART Series Ethernet Module.
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Siemens S7-200 SMART (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
PLC sta. no.	2		

Online simulator	Yes	**Mutiple HMI connection**	Yes

*At most four HMIs can be connected with PLC simultaneously.


Device Address:

Bit/Word	Device	Format	Range	Memo
B	I	DDo	0 ~ 317	Input
B	Q	DDo	0 ~ 317	Output
B	M	DDo	0 ~ 317	Bit Memory
B	V	DDDDDo	0 ~ 204797	V Memory Bit
B	S	DDo	0 ~ 317	SCR
B	SM	DDDDo	0 ~ 15357	Special Memory Bit
B	Timer	DDD	0 ~ 255	Timer
B	Counter	DDD	0 ~ 255	Counter
W	MW	DD	0 ~ 30	Word Memory
W	VW	DDDDD	0 ~ 20478	V Memory
W	SMW	DDDD	0 ~ 1534	Special Memory
W	T	DDD	0 ~ 255	Timer
W	C	DDD	0 ~ 255	Counter
W	AIW	DDD	0 ~ 110	Analog Input
W	AQW	DDD	0 ~ 110	Analog Output
DW	VD	DDDDD	0 ~ 20476	V Memory (Double Word)
Byte	VB	DDDD	0 ~ 8191	V Memory Byte

- Double word and floating point value must use VD device type.

Wiring Diagram:

Ethernet cable:

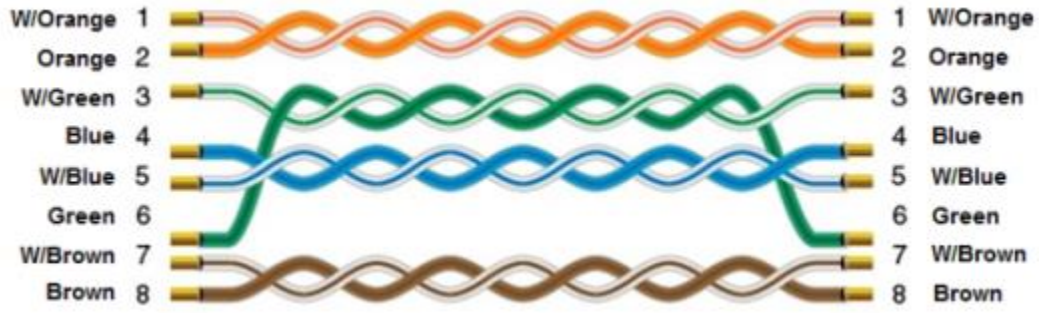

Siemens S7-200 SMART PPI

Supported Series: Siemens S7-200 SMART series PLC
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Siemens S7-200 SMART PPI		
PLC I/F	RS485 2W	RS485 2W	
Baud rate	9600	9600, 19200, 187.5K	Only MT6000/8000V2 support baud rate 187.5 K
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
Turn around delay	5		
ACK delay time (ms)	30		
PLC sta. no.	2	1 ~ 126	

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

PLC Setting:

PLC setting	PLC sta. no. can not be the same as HMI sta. no.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDo	0 ~ 317	Input
B	Q	DDo	0 ~ 317	Output
B	M	DDo	0 ~ 317	Bit Memory
B	V	DDDDDo	0 ~ 204797	V Memory bit
B	S	DDo	0 ~ 317	SCR
B	SM	DDDDo	0 ~ 15357	Special Memory Bit
B	Timer	DDD	0 ~ 255	Timer
B	Counter	DDD	0 ~ 255	Counter
W	MW	DD	0 ~ 30	Word Memory
W	VW	DDDDD	0 ~ 20478	V Memory

Bit/Word	Device type	Format	Range	Memo
W	SMW	DDDD	0 ~ 1534	Special Memory
W	T	DDD	0 ~ 255	Timer
W	C	DDD	0 ~ 255	Counter
W	AIW	DDD	0 ~ 110	Analog input
W	AQW	DDD	0 ~ 110	Analog Output
DW	VD	DDDDD	0 ~ 20476	V Memory (Double Word)

- Double Word and floating point value must use VD device type.

Wiring Diagram:

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8
Data+	6	1	⟷	3
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	5	5	⟷	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	8
Data+	2	⟷	3
GND	5	⟷	5

Siemens S7-300

Supported Series: Siemens S7-300 series PLC
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SIEMENS S7-300		
PLC I/F	RS232		
Baud rate	19200	9600,19200	
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	2		Must be same as the PLC setting.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFFDDDDo	0 ~ 6553599997	Data Register Bit
B	DBxBit	FFFFFDDDDDo	0 ~ 10700655327	
B	DB1Bit ~ DB99Bit	DDDDDo	0 ~ 655327	
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
Byte	DBBn	FFFFFDDDD	0 ~ 655359999	Data Register Byte
Byte	DBBx	FFFFFDDDDD	0 ~ 1070065532	
W	DBx	FFFFFDDDDD	0 ~ 1070065532	
W	DBn	FFFFFDDDD	0 ~ 655359999	Data Register (must be even)
DW	DBDn	FFFFFDDDD	0 ~ 655359999	Data Register Double Word (must be even)
DW	DBDx	FFFFFDDDDD	0 ~ 1070065532	

Bit/Word	Device type	Format	Range	Memo
W	DBn_String	FFFFFDDDD	0 ~ 655359999	
W	DBx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DBn_String1	FFFFFDDDD	0 ~ 655359999	
W	DBx_String1	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn_String	FFFFFDDDD	0 ~ 655359999	Data Register Double Word (must be even)
DW	DBDx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DB1-DB99	DDDD	0 ~ 8192	Data Register


* Double word and floating point value must use DBDn device type.

How to Import Tag:


SIEMENS STEP 7 program allows building files of user-defined tag (***.dif** file and ***.AWL** file), and import these files in EasyBuilder8000/EasyBuilderPro -> System Parameter Settings. The following describes how to build and import these two types of files.

1. Building *.dif File

a、 In “Symbols” create user-defined tag.

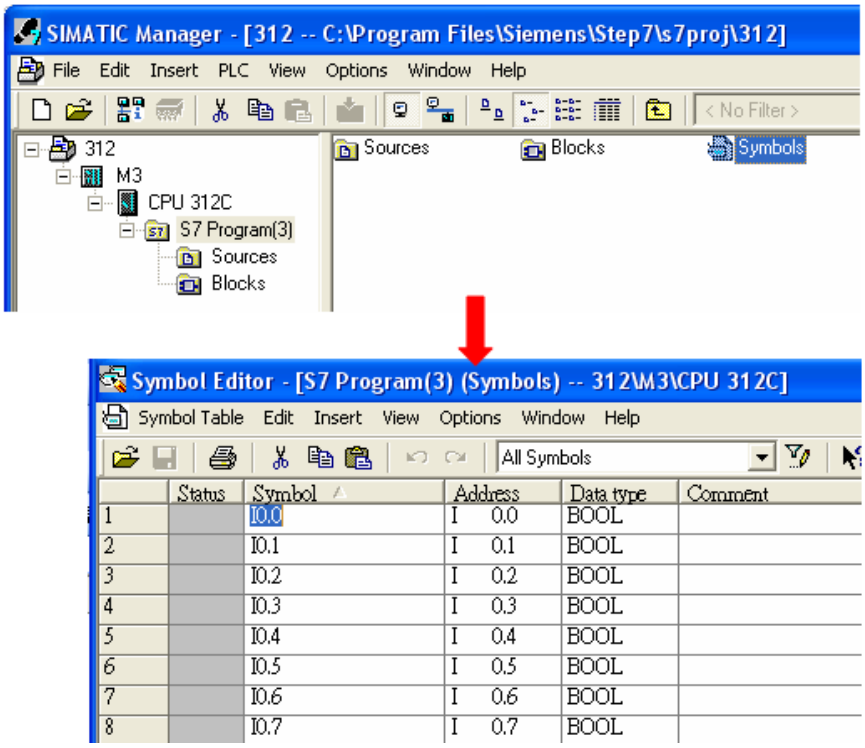


b、 Click **Export** to export the edited file and click **Save**.

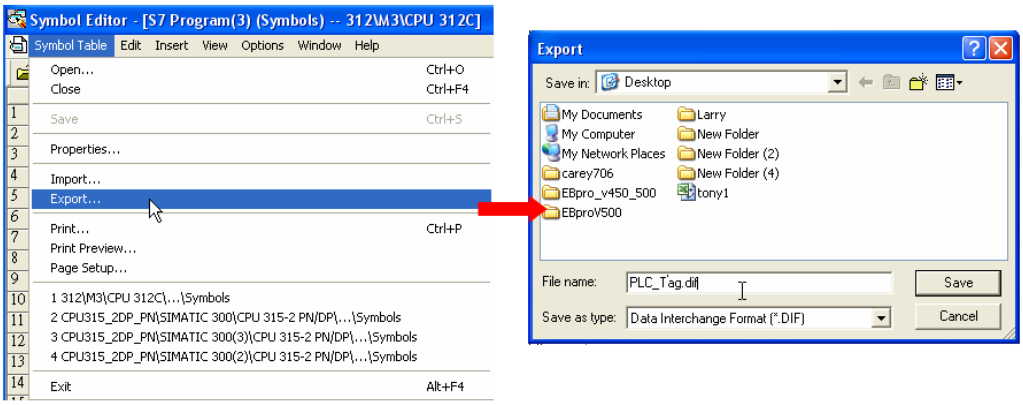


2. Building *.AWF File


a、 In **Blocks** create items as shown below:

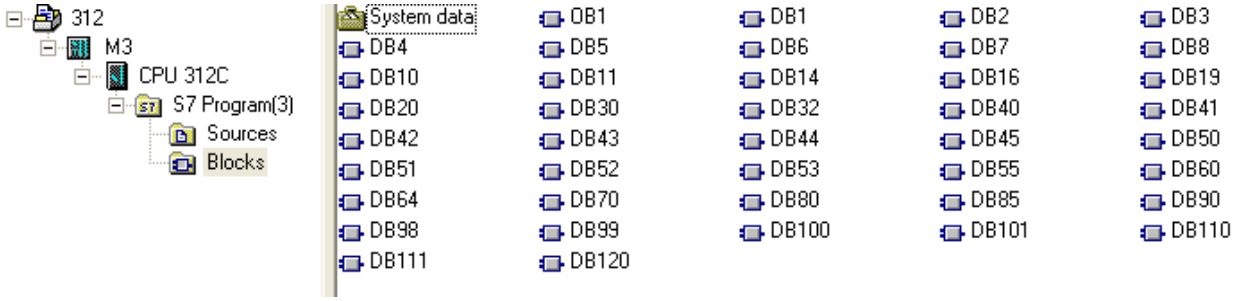


b、 Open **LAD/STL, FBD – Programming S7 Blocks**, click **File** -> **Generate Source.**

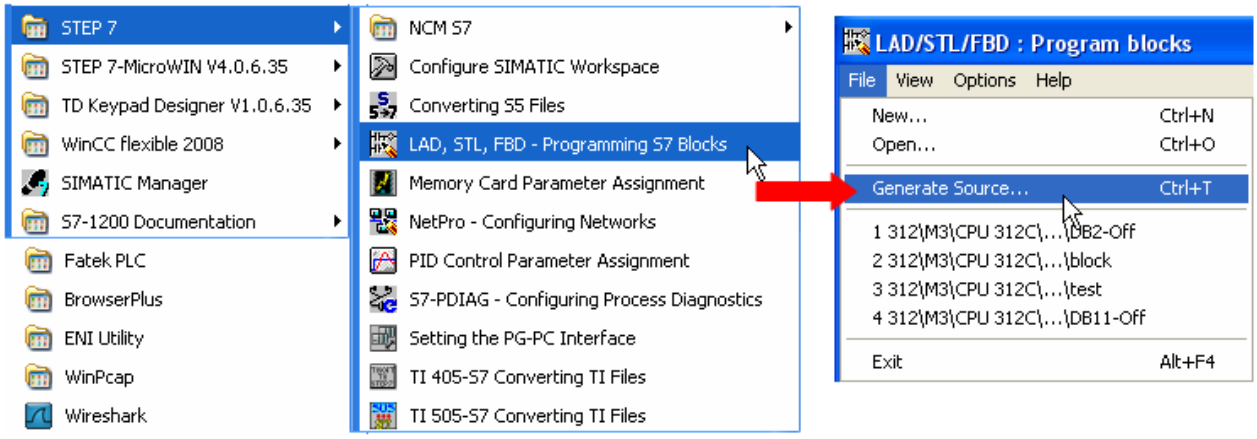


c、 Select **Sources** as storage path, specify the file name then click **OK**.

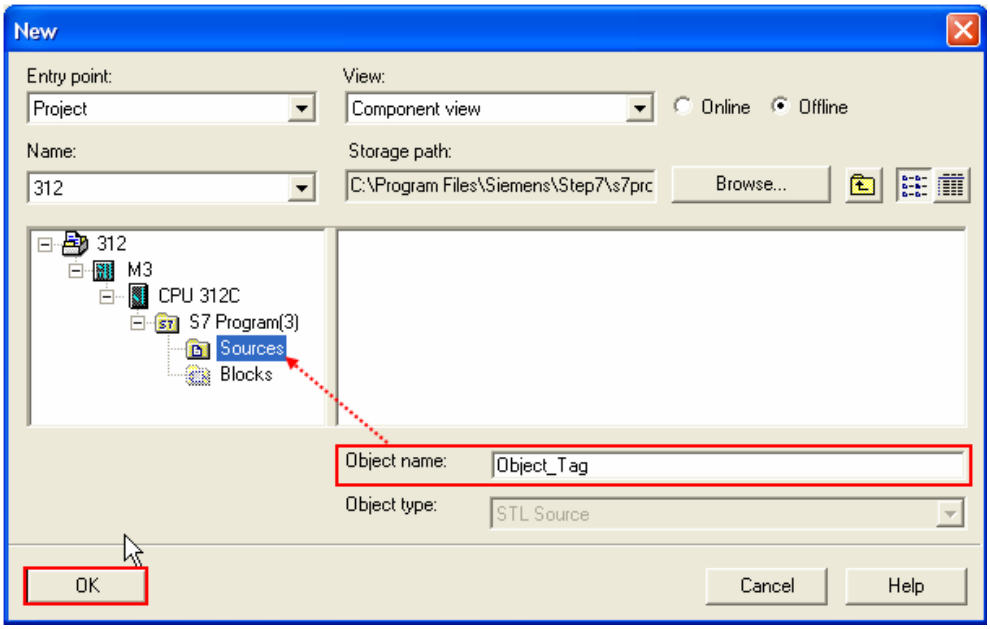


d、 Select the objects to be exported then click **OK**.

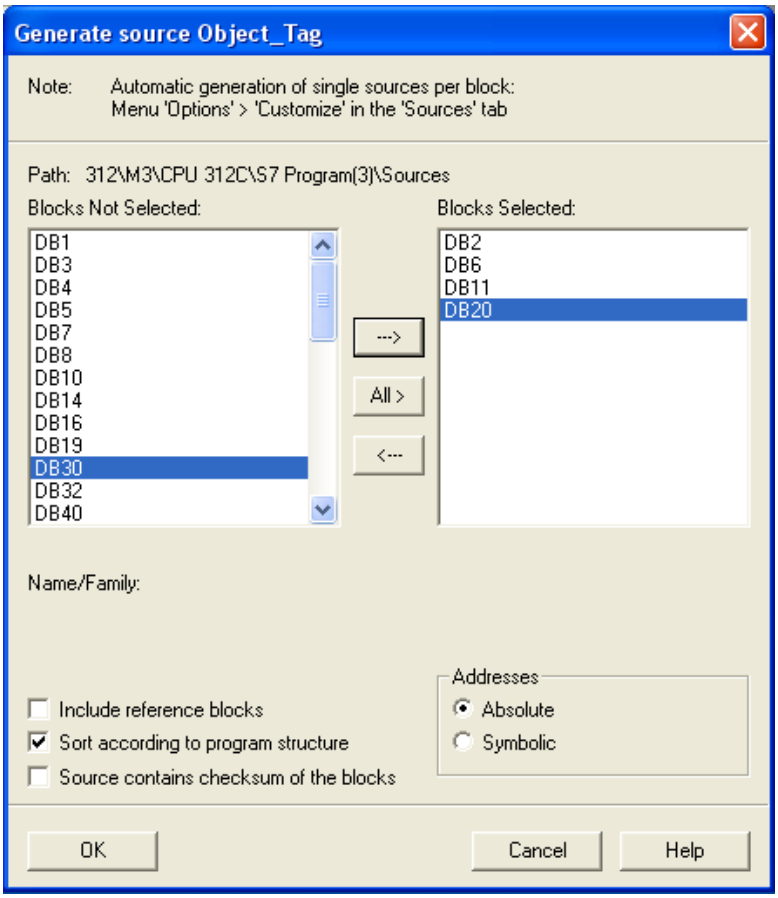

e、 Under **Sources** there will be names of the saved files, select **Export Source** to build ***.AWL** file.

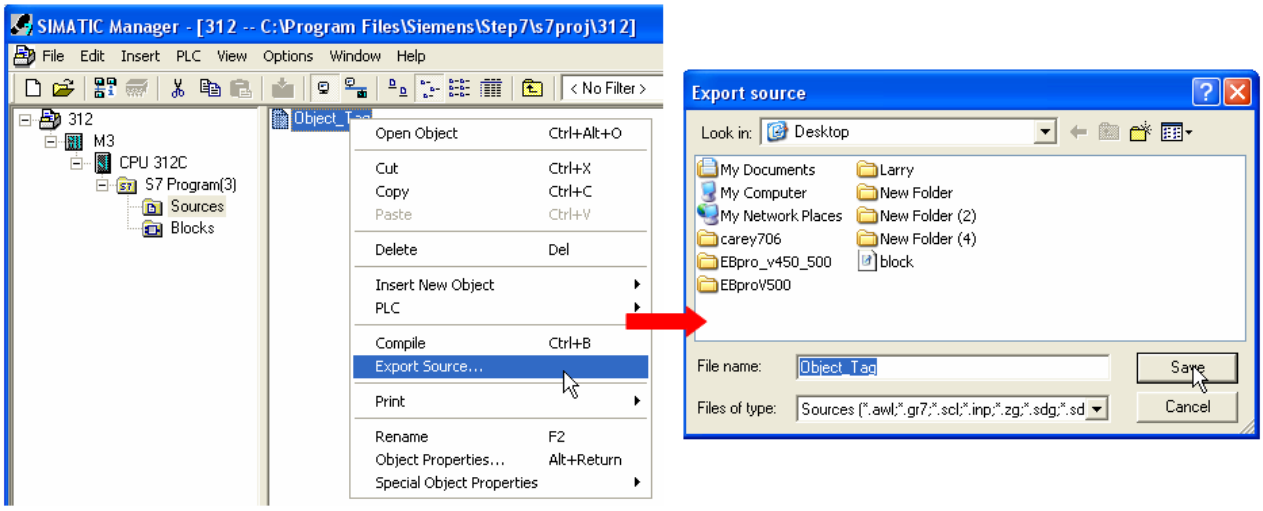

The generated *.dif and *.AWL files can be imported in EasyBuilder8000/EasyBuilderPro **System Parameter Settings**, by clicking **Import Tag**.

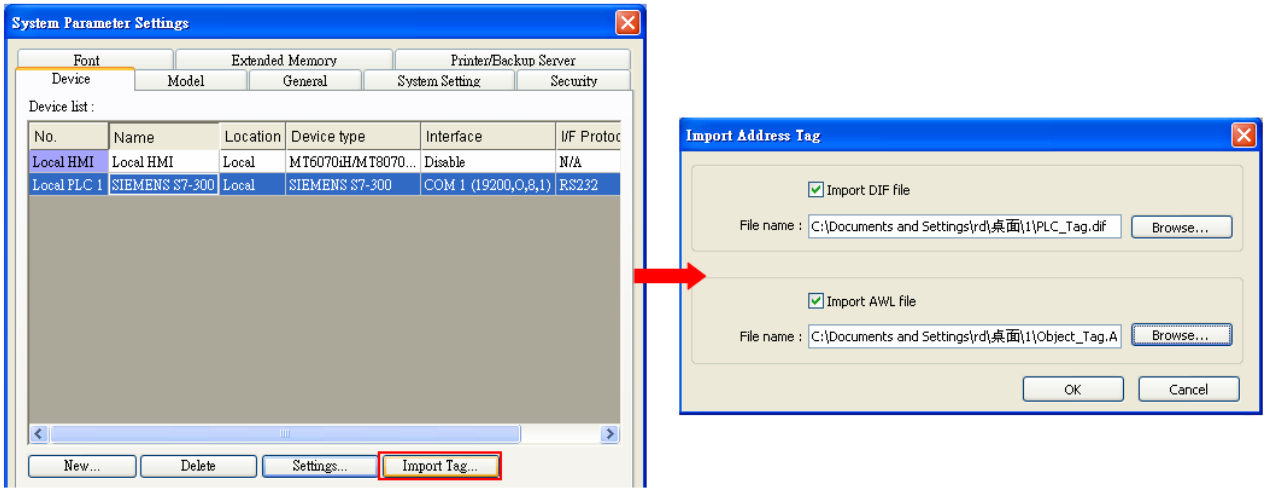

Tag information successfully imported.



Wiring Diagram:

Siemens S7-300 PC Adapter : 9P D-Sub to 9P D-Sub (Diagram 1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

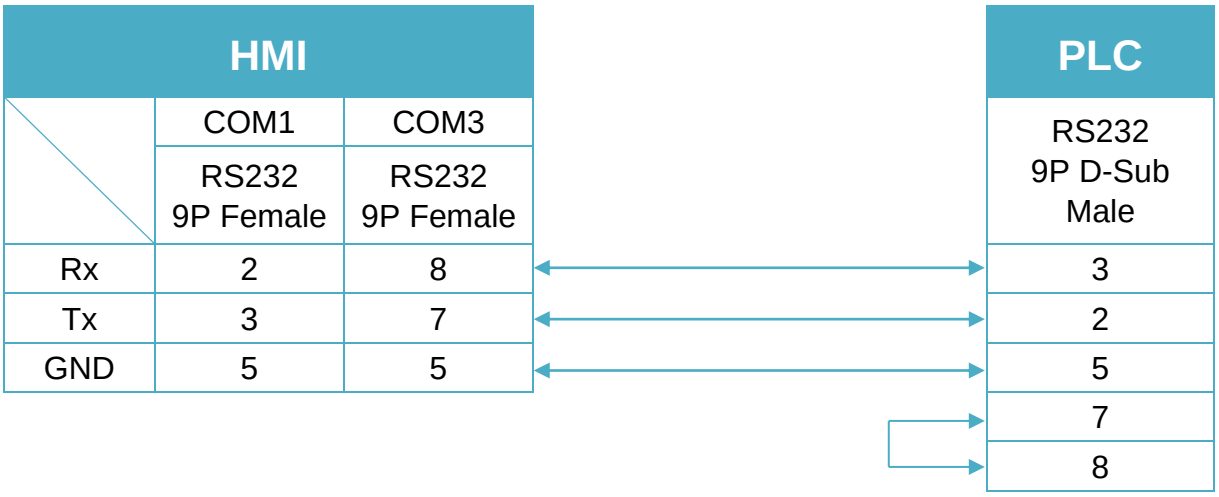


Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


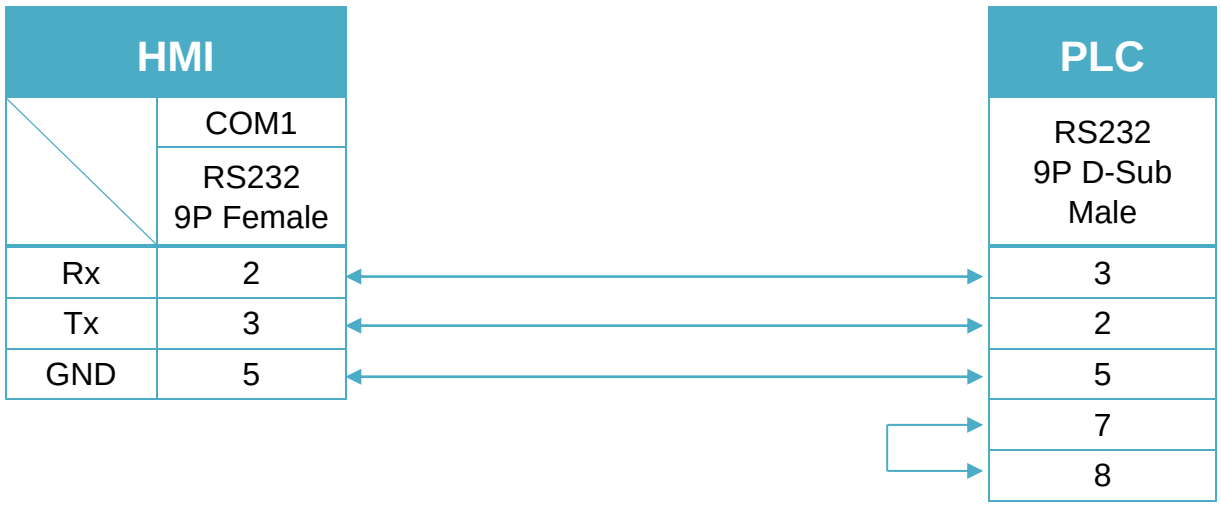


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

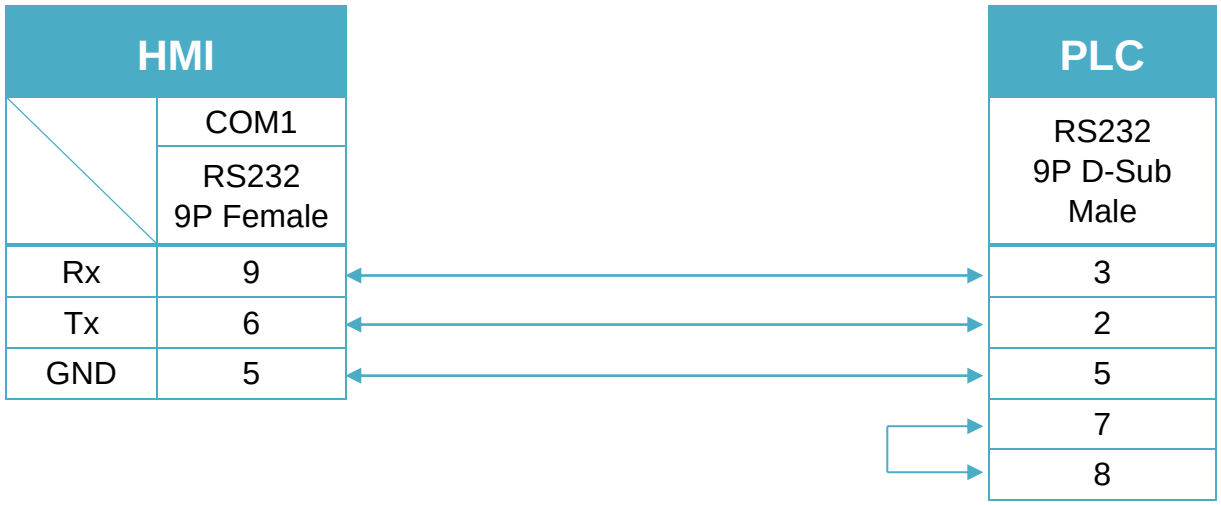

Systeme Helmholz SSW7-TS : 9P D-Sub to 9P D-Sub (Diagram 4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1	COM3	RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female	
Rx	2	8	3
Tx	3	7	2
GND	5	5	5
			7
			8
			4
			6

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


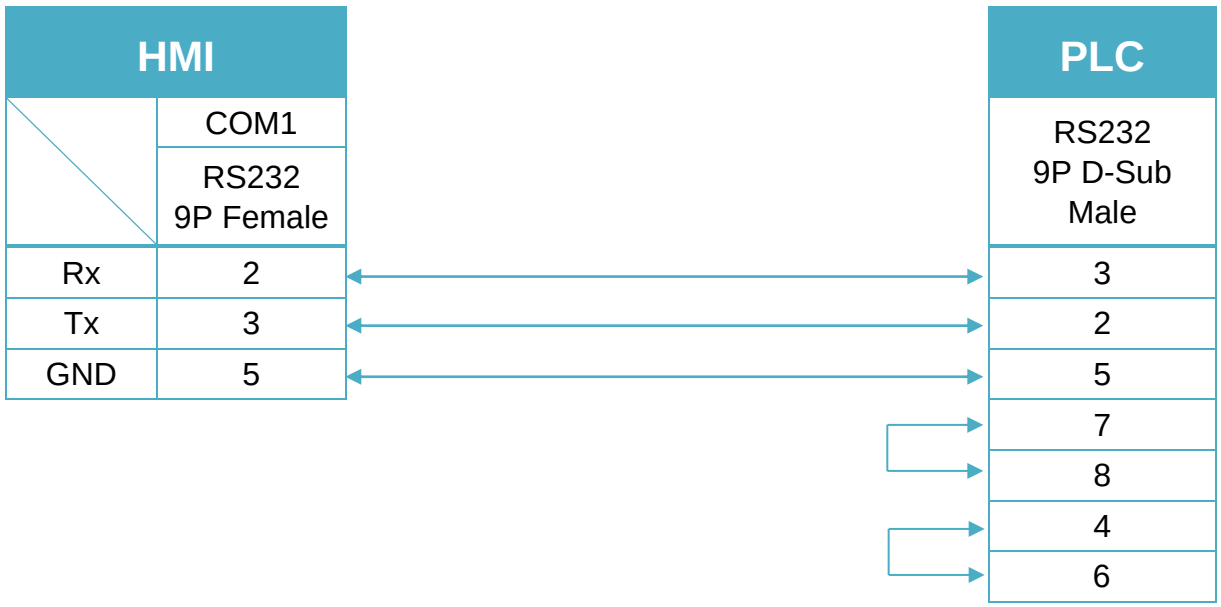


Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

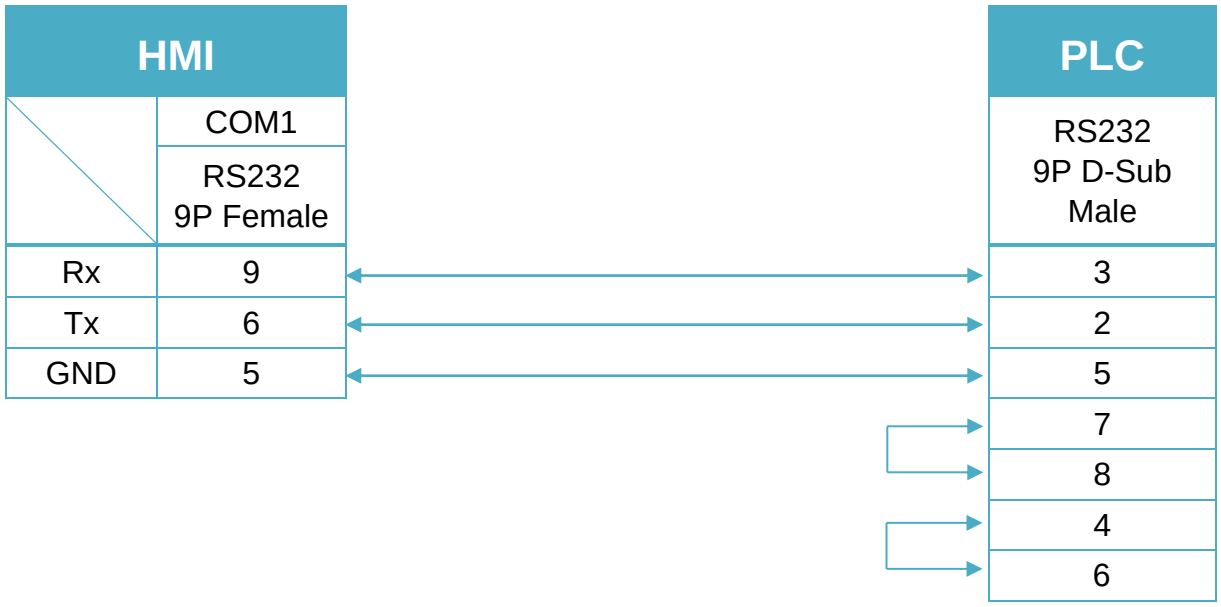


Siemens S7-300/S7-400 (ISO Ethernet)

Supported Series: Siemens S7-300 Ethernet Series PLC, Ethernet module CP-343-1, CPU315-2 PN/DP, CPU317-2 PN/DP, CPU319-3 PN/DP, ET200S, CP-443-1.
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Siemens S7-300/S7-400 (ISO Ethernet)		
PLC I/F	Ethernet		
Local TSAP	100		
Remote TSAP	103		

Online simulator	No

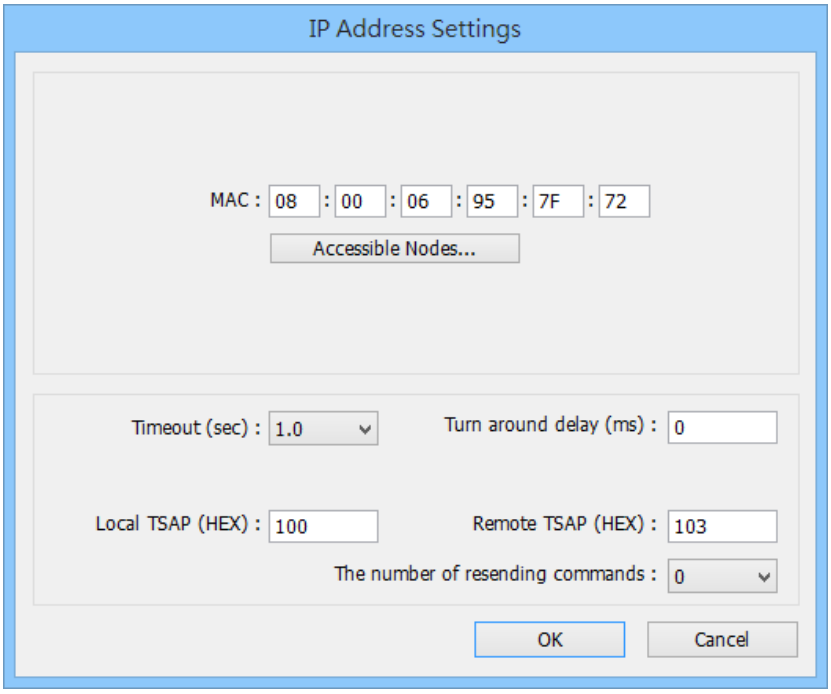

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFFDDDDo	0 ~ 6553599997	
B	DBxBit	FFFFFDDDDDo	0 ~ 10700655327	
B	DB0Bit-DB99Bit	DDDDDo	0 ~ 655327	Data Register Bit
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	Bit Memory Double Word
DW	MD_Anyaddr	DDDD	0 ~ 4094	Bit Memory Double Word (must be even)
Byte	DBBn	FFFFFDDDD	0 ~ 655359999	Data Register Byte
Byte	DBBx	FFFFFDDDDD	0 ~ 1070065532	
W	DBn	FFFFFDDDD	0 ~ 655359999	Data Register(must be even)
W	DBx	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn	FFFFFDDDD	0 ~ 655359999	Data Register Double Word (must be even)
DW	DBDx	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn_Anyaddr	FFFFFDDDD	0 ~ 655359999	Data Register Double Word (must be even)
W	DBn_String	FFFFFDDDD	0 ~ 655359999	
W	DBx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DBn_String1	FFFFFDDDD	0 ~ 655359999	
W	DBx_String1	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn_String	FFFFFDDDD	0 ~ 655359999	
DW	DBDx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DB0 ~ DB99	DDDDD	0 ~ 65532	Data Register(must be even)

- Double word and floating point value must use DBDn device type.

Wiring Diagram:

Ethernet cable:



Siemens S7-300 MPI

Supported Series: Siemens S7-300 series PLC
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommende	Options	Notes
PLC type	SIEMENS S7-300 MPI		
PLC I/F	RS-485 2W		
Baud rate	187.5K	19200,187.5K	
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	2	2 ~ 31	

Online simulator	NO	**Extend address mode**	Yes
Broadcast command	NO		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFFDDDDo	0 ~ 6553599997	Data Register Bit
B	DBxBit	FFFFFDDDDDo	0 ~ 10700655327	
B	DB1Bit ~ DB99Bit	DDDDDo	0 ~ 655327	Data Register Bit
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	
Byte	DBBn	FFFFFDDDD	0 ~ 655359999	Data Register
Byte	DBBx	FFFFFDDDDD	0 ~ 1070065532	
W	DBn	FFFFFDDDD	0 ~ 655359999	Data Register (must be even)


Bit/Word	Device type	Format	Range	Memo
W	DBx	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn	FFFFFDDDD	0 ~ 655359999	Data Register Double Word (must be even)
DW	DBDx	FFFFFDDDDD	0 ~ 1070065532	
W	DBn_String	FFFFFDDDD	0 ~ 655359999	
W	DBx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DBn_String1	FFFFFDDDD	0 ~ 655359999	
W	DBx_String1	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn_String	FFFFFDDDD	0 ~ 655359999	
DW	DBDx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DB1 ~ DB99	DDDDD	0 ~ 65532	Data Register (must be even)

- Double word and floating point value must use DBDn device type.


Multi-HMIs-Multi-PLCs Communication Setting:



For SIEMENS S7-300 MPI driver in Multi-HMIs-Multi-PLCs communication, [Max. station no. (MPI network)] parameter must be correctly set. This setting is relevant to the station no. of the devices, as shown, two HMI (station no. 0, 1) and two PLC (station no. 2, 3) are in MPI network, Max. Station No. should be set to 3.

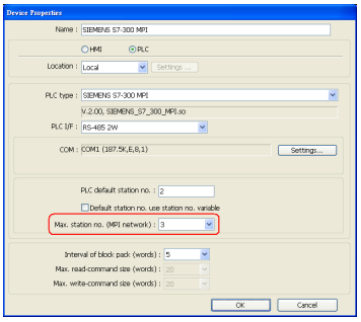

For the effectiveness of communication, users may set PLC device in STEP 7 as shown below. In Properties MPI / Network Settings, set Highest MPI address to the number closest to the actual device station number.

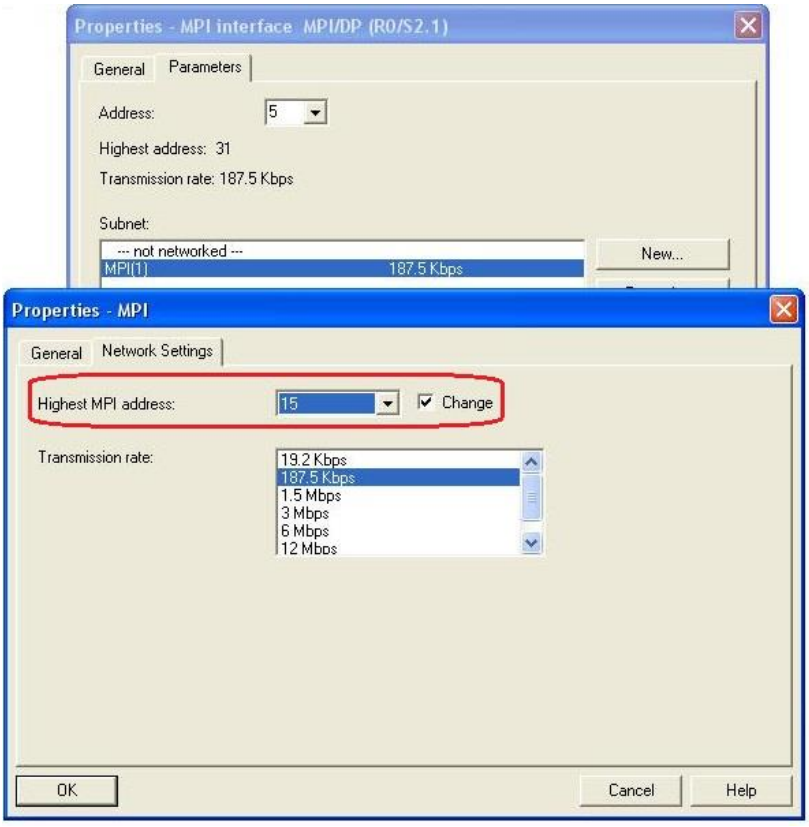

■ HMI sta. no. can not be the same as PLC sta. no.

■ Highly recommended that the device station numbers start from 0 sequentially and correctly set [Max. station no. (MPI network)].

■ Available for EasyBuilder V4.50 and later.


■ X Series does not support multiple-HMI-to-multiple-PLC communication, and supports only 1-HMI-to-1-PLC communication.

How to Import Tag:


SIEMENS STEP 7 program allows building files of user-defined tag (***.dif** file and ***.AWL** file), and import these files in EasyBuilder8000/EasyBuilderPro -> System Parameter Settings. The following describes how to build and import these two types of files.

1. Building *.dif File

a、 In “Symbols” create user-defined tag.

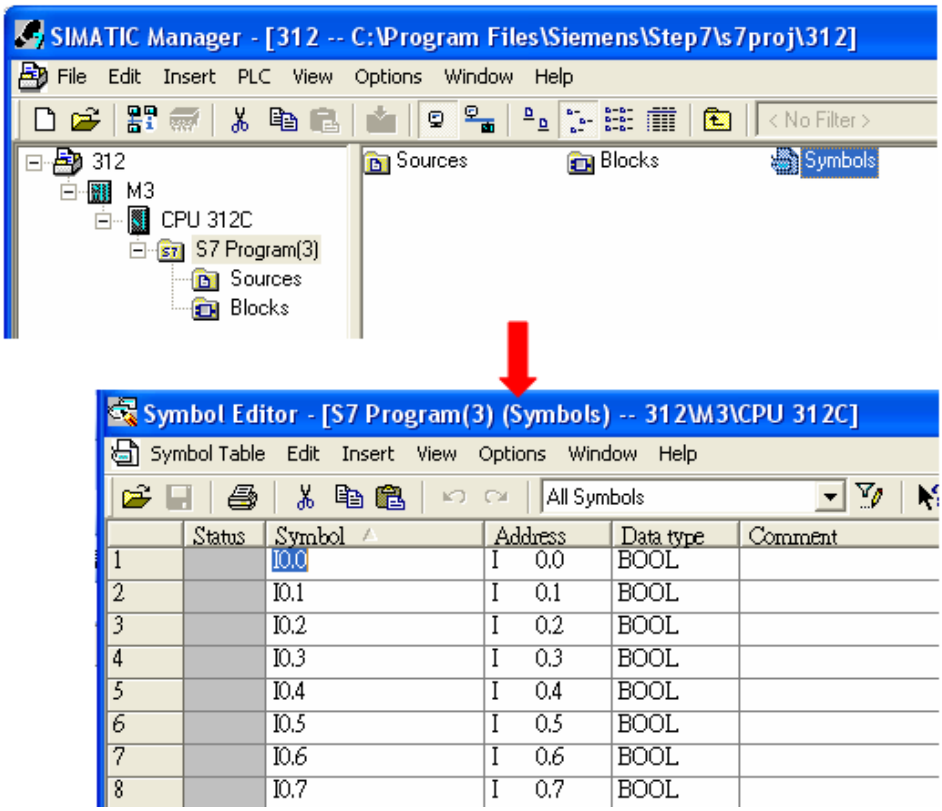


b、 Click **Export** to export the edited file and click **Save**.

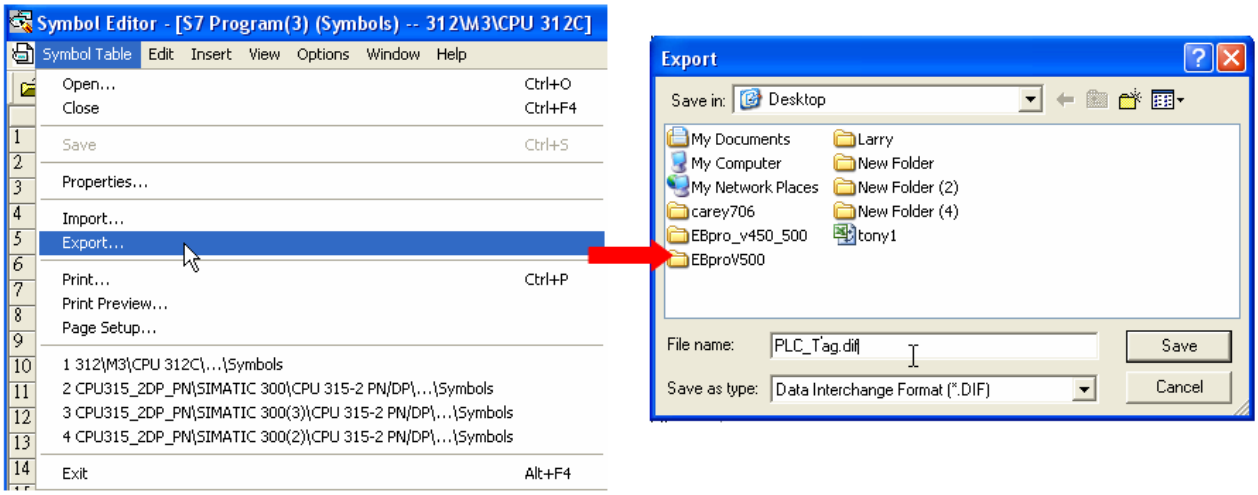


2. Building *.AWF File


a、 In **Blocks** create items as shown below:

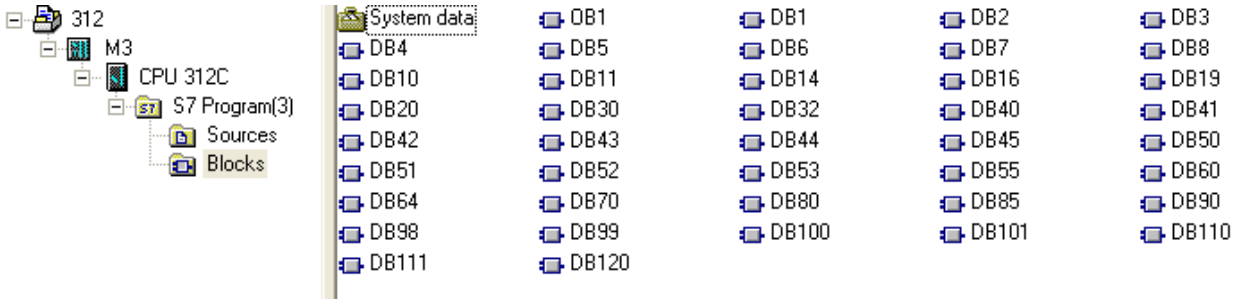


b、 Open **LAD/STL, FBD – Programming S7 Blocks**, click **File** -> **Generate Source.**

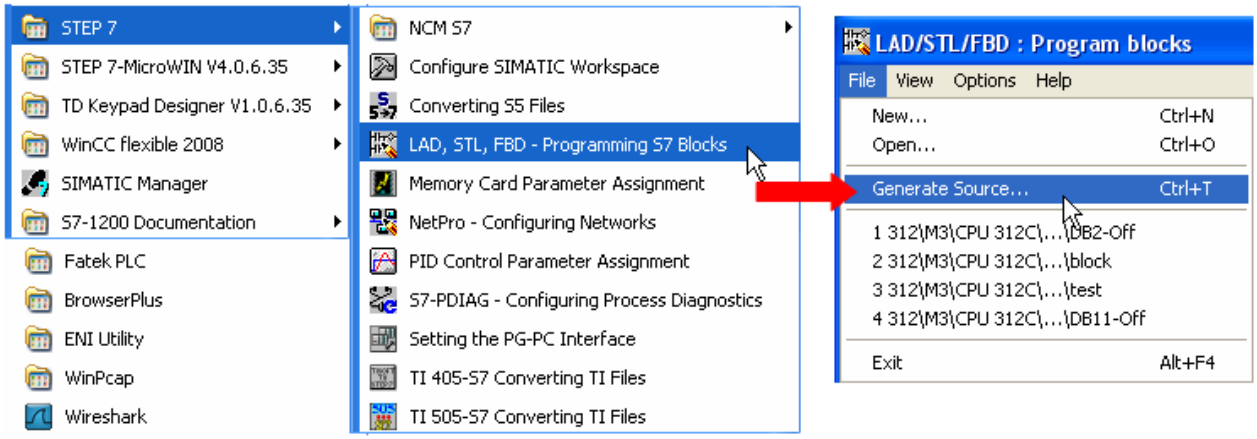


c、 Select **Sources** as storage path, specify the file name then click **OK**.

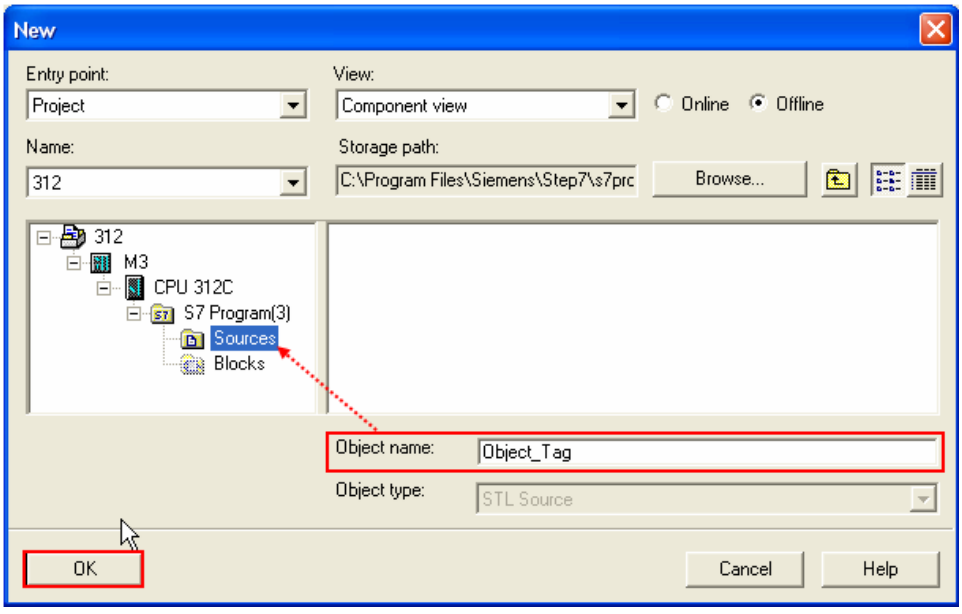


d、 Select the objects to be exported then click **OK**.

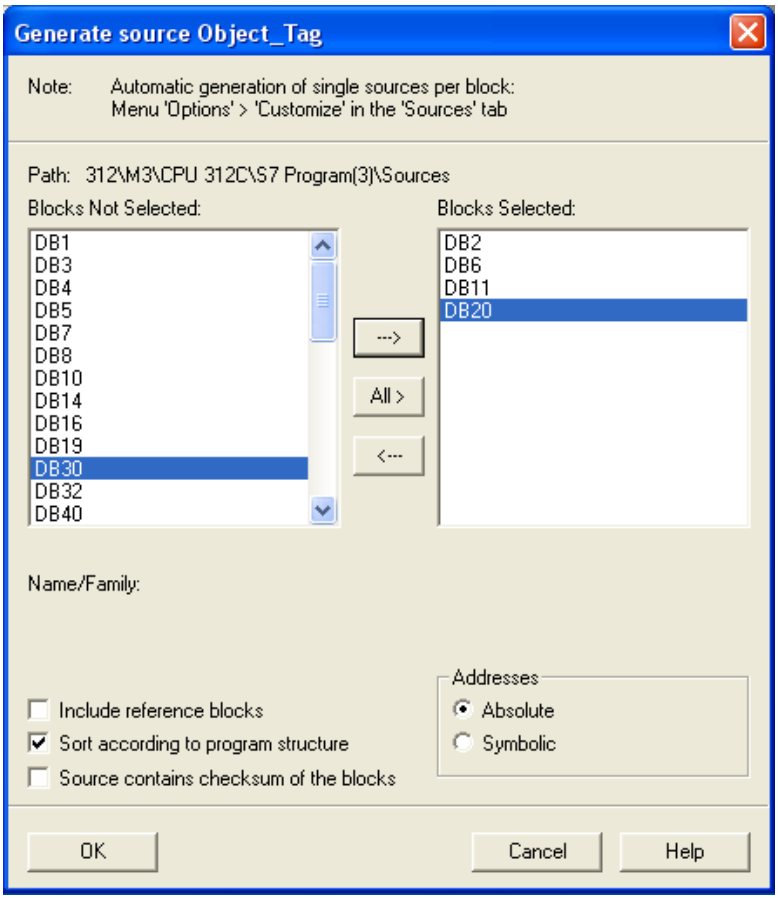

e、 Under **Sources** there will be names of the saved files, select **Export Source** to build ***.AWL** file.

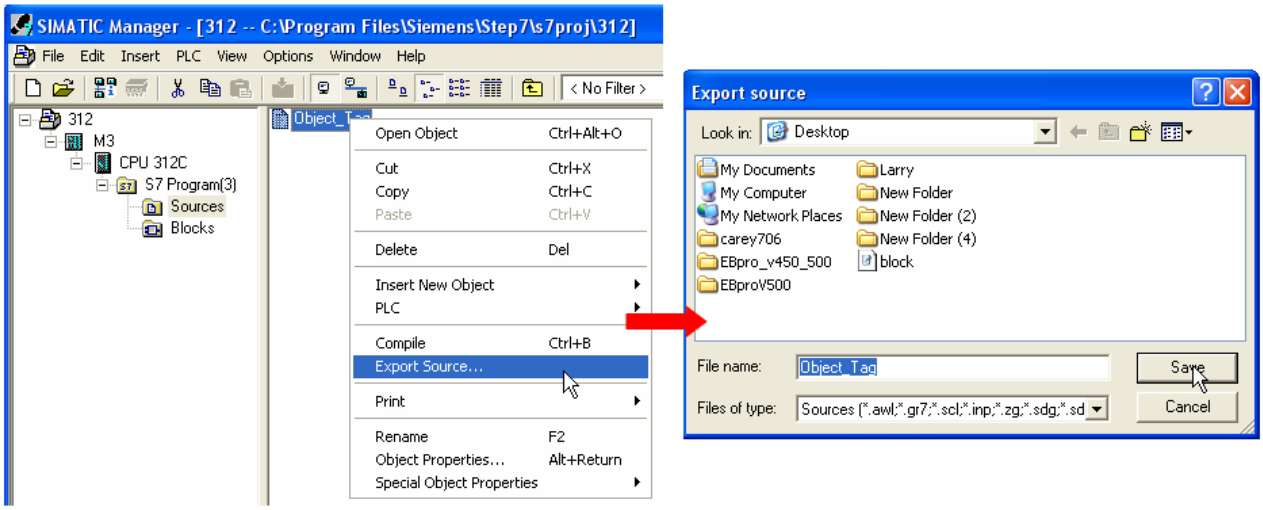

The generated *.dif and *.AWL files can be imported in EasyBuilder8000/EasyBuilderPro **System Parameter Settings**, by clicking **Import Tag**.

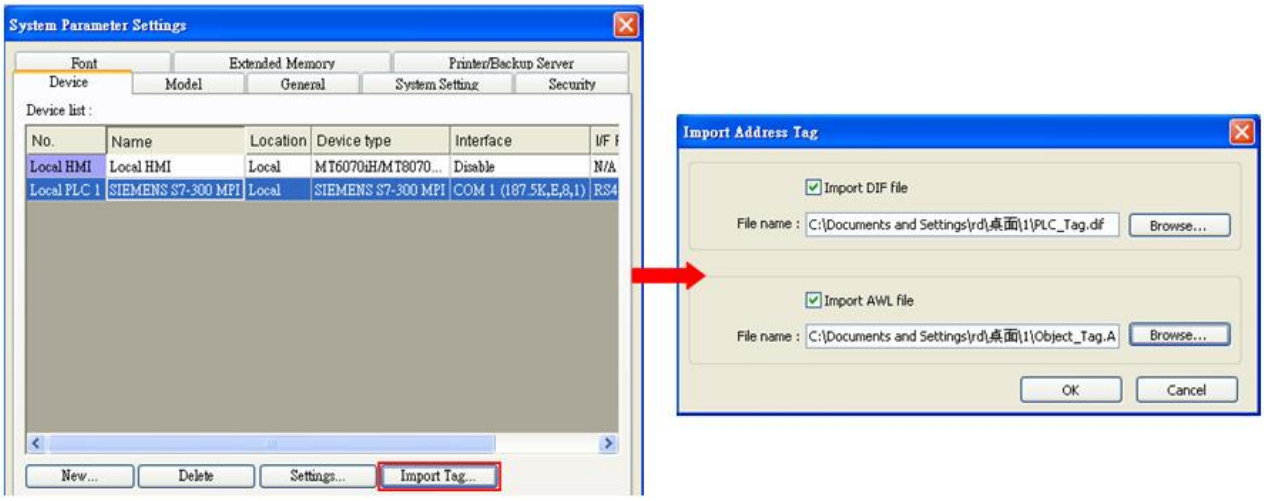


Tag information successfully imported.



Pass-Through Settings:

[Designate client IP]: In Pass-through mode designate the client IP address to connect HMI. The “client” usually refers to Siemens Step 7 application.

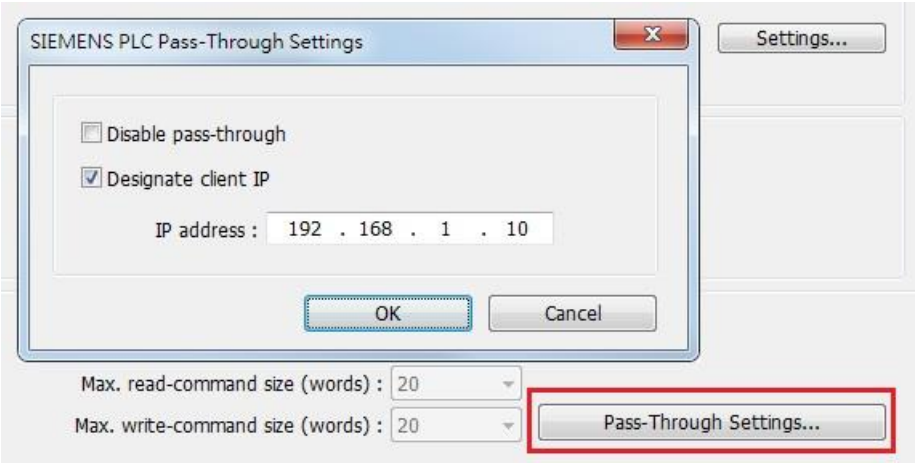

The following lists the system registers relevant to Siemens S7-200 PPI and Siemens S7-300 MPI Pass-through feature.

- [LW-10850: disable/enable (0 : disable, 1 : normal, 2 : IP limited) (siemens pass-through)]
- [LW-10851: destination COM port (siemens pass-through)]: Generally refers to the COM port connected with PLC.
- [LW-10852: destination PLC station no. (siemens pass-through)]
- [LW-10853: communication protocol (0 : invalid, 1 : PPI, 2 : MPI) (siemens pass-through)]
- [LW-10854 to LW-10857: IP of connecting client (siemens pass-through)]: Displays current client IP address connected with HMI.
- [LW-10858 to LW-10861: IP of designated client (siemens pass-through)]: If LW-10850 is set to 1, the system registers can be used to designate the client IP connected with HMI.
- [LW-10862: connection status (0 : ready, 1 : client connecting) (siemens pass-through)]
- [LW-10863: execution status (0 : normal, 1 : error) (siemens pass-through)]
- [LW-10864: the last error (siemens pass-through)]

The following table lists the error codes, the description of each code, and the possible reason.

Error Code	Description	Possible Reason
0	Successfully executed	
1	Prohibit client from connecting HMI	HMI is already running pass-through and won't accept any request from other client.
2	Prohibit client from connecting HMI	When LW-10850 is set to 1, the client IP for connecting HMI is different from the IP specified in LW-10858 ~ LW-10861.
3	Invalid communication protocol	Invalid setting in LW-10853.
4	Invalid PLC station number	The PLC station number specified in LW-10852 does not exist.
5	Delayed communication	PLC connection failure.
6	Busy communication	PLC does not accept pass-through request, please confirm PLC settings.
7	Invalid pass-through request	Environment setup failure.

Wiring Diagram:

S7-200 PPI , S7-300 MPI :RS485 2W

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8
Data+	6	1	⟷	3
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	5	5	⟷	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	8
Data+	2	⟷	3
GND	5	⟷	5


Siemens S7-300/ET200S (Ethernet)

Supported Series: Siemens S7-300 Ethernet Series PLC, Ethernet module CP-343-1, CPU315-2 PN/DP, CPU317-2 PN/DP, CPU319-3 PN/DP, and ET200S.
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SIEMENS S7-300/ET200S (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
PLC sta. no.	1	0-31	

In V3.00 and later versions, setting **[Interval of block pack]** to 0 can optimize efficiency.

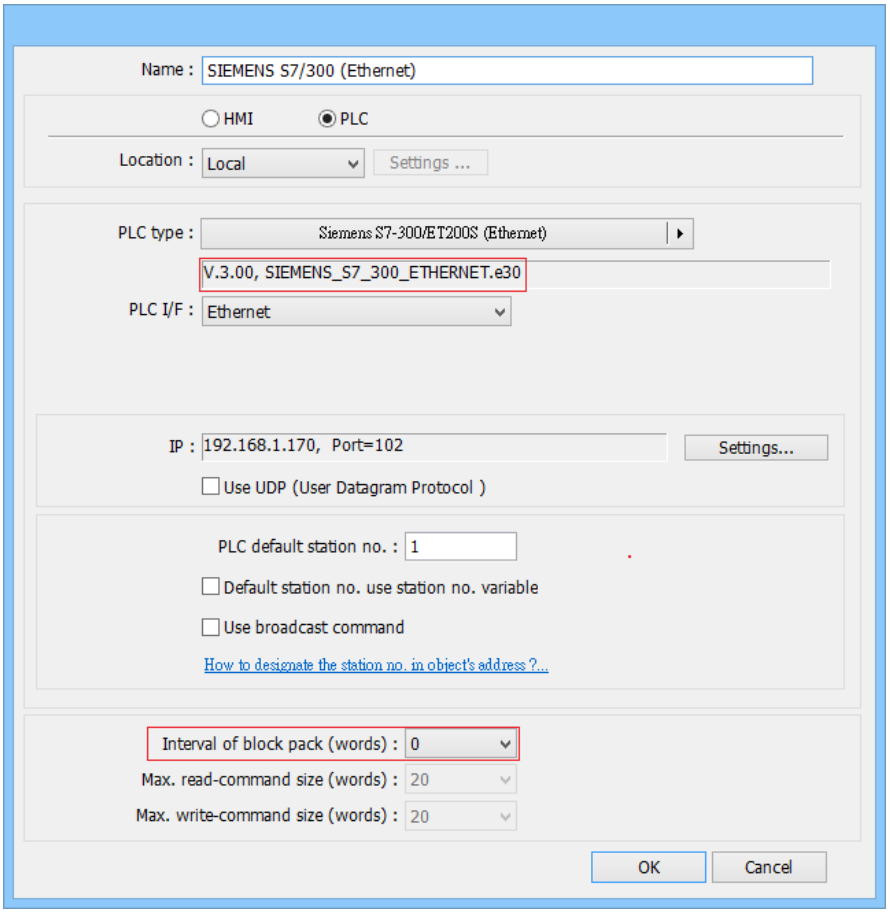

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFFDDDDo	0 ~ 6553599997	
B	DBxBit	FFFFFDDDDDo	0 ~ 10700655327	
B	DB1Bit-DB99Bit	DDDDDo	0 ~ 655327	Data Register Bit
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	Bit Memory Double Word
DW	MD_Anyaddr	DDDD	0 ~ 4094	Bit Memory Double Word (must be even)
Byte	DBBn	FFFFFDDDD	0 ~ 655359999	Data Register Byte
Byte	DBBx	FFFFFDDDDD	0 ~ 1070065532	
W	DBn	FFFFFDDDD	0 ~ 655359999	Data Register (must be even)
W	DBx	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn	FFFFFDDDD	0 ~ 655359999	Data Register Double Word (must be even)
DW	DBDx	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn_Anyaddr	FFFFDDDD	0 ~ 40969999	Data Register Double Word (must be even)
W	DBn_String	FFFFFDDDD	0 ~ 655359999	
W	DBx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DBn_String1	FFFFFDDDD	0 ~ 655359999	
W	DBx_String1	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn_String	FFFFFDDDD	0 ~ 655359999	
DW	DBDx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DB1 ~ DB99	DDDDD	0 ~ 65532	Data Register(must be even)


- Double word and floating point value must use DBDn device type.

How to Import Tag:


SIEMENS STEP 7 program allows building files of user-defined tag (***.dif** file and ***.AWL** file), and import these files in EasyBuilder8000/EasyBuilderPro -> System Parameter Settings. The following describes how to build and import these two types of files.

1. Building *.dif File

a、 In “Symbols” create user-defined tag.

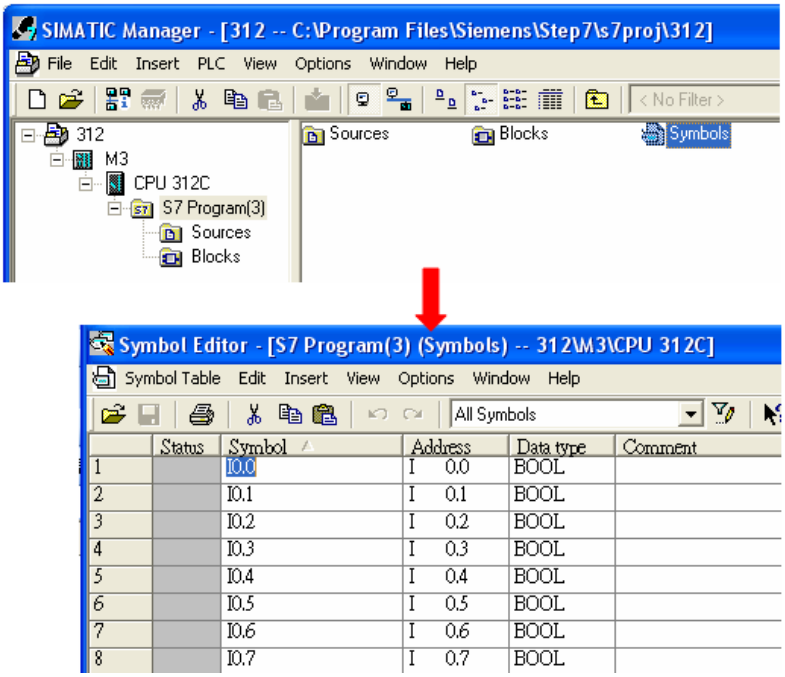


b、 Click **Export** to export the edited file and click **Save**.

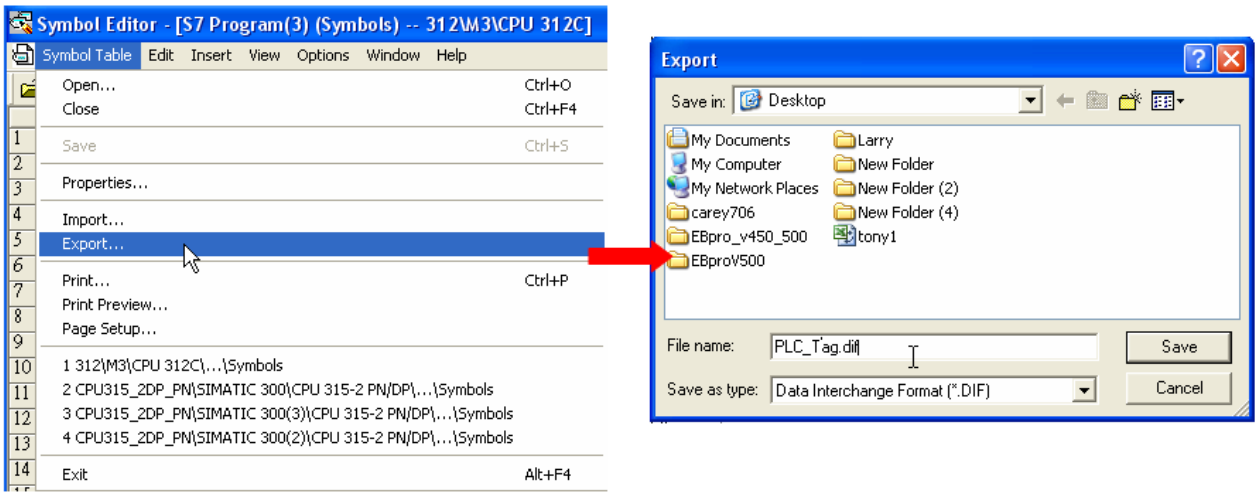


2. Building *.AWF File


a、 In **Blocks** create items as shown below:

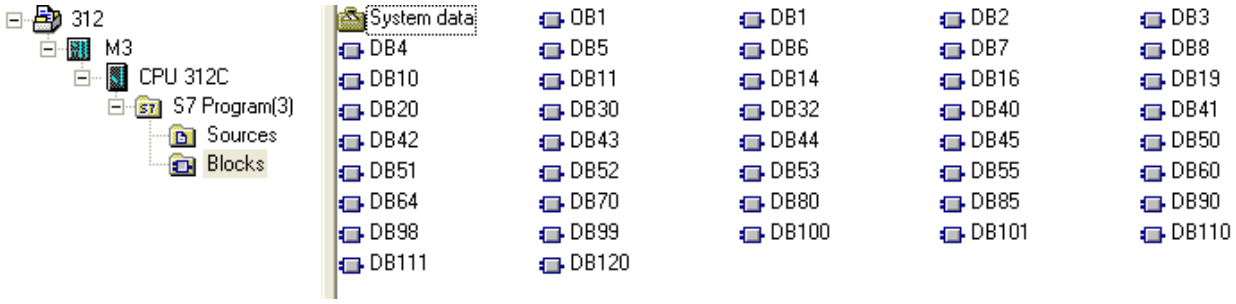


b、 Open **LAD/STL, FBD – Programming S7 Blocks**, click **File** -> **Generate Source.**

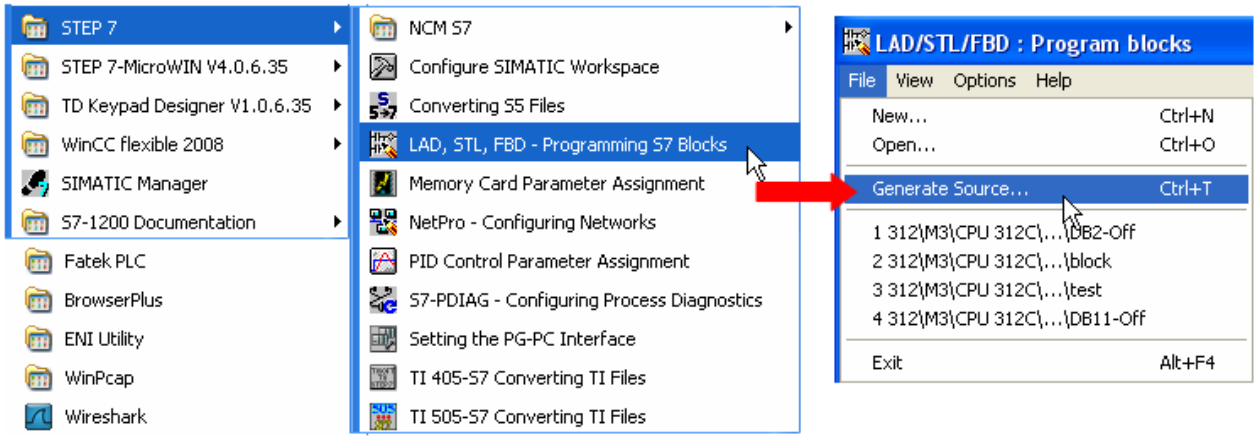


c、 Select **Sources** as storage path, specify the file name then click **OK**.

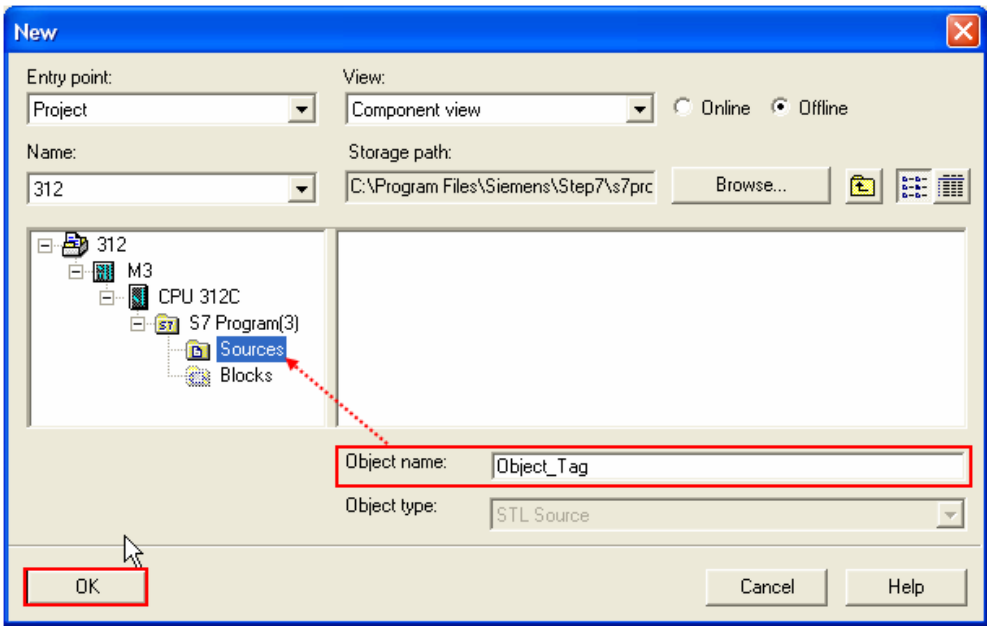


d、 Select the objects to be exported then click **OK**.

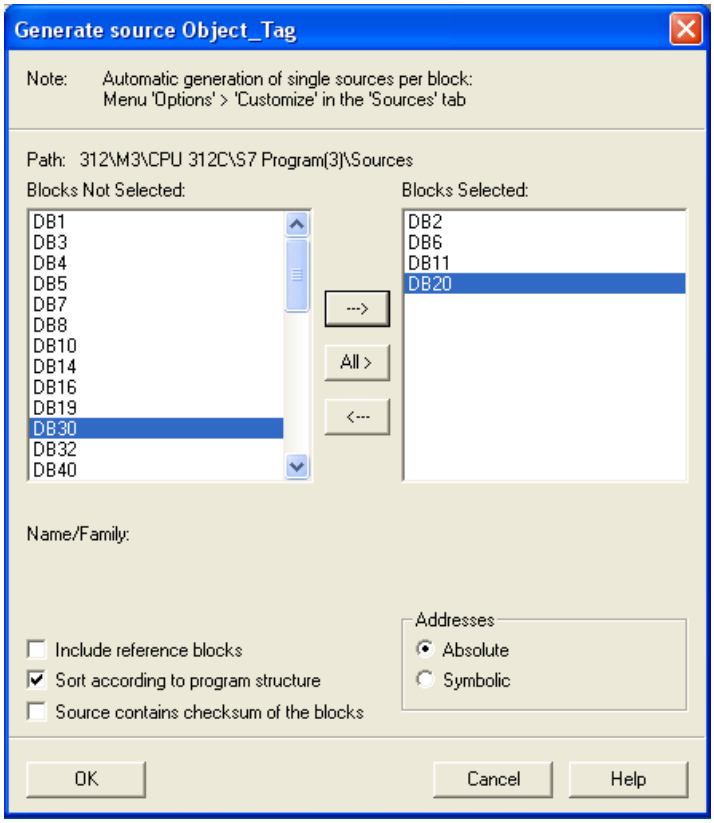

e、 Under **Sources** there will be names of the saved files, select **Export Source** to build ***.AWL** file.

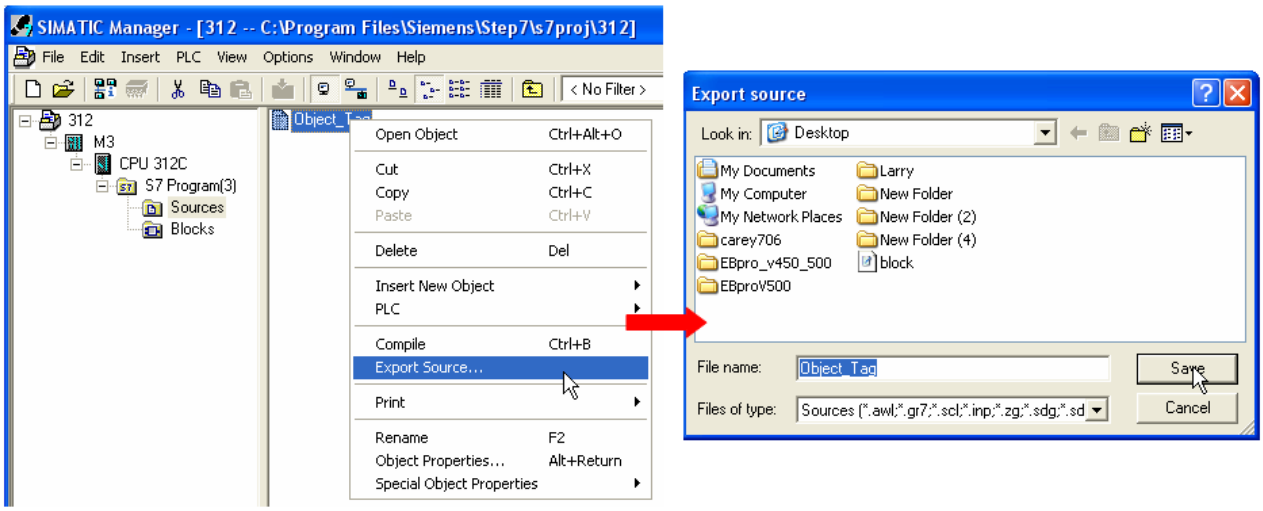

The generated *.dif and *.AWL files can be imported in EasyBuilder8000/EasyBuilderPro **System Parameter Settings**, by clicking **Import Tag**.

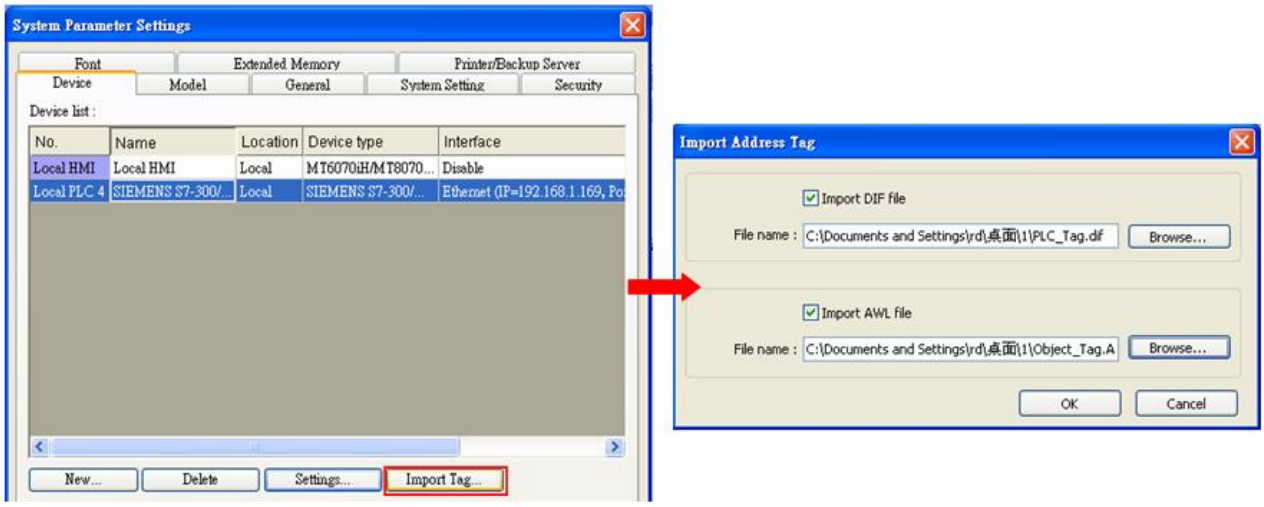


Tag information successfully imported.



Wiring Diagram:

Ethernet cable:

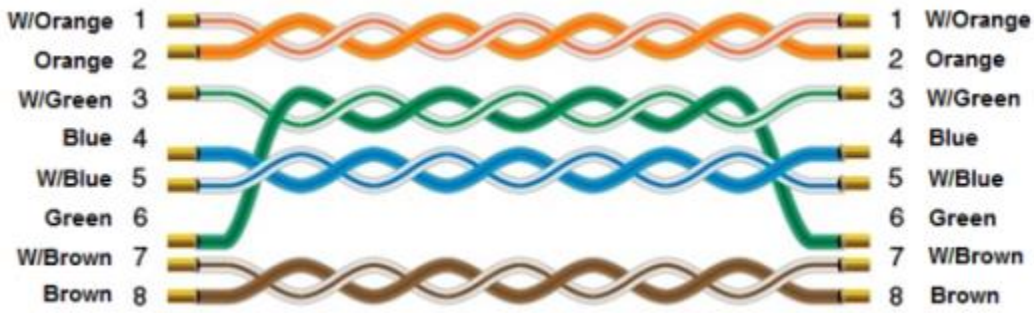

Siemens S7-400 (Ethernet)

Supported Series: Siemens S7-400/1200 Ethernet PLC.
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Siemens S7-400 (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
Link type	PG	PC, OP	
Rack	0	0-7	
CPU slot	3	1-31	To Connect with S7-1200,slot 1 must be selected.
PLC sta. no.	0	0-31	

Device Address:


Bit/Wor	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFFDDDDo	0 ~ 6553599997	
B	DBxBit	FFFFFDDDDD	0 ~ 10700655327	
B	DB1Bit-DB99Bit	DDDDDo	0 ~ 655327	Data Register Bit
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	
Byte	DBBn	FFFFFDDDD	0 ~ 655359999	Data Register Byte
Byte	DBBx	FFFFFDDDDD	0 ~ 1070065532	
W	DBn	FFFFFDDDD	0 ~ 655359999	Data Register (must be even)
W	DBx	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn	FFFFFDDDD	0 ~ 655359999	Data Register Double Word (must be even)
DW	DBDx	FFFFFDDDDD	0 ~ 1070065532	

Bit/Wor	Device type	Format	Range	Memo
W	DBn_String	FFFFFDDDD	0 ~ 655359999	
W	DBx_String	FFFFFDDDDD	0 ~ 1070065532	
W	DBn_String1	FFFFDDDD	0 ~ 40969999	
W	DBx_String1	FFFFFDDDDD	0 ~ 1070065532	
DW	DBDn_String	FFFFFDDDD	0 ~ 655359999	
DW	DBDn_String	FFFFFDDDDD	0 ~ 1070065532	
W	DB1 ~ DB99	DDDDD	0 ~ 65532	Data Register (must be even)

* Double word and floating point value must use DBDn device type.


EasyBuilder Device Setting Steps

1. Open EasyBuilder, File/NEW, select HMI model and press [OK].

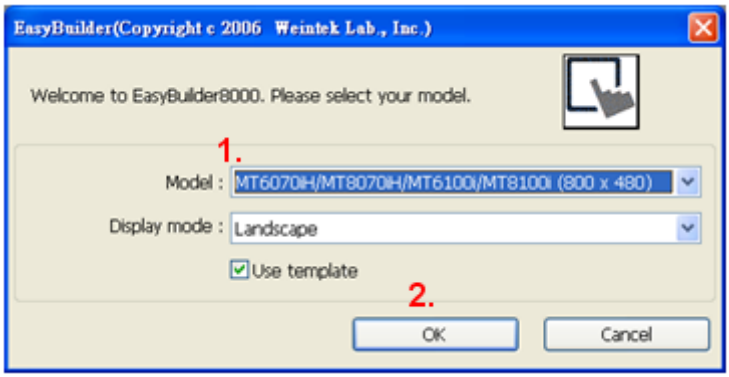


2. ”System Parameter Settings” window is shown, click [New].

3. Select “SIEMENS S7-400(ETHERNET)”.

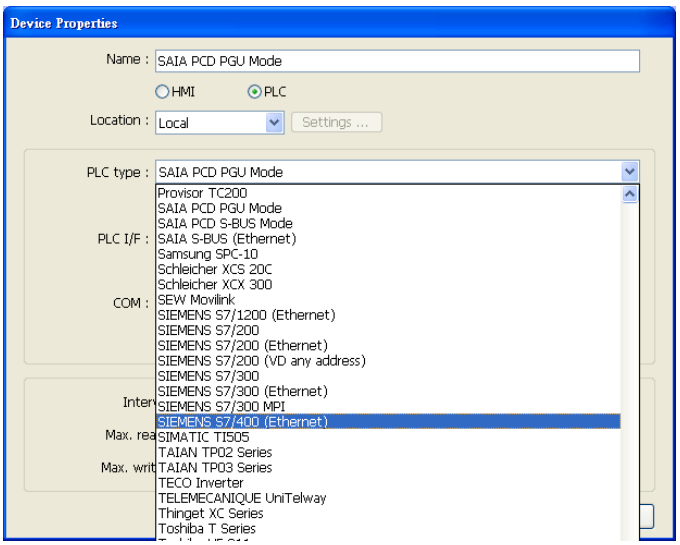


4. Press [Settings].

5. Set S7-400 IP, Port no., Link type, Rack and CPU slot. (must match PLC settings)

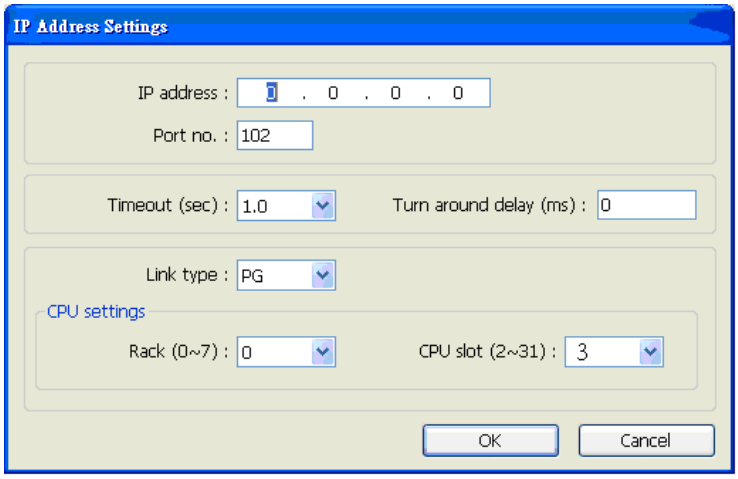

6. The setting will be finished as below.

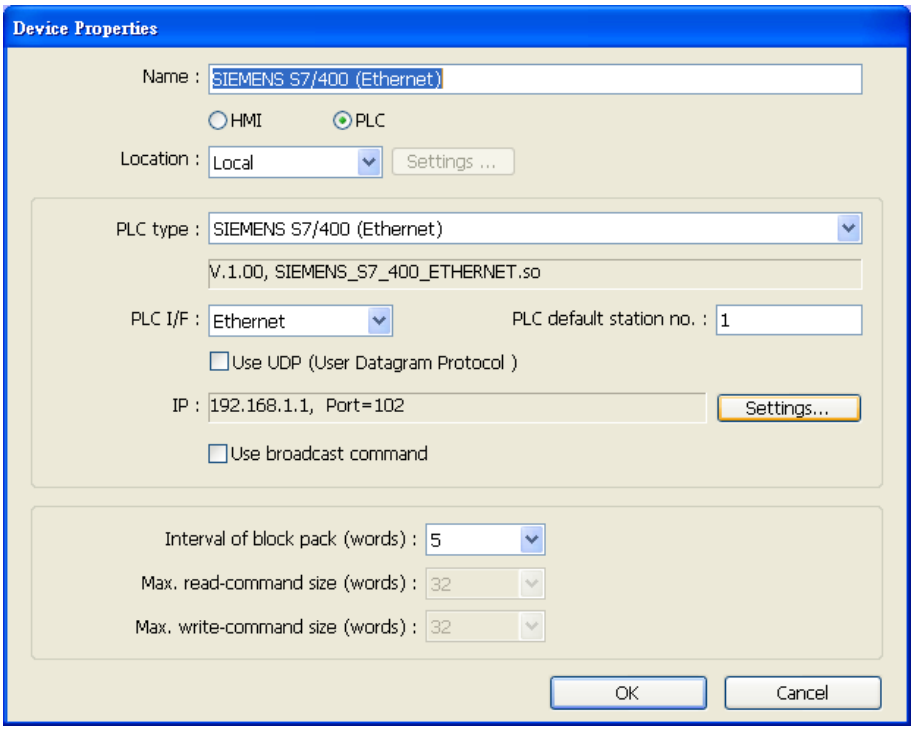


How to Import Tag:


SIEMENS STEP 7 program allows building files of user-defined tag (***.dif** file and ***.AWL** file), and import these files in EasyBuilder8000/EasyBuilderPro -> System Parameter Settings. The following describes how to build and import these two types of files.

1. Building *.dif File

a、 In “Symbols” create user-defined tag.

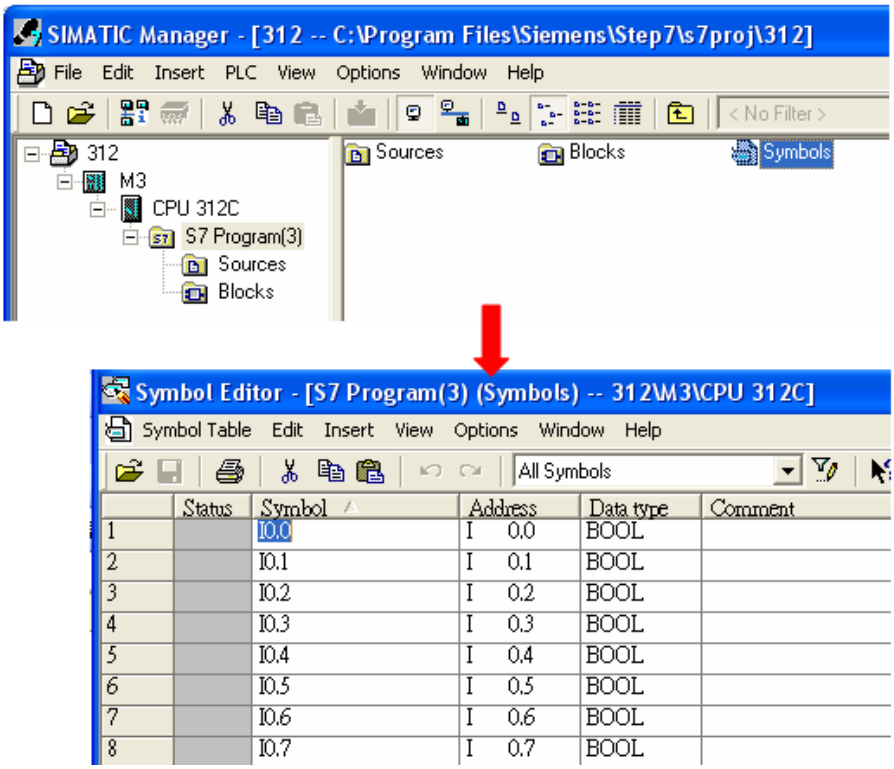


b、 Click **Export** to export the edited file and click **Save**.

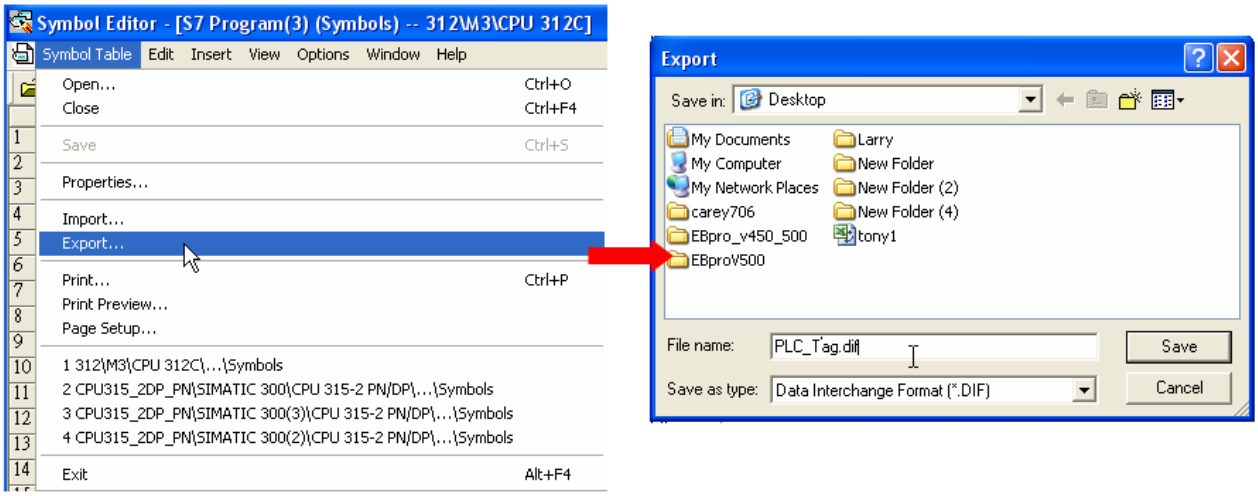


2. Building *.AWF File


a、 In **Blocks** create items as shown below:

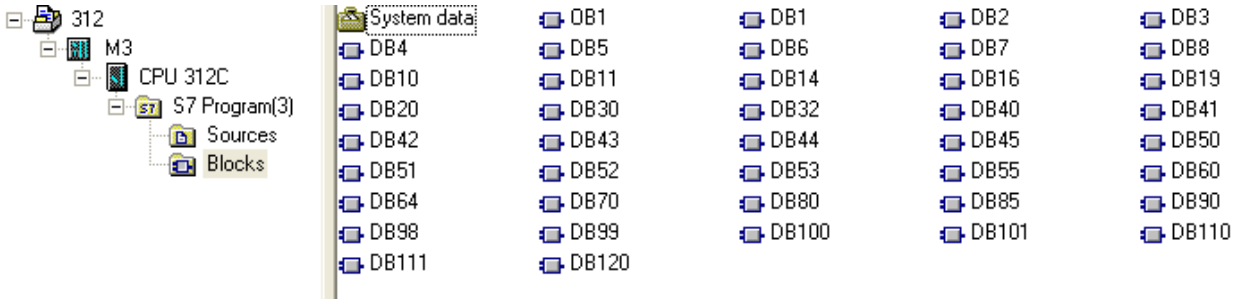


b、 Open **LAD/STL, FBD – Programming S7 Blocks**, click **File** -> **Generate Source.**

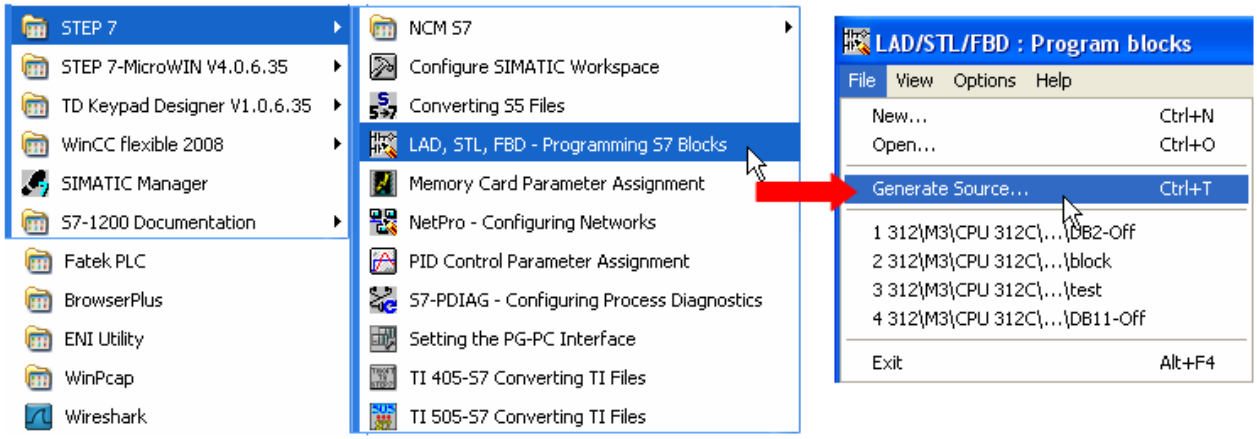


c、 Select **Sources** as storage path, specify the file name then click **OK**.

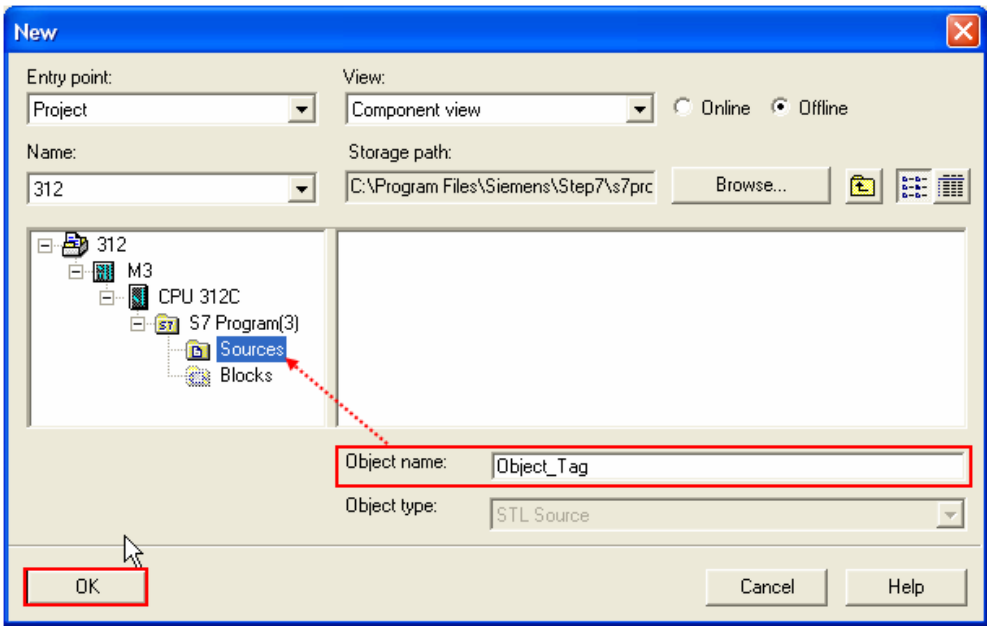


d、 Select the objects to be exported then click **OK**.

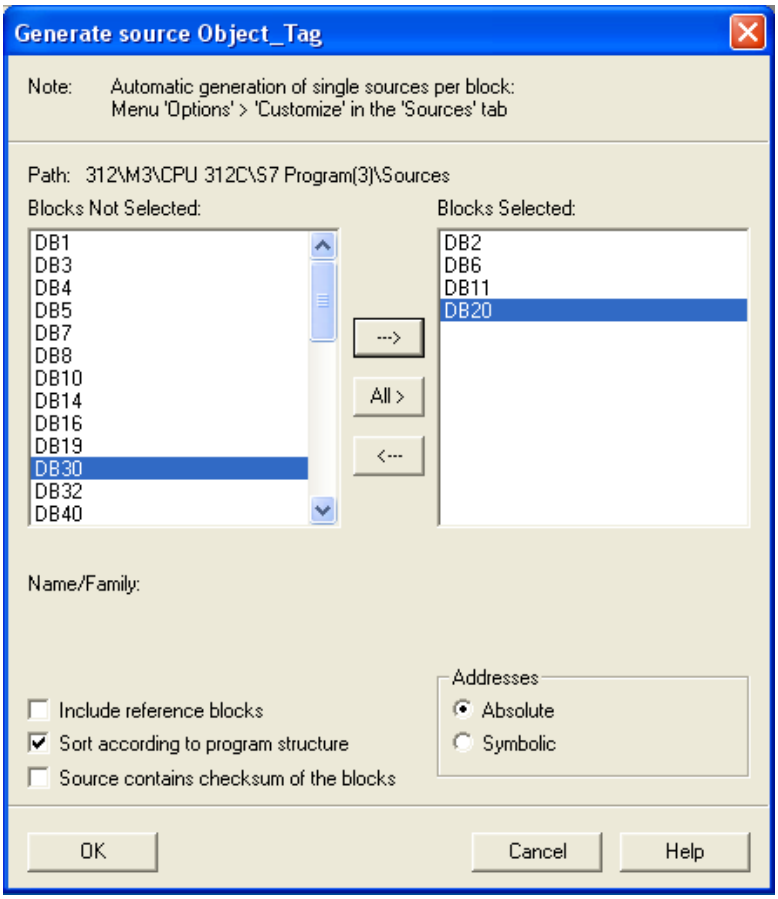

e、 Under **Sources** there will be names of the saved files, select **Export Source** to build ***.AWL** file.

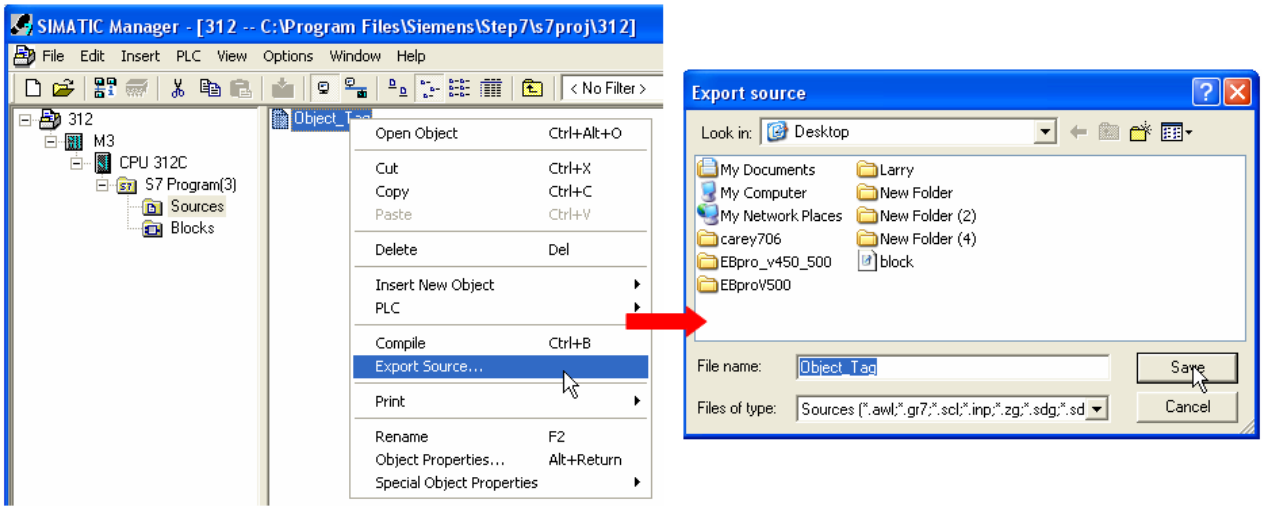

The generated *.dif and *.AWL files can be imported in EasyBuilder8000/EasyBuilderPro **System Parameter Settings**, by clicking **Import Tag**.

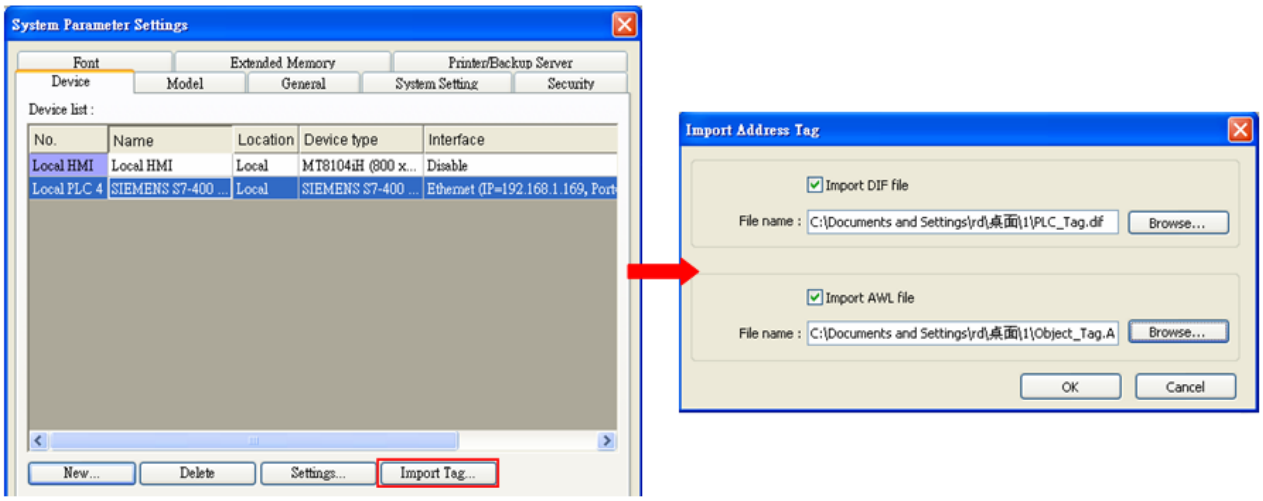

Tag information successfully imported.



Wiring Diagram:

Ethernet cable:



Siemens TI505

Supported Series: SIMATIC TI505 Series PLCs: TI520, TI525, TI530, TI535, TI545, TI555, TI560, TI565, TI575. Use NITP protocol in a point-to-point, single master, single slave format.
CTI 2500 Series PLCs (Classic and Compact): C100, C200, C300 and C400.
Website Siemens: http://www.siemens.com/entry/cc/en/
Website CTI: http://www.controltechnology.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SIMATIC TI505		NITP protocol
PLC I/F	RS232	RS232, RS485 4W	
Baud rate	19200	19200	
Data bits	7	7	
Parity	Odd	Odd	
Stop bits	1	1	
PLC sta. no.	0	Does not apply	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CR	DDDDD	1 ~ 65535	Internal Relay
B	X	DDDDD	1 ~ 65535	Discrete Input Coils
B	Y	DDDDD	1 ~ 65535	Discrete Output Coils
B	V_Bit	DDDDDdd	101 ~ 6553616	User Data Register Bits
W	V	DDDDD	1 ~ 65535	User Data Registers
DW	VD	DDDDD	1 ~ 65536	User Data Registers (32bit)
W	STW	DDDDD	1 ~ 65535	Status Word Registers
W	TCP	DDDDD	1 ~ 65535	Timer/Counter Preset Values
W	TCC	DDDDD	1 ~ 65535	Timer/Counter Current Values
W	WX	DDDDD	1 ~ 65535	Word Discrete Inputs
W	WY	DDDDD	1 ~ 65535	Word Discrete Outputs

Wiring Diagram:

RS-232 25P D-Sub (Diagram1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

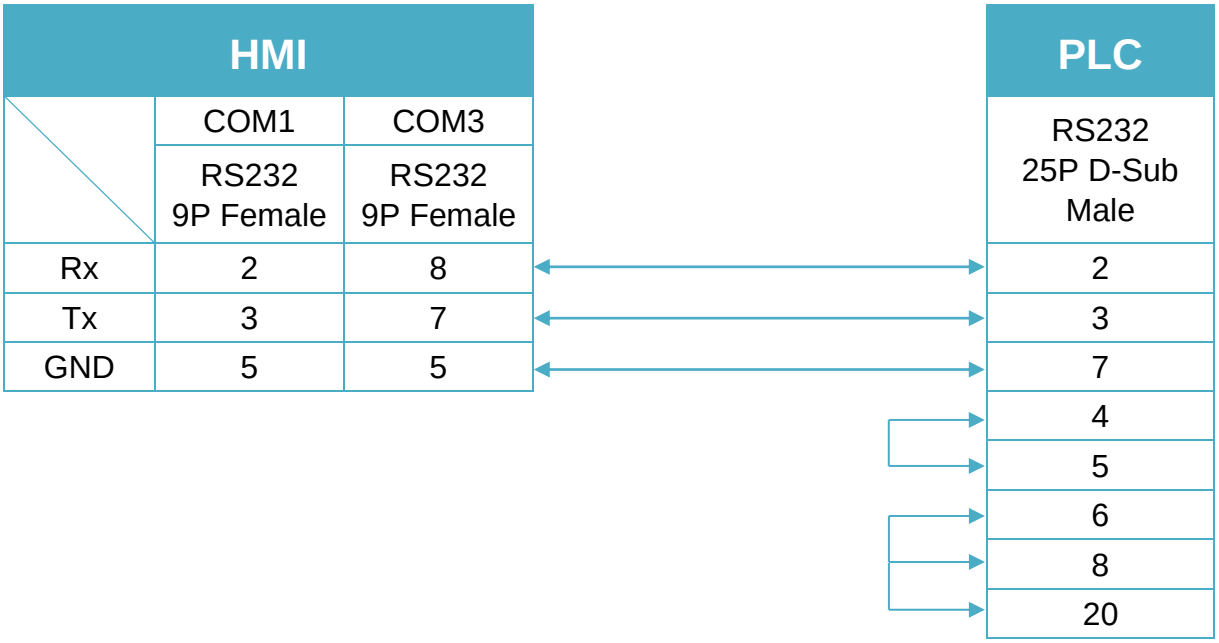


Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


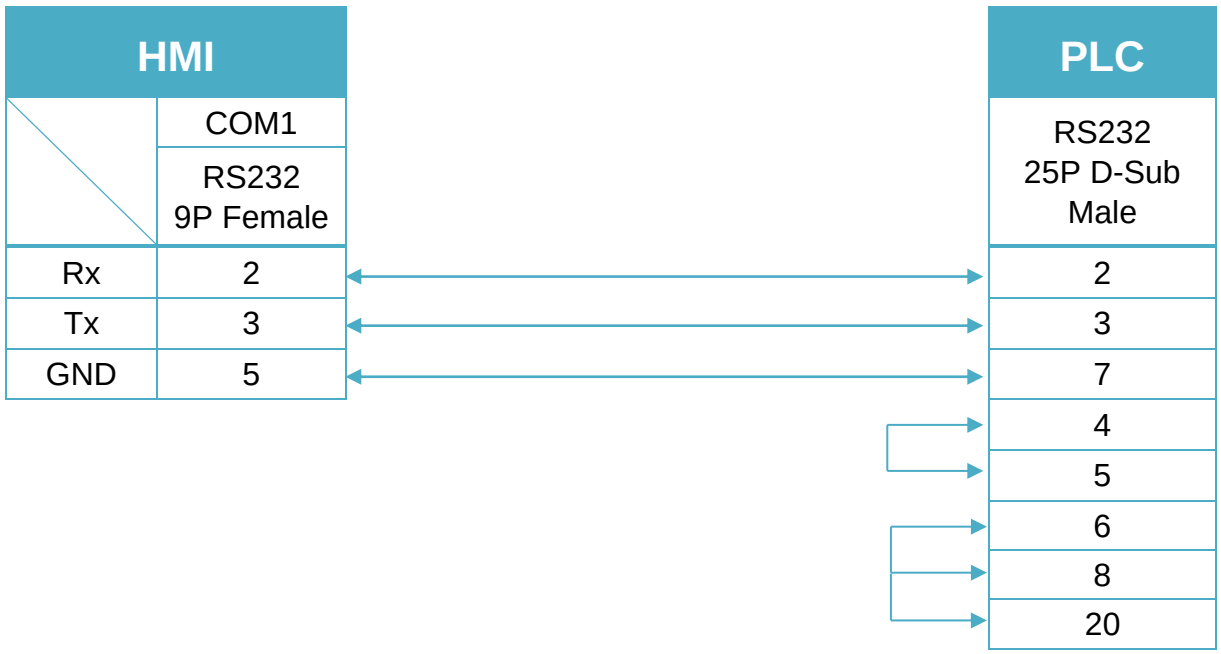


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

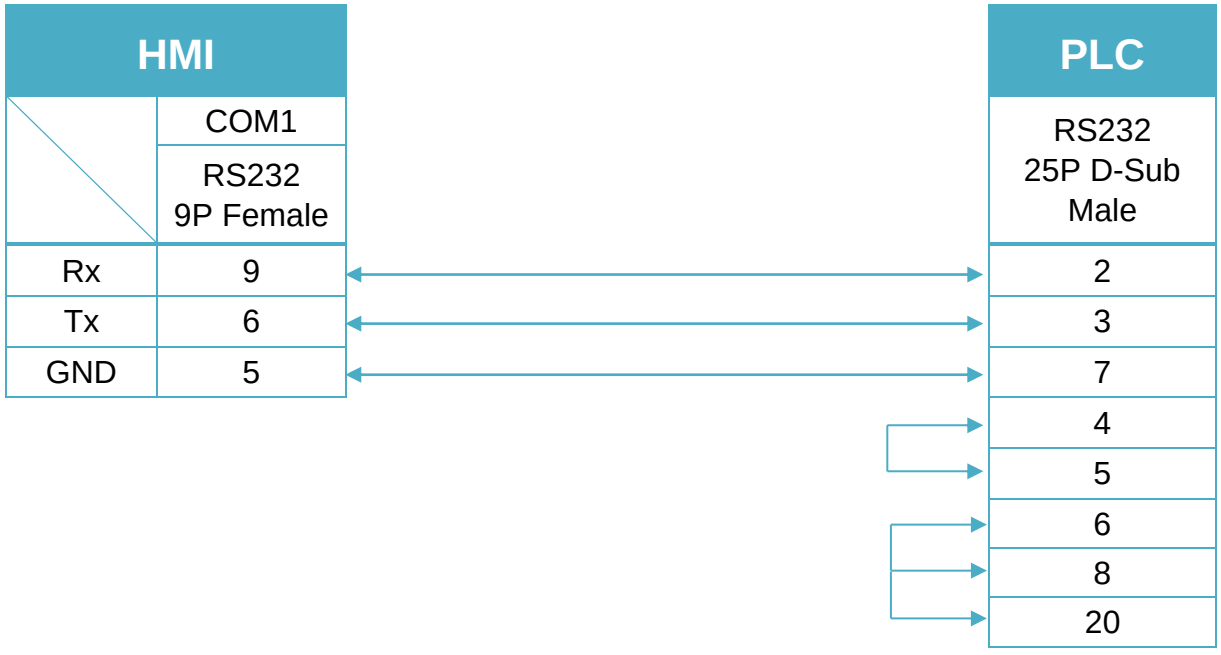

RS-232 9P D-Sub (Diagram4 ~ Diagram 7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

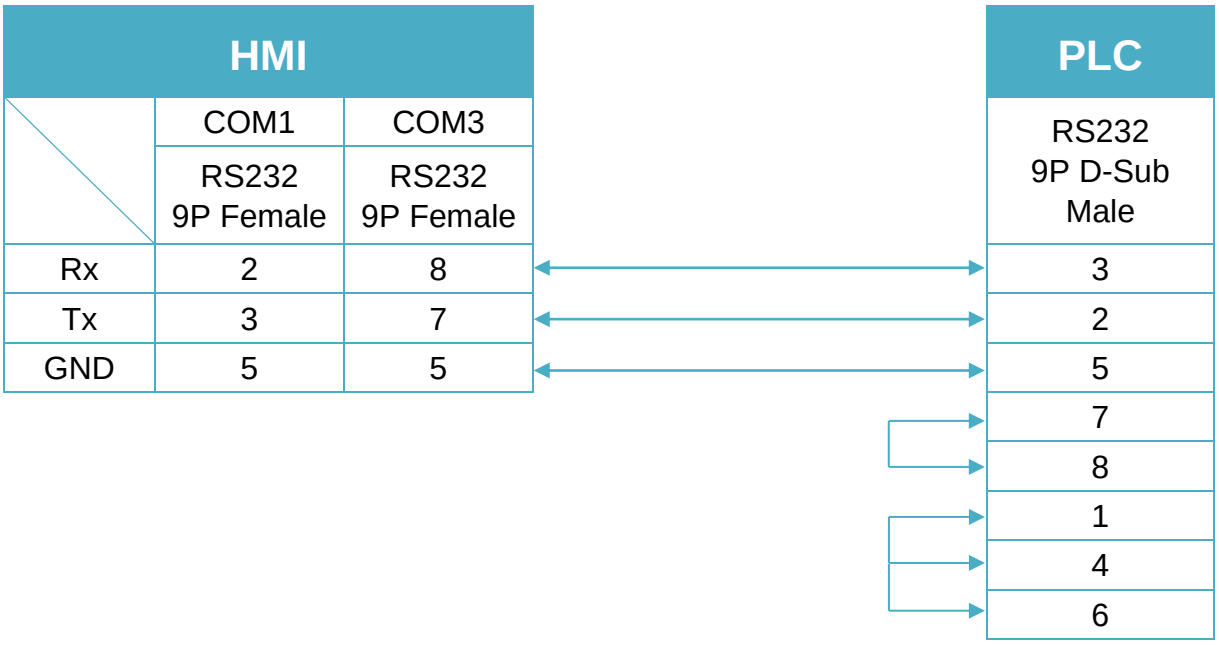


Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

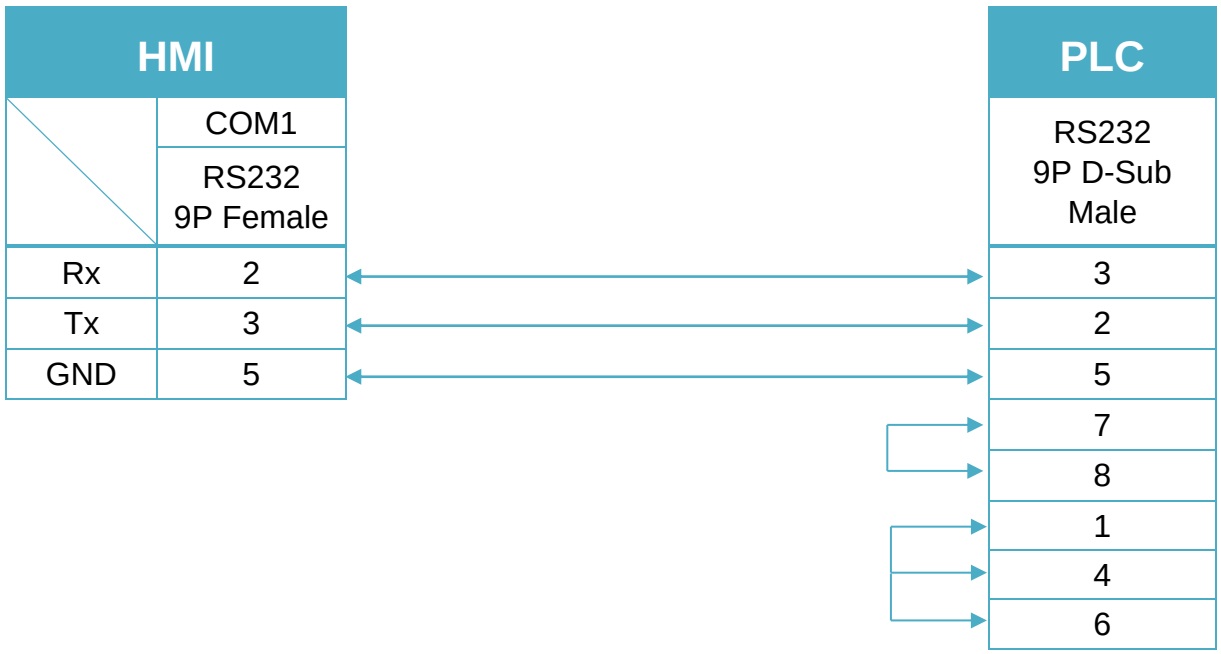


Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

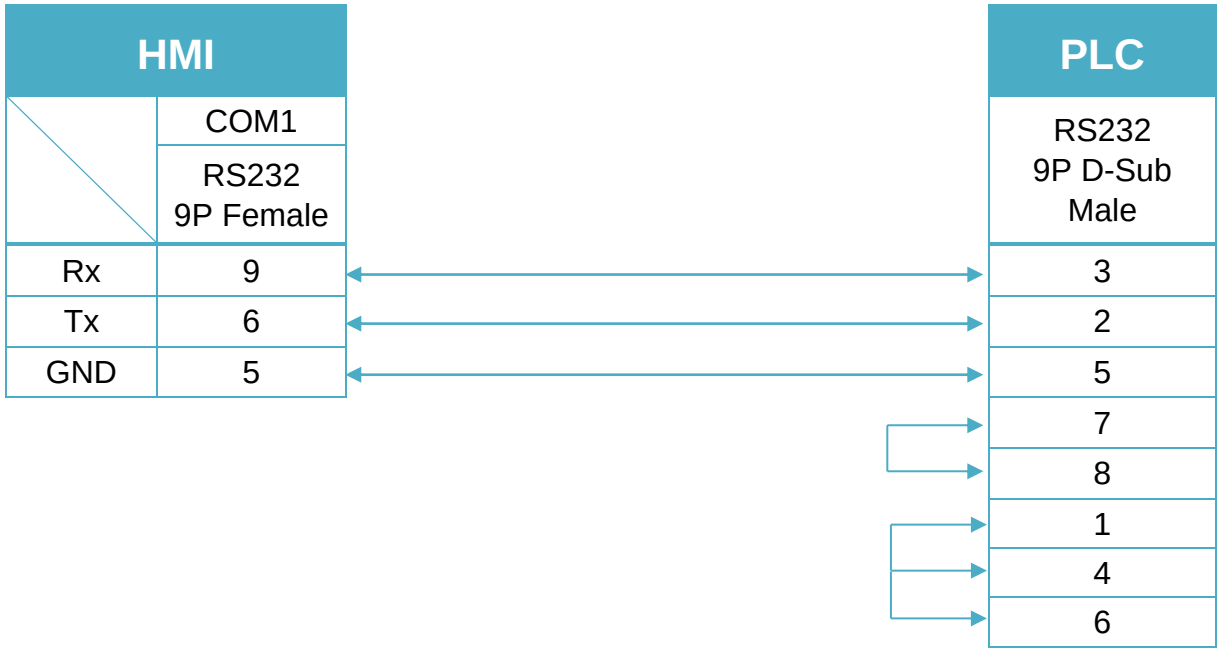


Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	7
Rx+	2	⟷	1
Tx-	3	⟷	8
TX+	4	⟷	6
GND	5	⟷	5

RS-485 4W Mini-Din (Diagram8 ~ Diagram 10)

.Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	7	⟷	7
Rx+	6	⟷	1
Tx-	9	⟷	8
TX+	8	⟷	5
GND	5	⟷	6

Diagram 9

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	7
Rx+	2	⟷	1
Tx-	3	⟷	8
TX+	4	⟷	6
GND	5	⟷	5

Diagram 10

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	7
Rx+	2	⟷	1
Tx-	3	⟷	8
TX+	4	⟷	6
GND	5	⟷	5

Siemens TI505 (Ethernet)

Supported Series: SIMATIC TI505 Series PLCs: TI520, TI525, TI530, TI535, TI545, TI555, TI560, TI565, TI575 with ethernet module.
CTI 2500 Series PLCs (Classic and Compact): C100, C200, C300 and C400
Website Siemens: http://www.siemens.com/entry/cc/en/
Website CTI: http://www.controltechnology.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Siemens TI505 (Ethernet)		
PLC I/F	Ethernet		
Port no.	1505		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CR	DDDDD	1 ~ 65536	Internal Relay
B	X	DDDDD	1 ~ 65536	Discrete Input Coils
B	Y	DDDDD	1 ~ 65536	Discrete Output Coils
B	V_Bit	DDDDDdd	101 ~ 6553616	User Data Register Bits
W	V	DDDDD	1 ~ 65536	User Data Registers
DW	VD	DDDDD	1 ~ 65535	User Data Registers (32bit)
W	STW	DDDDD	1 ~ 65536	Status Word Registers
W	TCP	DDDDD	1 ~ 65536	Timer/Counter Preset Values
W	TCC	DDDDD	1 ~ 65536	Timer/Counter Current
W	WX	DDDDD	1 ~ 65536	Word Discrete Inputs
W	WY	DDDDD	1 ~ 65536	Word Discrete Outputs

Wiring Diagram:

Ethernet cable:



Siemens TI565

Supported Series: SIMATIC TI565
Website: http://www.siemens.com/entry/cc/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SIMATIC TI565		
PLC I/F	RS232	RS232, RS485 4W	
Baud rate	19200	19200	
Data bits	7	7	
Parity	Odd	Odd	
Stop bits	1	1	
PLC sta. no.	0	Does not apply	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	CR	DDDDD	1 ~ 65535	Internal Relay
B	X	DDDDD	1 ~ 65535	Discrete Input Coils
B	Y	DDDDD	1 ~ 65535	Discrete Output Coils
W	V	DDDDD	1 ~ 65535	User Data Registers
DW	VD	DDDDD	1 ~ 65535	User Data Registers (32bit)
W	STW	DDDDD	1 ~ 65535	Status Word Registers
W	TCP	DDDDD	1 ~ 65535	Timer/Counter Preset Values
W	TCC	DDDDD	1 ~ 65535	Timer/Counter Current Values
W	WX	DDDDD	1 ~ 65535	Word Discrete Inputs
W	WY	DDDDD	1 ~ 65535	Word Discrete Outputs

Wiring Diagram:

RS-232 25P D-Sub (Diagram1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

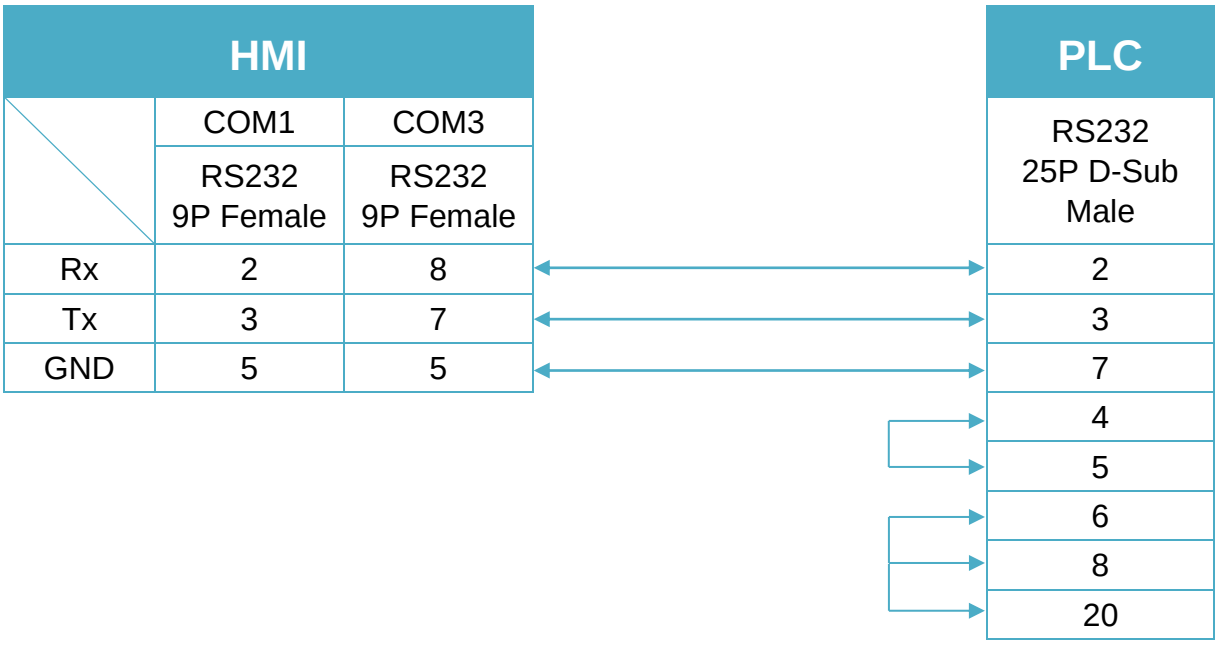


Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


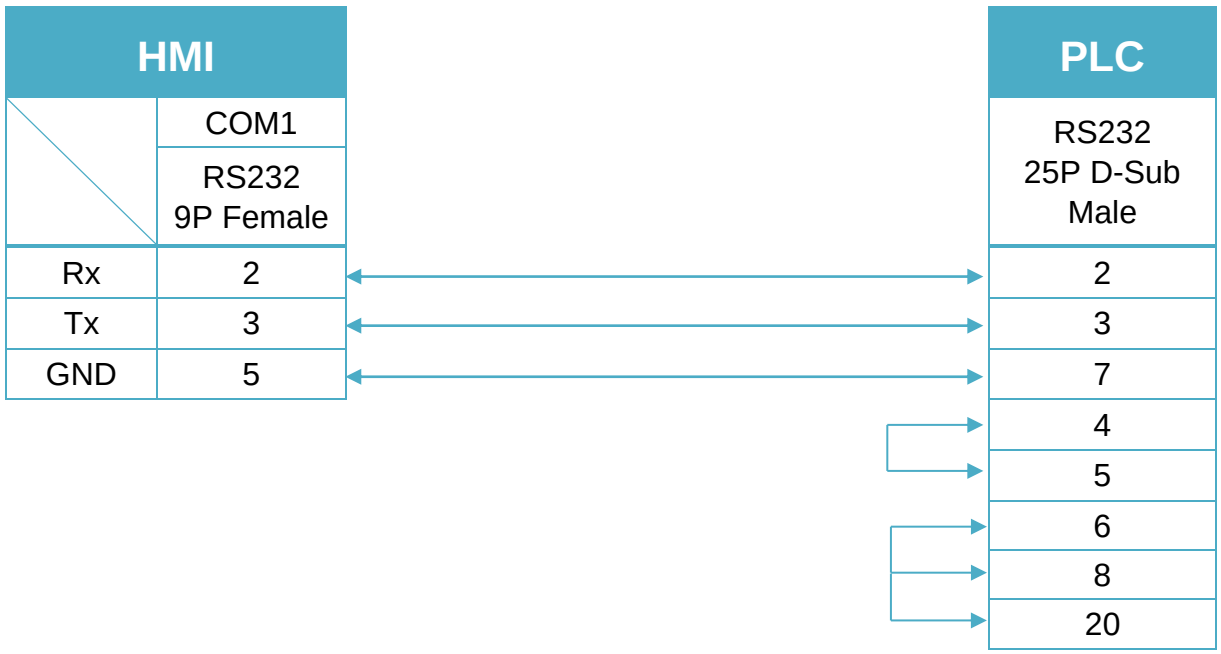


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

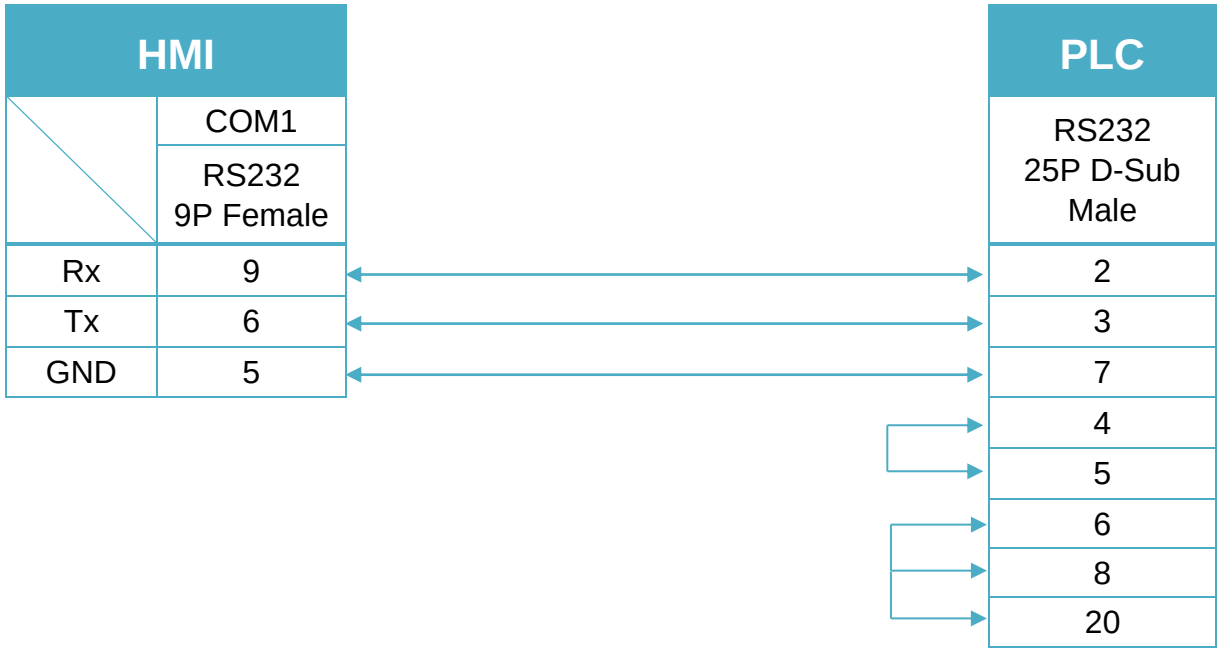

RS-232 9P D-Sub (Diagram4 ~ Diagram6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

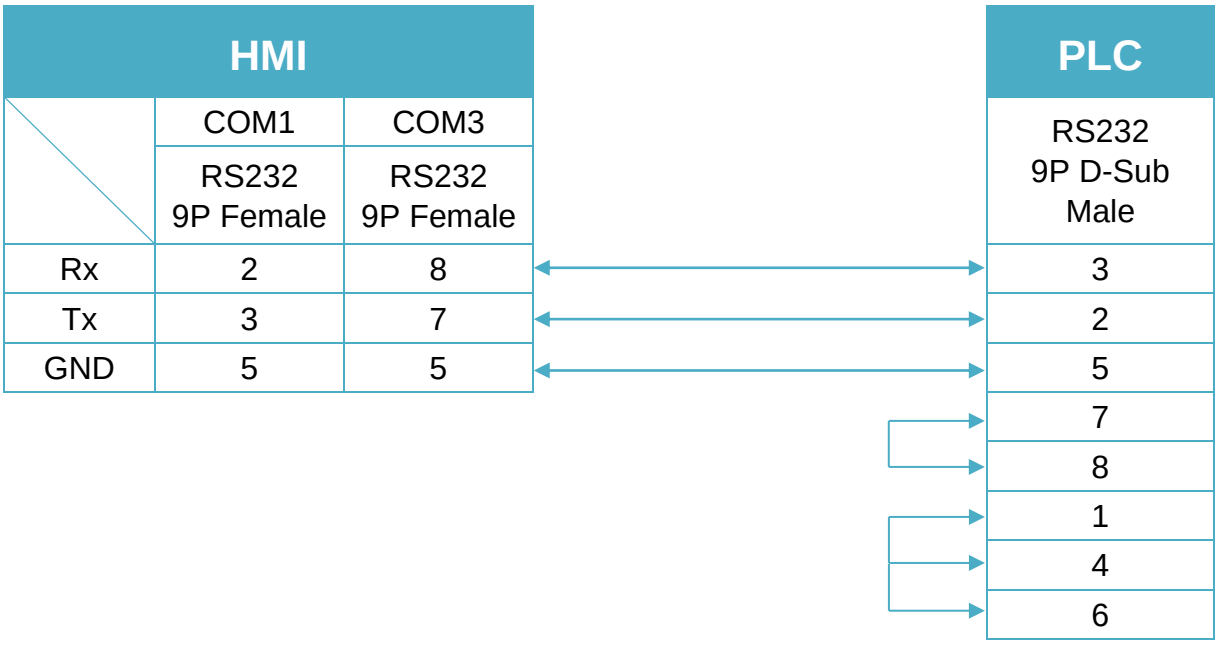


Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


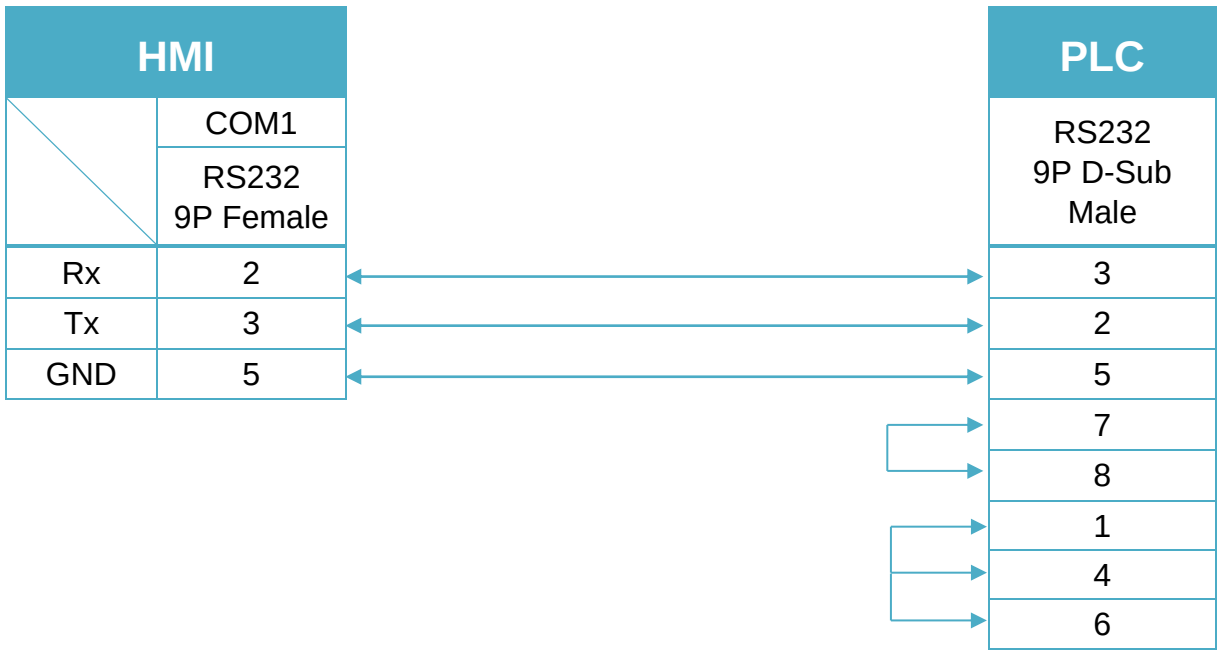


Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

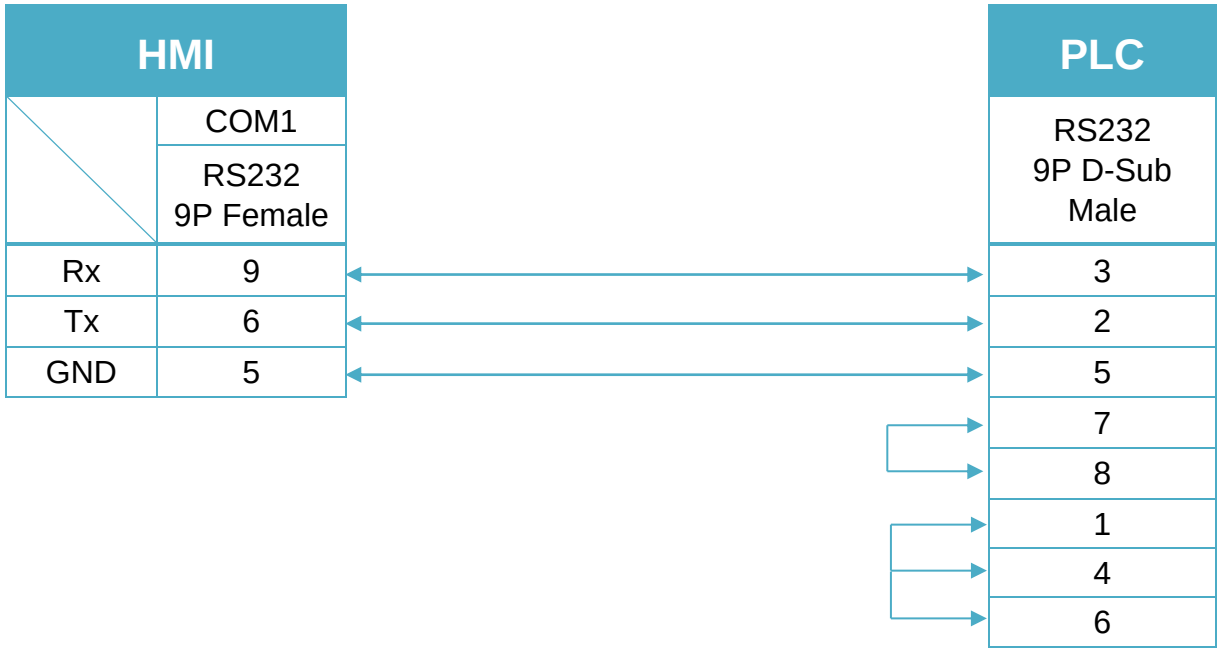

RS 485 4W 8P Mini-Din (Diagram7 ~ Diagram 10)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	7
Rx+	2	⟷	1
Tx-	3	⟷	8
TX+	4	⟷	6
GND	5	⟷	5

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	7	⟷	7
Rx+	6	⟷	1
Tx-	9	⟷	8
TX+	8	⟷	5
GND	5	⟷	6

Diagram 9

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	7
Rx+	2	⟷	1
Tx-	3	⟷	8
TX+	4	⟷	6
GND	5	⟷	5

Diagram 10

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	7
Rx+	2	⟷	1
Tx-	3	⟷	8
TX+	4	⟷	6
GND	5	⟷	5

SIGMATEK S-DIAS CPU (Ethernet)

Supported Series: SIGMATEK S-DIAS Digital Mix DM162
Website: http://www.sigmatek-automation.com/en/


HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SIGMATEK S-DIAS CPU (Ethernet)		
PLC I/F	Ethernet		
Port no.	1956		
PLC sta. no.	0		


On-line simulator	Yes	**Multi-HMI connect**	Yes

How to Import Tag:


1. Launch **LASAL Class 2**, click **Network View** tab, and the software editing area opens.

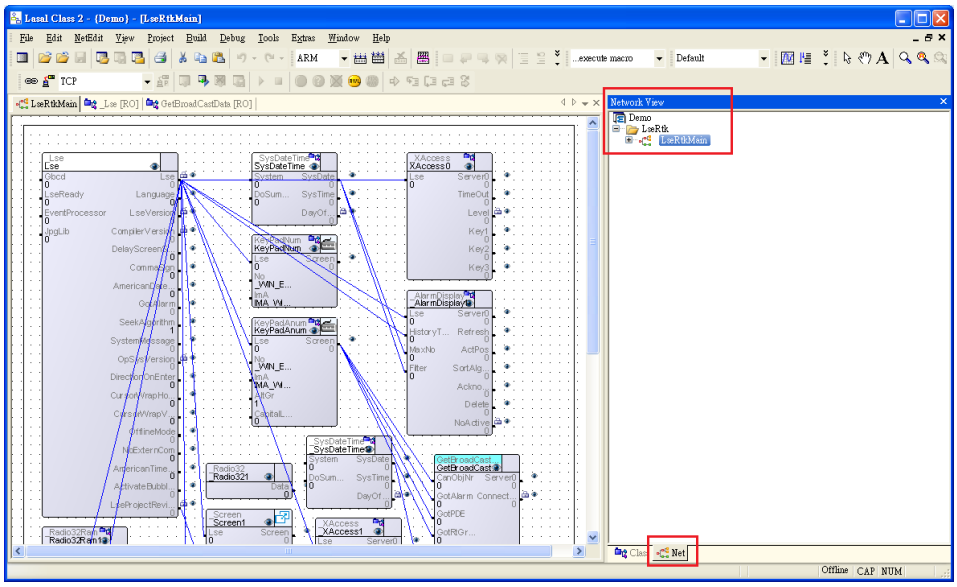


2. Switch to **Class View** tab and drag the object to the editing area.

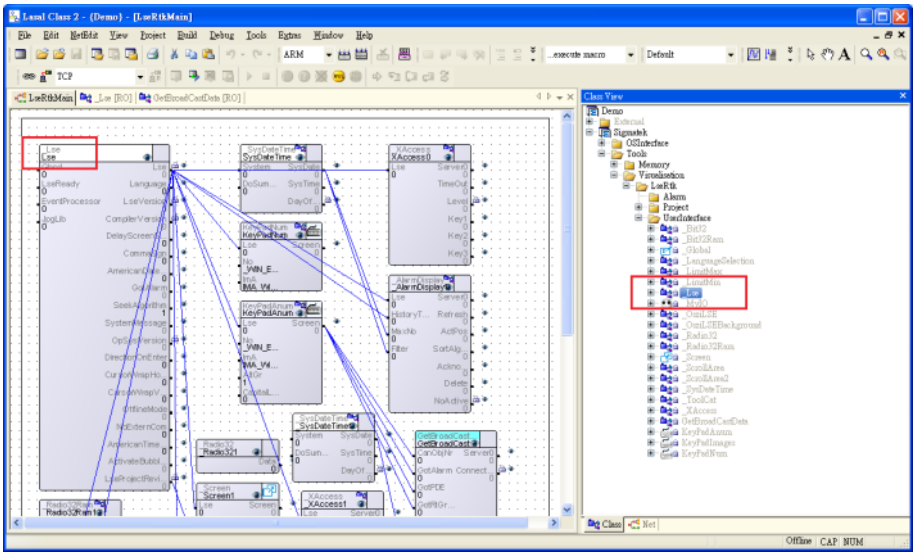

3. In the editing area select the object, and in **Properties** tab select **true** for **Visualized**.

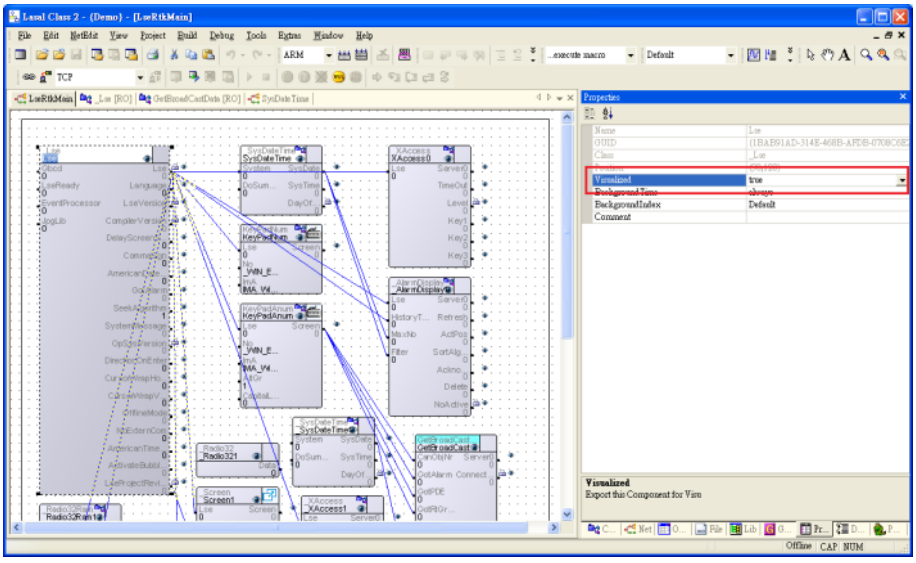


4. **Build** the file.

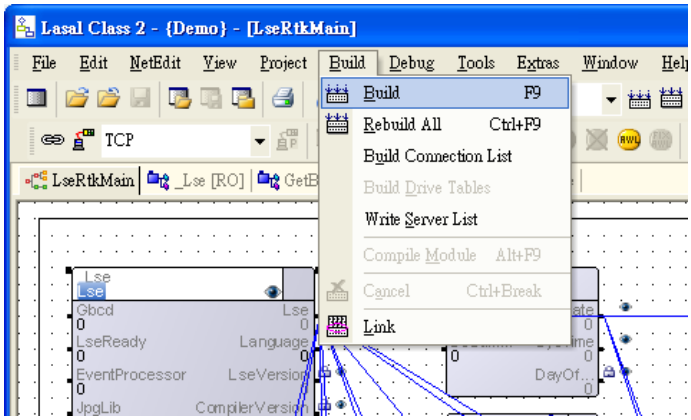


5. After editing, the **MaeExp.txt** file will be generated under the project folder, and the file can be imported to EasyBuilder. If **false** was selected for Visualized in step 3, then the file will not be imported to EasyBuilder.




6. Launch EasyBuilder, select SIGMATEK driver and set the parameters, and then select **Import Tag**.

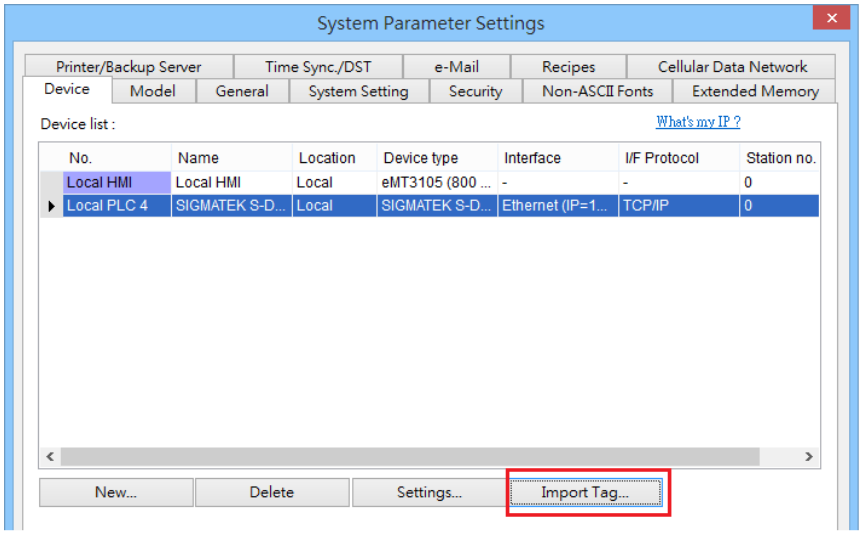

7. Click **Get Tag** » **Verifying tags with PLC**, and then select the MaeExp.txt file generated in step 5. Please check that the PLC is on line for verification. The address tags can also be imported by clicking **Get Tag** » **Import Tag**, and then run off-line simulation. Please note that on-line simulation and download cannot be carried out using this method.

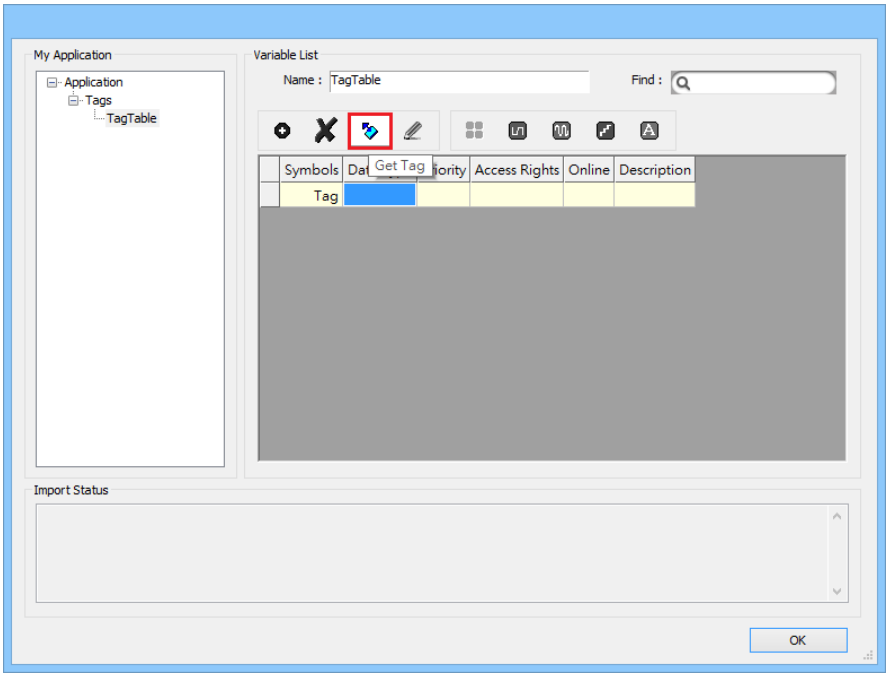

8. See the result in **Import Status** field.

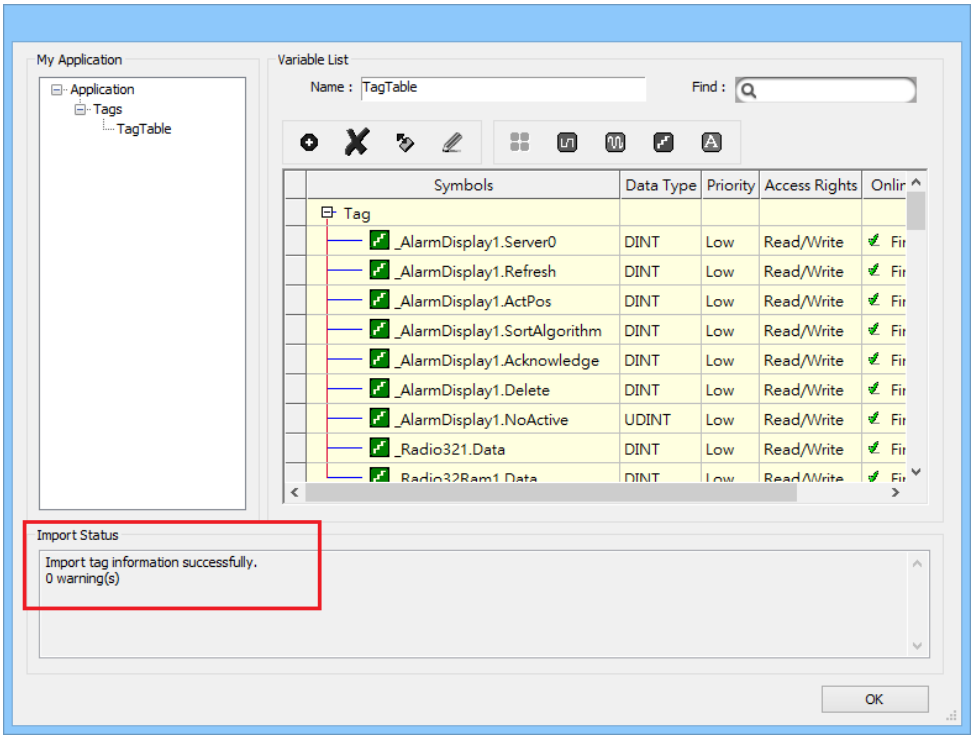

Support Device Type:

Data type	EasyBuilder data format	Memo
Bool	bit	
Byte	16-bit BCD, Hex, Binary, Unsigned	8-bit
SInt	16-bit BCD, Hex, Binary, Signed	8-bit
USInt	16-bit BCD, Hex, Binary, Unsigned	8-bit
Word	16-bit BCD, Hex, Binary, Unsigned	16-bit
Int	16-bit BCD, Hex, Binary, Signed	16-bit
UInt	16-bit BCD, Hex, Binary, Unsigned	16-bit
DWord	32-bit BCD, Hex, Binary, Unsigned	32-bit
DInt	32-bit BCD, Hex, Binary, Signed	32-bit
Real	32-bit Float	32-bit
UDInt	32-bit BCD, Hex, Binary, Unsigned	32-bit
String	ASCII (Use Unicode)	16-bit

Wiring Diagram:

Ethernet Cable:



SSTC SSD Series

Supported Series: SSTC SSD Series

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	SSTC SSD Series		
PLC I/F	RS232	RS232/RS485 2W	
Baud rate	19200	9600~115200	
Data bits	8	8	
Parity	None	None,Odd	
Stop bits	1	1	
PLC sta. no.	1	1~32	

X Series does not support RS-485 2W communication.

Device Address:

Bit/Word	Device Type	Format	Range	Memo
W	ID	DDDDD	0 ~ 99999	
W	ID_30	DDDDD	30	Use Unicode
W	ID_35000	DDDDD	35000	String
W	ID_35001	DDDDD	35001	String

ID Address List:

ID No.	Data Length	Data Type	Write / Read	Decimal Place*
1	BYT2	UDEC	Yes/Yes	1
30	BYT4	HEX	No/Yes	Hex
36	BYT4	SDEC	Yes/Yes	0.0001
38	BYT4	UDEC	Yes/Yes	0.0001
39	BYT4	SDEC	Yes/Yes	0.0001
40	BYT4	SDEC	No/Yes	0.0001
41	BYT4	SDEC	No/Yes	0.0001
43	BYT2	UDEC	Yes/Yes	1
47	BYT4	SDEC	Yes/Yes	1
48	BYT4	SDEC	Yes/Yes	1
49	BYT4	SDEC	Yes/Yes	1

50	BYT4	SDEC	Yes/Yes	1
51	BYT4	SDEC	Yes/Yes	1
53	BYT4	SDEC	Yes/Yes	1
55	BYT2	UDEC	Yes/Yes	1
57	BYT4	UDEC	Yes/Yes	1
80	BYT2	SDEC	Yes/Yes	0.1
82	BYT2	UDEC	Yes/Yes	0.1
83	BYT2	SDEC	Yes/Yes	0.1
84	BYT2	SDEC	No/Yes	0.1
85	BYT2	UDEC	Yes/Yes	1
100	BYT2	UDEC	Yes/Yes	1
101	BYT2	UDEC	Yes/Yes	0.1
102	BYT2	UDEC	Yes/Yes	0.1
103	BYT4	SDEC	Yes/Yes	1
104	BYT2	UDEC	Yes/Yes	1
109	BYT4	UDEC	Yes/Yes	0.001
110	BYT4	UDEC	No/Yes	0.001
111	BYT4	UDEC	Yes/Yes	0.001
112	BYT4	UDEC	No/Yes	0.001
113	BYT4	UDEC	Yes/Yes	0.0001
116	BYT4	UDEC	Yes/Yes	1
124	BYT4	SDEC	Yes/Yes	0.0001
125	BYT4	SDEC	Yes/Yes	0.0001
126	BYT2	SDEC	Yes/Yes	0.1
136	BYT4	SDEC	Yes/Yes	1
137	BYT4	SDEC	Yes/Yes	1
147	BYT2	HEX	Yes/Yes	Hex
150	BYT4	SDEC	Yes/Yes	1
153	BYT4	SDEC	Yes/Yes	1
154	BUT2	HEX	Yes/Yes	Hex
157	BYT4	SDEC	Yes/Yes	0.0001
159	BYT4	UDEC	Yes/Yes	1
173	BYT4	SDEC	Yes/Yes	1
193	BYT2	UDEC	Yes/Yes	1
209	BYT4	UDEC	Yes/Yes	0.0001

210	BYT4	UDEC	Yes/Yes	0.0001
211	BYT2	UDEC	Yes/Yes	0.1
212	BYT2	UDEC	Yes/Yes	0.1
222	BYT4	SDEC	Yes/Yes	1
225	BYT2	HEX	Yes/Yes	Hex
228	BYT4	UDEC	Yes/Yes	1
230	BYT4	UDEC	Yes/Yes	1
268	BYT4	UDEC	Yes/Yes	1
278	BYT4	UDEC	Yes/Yes	1
32768	BYT2	UDEC	Yes/Yes	0.1
32769	BYT4	UDEC	Yes/Yes	0.001
32770	BYT4	UDEC	Yes/Yes	0.001
32771	BYT2	UDEC	Yes/Yes	0.1
32772	BYT4	UDEC	Yes/Yes	0.0001
32773	BYT4	HEX	Yes/Yes	Hex
32774	BYT2	UDEC	Yes/Yes	0.1
32775	BYT2	UDEC	Yes/Yes	1
32776	BYT2	UDEC	Yes/Yes	1
32777	BYT2	SDEC	Yes/Yes	0.1
32778	BYT4	SDEC	Yes/Yes	0.0001
32779	BYT4	SDEC	Yes/Yes	0.0001
32780	BYT4	UDEC	Yes/Yes	0.1
32781	BYT4	UDEC	Yes/Yes	0.1
32782	BYT4	UDEC	Yes/Yes	0.1
32783	BYT2	UDEC	Yes/Yes	1
32784	BYT4	SDEC	Yes/Yes	1
32785	BYT2	UDEC	Yes/Yes	1
32786	BYT4	SDEC	Yes/Yes	1
32787	BYT4	UDEC	Yes/Yes	1
32788	BYT4	SDEC	Yes/Yes	1
32789	BYT4	UDEC	Yes/Yes	1
32790	BYT4	SDEC	Yes/Yes	1
32791	BYT4	UDEC	Yes/Yes	1
32792	BYT4	SDEC	Yes/Yes	1
32793	BYT4	UDEC	Yes/Yes	1

32794	BYT4	SDEC	Yes/Yes	1
32797	BYT4	HEX	No/Yes	Hex
32798	BYT4	HEX	No/No	Hex
32799	BYT4	HEX	No/No	Hex
32800	BYT4	HEX	Yes/Yes	Hex
32801	BYT4	HEX	Yes/Yes	Hex
32802	BYT4	HEX	Yes/Yes	Hex
32803	BYT4	HEX	Yes/Yes	Hex
32804	BYT4	HEX	Yes/Yes	Hex
32805	BYT4	HEX	Yes/Yes	Hex
32806	BYT4	UDEC	Yes/Yes	1
32807	BYT4	UDEC	Yes/Yes	1
32808	BYT4	UDEC	Yes/Yes	1
32809	BYT4	UDEC	Yes/Yes	1
32836	BYT2	UDEC	No/Yes	1
32845	BYT2	UDEC	Yes/Yes	1
32846	BYT2	SDEC	Yes/Yes	1
32847	BYT2	SDEC	Yes/Yes	1
32848	BYT2	UDEC	Yes/Yes	1
32849	BYT2	SDEC	Yes/Yes	1
32850	BYT2	SDEC	Yes/Yes	1
32851	BYT2	SDEC	Yes/Yes	1
32852	BYT2	SDEC	Yes/Yes	1
32853	BYT2	SDEC	Yes/Yes	1
32854	BYT2	SDEC	Yes/Yes	1
32865	BYT2	UDEC	Yes/Yes	1
32866	BYT2	UDEC	Yes/Yes	1
32867	BYT2	UDEC	Yes/Yes	1
32868	BYT2	UDEC	Yes/Yes	1
32874	BYT2	UDEC	Yes/Yes	1
32875	BYT2	UDEC	Yes/Yes	1
32876	BYT2	UDEC	Yes/Yes	1
32877	BYT2	UDEC	Yes/Yes	1
32880	BYT2	UDEC	Yes/Yes	1
32881	BYT2	UDEC	Yes/Yes	1

32882	BYT2	UDEC	Yes/Yes	1
32883	BYT2	UDEC	Yes/Yes	1
32891	BYT2	UDEC	Yes/Yes	1
32892	BYT4	UDEC	Yes/Yes	1
32893	BYT4	UDEC	Yes/Yes	1
32922	BYT2	UDEC	Yes/Yes	1
32925	BYT2	HEX	Yes/Yes	Hex
32926	BYT2	HEX	Yes/Yes	Hex
32927	BYT2	HEX	Yes/Yes	Hex
32928	BYT2	UDEC	Yes/Yes	0.1
32929	BYT2	UDEC	Yes/Yes	0.1
32934	BYT2	UDEC	Yes/Yes	1
32935	BYT2	UDEC	Yes/Yes	0.1
32936	BYT4	HEX	Yes/Yes	Hex
32940	BYT4	SDEC	Yes/Yes	1
32947	BYT4	UDEC	Yes/Yes	1
32952	BYT4	UDEC	Yes/Yes	1
32953	BYT2	HEX	Yes/Yes	Hex
32956	BYT2	UDEC	Yes/Yes	1
32958	BYT2	UDEC	Yes/Yes	1
32959	BYT2	UDEC	Yes/Yes	1
32964	BYT2	UDEC	Yes/Yes	1
32966	BYT2	SDEC	Yes/Yes	1
32967	BYT2	UDEC	Yes/Yes	1
32968	BYT2	UDEC	Yes/Yes	0.1
32978	BYT2	UDEC	Yes/Yes	1
32979	BYT2	UDEC	Yes/Yes	1
32980	BYT2	UDEC	Yes/Yes	1
32981	BYT2	UDEC	Yes/Yes	1
32992	BYT2	UDEC	Yes/Yes	0.1
32993	BYT2	UDEC	Yes/Yes	0.1
33700	BYT2	UDEC	Yes/Yes	1
33701	BYT2	UDEC	Yes/Yes	1
33702	BYT2	UDEC	Yes/Yes	1
33703	BYT2	UDEC	Yes/Yes	1


33704	BYT2	UDEC	Yes/Yes	1
33705	BYT2	UDEC	Yes/Yes	1
33706	BYT2	UDEC	Yes/Yes	1
33707	BYT2	UDEC	Yes/Yes	1
33708	BYT2	UDEC	Yes/Yes	1
33709	BYT2	UDEC	Yes/Yes	1
33710	BYT2	UDEC	Yes/Yes	1
33711	BYT2	UDEC	Yes/Yes	1
33712	BYT2	UDEC	Yes/Yes	1
33713	BYT2	UDEC	Yes/Yes	1
33714	BYT2	UDEC	Yes/Yes	1
33721	BYT2	UDEC	Yes/Yes	1
33722	BYT2	UDEC	Yes/Yes	1
33724	BYT2	UDEC	Yes/Yes	1
33725	BYT2	UDEC	Yes/Yes	1
33729	BYT2	UDEC	Yes/Yes	1
33730	BYT2	UDEC	Yes/Yes	1
33731	BYT2	UDEC	Yes/Yes	1
33732	BYT2	UDEC	No/Yes	1
33800	BYT2	UDEC	Yes/Yes	1
33801	BYT2	UDEC	Yes/Yes	1
33802	BYT2	UDEC	Yes/Yes	1
33803	BYT2	UDEC	Yes/Yes	1
33804	BYT2	UDEC	Yes/Yes	1
33805	BYT2	UDEC	Yes/Yes	1
33806	BYT2	UDEC	Yes/Yes	1
33807	BYT2	UDEC	Yes/Yes	1
33808	BYT2	UDEC	Yes/Yes	1
33809	BYT2	UDEC	Yes/Yes	1
33810	BYT2	UDEC	Yes/Yes	1
33811	BYT2	UDEC	Yes/Yes	1
33812	BYT2	UDEC	Yes/Yes	1
33813	BYT2	UDEC	Yes/Yes	1
33814	BYT2	UDEC	Yes/Yes	1
33815	BYT2	UDEC	Yes/Yes	1

33816	BYT2	UDEC	Yes/Yes	1
33817	BYT2	UDEC	Yes/Yes	1
33818	BYT2	UDEC	Yes/Yes	1
33819	BYT2	UDEC	Yes/Yes	1
33820	BYT2	UDEC	Yes/Yes	1
33839	BYT2	UDEC	Yes/Yes	1
33840	BYT2	UDEC	Yes/Yes	1
33859	BYT2	UDEC	Yes/Yes	1
33860	BYT2	UDEC	Yes/Yes	1
33869	BYT2	UDEC	Yes/Yes	1
33880	BYT2	UDEC	Yes/Yes	1
33889	BYT2	UDEC	Yes/Yes	1
33890	BYT2	UDEC	Yes/Yes	1
33899	BYT2	UDEC	Yes/Yes	1
34000	BYT2	UDEC	Yes/Yes	1
34001	BYT2	UDEC	Yes/Yes	1
34002	BYT2	UDEC	Yes/Yes	1
34003	BYT2	UDEC	Yes/Yes	1
34004	BYT2	UDEC	Yes/Yes	1
34005	BYT2	UDEC	Yes/Yes	1
34006	BYT2	UDEC	Yes/Yes	1
34007	BYT2	UDEC	Yes/Yes	1
34008	BYT2	UDEC	Yes/Yes	1
34009	BYT2	UDEC	Yes/Yes	1
34010	BYT2	UDEC	Yes/Yes	1
34011	BYT2	UDEC	Yes/Yes	1
34012	BYT2	UDEC	Yes/Yes	1
34013	BYT2	UDEC	Yes/Yes	1
34014	BYT2	UDEC	Yes/Yes	1
34015	BYT2	UDEC	Yes/Yes	1
34016	BYT2	UDEC	Yes/Yes	1
34017	BYT2	UDEC	Yes/Yes	1
34018	BYT2	UDEC	Yes/Yes	1
34019	BYT2	UDEC	Yes/Yes	1
34023	BYT2	UDEC	Yes/Yes	1

34025	BYT2	UDEC	Yes/Yes	1
34042	BYT2	UDEC	Yes/Yes	1
34043	BYT2	UDEC	Yes/Yes	0.01
34044	BYT2	UDEC	Yes/Yes	0.01
34045	BYT2	UDEC	Yes/Yes	0.01
34046	BYT2	UDEC	Yes/Yes	0.01
34047	BYT2	UDEC	Yes/Yes	0.01
34048	BYT2	UDEC	Yes/Yes	0.01
34049	BYT2	UDEC	Yes/Yes	0.01
34050	BYT2	UDEC	Yes/Yes	0.1
34051	BYT2	UDEC	Yes/Yes	0.01
34052	BYT2	UDEC	Yes/Yes	0.1
34053	BYT2	UDEC	Yes/Yes	1
34054	BYT2	UDEC	Yes/Yes	0.1
34055	BYT2	UDEC	Yes/Yes	0.1
34056	BYT2	UDEC	Yes/Yes	1
34070	BYT2	UDEC	Yes/Yes	1
34148	BYT2	UDEC	Yes/Yes	0.001
34149	BYT2	UDEC	Yes/Yes	0.1
34164	BYT2	UDEC	Yes/Yes	0.01
34167	BYT2	UDEC	Yes/Yes	0.01
34177	BYT2	UDEC	Yes/Yes	1
34178	BYT2	UDEC	Yes/Yes	1
34179	BYT2	UDEC	Yes/Yes	1
34180	BYT2	UDEC	Yes/Yes	1
34182	BYT4	SDEC	Yes/Yes	1
35000	/* Depends on Text */ 0	ASCI	No/Yes	ASCII
35001	/* Depends on Text */ 0	ASCI	No/Yes	ASCII
35002	BYT4	HEX	No/Yes	1
35003	BYT2	HEX	No/Yes	Hex
35004	BYT2	UDEC	No/Yes	0.1
35005	BYT2	UDEC	No/Yes	0.1
35006	BYT2	UDEC	No/Yes	0.1
35007	BYT2	UDEC	No/Yes	0.1
35008	BYT2	UDEC	No/Yes	0.1

35009	BYT2	UDEC	No/Yes	0.1
35010	BYT2	UDEC	No/Yes	0.1
35011	BYT2	UDEC	No/Yes	1
36000	BYT2	UDEC	No/Yes	1
36001	BYT2	UDEC	No/Yes	1
36002	BYT4	SDEC	No/Yes	1
36003	BYT4	SDEC	No/Yes	1
36004	BYT4	UDEC	No/Yes	1
36005	BYT4	UDEC	No/Yes	1
36006	BYT2	UDEC	No/Yes	1
36007	BYT2	UDEC	No/Yes	1
36008	BYT2	UDEC	No/Yes	1
36009	BYT2	UDEC	No/Yes	1
36010	BYT2	UDEC	No/Yes	1
36011	BYT2	UDEC	No/Yes	1
36012	BYT4	UDEC	No/Yes	1
36013	BYT4	UDEC	No/Yes	1
36019	BYT2	UDEC	Yes/Yes	1
36020	BYT2	UDEC	Yes/Yes	1
36021	BYT2	UDEC	Yes/Yes	1
36022	BYT2	UDEC	Yes/Yes	1
36023	BYT2	UDEC	Yes/Yes	1
36100	BYT4	UDEC	Yes/Yes	1
36101	BYT4	UDEC	Yes/Yes	1
36102	BYT4	UDEC	Yes/Yes	1
36103	BYT4	UDEC	Yes/Yes	1
36104	BYT4	UDEC	Yes/Yes	1

*Note: If the decimal place of ID is 0.0001, please set [Right of decimal Pt.] of the object to “4”.

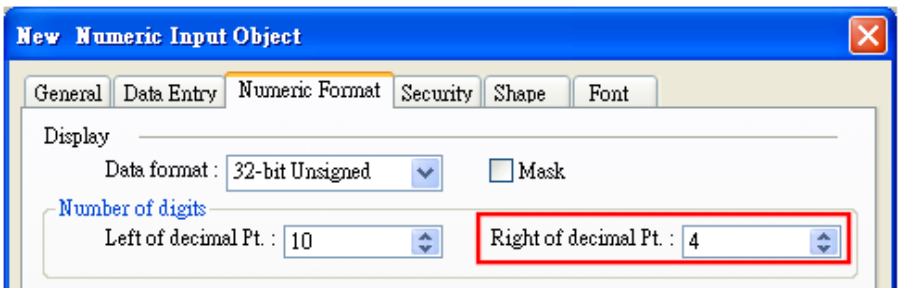

Wiring Diagram:

RS-232 6P 6P Mini-Din (Diagram1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 6P Mini-Din Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5

RS-485 2W 9P D-Sub (Diagram4 ~ Diagram 9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	4
Data+	2	9	⟷	1
GND	5	5	⟷	5

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	4
Data+	6	1	⟷	1
GND	5	5	⟷	5

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	4
Data+	2	8	⟷	1
GND	**5**	**9**	⟷	5

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	4
Data+	2	9	⟷	1
GND	5	5	⟷	5

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	4
Data+	2	8	⟷	1
GND	5	5	⟷	5

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	8
Data+	2	⟷	3
GND	5	⟷	5

TECHSOFT Intelligent Servo

Supported Series: Intelligent Servo supports IDM640, IDM240.
Website: http://www.techsoftmotion.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Intelligent Servo		
PLC I/F	RS232		
Baud rate	9600	9600~115200	
Data bits	8	7 or 8	
Parity	None	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Register_32bit	HHHH	0 ~ 270f	32bit signed
DW	Register_H	HHHH	0 ~ 270f	32bit Hex
W	UPD	HHHHH	0 ~ 1869f	Send UDP command
W	STOP	HHHHH	0 ~ 1869f	Send STOP command

Wiring Diagram:

RS-232 6P Mini-Din (Diagram1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1	COM3	
	RS232 9P Female	RS232 9P Female	RS232 6P Mini-Din Male
Rx	2	8	2
Tx	3	7	3
GND	5	5	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1	
	RS232 9P Female	RS232 6P Mini-Din Male
Rx	2	2
Tx	3	3
GND	5	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5

TECO Inverter

Supported Series: TECO Inverter series, 7300CV model.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	TECO Inverter		
PLC I/F	RS232	RS232/RS485	
Baud rate	38400		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device	Format	Range	Memo
B	0x	DDDDD	1 ~ 65535	Output Bit
B	1x	DDDDD	1 ~ 65535	Input Bit (read only)
B	3x_Bit	DDDDDdd	100 ~ 6553515	Input Register Bit (read only)
B	4x_Bit	DDDDDdd	100 ~ 6553515	Output Register Bit
B	6x_Bit	DDDDDdd	100 ~ 6553515	
B	0x (0x0f)	DDDDD	1 ~ 65535	Write Multiple Coils
W	3x	DDDDD	1 ~ 65535	Input Register (read only)
W	4x	DDDDD	1 ~ 65535	Output Register
DW	5x	DDDDD	1 ~ 65535	4x Double Word Swap
W	6x	DDDDD	1 ~ 65535	4x Single Word Write

Wiring Diagram:




MT8000



JNSIF-232



JNSIF-232Wiring Diagram:

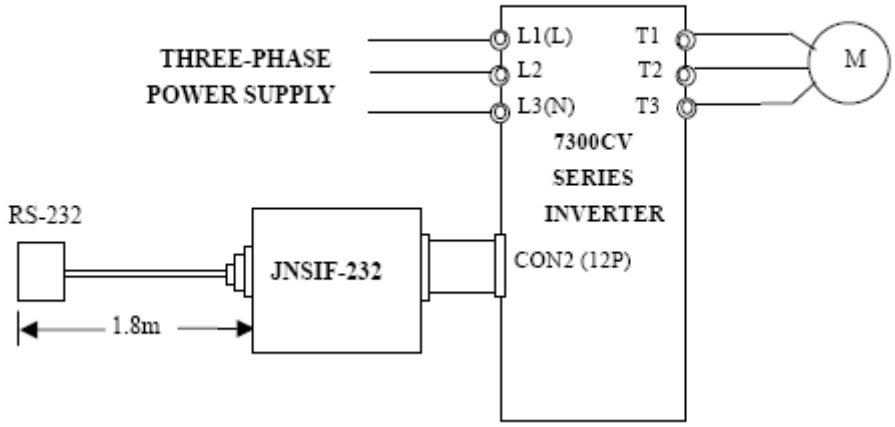

This section needs to double check as it doesn't have female in the original file.

RS-232 6P D-Sub (Diagram1 ~ Diagram 3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM1	COM3	RS232 6P Mini-Din Male
	RS232 9P Female	RS232 9P Female	
Rx	2	8	3
Tx	3	7	4
GND	5	5	5
RTS to CVV	7		7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1	RS232 6P Mini-Din Male
	RS232 9P Female	
Rx	2	3
Tx	3	4
GND	5	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 6P Mini-Din Male
Rx	9	⟷	3
Tx	6	⟷	4
GND	5	⟷	5

TECO TP02 Series

Supported Series: TAIAN TP02 series
Website: http://www.taian-technology.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	TECO TP02 Series		
PLC I/F	RS485 4W/2W	RS485 4W/2W	MMI 422 port: 4W; RS485 terminals: 2W
Baud rate	19200	9600, 19200, 38400	
Data bits	7	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	2	1, 2	
PLC sta. no.	1	0-255	

PLC Setting:

RS422 port: WS041=120, WS042=1;
RS485 terminals: WS044=120, WS045=1.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDD	1 ~ 384	Input relay
B	Y	DDD	1 ~ 384	Output relay
B	C	DDDD	1 ~ 2048	Auxiliary relay
W	X	DDD	1 ~ 369	Input register (must be 1 or a multiple of plus 1)
W	Y	DDD	1 ~ 369	Output register (must be 1 or a multiple of plus 1)
W	V	DDDD	1 ~ 1024	Auxiliary register
W	D	DDDD	1 ~ 2048	Auxiliary register
W	WS	DDD	1 ~ 128	System register
W	C	DDDD	1 ~ 2033	Auxiliary relay register (must be 1 or a multiple of plus 1)
W	WC	DDD	1 ~ 912	Constant register

Wiring Diagram:

RS-485 4W Terminal (Diagram1 ~ Diagram 4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W Terminal
Rx-	1	⟷	8
Rx+	2	⟷	3
Tx-	3	⟷	7
TX+	4	⟷	2
GND	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W Terminal
Rx-	7	⟷	8
Rx+	6	⟷	3
Tx-	9	⟷	7
TX+	8	⟷	2
GND	5	⟷	

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W Terminal
Rx-	1	⟷	8
Rx+	2	⟷	3
Tx-	3	⟷	7
TX+	4	⟷	2
GND	5	⟷	

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W Terminal
Rx-	1	⟷	8
Rx+	2	⟷	3
Tx-	3	⟷	7
TX+	4	⟷	2
GND	5	⟷	

RS 485 2W Terminal (Diagram5 ~ Diagram10)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	T/R
Data+	2	9	⟷	T/R+
GND	5	5	⟷	

Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	T/R
Data+	6	1	⟷	T/R+
GND	5	5	⟷	

Diagram 7

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	T/R
Data+	2	8	⟷	T/R+
GND	**5**	**9**	⟷	

Diagram 8

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	T/R
Data+	2	9	⟷	T/R+
GND	5	5	⟷	

Diagram 9

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	↔	T/R
Data+	2	8	↔	T/R+
GND	5	5	↔	

Diagram 10

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	↔	T/R
Data+	2	↔	T/R+
GND	5	↔	

TECO TP03 Series/AP-360BT-A

Supported Series: TECO TP03 Series/AP-360BT-A
Website: http://www.teco.com.tw/sa/en/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	TECO TP03 Series/AP-360BT-A		
PLC I/F	RS485 4W		
Baud rate	19200	9600, 19200	
Data bits	8	8	
Parity	None	Even, Odd, None	
Stop bits	2	1	
PLC sta. no.	1	1-255	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	C	DDDD	0 ~ 9999	
B	C256	DDDD	256 ~ 9999	
B	M	DDDD	0 ~ 9999	
B	S	DDDD	0 ~ 9999	
B	T	DDDD	0 ~ 9999	
B	X	OOO	0 ~ 377	
B	Y	OOO	0 ~ 377	
W	D	DDDD	0 ~ 9999	
W	V	DDDD	0 ~ 9999	
W	Z	DDDD	0 ~ 9999	
W	T_Curent	DDDD	0 ~ 9999	
W	C_Curent	DDDD	0 ~ 9999	
W	T_Preset	DDDD	0 ~ 9999	
W	C_Preset	DDDD	0 ~ 9999	
DW	C200_Curent	DDDD	200 ~ 9999	
DW	C200_Preset	DDDD	200 ~ 9999	
DW	C256_Curent	DDDD	256 ~ 9999	
DW	C256_Preset	DDDD	256 ~ 9999	

Wiring Diagram:

The following is the view from the soldering point of a connector.



RS-485 4W 8P Mini-Din (Diagram1 ~ Diagram4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI		PLC
	COM1 RS485 4W 9P Male	RS485 4W 8P Mini-Din Male
Rx-	1	4
Rx+	2	7
Tx-	3	1
TX+	4	2
GND	5	3

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	7	⟷	4
Rx+	6	⟷	7
Tx-	9	⟷	1
TX+	8	⟷	2
GND	5	⟷	3

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P Mini-Din Male
Rx-	1	⟷	4
Rx+	2	⟷	7
Tx-	3	⟷	1
TX+	4	⟷	2
GND	5	⟷	3

TINHAO

Website: www.chinastrand.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	TINHAO		
PLC I/F	RS485 2W		
Baud rate	19200		
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
W	Commend1	DDD	0 ~ 255	
W	Commend2	DDD	0 ~ 255	
W	Commend3	DDD	0 ~ 255	
W	Commend4	DDD	0 ~ 255	
W	Commend5	DDD	0 ~ 255	
W	Commend6	DDD	0 ~ 255	
W	Commend7	DDD	0 ~ 255	
W	Commend8	DDD	0 ~ 255	
W	Commend9	DDD	0 ~ 255	
W	Commend10	DDD	0 ~ 255	
W	Commend11	DDD	0 ~ 255	
W	Commend12	DDD	0 ~ 255	
W	Commend13	DDD	0 ~ 255	
W	Commend14	DDD	0 ~ 255	
W	Commend15	DDD	0 ~ 255	
W	Commend16	DDD	0 ~ 255	
W	Commend17	DDD	0 ~ 255	
W	Commend18	DDD	0 ~ 255	
W	Commend19	DDD	0 ~ 255	
W	Commend20	DDD	0 ~ 255	
W	Commend21	DDD	0 ~ 255	
W	Commend22	DDD	0 ~ 255	

Wiring Diagram:

RS-485 2W Terminal (Diagram1 ~ Diagram6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W Terminal
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	

Toptek Topvert

Supported Series: TOPVERT G1/H1/P1 series.
Website: http://www.toptek.biz/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Toptek Topvert		
PLC I/F	RS485 2W		
Baud rate	9600		
Data bits	7		
Parity	None		
Stop bits	2		
PLC sta. no.	1		

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES	**Broadcast station no.**	0

PLC Setting:

Communication mode	Pr 7-15 = 0 (7, N, 2 ASCII)

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	PR_Bit	DDDDDdd	0 ~ 6553515	G=Groups, F=Function no. dd=0~15 bit no.
W	PR	DDDDD	0 ~ 65535	G=Groups, F=Function no.

Note:

Max.read-command size (words): 16
Max.write-command size (words): 1
For G1/H1/P1 Series Inverter, if standard parameter address is in decimal= 100*G+F:
G=Group (parameter group code0~9); F=Function no. (parameter number 0~99)
For example: Pr5-20 (decimal Dec.) parameter address is expressed as 100*5+20=520.

Parameter (PrX-XX)	Address (decimal)
0-00	0*100+0=0
0-14	0*100+14=14
1-00	1*100+0=100

Wiring Diagram:

RS-485 2W Terminal (Diagram1 ~ Diagram6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	SG-
Data+	2	9	⟷	SG+
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	SG-
Data+	6	1	⟷	SG+
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	SG-
Data+	2	8	⟷	SG+
GND	**5**	**9**	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W Terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	SG-
Data+	2	9	⟷	SG+
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W Terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	SG-
Data+	2	8	⟷	SG+
GND	5	5	⟷	

Diagram 6

MT-iP ***MT6071iP / MT8071iP***

HMI			PLC
	COM2 RS485 2W 9P Female		RS485 2W Terminal
Data-	1	⟷	SG-
Data+	2	⟷	SG+
GND	5	⟷	

TOSHIBA INVERTER VF

Supported Series: Toshiba Invertor Protocol (ASCII code).

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	TOSHIBA INVERTER VF		
PLC I/F	RS485 2W	RS422, RS485	
Baud rate	9600	9600, 19200	
Data bits	8	7 or 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1 or 2	
PLC sta. no.	0	0-99	

Online simulator	YES	**Extend address mode**	YES
Broadcast command	YES		


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Cmd. No B	HHHHdd	0 ~ 270f15	
W	Cmd. No	HHHH	0 ~ ffff	Parameters and data memory

Wiring Diagram:

Note:

Before connecting with TOSHIBA INVERTER VF, make sure the SW1 of both sides are in the correct position. (SW1: wiring method selector switch)

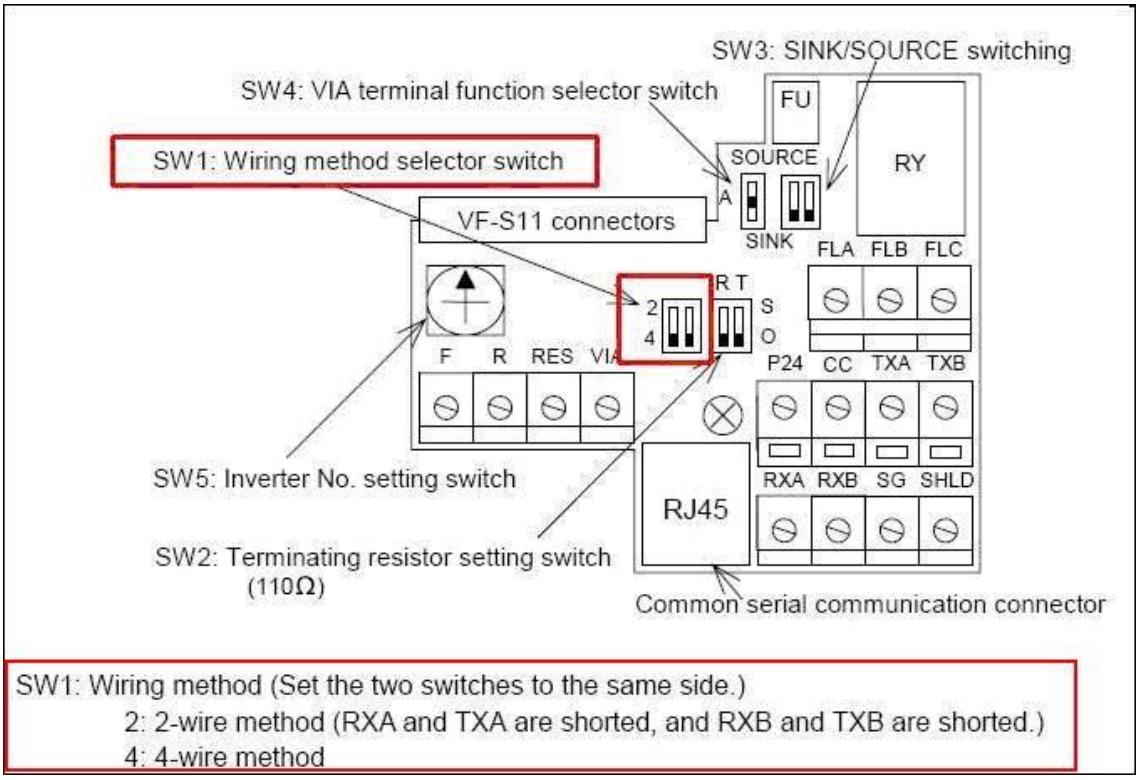

RS 485 2W 8P RJ45 (Diagram1 ~ Diagram 6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	5 Data+
Data+	2	9	⟷	4 Data-
GND	5	5	⟷	8 Gnd

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 8P RJ45 Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	5 Data+
Data+	6	1	⟷	4 Data-
GND	5	5	⟷	8 Gnd

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 8P RJ45 Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	5 Data+
Data+	2	8	⟷	4 Data-
GND	**5**	**9**	⟷	8 Gnd

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	
	RS485 2W 9P Male	RS485 2W 9P Male	RS485 2W 8P RJ45 Male
Data-	1	6	5 Data+
Data+	2	9	4 Data-
GND	5	5	8 Gnd

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	
	RS485 2W 9P Female	RS485 2W 9P Female	RS485 2W 8P RJ45 Male
Data-	1	7	5 Data+
Data+	2	8	4 Data-
GND	5	5	8 Gnd

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	
	RS485 2W 9P Female	RS485 2W 8P RJ45 Male
Data-	1	5 Data+
Data+	2	4 Data-
GND	5	8 Gnd

TOSHIBA T Series

Supported Series: Toshiba T series, S2E.
Website: http://www.tic.toshiba.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	TOSHIBA T Series		
PLC I/F	RS232	RS232/RS485	In accordance with PLC port
Baud rate	9600	9600, 19200, 38400, 57600, 115200	
Data bits	8	7,8	
Parity	Odd	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	0	0-255	Must be same as the PLC setting

Online simulator	YES	**Extend address mode**	YES

PLC Setting:

Communication mode	Must set PLC node ID

Device Address:

Bit/Word	Device	Format	Range	Memo
B	X	DDDDh	0 ~ 4095f	Input Bit
B	Y	DDDDh	0 ~ 4095f	Output Bit
B	R	DDDDh	0 ~ 8191f	Auxiliary Bit
B	S	DDDDh	0 ~ 4095f	Special Bit
B	L	DDDDh	0 ~ 4095f	
B	Z	DDDDh	0 ~ 8191f	
W	T	DDD	0 ~ 999	Timer Register
W	C	DDD	0 ~ 511	Counter Register
W	D	DDDD	0 ~ 8191	Data Memory
W	SW	DDD	0 ~ 255	Special Register
W	XW	DDD	0 ~ 255	Input Register
W	YW	DDD	0 ~ 255	Output Register

Bit/Word	Device	Format	Range	Memo
W	RW	DDD	0 ~ 999	Auxiliary Register
W	LW	DDD	0 ~ 255	
W	W	DDDD	0 ~ 1023	
W	F	DDDD	0 ~ 8191	

Wiring Diagram:

The following is the view from the soldering point of a connector.



RS-232 8P Mini-DIN (Diagram1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P Mini-DIN
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	6
Tx	3	7	⟷	8
GND	5	5	⟷	5
				4
				7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 8P Mini-DIN
Rx	2	6
Tx	3	8
GND	5	5
		4
		7

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 8P Mini-DIN
Rx	9	6
Tx	6	8
GND	5	5
		4
		7

RS-232 9P D-Sub (Diagram4 ~ Diagram 6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	3
Tx	3	7	↔	2
GND	5	5	↔	5
				7
				8

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


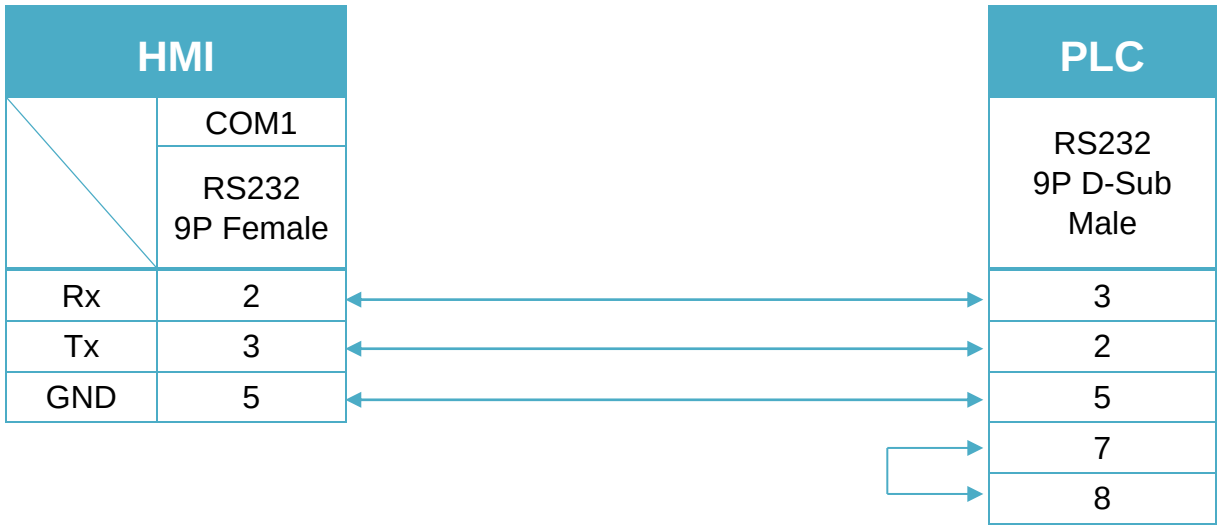


Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

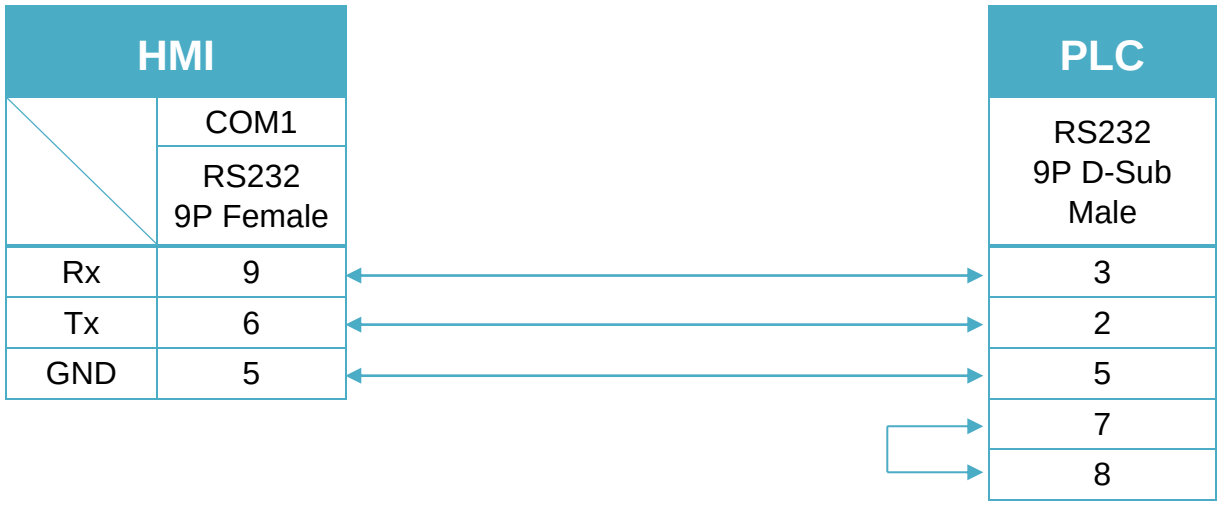

RS-485 4W 15 P D-Sub (Diagram7 ~ Diagram10)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI		PLC
	COM1 RS485 4W 9P Male	RS485 4W 15P D-Sub Male
Rx-	1	11
Rx+	2	3
Tx-	3	10
TX+	4	2
GND	5	7
		5
		4
		13
		12

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI		PLC
	COM2 RS485 4W 9P Female	RS485 4W 15P D-Sub Male
Rx-	7	11
Rx+	6	3
Tx-	9	10
TX+	8	2
GND	5	7
		5
		4
		13
		12

.

Diagram 9

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***


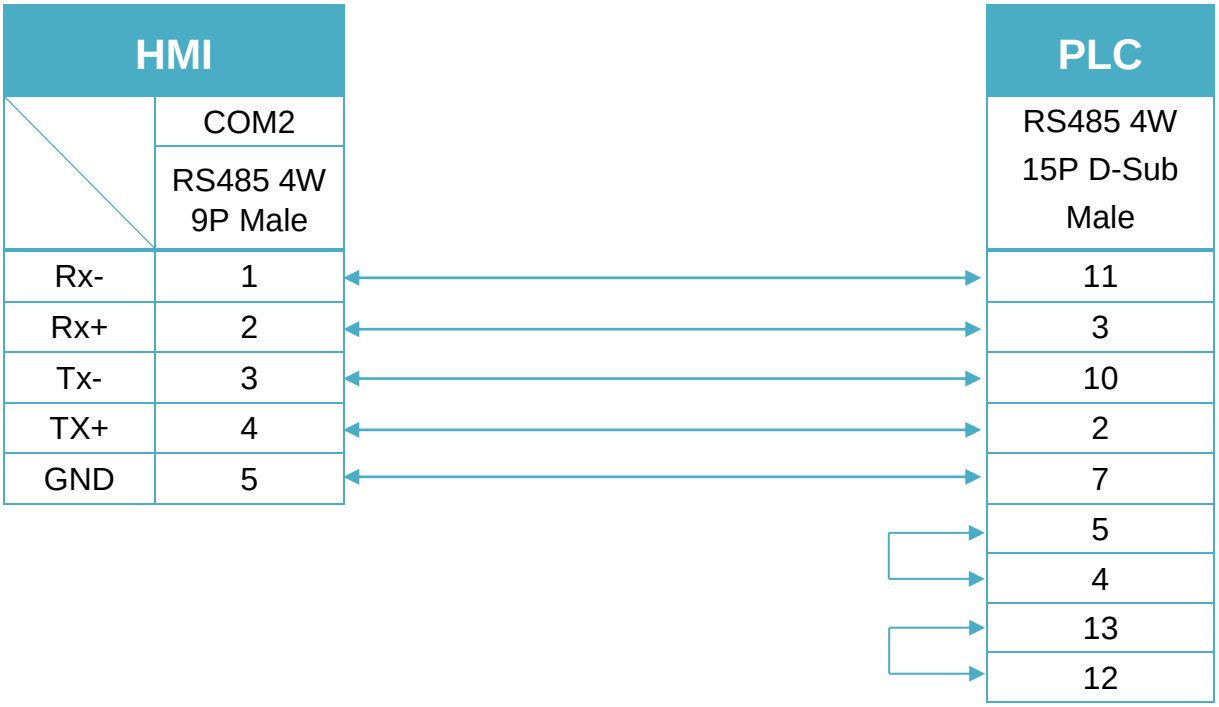


Diagram 10

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

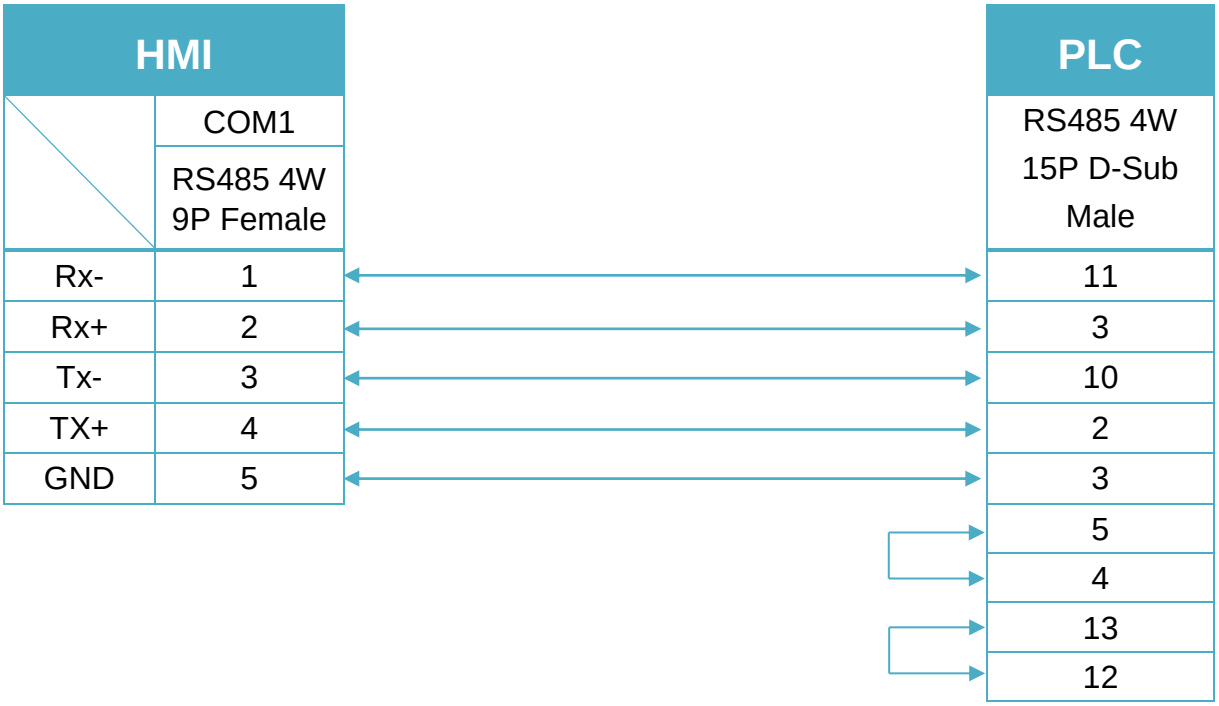

TOSHIBA MACHINE Provisor TC200

Supported Series: TOSHIBA MACHINE CO., JAPAN
WebSite: http://www.toshiba-machine.co.jp

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	TOSHIBA MACHINE Provisor TC200		
PLC I/F	RS232	RS232	In accordance with PLC port
Baud rate	9600	9600, 19200	
Data bits	8	7,8	
Parity	None	Even, Odd, None	
Stop bits	1	1, 2	

Device Address:

Bit/Word	Device	Format	Range	Memo
B	R_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	X_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	Y_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	L_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	G_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	H_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	T_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	C_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	S_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
B	E_bit	HHHh	0 ~ ffff	h : Bit no.(0~f)
W	P	HHH	0 ~ fff	
W	V	HHH	0 ~ fff	
W	X	HHH	0 ~ fff	
W	Y	HHH	0 ~ fff	
W	D	HHH	0 ~ fff	
W	R	HHH	0 ~ fff	
W	L	HHH	0 ~ fff	
W	B	HHH	0 ~ fff	
W	G	HHH	0 ~ fff	
W	H	HHH	0 ~ fff	

Bit/Word	Device	Format	Range	Memo
W	T	HHH	0 ~ fff	
W	C	HHH	0 ~ fff	
W	S	HHH	0 ~ fff	
W	E	HHH	0 ~ fff	

Wiring Diagram:

TC mini series RS232 9P D-Sub (Diagram1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		TC mini series RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	2
Tx	3	7	↔	3
GND	5	5	↔	5
			↔	7
			↔	8

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


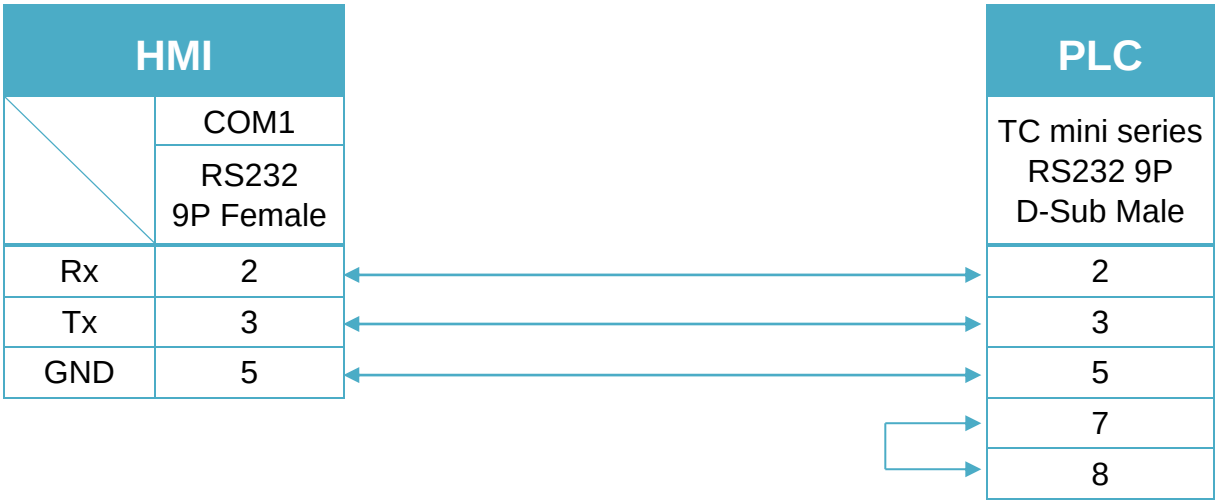


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

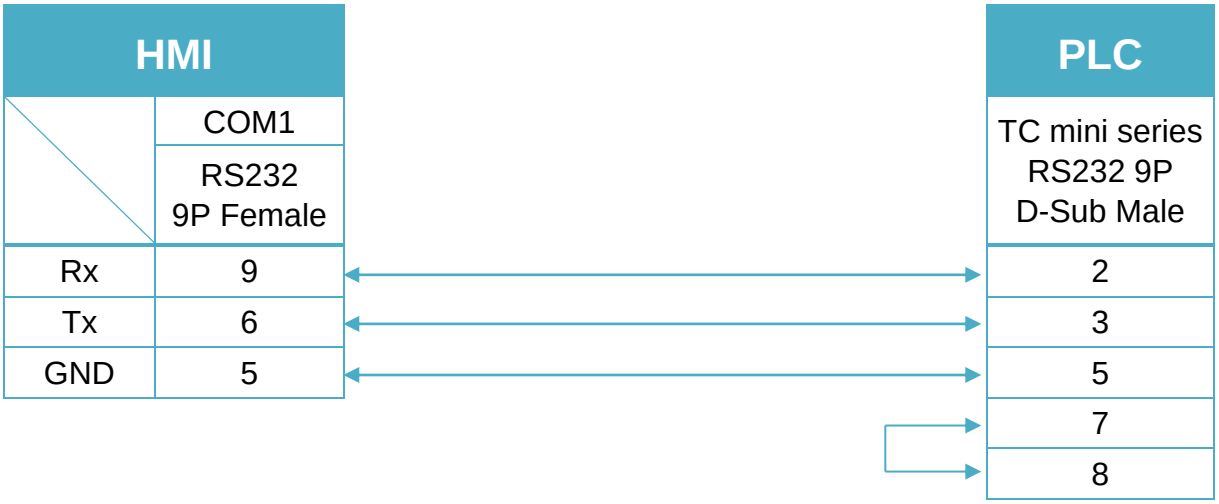

Trio MODBUS RTU, TCP/IP

Website : http://www.triomotion.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Trio MODBUS RTU, TCP/IP		
PLC I/F	RS485	RS232/RS485/Ethernet	
Baud rate	9600	9600~115200	
Data bits	8	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
Port no.	502		
PLC sta. no.	1	0-255	

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

PLC Setting:

Communication mode	Modbus RTU protocol
PLC mode	4 (16bit signed integer)

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	VR_Bit	DDDDdd	0 ~ 409615	
B	Table_Bit	DDDDDdd	0 ~ 3199915	
W	VR	DDDD	0 ~ 4096	
W	Table	DDDDD	0 ~ 31999	

Wiring Diagram:

RS-232 9P D-Sub (Diagram1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND
			→	RTS
			←	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


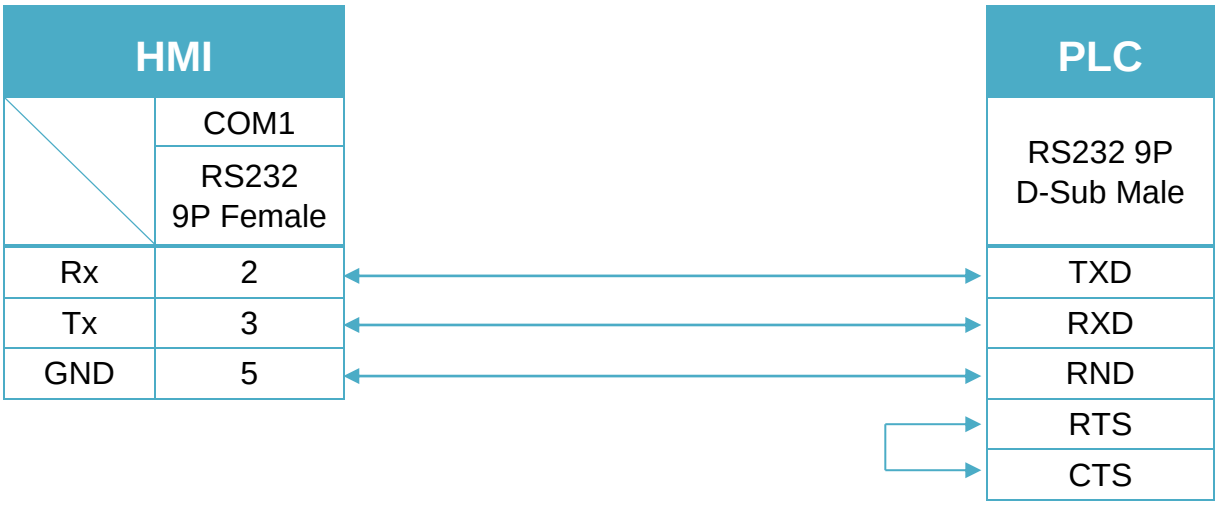


Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

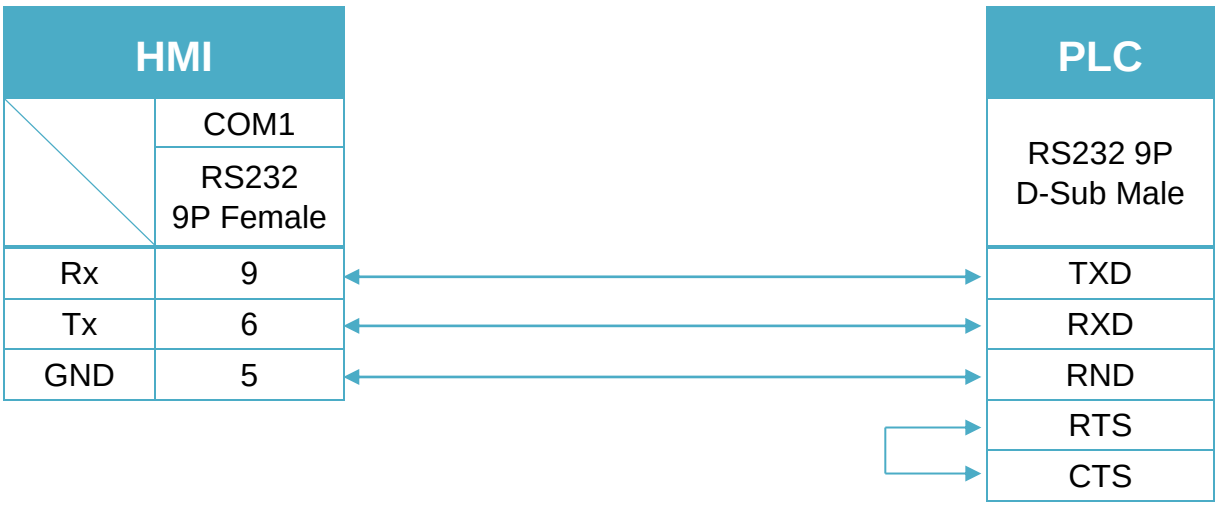

RS-485 4W 9P D-Sub (Diagram4 ~ Diagram7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 9P D-Sub Male
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 9P D-Sub Male
Rx-	7	⟷	TX-
Rx+	6	⟷	TX+
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 9P D-Sub Male
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 9P D-Sub Male
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS-485 2W 9P D-Sub (Diagram8 ~ Diagram13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND

Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

Diagram 14

Etehernet cable:



Trio MODBUS RTU, TCP/IP (Mode 7)

Website : http://www.triomotion.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	Trio MODBUS RTU, TCP/IP (Mode 7)		
PLC I/F	RS485	RS232/RS485/Ethernet	
Baud rate	9600	9600~115200	
Data bits	8	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
Port no.	502		
PLC sta. no.	1	0-255	

Online simulator	YES	**Broadcast command**	YES
Extend address mode	YES		

PLC Setting:

Communication mode	Modbus RTU protocol
PLC mode	7 (IEEE floating point)

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	VR_Bit	DDDDdd	0 ~ 409631	
B	VR_INT_Bit	DDDDdd	0 ~ 409631	
B	Table_Bit	DDDDDdd	0 ~ 3199931	
W	VR	DDDD	0 ~ 4096	
W	VR_INT	DDDD	0 ~ 4096	
W	Table	DDDDD	0 ~ 31999	
W	Table_INT	DDDDD	0 ~ 31999	

Wiring Diagram:

RS-232 9P D-Sub (Diagram1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TXD
Tx	3	7	⟷	RXD
GND	5	5	⟷	GND
			→	RTS
			←	CTS

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	TXD
Tx	3	⟷	RXD
GND	5	⟷	GND
		⟷	RTS
		⟷	CTS

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	TXD
Tx	6	⟷	RXD
GND	5	⟷	GND
		⟷	RTX
		⟷	CTS

RS-485 4W 9P D-Sub (Diagram4~ Diagram7)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI		PLC
	COM1 RS485 4W 9P Male	RS485 4W 9P D-Sub Male
Rx-	1	TX-
Rx+	2	TX+
Tx-	3	RX-
TX+	4	RX+
GND	5	GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI		PLC
	COM2 RS485 4W 9P Female	RS485 4W 9P D-Sub Mal
Rx-	7	TX-
Rx+	6	TX+
Tx-	9	RX-
TX+	8	RX+
GND	5	GND

Diagram 6

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2		
	RS485 4W 9P Male		RS485 4W 9P D-Sub Mal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1		
	RS485 4W 9P Female		RS485 4W 9P D-Sub Mal
Rx-	1	⟷	TX-
Rx+	2	⟷	TX+
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	GND

RS-485 2W 9P D-Sub (Diagram8~ Diagram13)

Diagram 8

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 9

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	GND

Diagram 10

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	GND

Diagram 11

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	GND

Diagram 12

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	GND


Diagram 13

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	GND

Diagram 14

Ethernet cable:

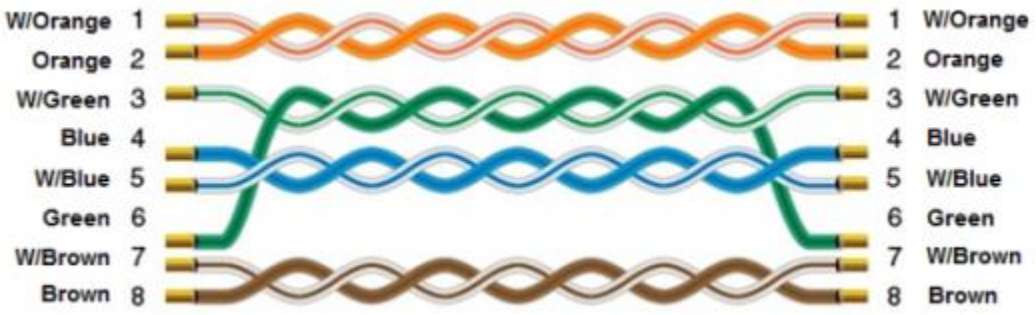

VIGOR

Supported Series: VIGOR M Series, VB Series, VH Series.
Website: http://www.vigorplc.com.tw/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	VIGOR		
PLC I/F	RS485 2W	RS232, RS485 4W	
Baud rate	19200		
Data bits	8		Select "7' for V1.10 and previous versions.
Parity	None		Select "Even" for V1.10 and previous versions.
Stop bits	1		
PLC sta. no.	0		

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 377	
B	Y	OOO	0 ~ 377	
B	M	DDDD	0 ~ 7999	
B	T	DDD	0 ~ 255	
B	C	DDD	0 ~ 255	
B	SM	DDDD	9000 ~ 9255	
B	S	DDD	0 ~ 999	
W	TV	DDD	0 ~ 255	
W	CV	DDD	0 ~ 199	
W	D	DDDD	0 ~ 9255	
W	CV2	DDD	200 ~ 255	
W	SD	DDDD	9000 ~ 9255	

Wiring Diagram:

RS-485 4W 6P Terminal (Diagram1~ Diagram4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 6P Terminal
Rx-	1	⟷	TX
Rx+	2	⟷	TX-
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	SG

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 6P Terminal
Rx-	7	⟷	TX
Rx+	6	⟷	TX-
Tx-	9	⟷	RX-
TX+	8	⟷	RX+
GND	5	⟷	SG

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2		RS485 4W 6P Terminal
	RS485 4W 9P Male		
Rx-	1	⟷	TX
Rx+	2	⟷	TX-
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	SG

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1		RS485 4W 6P Terminal
	RS485 4W 9P Female		
Rx-	1	⟷	TX
Rx+	2	⟷	TX-
Tx-	3	⟷	RX-
TX+	4	⟷	RX+
GND	5	⟷	SG

RS-232 9P D-Sub (Diagram5~ Diagram7)

Diagram 5

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5

Diagram 6

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	5

Diagram 7

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	5

VIGOR VS Series

Supported Series: VIGOR VS Series.
Website: http://www.vigorplc.com.tw/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	VIGOR VS Series		
PLC I/F	RS485 2W	RS232, RS485 2W, USB	
Baud rate	19200	300 ~ 115200	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	0	0 ~ 254	

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	OOO	0 ~ 571	
B	Y	OOO	0 ~ 571	
B	M	DDDD	0 ~ 8191	
B	S	DDDD	0 ~ 4095	
B	SM	DDDD	9000 ~ 9511	
B	D_Bit	DDDDh	0 ~ 8999f	
B	R_Bit	DDDDDh	0 ~ 25999f	
B	T_Coil	DDD	0 ~ 511	
B	T_Contact	DDD	0 ~ 511	
B	C_Coil	DDD	0 ~ 255	
B	C_Contact	DDD	0 ~ 255	
W	XW	OO	0 ~ 21	
W	YW	OO	0 ~ 21	
W	MW	DDD	0 ~ 511	
W	SW	DDD	0 ~ 255	
W	D	DDDD	0 ~ 8999	

Bit/Word	Device type	Format	Range	Memo
W	SD	DDDD	9000 ~ 9511	
W	R	DDDDD	0 ~ 25999	
W	T	DDD	0 ~ 511	
W	C	DDD	0 ~ 199	
DW	C_32Bit	DDD	200 ~ 255	

Wiring Diagram:

CP1 RS-485 2W Terminal (Diagram1~ Diagram6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		CP1 RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	SG

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		CP1 RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	D-
Data+	6	1	⟷	D+
GND	5	5	⟷	SG

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		CP1 RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	**5**	**9**	⟷	SG

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		CP1 RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	D-
Data+	2	9	⟷	D+
GND	5	5	⟷	SG

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		CP1 RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	D-
Data+	2	8	⟷	D+
GND	5	5	⟷	SG

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		CP1 RS485 2W terminal
	RS485 2W 9P Female		
Data-	1	⟷	D-
Data+	2	⟷	D+
GND	5	⟷	SG

CP2 RS-232 Terminal (Diagram7~ Diagram9)

Diagram 7

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		CP2 RS232 terminal
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	TX
Tx	3	7	⟷	RX
GND	5	5	⟷	SG

Diagram 8

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		CP2 RS232 terminal
	RS232 9P Female		
Rx	2	⟷	TX
Tx	3	⟷	RX
GND	5	⟷	SG

Diagram 9

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

	COM1 RS232 9P Female		PLC CP2 RS232 terminal
Rx	9	⟷	TX
Tx	6	⟷	RX
GND	5	⟷	SG

VIPA 200

HMI Setting:

Parameters	Recommen	Options	Notes
PLC type	VIPA 200		
PLC I/F	RS485 2w	RS485 2w	
Baud rate	9600	9600, 19200, 187.5K	The HMI which has a sticker "MPI187.5" on the rear cover supports 187.5K
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	2	1 ~ 126	
Turn around delay	5		
Reserved 1	30		ACK delay time

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

PLC Setting:

Communication mode	Set station number to 2

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
Byte	VB	DDDDD	0 ~ 10239	
W	VW	DDDDD	0 ~ 10239	V Memory
W	VW_Odd	DDDDD	0 ~ 10239	V Memory
DW	VD	DDDDD	0 ~ 10239	V Memory Double Word
DW	VD_Odd	DDDDD	0 ~ 10239	V Memory Double Word
W	VW_String	DDDDD	0 ~ 10239	String

Bit/Word	Device type	Format	Range	Memo
W	VW_String_Odd	DDDDD	0 ~ 10239	String
DW	VD_String	DDDDD	0 ~ 10239	String
DW	VD_String_Odd	DDDDD	0 ~ 10239	String
Byte	MB	DDDDD	0 ~ 10239	Byte Memory
W	MW	DDDDD	0 ~ 10239	Word Memory
DW	MD	DDDDD	0 ~ 10239	Word Memory
W	MW_Odd	DDDDD	0 ~ 10239	Word Memory
W	T	DDD	0 ~ 127	Timer
W	C	DDD	0 ~ 127	Counter

- Double word and floating point value must use VD device type.

Wiring Diagram:

RS-485 2W 9P D-Sub (Diagram1~ Diagram6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8
Data+	6	1	⟷	3
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	
	RS485 2W 9P Male	RS485 2W 9P Male	RS485 2W 9P D-Sub Male
Data-	1	6	8
Data+	2	9	3
GND	5	5	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	
	RS485 2W 9P Female	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	7	8
Data+	2	8	3
GND	5	5	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	
	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	8
Data+	2	3
GND	5	5

VIPA 200 (VD any address)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	VIPA 200 (VD any address)		
PLC I/F	RS485 2w	RS485 2w	
Baud rate	9600	9600, 19200, 187.5K	The HMI which has a sticker "MPI187.5" on the rear cover supports 187.5K
Data bits	8	7,8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	2	1 ~ 126	
Turn around delay	5		
Reserved 1	30		ACK delay time

Online simulator	YES	**Extend address mode**	NO
Broadcast command	NO		

PLC Setting:

Communication mode	Set station number to 2

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
W	VW	DDDDD	0 ~ 10239	V Memory
DW	VD	DDDDD	0 ~ 10239	V Memory Double Word
W	VW_String	DDDDD	0 ~ 10239	String
DW	VD_String	DDDDD	0 ~ 10239	String
W	MW	DDDDD	0 ~ 10239	Word Memory
W	T	DDD	0 ~ 127	Timer

Bit/Word	Device type	Format	Range	Memo
W	C	DDD	0 ~ 127	Counter
DW	MD	DDDDD	0 ~ 10239	Word Memory

- Double word and floating point value must use VD device type.
- VD register can set to any value, not necessarily a multiple of 4.

Wiring Diagram:

RS-485 2W 9P D-Sub (Diagram1~ Diagram6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	8
Data+	6	1	⟷	3
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W 9P D-Sub Male
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	RS485 2W 9P Female	
Data-	1	7	8
Data+	2	8	3
GND	5	5	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	RS485 2W 9P D-Sub Male
	RS485 2W 9P Female	
Data-	1	8
Data+	2	3
GND	5	5

VIPA 200, for ex. 214-2BT10 (Ethernet)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	VIPA 200, for ex. 214-2BT10 (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
PLC sta. no.	1	0-31	

Device Address:

Bit/Word	Device	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	VW_Bit	DDDDDo	0 ~ 102397	V Memory Bit Address
W	VW	DDDDD	0 ~ 10239	V Memory
DW	VD	DDDDD	0 ~ 10239	V Memory Double Word
W	VW_String	DDDDD	0 ~ 10239	String
DW	VD_String	DDDDD	0 ~ 10239	String
DW	MD	DDDDD	0 ~ 10239	Word Memory

- Double word and floating point value must use VD device type.

Wiring Diagram:

Ethernet cable:



VIPA 200/300 MPI

HMI Setting:

Parameters	Recommende	Options	Notes
PLC type	VIPA 200/300 MPI		
PLC I/F	RS-485 2W		
Baud rate	187.5K		Only HMI with a sticker “MPI 187.5K” on the rear cover supports MPI communication.
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	2	2 ~ 31	


Online simulator	NO	**Extend address mode**	Yes
Broadcast command	NO		

Device Address:


Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFDDDDo	0 ~ 409699997	Data Register Bit
B	DB0Bit ~DB99Bit	DDDDDo	0 ~ 655327	Data Register Bit
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
Byte	DBBn	FFFFDDDD	0 ~ 40969999	Data Register
W	DBn	FFFFDDDD	0 ~ 40969999	Data Register (must be even)
DW	DBDn	FFFFDDDD	0 ~ 40969999	Data Register Double Word
W	DBn_String	FFFFDDDD	0 ~ 40969999	
DW	DBDn_String	FFFFDDDD	0 ~ 40969999	
W	DB0 ~ DB99	DDDDD	0 ~ 65532	Data Register (must be even)

* Double word and floating point value must use DBDn device type.


Multi-HMIs-Multi-PLCs Communication Setting:

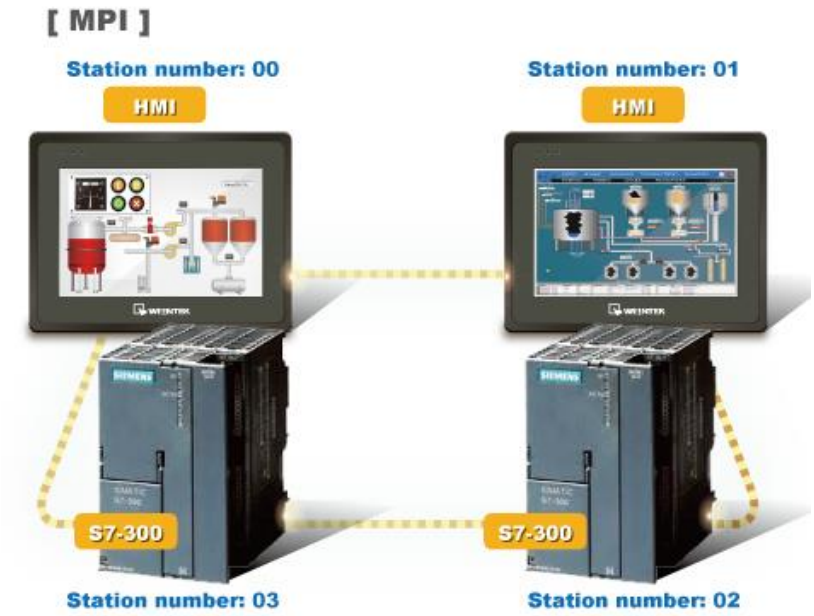

For SIEMENS S7-300 MPI driver in Multi-HMIs-Multi-PLCs communication, [Max. station no. (MPI network)] parameter must be correctly set. This setting is relevant to the station no. of the devices, as shown, two HMI (station no. 0, 1) and two PLC (station no. 2, 3) are in MPI network, Max. Station No. should be set to 3.

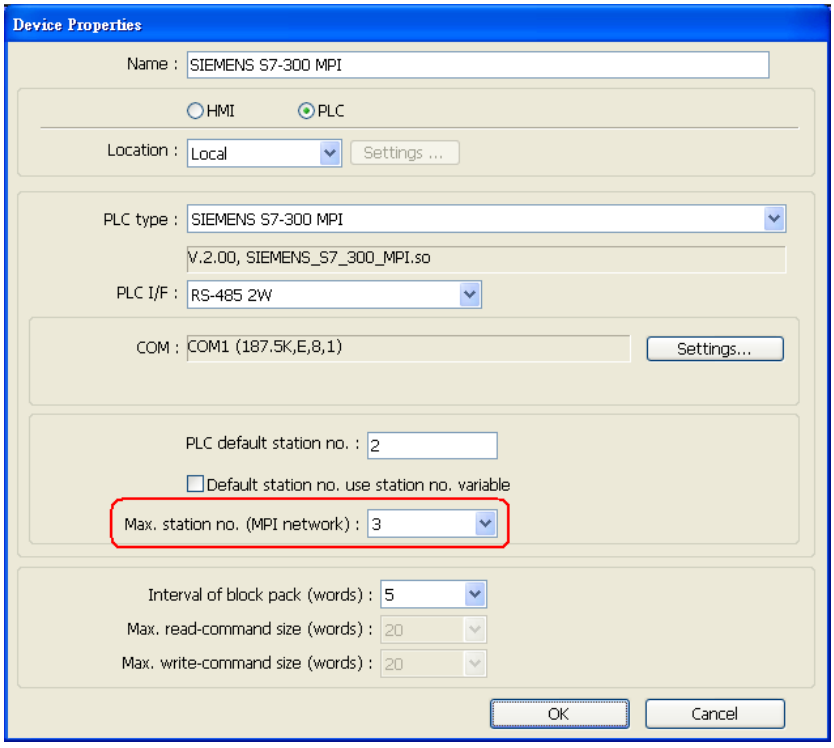

For the effectiveness of communication, users may set PLC device in STEP 7 as shown below. In Properties MPI / Network Settings, set Highest MPI address to the number closest to the actual device station number.

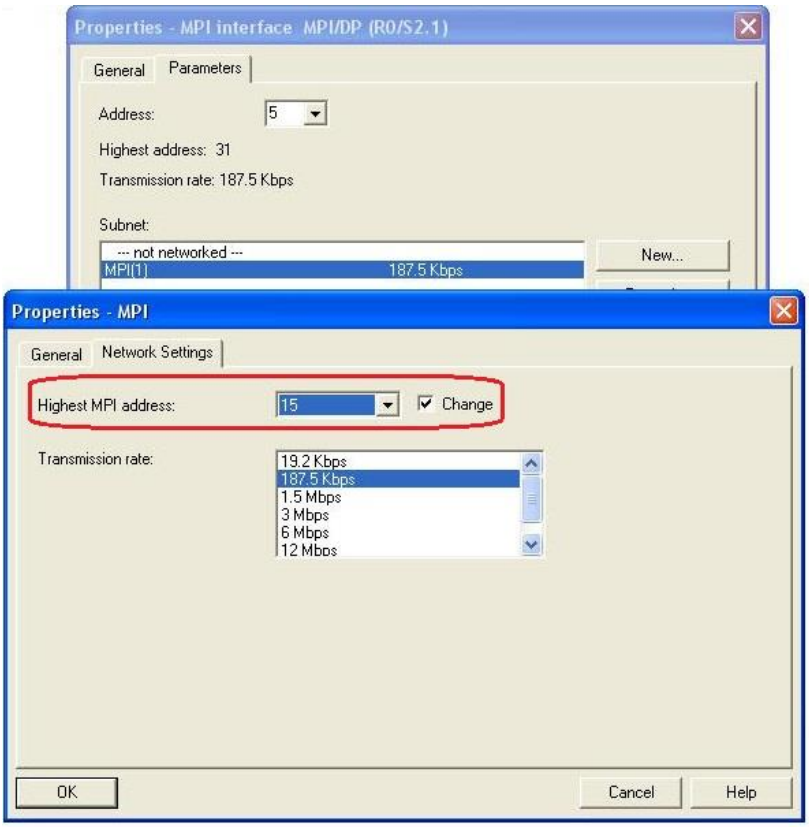

Note:


- HMI sta. no. can not be the same as PLC sta. no.
- Highly recommended that the device station numbers start from 0 sequentially and correctly set [Max. station no. (MPI network)].
- Available for EasyBuilder V4.50 and later.

How to Import Tag:


SIEMENS STEP 7 program allows building files of user-defined tag (***.dif** file and ***.AWL** file), and import these files in EasyBuilder8000/EasyBuilderPro -> System Parameter Settings. The following describes how to build and import these two types of files.

1. Building *.dif File

a、 In “Symbols” create user-defined tag.

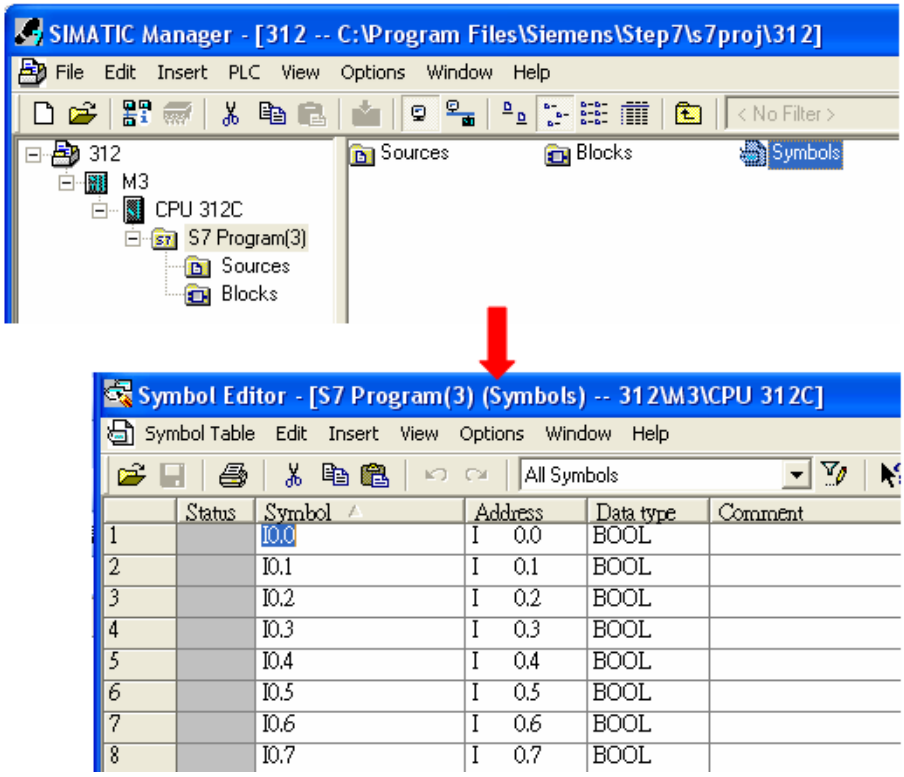


b、 Click **Export** to export the edited file and click **Save**.

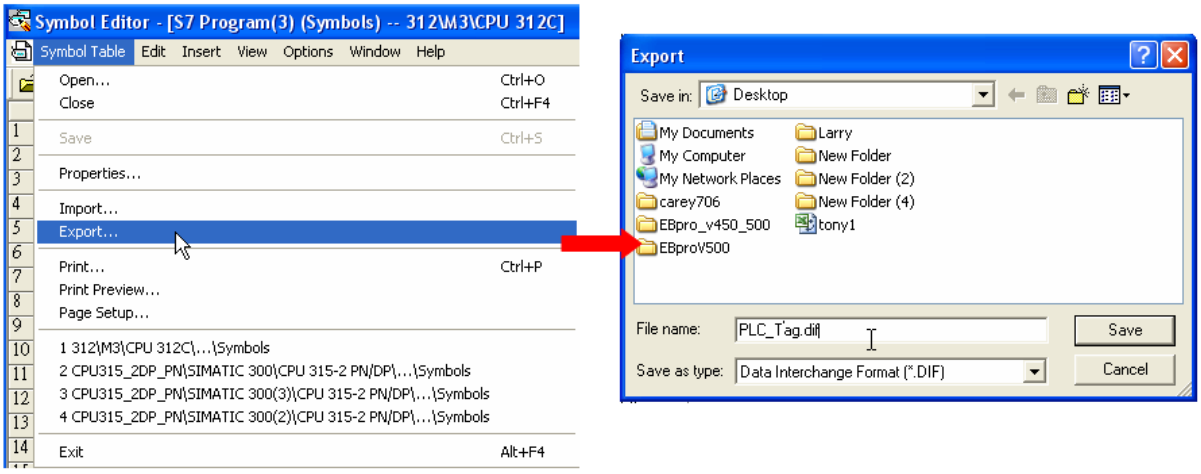


2. Building *.AWF File


a、 In **Blocks** create items as shown below:

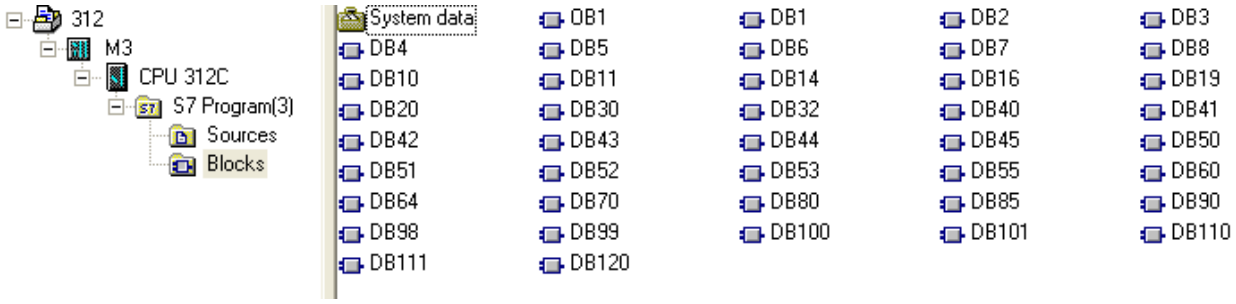


b、 Open **LAD/STL, FBD – Programming S7 Blocks**, click **File** -> **Generate Source.**

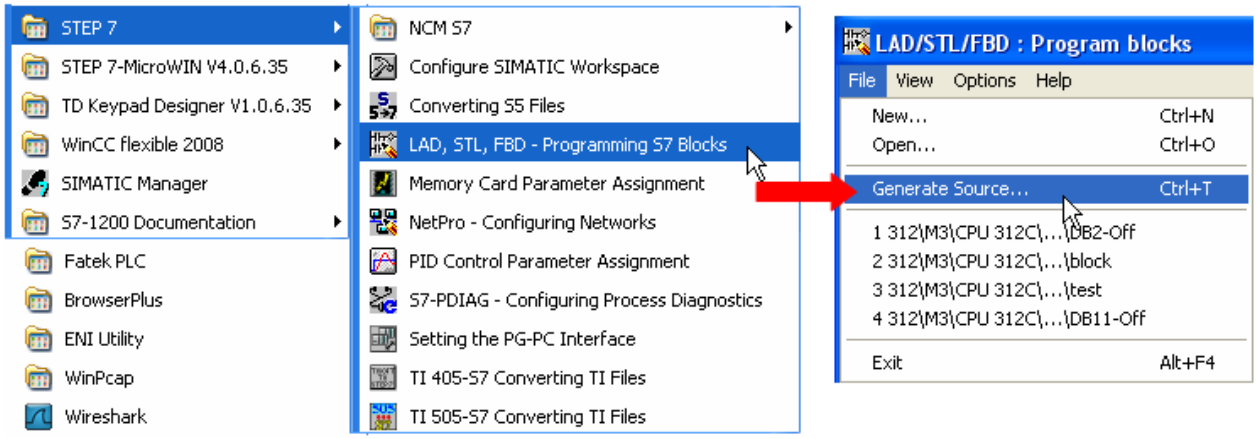


c、 Select **Sources** as storage path, specify the file name then click **OK**.

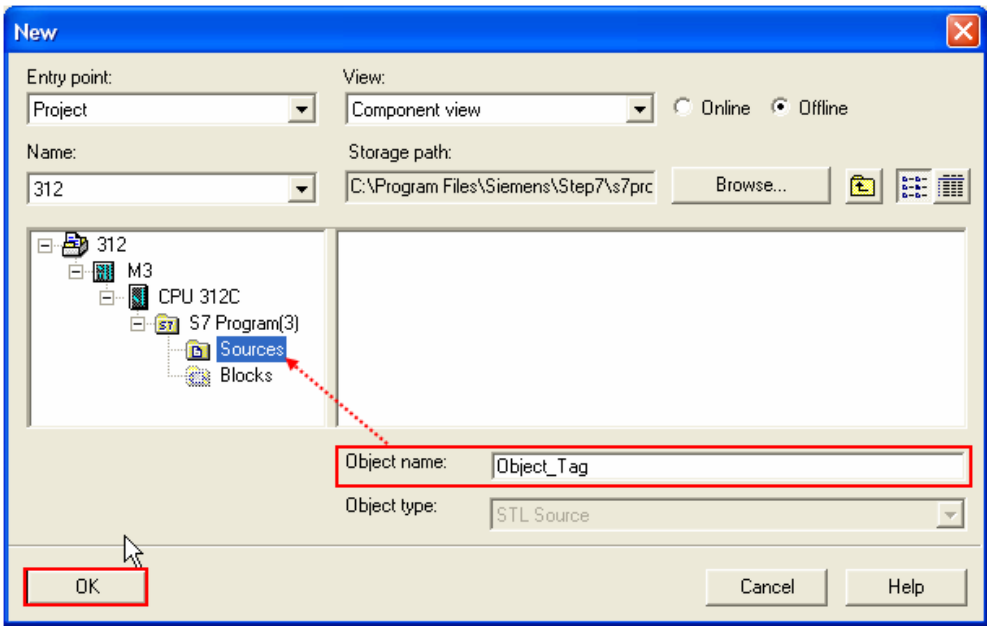


d、 Select the objects to be exported then click **OK**.

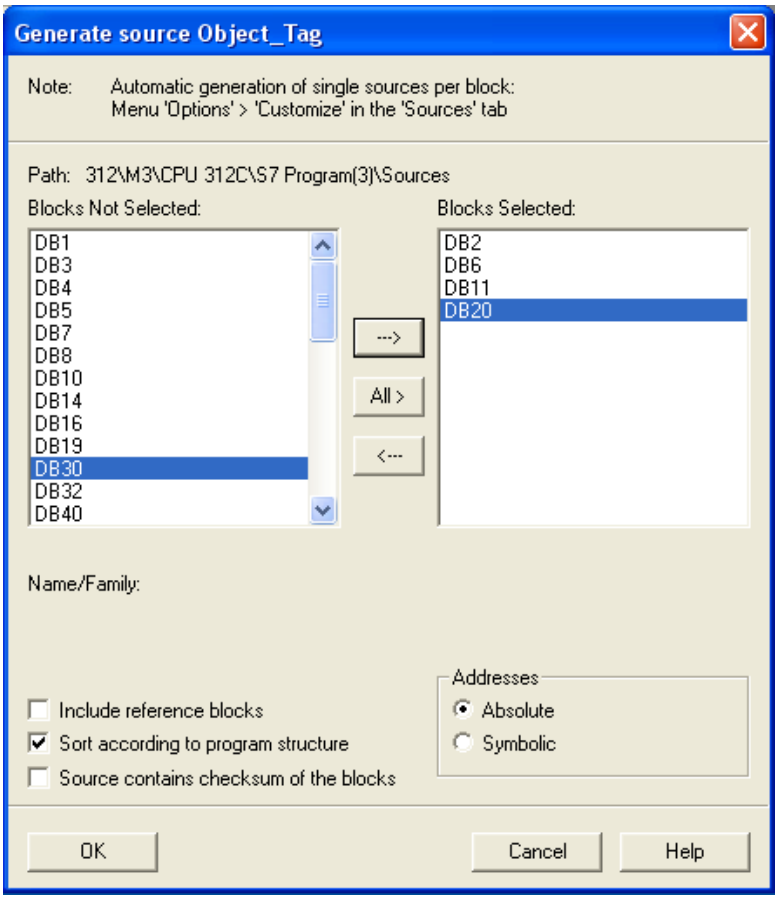

e、 Under **Sources** there will be names of the saved files, select **Export Source** to build ***.AWL** file.

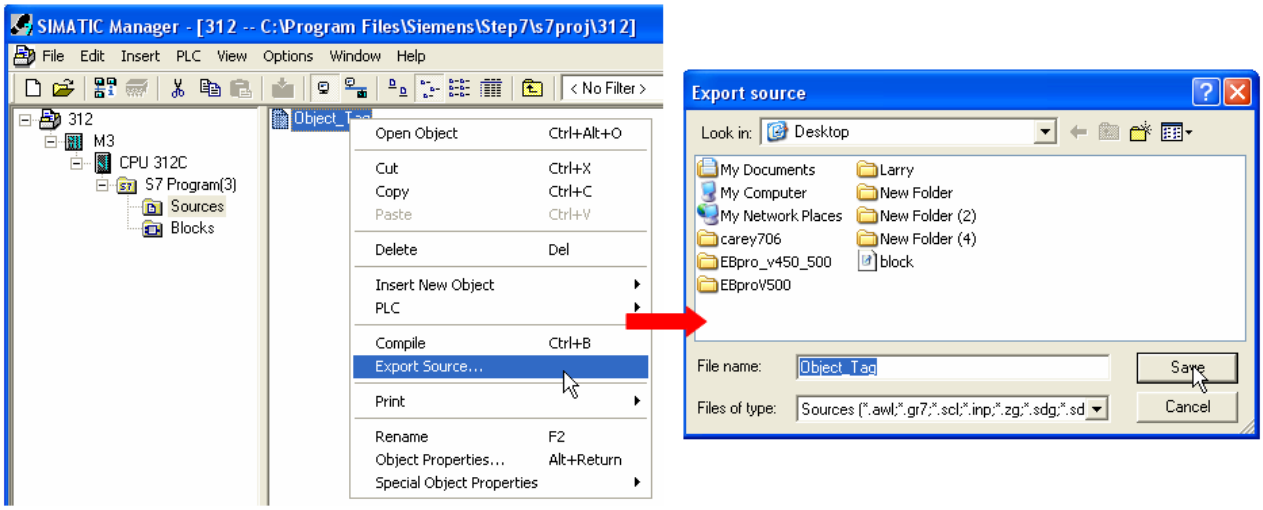

The generated *.dif and *.AWL files can be imported in EasyBuilder8000/EasyBuilderPro **System Parameter Settings**, by clicking **Import Tag**.

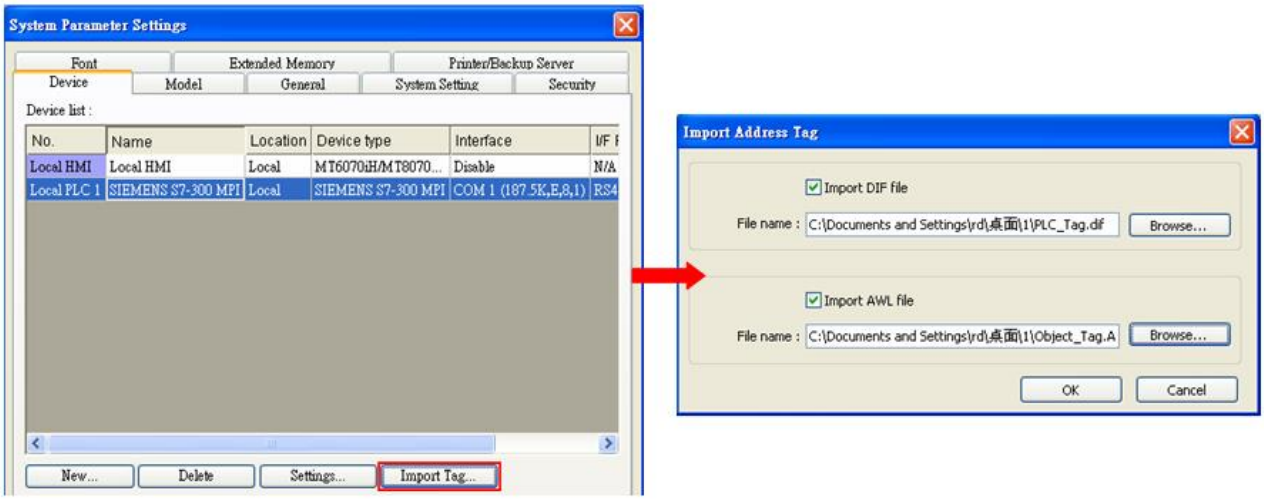

Tag information successfully imported.



Wiring Diagram:

RS-485 2W 9P D-Sub (Diagram1~ Diagram6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		
	RS485 2W 9P Male	RS485 2W 9P Male		RS485 2W 9P D-Sub Male
Data-	1	6	⟷	8
Data+	2	9	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		
	RS485 2W 9P Female	RS485 2W 9P Female		RS485 2W 9P D-Sub Male
Data-	7	4	⟷	8
Data+	6	1	⟷	3
GND	5	5	⟷	5

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		
	RS485 2W 9P Male	RS485 2W 9P Male		RS485 2W 9P D-Sub Male
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI			PLC
	COM2	COM3	
	RS485 2W 9P Male	RS485 2W 9P Male	RS485 2W 9P D-Sub Male
Data-	1	6	8
Data+	2	9	3
GND	5	5	5

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1	COM3	
	RS485 2W 9P Female	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	7	8
Data+	2	8	3
GND	5	5	5

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI		PLC
	COM2	
	RS485 2W 9P Female	RS485 2W 9P D-Sub Male
Data-	1	8
Data+	2	3
GND	5	5

VIPA 300

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	VIPA 300		
PLC I/F	RS232		
Baud rate	19200, 38400, 187.5K	9600~187.5K	Must be same as the PLC setting. The HMI which has a sticker MPI187.5 on the rear cover supports 187.5K.
Data bits	8		
Parity	Odd		
Stop bits	1		
PLC sta. no.	2		Must be same as the PLC setting.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFDDDDo	0 ~ 409681927	Data Register Bit
B	DB0Bit ~ DB99Bit	DDDDo	0 ~ 81927	
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
Byte	DBBn	FFFFDDDD	0 ~ 40968192	Data Register Byte
W	DBn	FFFFDDDD	0 ~ 40968192	Data Register (must be even)
DW	DBDn	FFFFDDDD	0 ~ 40968192	Data Register Double Word (must be multiple of 4)
W	DBn_String	FFFFDDDD	0 ~ 40968192	Data Register Double Word (must be multiple of 4)

Bit/Word	Device type	Format	Range	Memo
DW	DBDn_String	FFFFDDDD	0 ~ 40968192	Data Register Double Word (must be multiple of 4)
W	DB0-DB99	DDDD	0 ~ 8192	Data Register (must be even)


* Double word and floating point value must use DBDn device type.

How to Import Tag:


SIEMENS STEP 7 program allows building files of user-defined tag (***.dif** file and ***.AWL** file), and import these files in EasyBuilder8000/EasyBuilderPro -> System Parameter Settings. The following describes how to build and import these two types of files.

1. Building *.dif File

a、 In “Symbols” create user-defined tag.

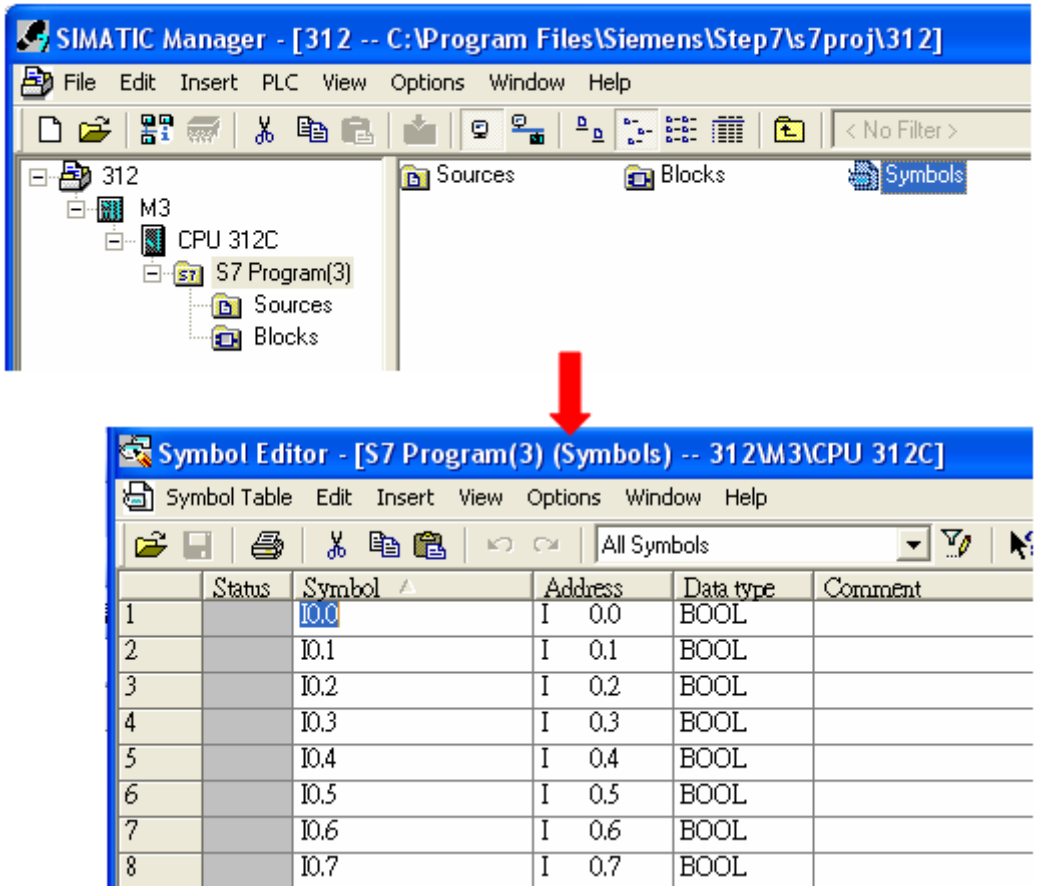

b、 Click **Export** to export the edited file and click **Save**.

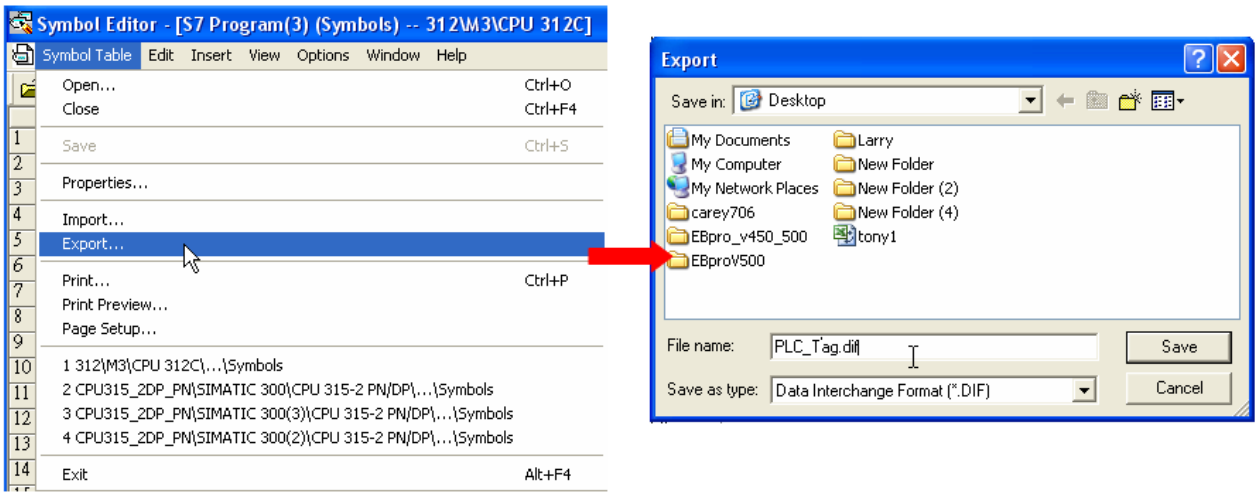


2. Building *.AWF File


a、 In **Blocks** create items as shown below:




b、 Open **LAD/STL, FBD – Programming S7 Blocks**, click **File** -> **Generate Source.**

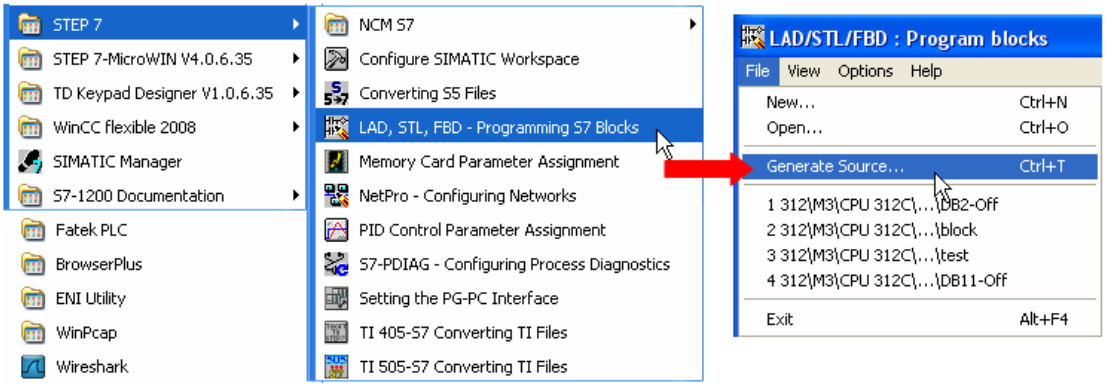


c、 Select **Sources** as storage path, specify the file name then click **OK**.

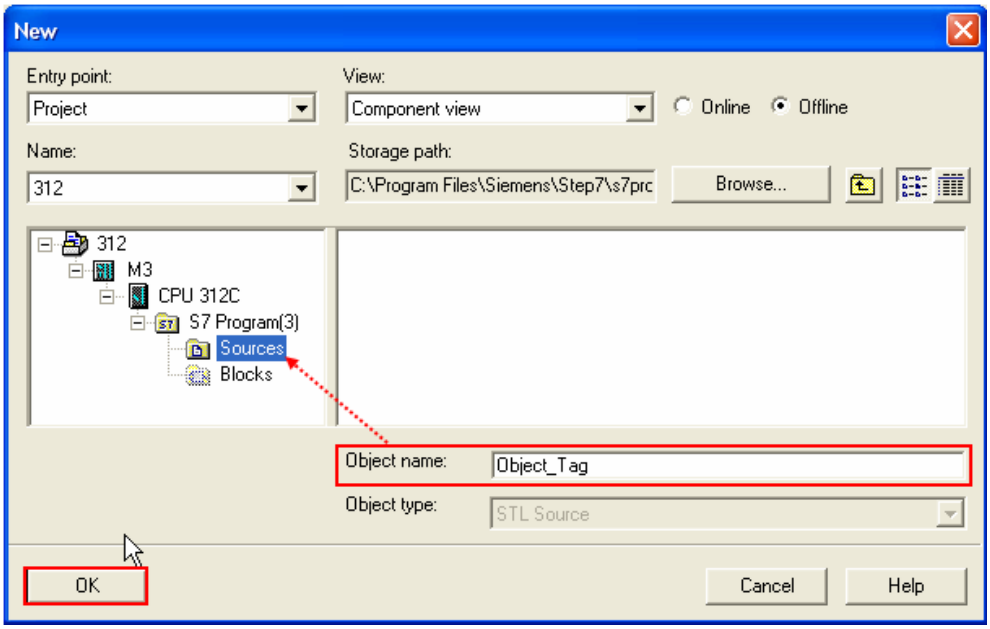


d、 Select the objects to be exported then click **OK**.

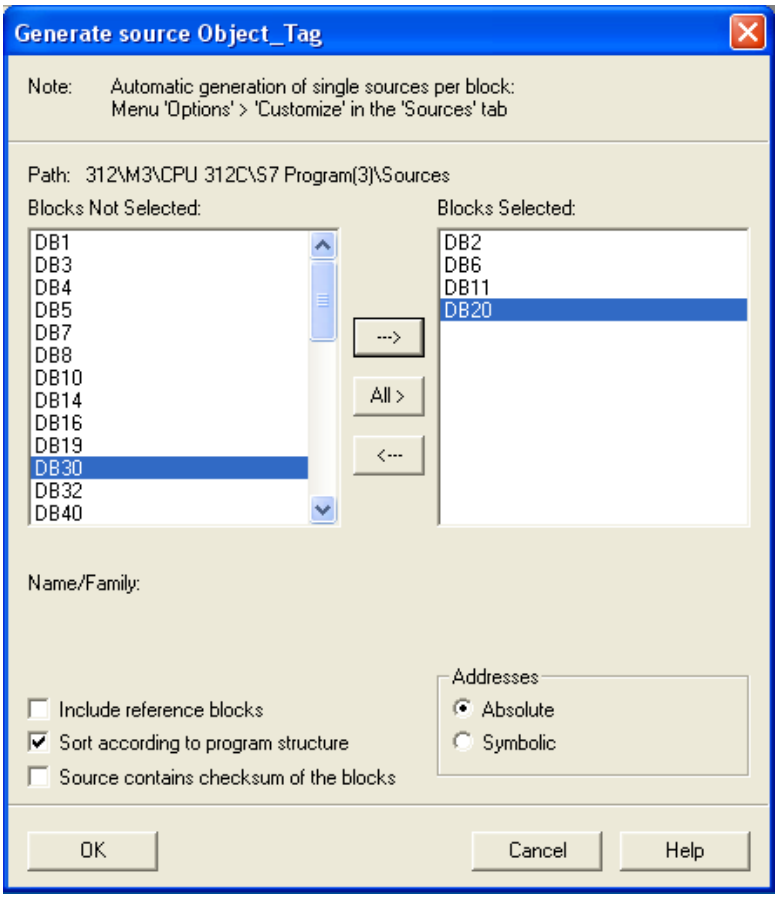

e、 Under **Sources** there will be names of the saved files, select **Export Source** to build ***.AWL** file.

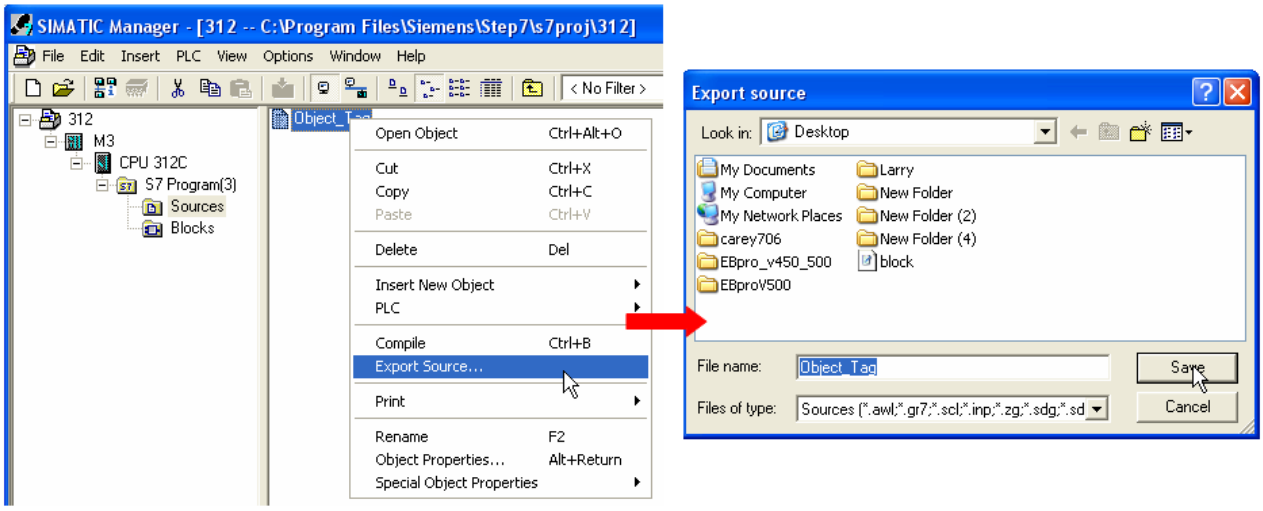

The generated *.dif and *.AWL files can be imported in EasyBuilder8000/EasyBuilderPro **System Parameter Settings**, by clicking **Import Tag**.

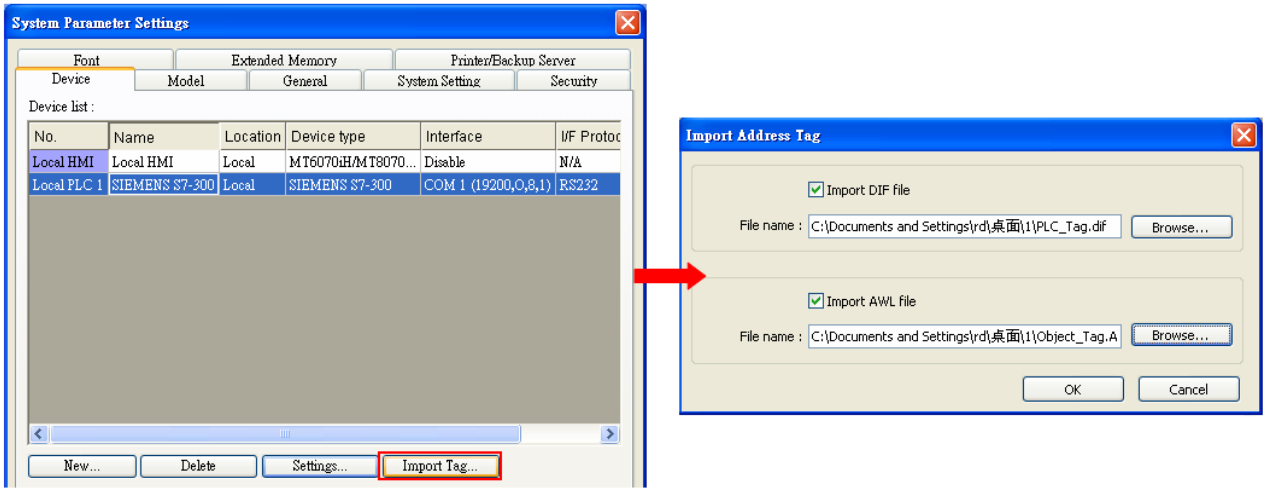

Tag information successfully imported.



Wiring Diagram:

Siemens S7-300 PC Adapter : 9P D-Sub to 9P D-Sub (Diagram1~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5
			↔	7
			↔	8

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	↔	3
Tx	3	↔	2
GND	5	↔	5
		↔	7
		↔	8

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	↔	3
Tx	6	↔	2
GND	5	↔	5
		↔	7
		↔	8

Systeme Helmholz SSW7-TS : RS-232 9P D-Sub to 9P D-Sub (Diagram4~ Diagram6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5
				7
				8
				4
				6

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***


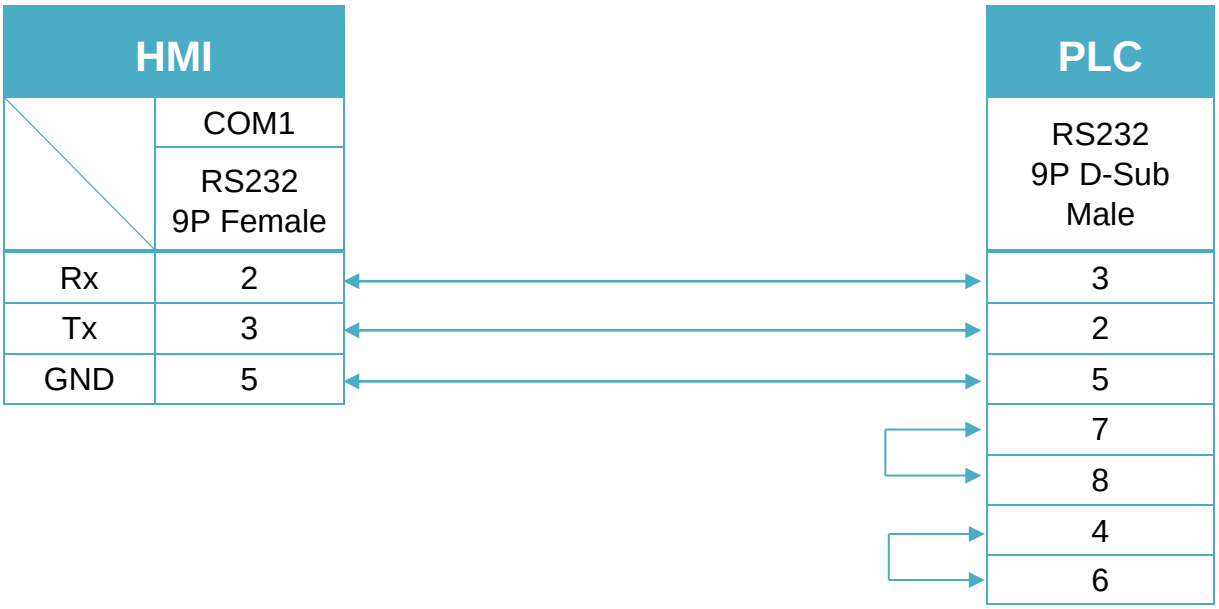


Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

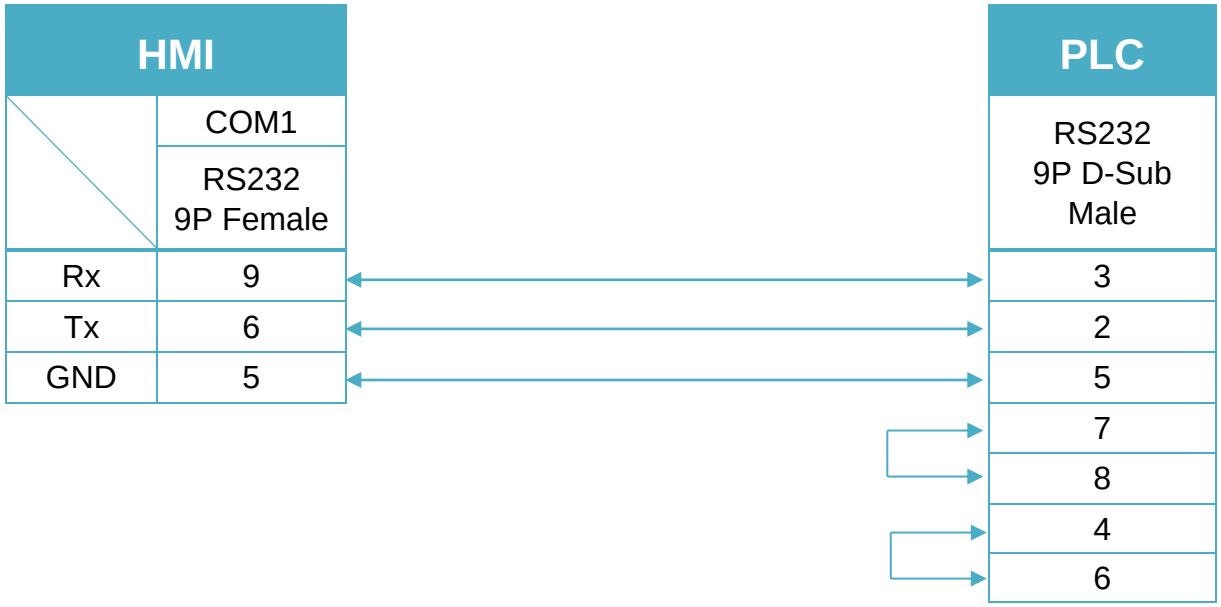

VIPA 300S (Ethernet)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	VIPA 300S (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
Link type	PG	PC, OP	
Rack	0	0-7	
CPU slot	3	2-31	
PLC sta. no.	0	0-31	


Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFFFDDDDo	0 ~ 6553599997	
B	DB0Bit-DB99Bit	DDDDDo	0 ~ 655327	Data Register Bit
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	
W	DBn	FFFFFDDDD	0 ~ 655359999	Data Register (must be even)
DW	DBDn	FFFFFDDDD	0 ~ 655359999	Data Register Double Word
W	DBn_String	FFFFFDDDD	0 ~ 655359999	
DW	DBDn_String	FFFFFDDDD	0 ~ 655359999	
W	DB0 ~ DB99	DDDDD	0 ~ 65532	Data Register
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
Byte	DBBn	FFFFFDDDD	0 ~ 655359999	Data Register Byte


* Double word and floating point value must use DBDn device type.

EasyBuilder Device Setting Steps


1. Open EasyBuilder, File/NEW, select HMI model and press [OK].

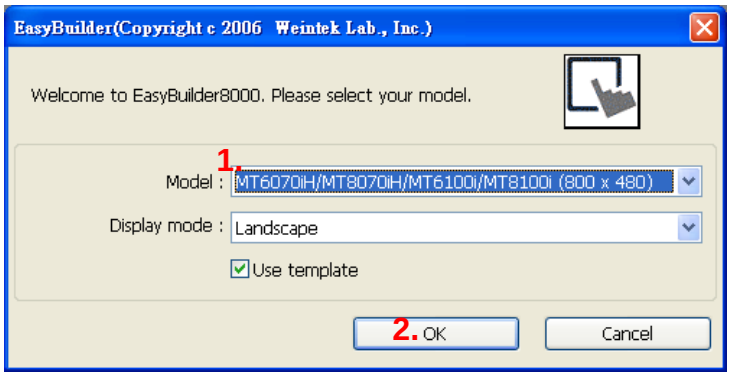


2. ”System Parameter Settings” window is shown, click [New].
3. Select “SIEMENS S7-400(ETHERNET)”.

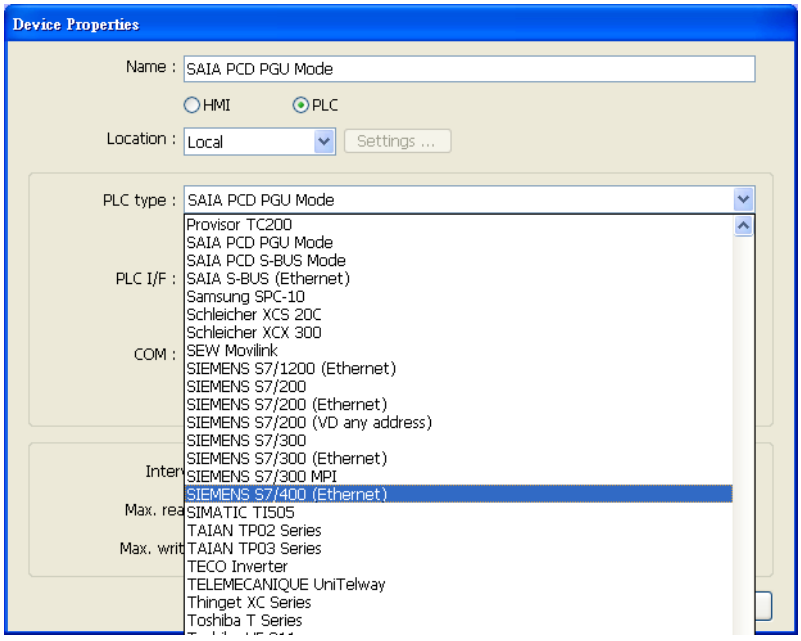

4. Press [Settings].
5. Set S7-400 IP, Port no., Link type, Rack and CPU slot. (must match PLC settings)

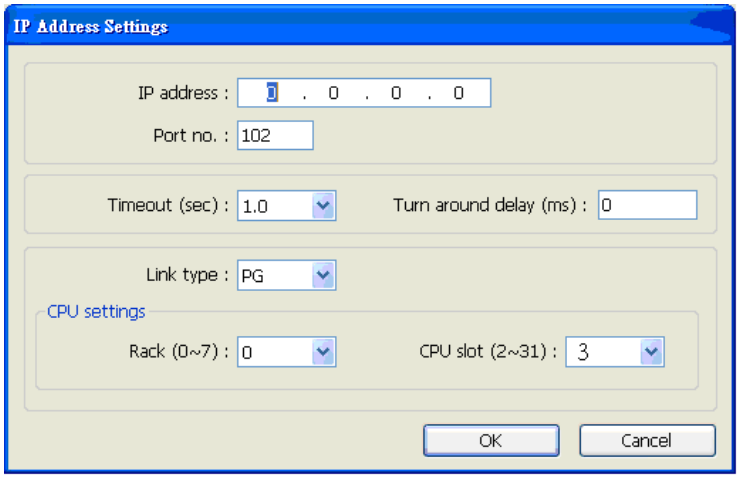

6. The setting will be finished as below.

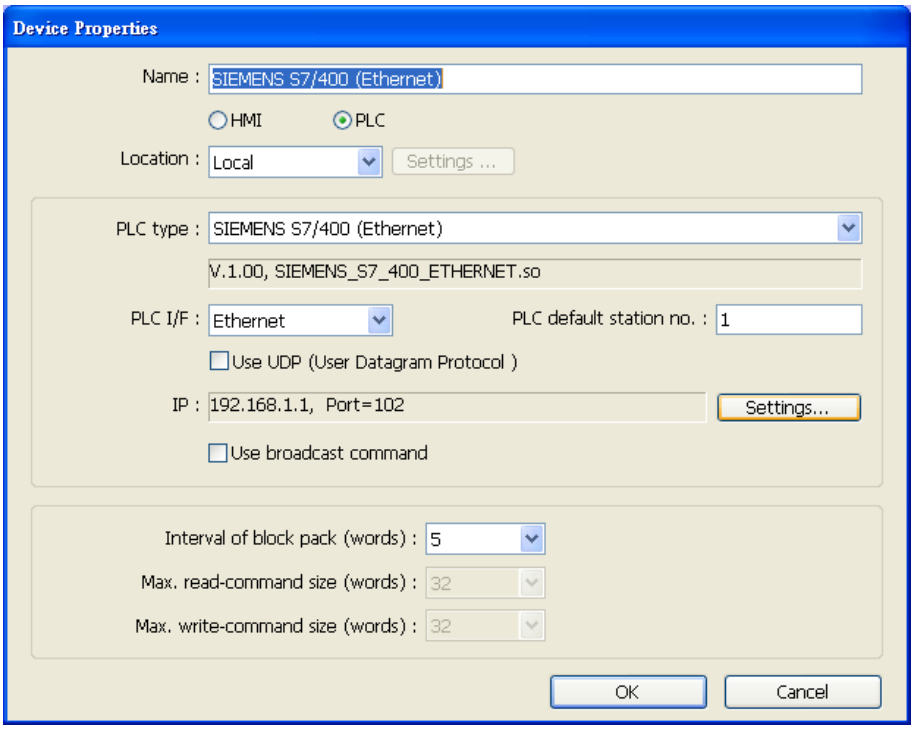


How to Import Tag:


SIEMENS STEP 7 program allows building files of user-defined tag (***.dif** file and ***.AWL** file), and import these files in EasyBuilder8000/EasyBuilderPro -> System Parameter Settings. The following describes how to build and import these two types of files.

1. Building *.dif File

a、 In “Symbols” create user-defined tag.

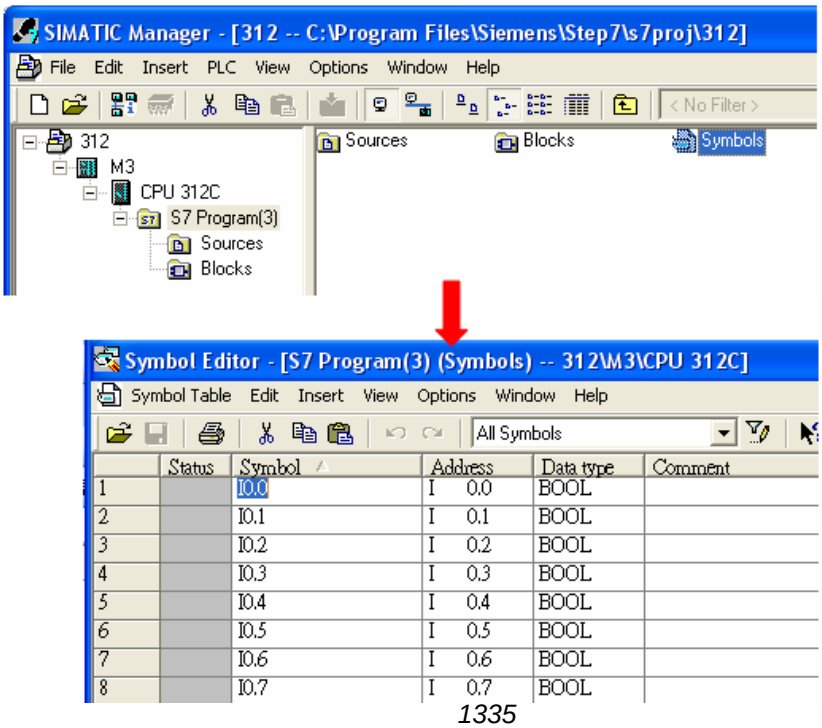

b、 Click **Export** to export the edited file and click **Save**.

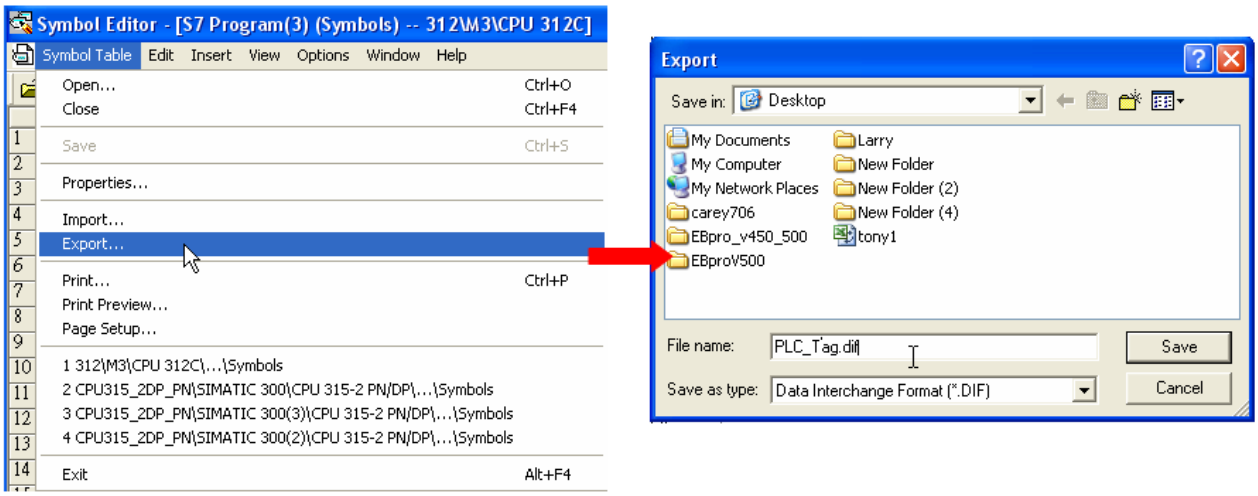


2. Building *.AWF File


a、 In **Blocks** create items as shown below:




b、 Open **LAD/STL, FBD – Programming S7 Blocks**, click **File** -> **Generate Source.**

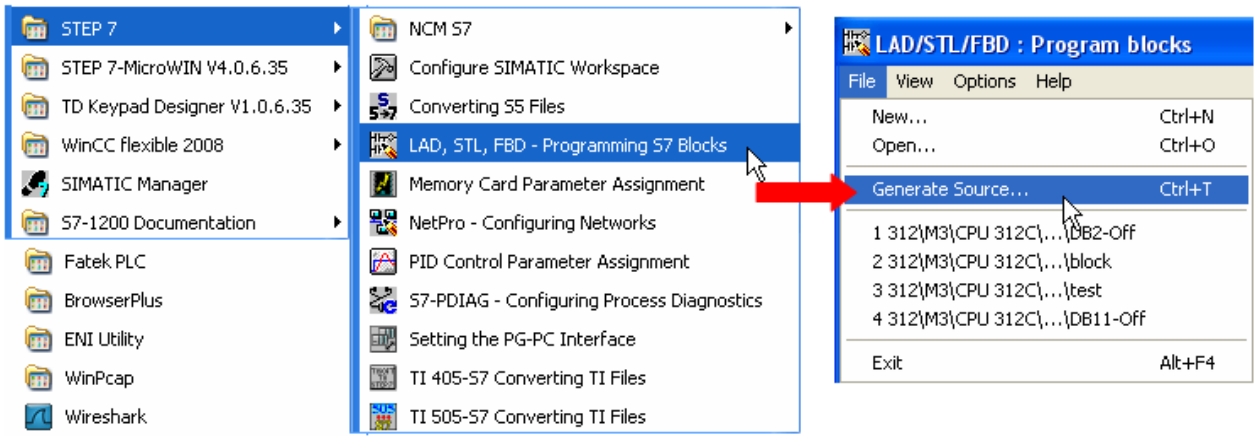


c、 Select **Sources** as storage path, specify the file name then click **OK**.

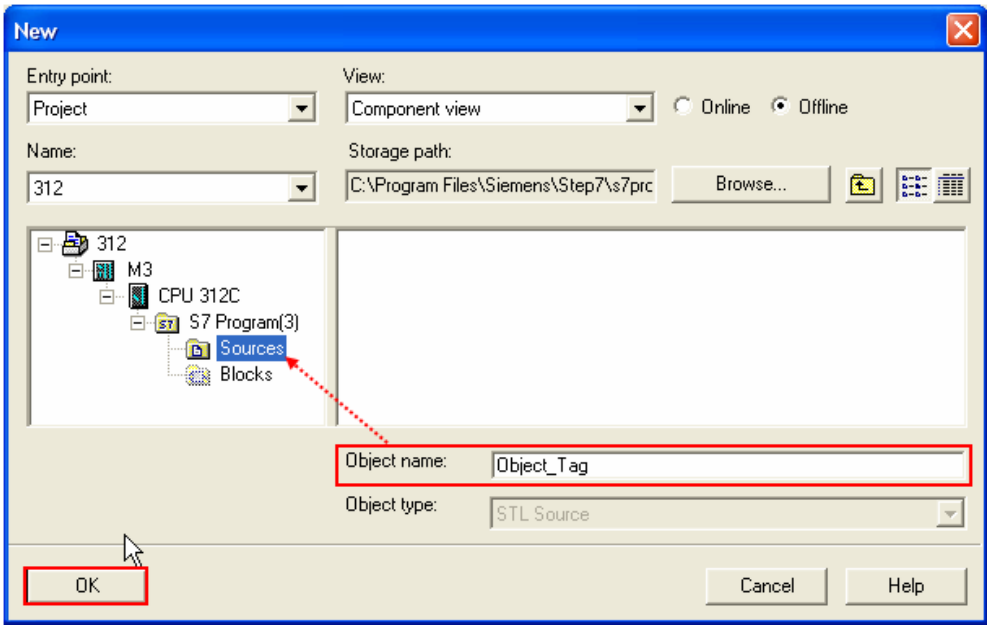


d、 Select the objects to be exported then click **OK**.

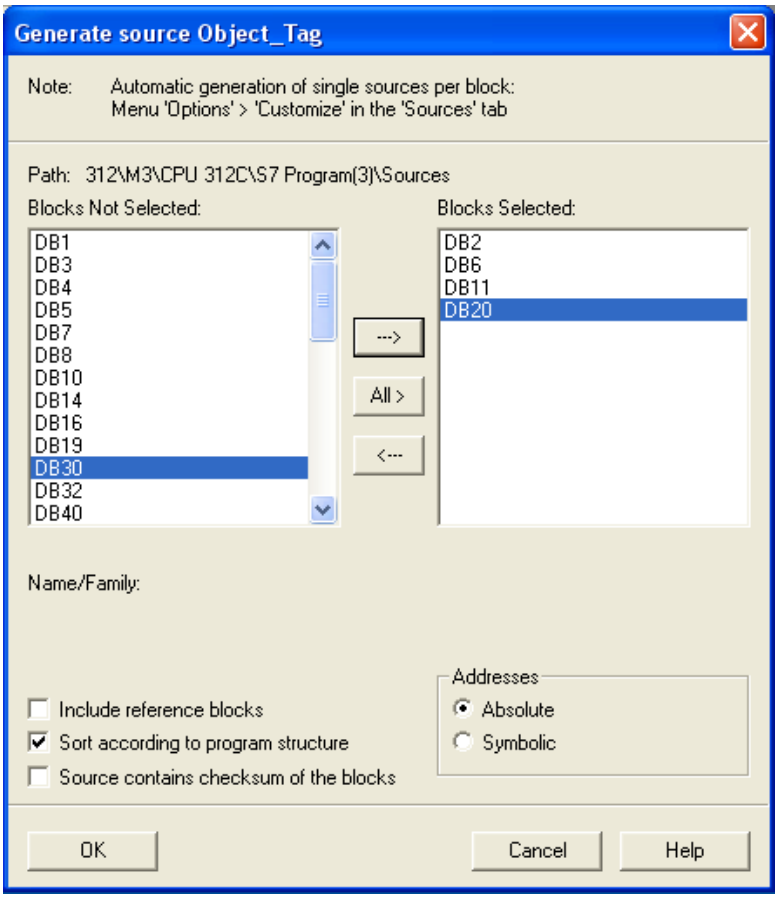

e、 Under **Sources** there will be names of the saved files, select **Export Source** to build ***.AWL** file.

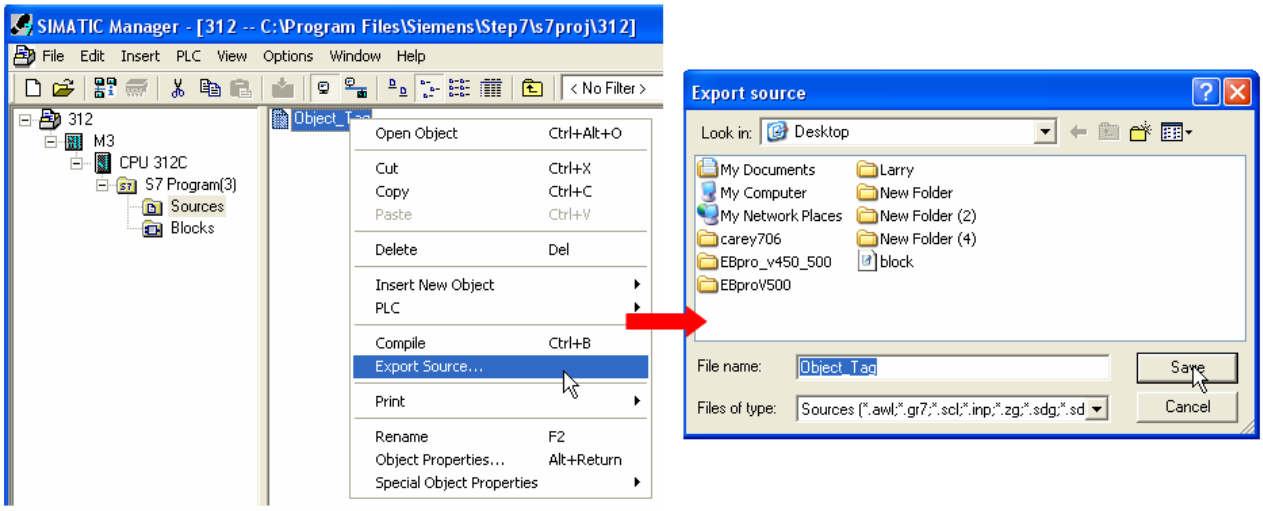

The generated *.dif and *.AWL files can be imported in EasyBuilder8000/EasyBuilderPro **System Parameter Settings**, by clicking **Import Tag**.

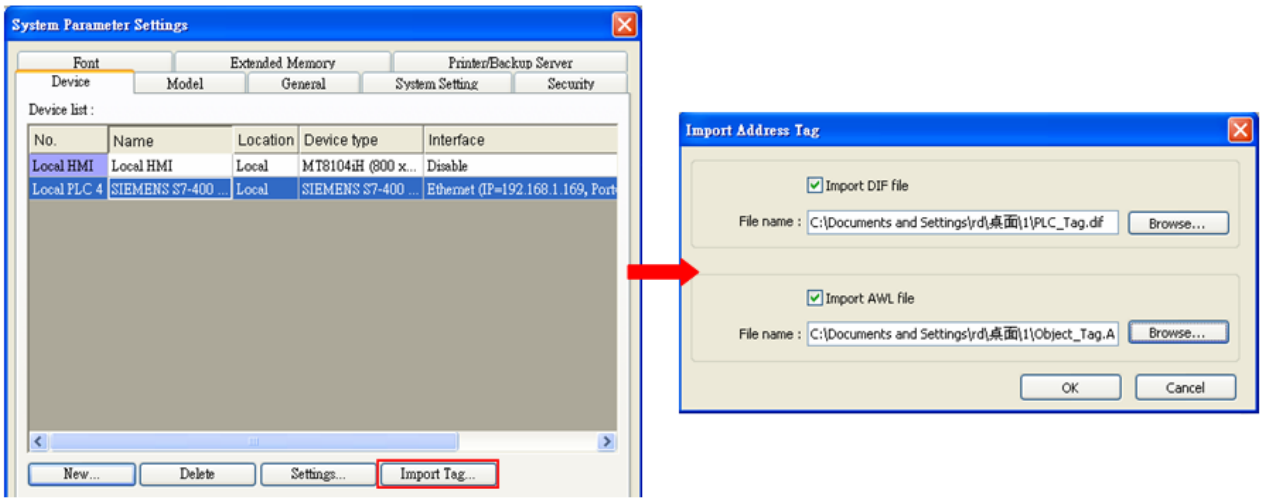


Tag information successfully imported.



Wiring Diagram:

Ethernet cable:

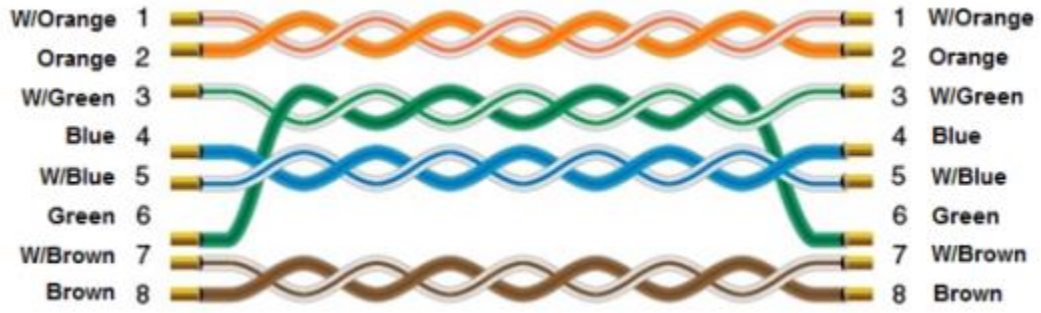

VIPA 300S, for ex. 315-4NE12 (Ethernet)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	VIPA 300S, for ex. 315-4NE12 (Ethernet)		
PLC I/F	Ethernet		
Port no.	102		
PLC sta. no.	1	0-31	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDDDo	0 ~ 40957	Input (I)
B	Q	DDDDo	0 ~ 40957	Output (O)
B	M	DDDDo	0 ~ 40957	Bit Memory
B	DBnBit	FFFFDDDDo	0 ~ 409699997	
B	DB0Bit-DB99Bit	DDDDDo	0 ~ 655327	Data Register Bit
W	IW	DDDD	0 ~ 4095	Input (I)
W	QW	DDDD	0 ~ 4095	Output (O)
W	MW	DDDD	0 ~ 4095	Bit Memory
DW	MD	DDDD	0 ~ 4094	Bit Memory Double Word
W	DBn	FFFFDDDD	0 ~ 40969999	Data Register (must be even)
DW	DBDn	FFFFDDDD	0 ~ 40969999	Data Register Double Word
W	DBn_String	FFFFDDDD	0 ~ 40969999	
DW	DBDn_String	FFFFDDDD	0 ~ 40969999	
W	DB0 ~ DB99	DDDDD	0 ~ 65532	Data Register (must be even)
Byte	MB	DDDD	0 ~ 4095	Bit Memory Byte
Byte	DBBn	FFFFDDDD	0 ~ 40969999	Data Register Byte


- Double word and floating point value must use DBDn device type.

How to Import Tag:


SIEMENS STEP 7 program allows building files of user-defined tag (***.dif** file and ***.AWL** file), and import these files in EasyBuilder8000/EasyBuilderPro -> System Parameter Settings. The following describes how to build and import these two types of files.

1. Building *.dif File

a、 In “Symbols” create user-defined tag.

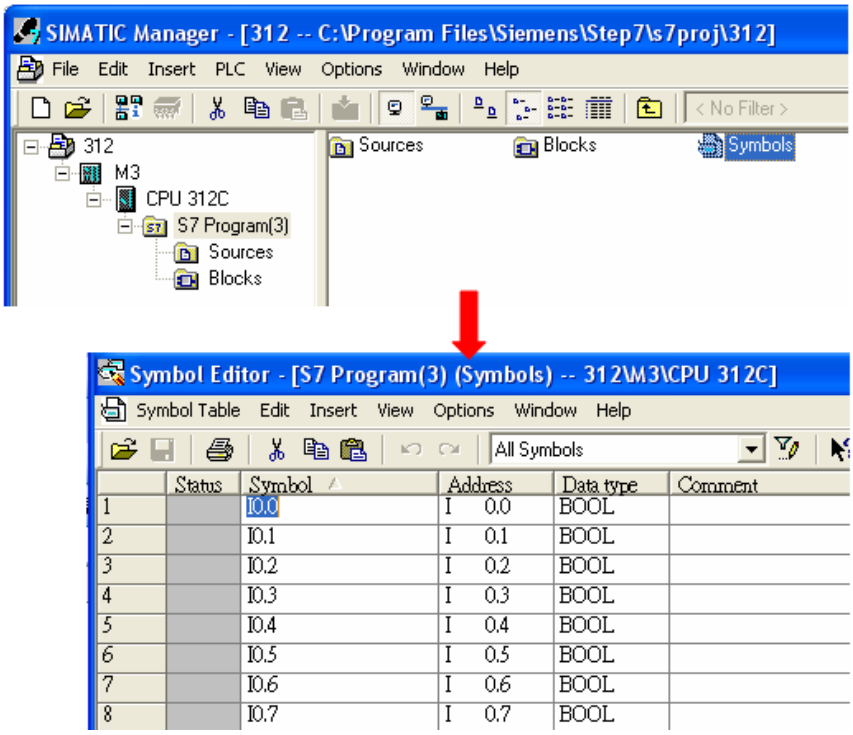


b、 Click **Export** to export the edited file and click **Save**.

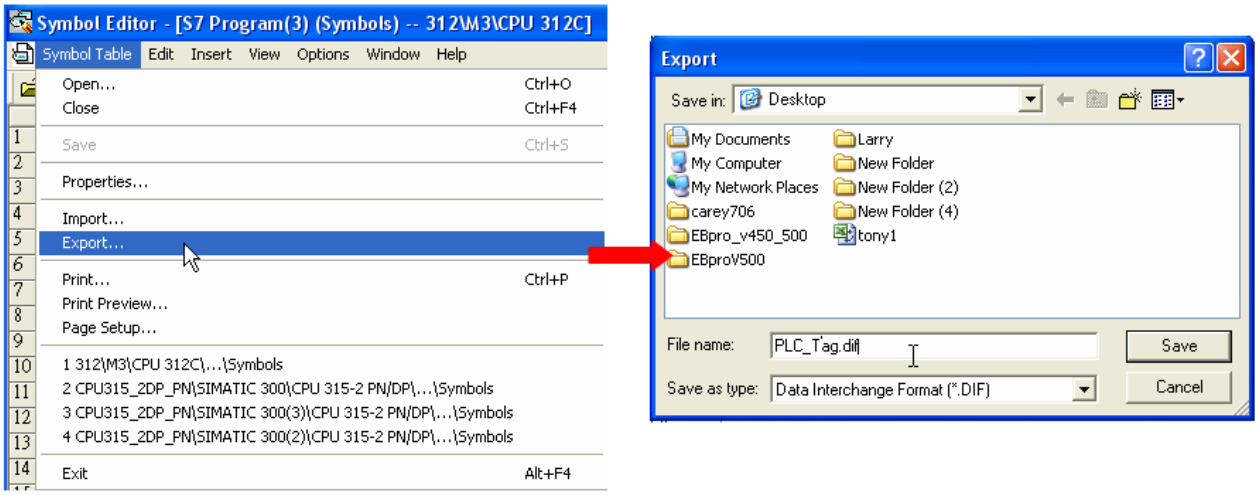


2. Building *.AWF File


a、 In **Blocks** create items as shown below:

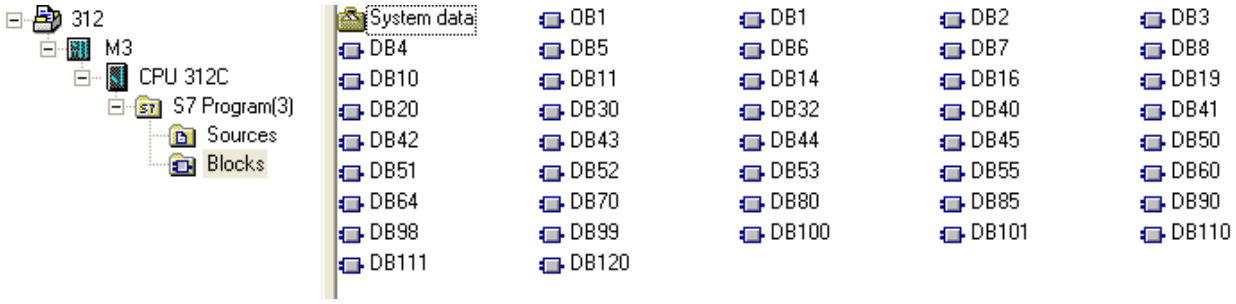


b、 Open **LAD/STL, FBD – Programming S7 Blocks**, click **File** -> **Generate Source.**

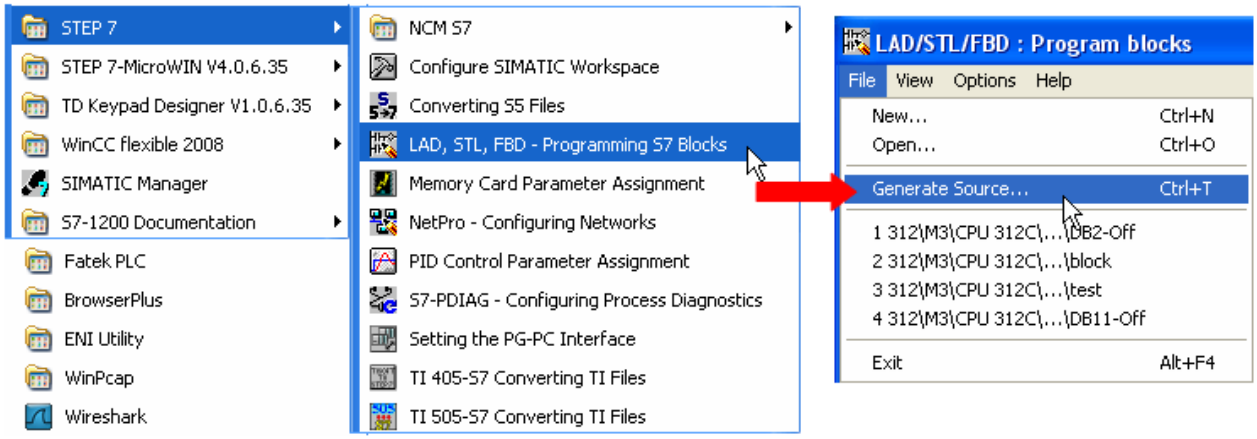


c、 Select **Sources** as storage path, specify the file name then click **OK**.

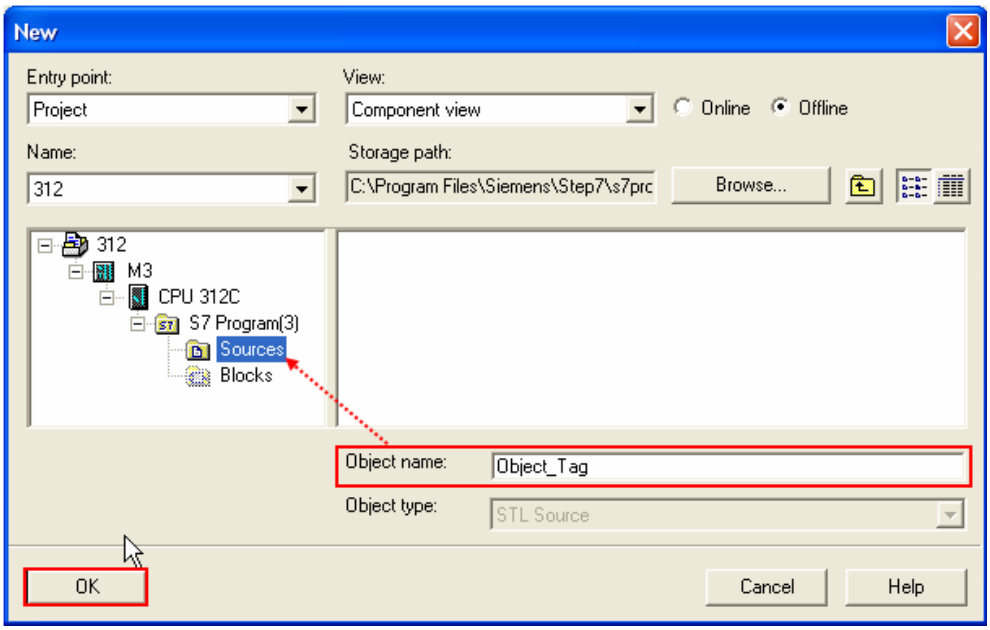


d、 Select the objects to be exported then click **OK**.

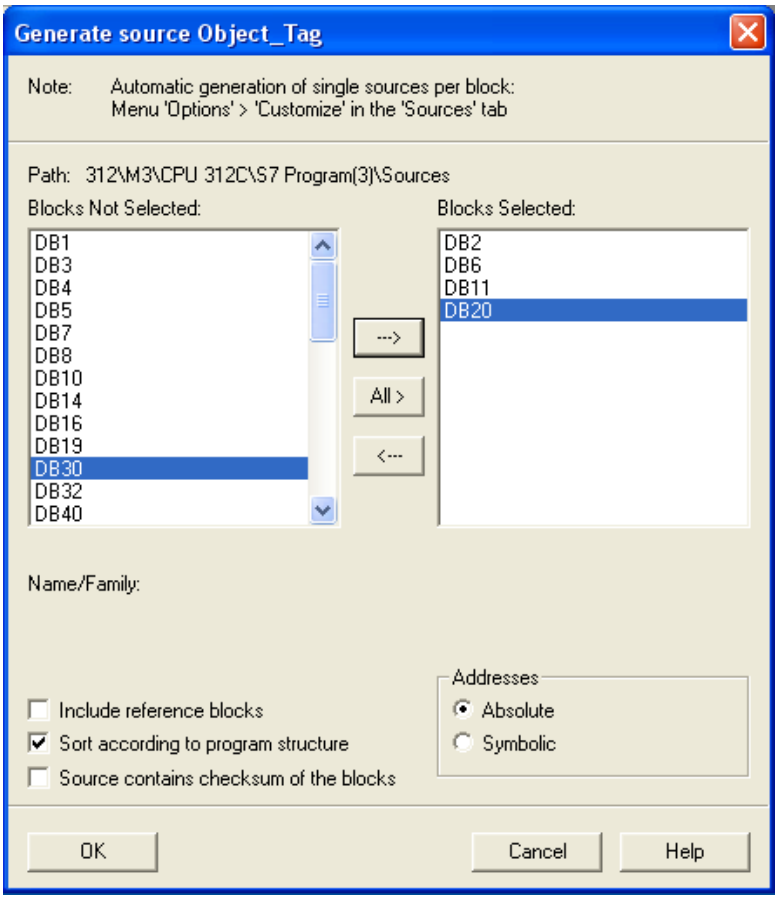

e、 Under **Sources** there will be names of the saved files, select **Export Source** to build ***.AWL** file.

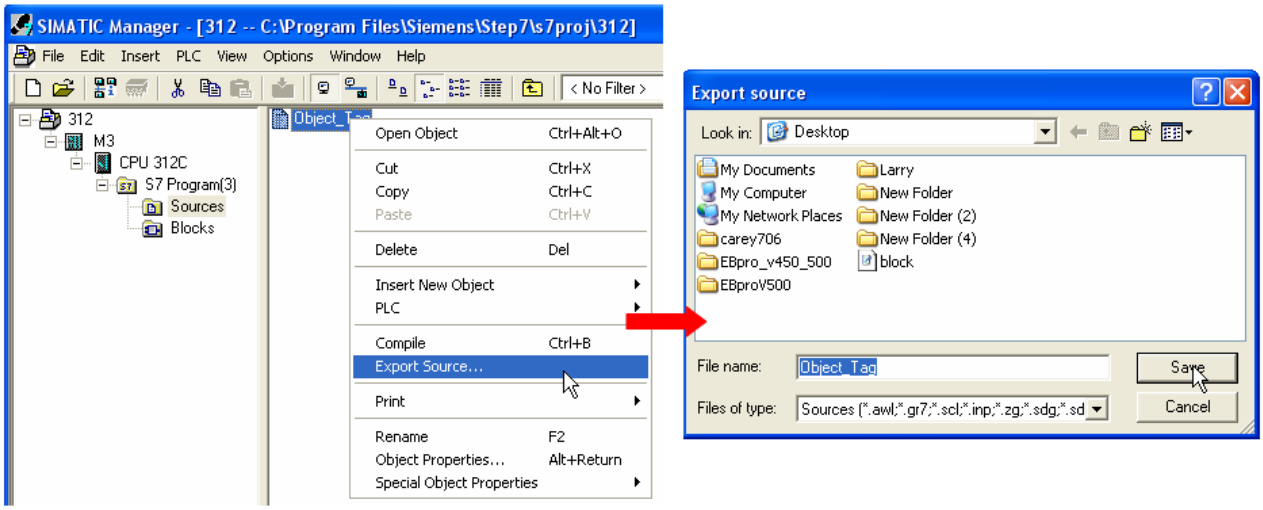

The generated *.dif and *.AWL files can be imported in EasyBuilder8000/EasyBuilderPro **System Parameter Settings**, by clicking **Import Tag**.

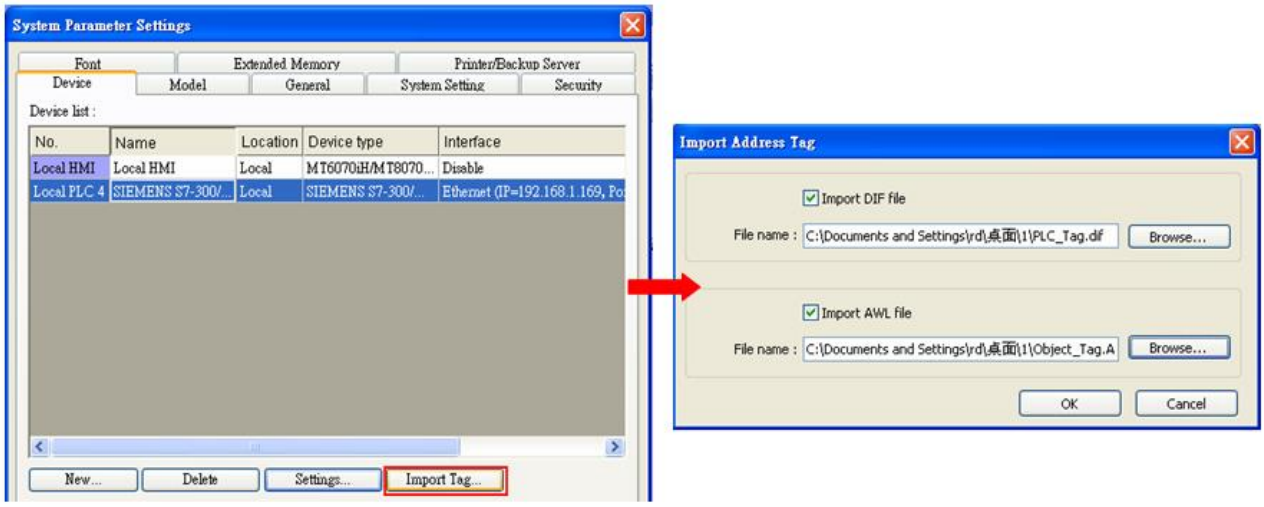


Tag information successfully imported.



Wiring Diagram:

Ethernet cable:

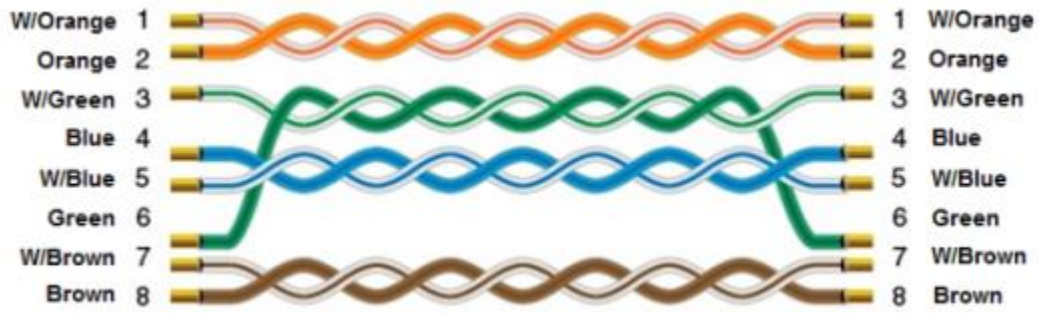

WIELAND SAMOS PRO

Supported Series: Samos Pro controllers SP-SCON-P1-K, SP-SCON-NET-PA-K
Website: http://www.wieland-electric.com/en/products/safety-technology

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	WIELAND SAMOS PRO		
PLC I/F	RS232		
Baud rate	115200	9600,19200,38400,57600,115200	
Data bits	8		
Parity	None		
Stop bits	1		
PLC sta. no.	0		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	I	DDo	0 ~ 967	Input
B	Q	DDo	0 ~ 487	Output
B	Logic result	DDo	0 ~ 327	Logic Result
B	RS-232	DDo	0 ~ 327	RS-232
B	Samos Pro to RS-232_Bit	DDo	0 ~ 997	
B	Module Status Bit Array_Bit	DDo	0 ~ 597	
B	Operating Data Block_Bit	Do	0 ~ 97	
B	Configuration CRCs_Bit	DDo	0 ~ 197	
B	CPU Module Type Key_Bit	DDo	0 ~ 177	
B	Extension Modules Type_Bit	DDDo	0 ~ 3377	
W	RS-232 to Samos Pro	D	0 ~ 2	
W	Samos Pro to RS-232	DD	0 ~ 98	
W	Module Status Bit Array	DD	0 ~ 58	
W	Operating Data Block	D	0 ~ 8	
W	Configuration CRCs	DD	0 ~ 18	
W	CPU Module Type Key	DD	0 ~ 16	
W	Extension Modules Type	DDD	0 ~ 336	

Wiring Diagram:

The following is the view from the soldering point of a connector.



CPU0 Port0 4P Mini-DIN (Diagram1~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		CPU0 Port0 4P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	4

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		CPU0 Port0 4P Mini-DIN Male
Rx	2	⟷	3
Tx	3	⟷	2
GND	5	⟷	4

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		CPU0 Port0 4P Mini-DIN Male
Rx	9	⟷	3
Tx	6	⟷	2
GND	5	⟷	4

XINJE XC Series

Supported Series: XINJE XC Series
Website: http://www.xinje.com

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	XINJE XC Series		
PLC I/F	RS232	RS232	
Baud rate	19200		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1	0-255	

*Support communications between HMI and PLC in pass-through mode
*Set LW-9903 to 2 to enhance the speed of download/upload PLC program in pass-through mode

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	M	DDDD	0 ~ 8511	
B	X	OOOO	0 ~ 1037	
B	Y	OOOO	0 ~ 1037	
B	S	DDDD	0 ~ 1023	
B	T	DDD	0 ~ 618	
B	C	DDD	0 ~ 634	
W	D	DDDD	0 ~ 8511	
W	TD	DDD	0 ~ 618	
W	CD	DDD	0 ~ 634	
W	FD_1	DDDD	0 ~ 5000	
W	FD_2	DDDD	8000 ~ 8511	

Wiring Diagram:

The following is the view from the soldering point of a connector.



RS-232 8P Mini-DIN (Diagram1~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 8P Mini-DIN Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	5
Tx	3	7	⟷	4
GND	5	5	⟷	8

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-DIN Male
Rx	2	⟷	5
Tx	3	⟷	4
GND	5	⟷	8

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 8P Mini-DIN Male
Rx	9	⟷	5
Tx	6	⟷	4
GND	5	⟷	8

YAMAHA ERCD

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	YAMAHA ERCD		
PLC I/F	RS232		
Baud rate	9600	1200-19200	
Data bits	8	7 or 8	
Parity	Odd	None/Even/Odd	
Stop bits	1	1 or 2	
PLC sta. no.	0		Needn't to set the station No.

Device Address:

Bit/Word	Device type	Format	Range	Memo
Bit	DI	DD	0 ~ 15	Sequence Input (Read only)
Bit	DO	D	0 ~ 7	Sequence Output (Read only)
Bit	EMG	D	0	Emergency stop status (Read only)
Bit	SRVO	D	0	Servo Status (Read/Write)
Bit	ORG_Sensor	D	0	Original sensor status (Read only)
Bit	RESET	D	0	Set on to reset program (Write only)
Bit	RUN	D	0	Set on to execute a program (Write only)
Bit	X_ADD	D	0	Set on to move robot to + side (Write only)
Bit	X_SUB	D	0	Set on to move robot to - side (Write only)
Word	P	DDD	0 ~ 999	PNT point data (Read/Write) *Note
Word	PRM	DD	0 ~ 99	Parameters (Read/Write)
Word	SWI	D	0	Switches program number to run RW0=program number (Write only) Set the parameter of RW register, and then enter any value in this register.
Word	MOVD	D	0	Directly moves to specified position RW1=X-axis position(mm), RW2=speed (Write only) Set the parameter of RW register, and then enter any value in this register.
Word	ORG	D	0	Return to original activity (Enter any value) ,

Bit/Word	Device type	Format	Range	Memo
				Return to original status (Read/Write)
Word	MODE	D	0	動作模式
Word	POS	D	0	Current position (Read only) *Note
Word	NO	D	0	Current program number (Read only)
Word	SNO	D	0	Current step number (Read only)
Word	TNO	D	0	Current task number (Read only)
Word	PNO	D	0	Current selected point number (Read only)

The value read in address types P and POS is timed by 100, therefore, i t to the second pla rrect value.

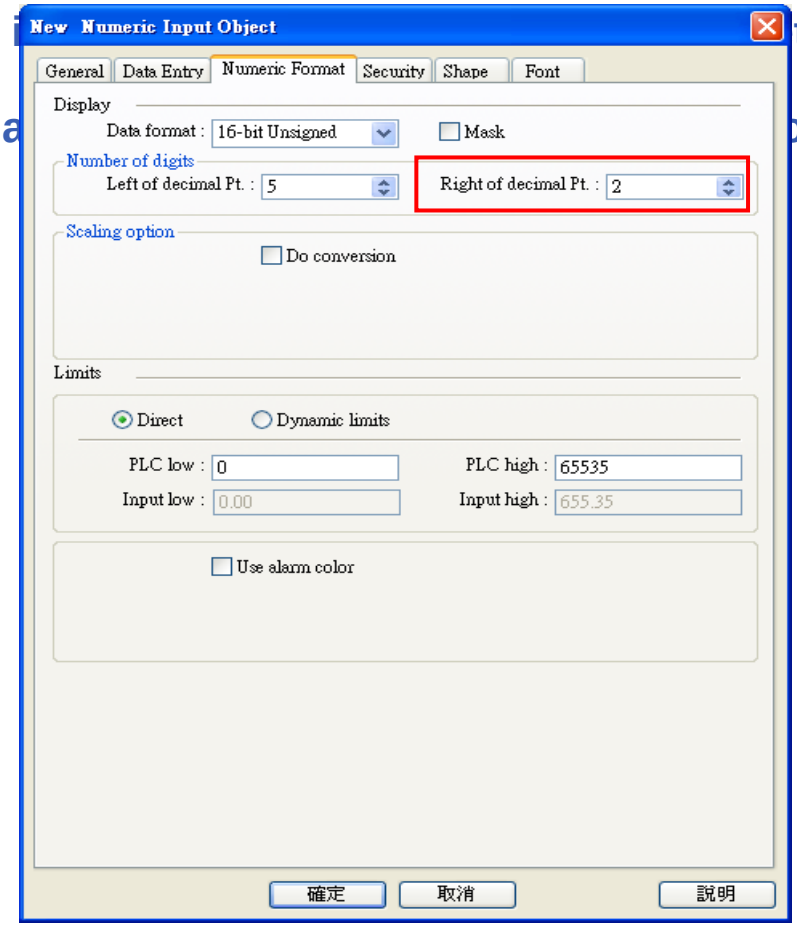

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	3
Tx	3	7	⟷	2
GND	5	5	⟷	5
			↪	7
			↩	8

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	↔	3
Tx	3	↔	2
GND	5	↔	5
		↔	7
		↔	8

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	↔	3
Tx	6	↔	2
GND	5	↔	5
		↔	7
		↔	8

YASKAWA CCMEP

Supported Series: YASKAWA CCMEP-100/ CCMEP-200
Website: http://www.yaskawa-control.co.jp/english/jigyo/mechotronics.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YASKAWA CCMEP		
PLC I/F	RS485 4W		
Baud rate	38400		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	4_Bit	DDDDDdd	100 ~ 6553515	
W	4	DDDDD	1 ~ 65535	

Wiring Diagram:

RS-485 4W 8P RJ45 (Diagram1~ Diagram4)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		RS485 4W 8P RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	3
Tx-	3	⟷	2
TX+	4	⟷	1
GND	5	⟷	8

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		RS485 4W 8P RJ45 Male
Rx-	7	⟷	4
Rx+	6	⟷	3
Tx-	9	⟷	2
TX+	8	⟷	1
GND	5	⟷	8

Diagram 3

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		RS485 4W 8P RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	3
Tx-	3	⟷	2
TX+	4	⟷	1
GND	5	⟷	8

Diagram 4

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		RS485 4W 8P RJ45 Male
Rx-	1	⟷	4
Rx+	2	⟷	3
Tx-	3	⟷	2
TX+	4	⟷	1
GND	5	⟷	8


YASKAWA DX100/DX200/FS100 Robot Controller

Supported Series: YASKAWA controler type DX100, FS100, DX200

Website: http://www.yaskawa.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YASKAWA DX100/DX200/FS100 Robot Controller		
PLC I/F	Ethernet (UDP)		
Port no.	10040		
Controller type	DX100	DX100, FX100, DX200	

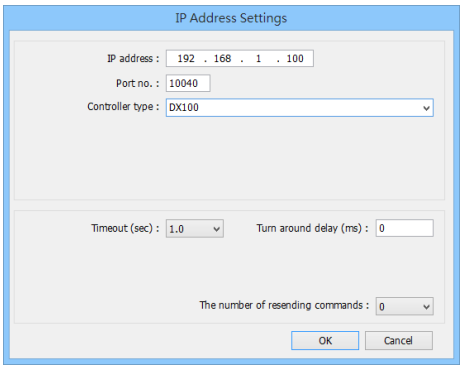

Device Address:

Bit/Word	Device type (Command)	Format	Range
B	Status_Bit	DDDDDDDdd	0 ~ 163836331
B	Robot_Position_Bit	DDDDDDDdd	0 ~ 163836331
B	IO_Data_Bit	DDDDDo	0 ~ 163837
B	Register_Data_Bit	DDDDDdd	0 ~ 1638315
B	B_Bit	DDDDDo	0 ~ 163837
B	I_Bit	DDDDDdd	0 ~ 1638315
B	D_Bit	DDDDDdd	0 ~ 1638331
B	R_Bit	DDDDDdd	0 ~ 1638331
B	P_Bit	DDDDDDDdd	0 ~ 163836331
W	Administration_Hour	DDDDDDDDD	0 ~ 163836300
W	Alarm	DDDDDDDDD	0 ~ 163836300
W	Alarm_Detailed	DDDDDDDDD	0 ~ 163836300
W	Alarm_History	DDDDDDDDD	0 ~ 163836300
W	Alarm_History_Detailed	DDDDDDDDD	0 ~ 163836300

Bit/Word	Device type (Command)	Format	Range
W	Axis_Composition	DDDDDDDDD	0 ~ 163836300
W	B	DDDDD	0 ~ 16383
W	BP	DDDDDDD	0 ~ 163363
W	D	DDDDD	0 ~ 16383
W	Axis_Position_Deflection	DDDDDDD	0 ~ 1638363
W	Each_Shaft_Torque	DDDDDDD	0 ~ 1638363
W	EX	DDDDDDD	0 ~ 1638363
W	I	DDDDD	0 ~ 16383
W	IO_Data	DDDDD	0 ~ 16383
W	Job_Information	DDDDDDDDD	0 ~ 163836300
W	Job_Select	DDDDDDDDD	0 ~ 163836300
W	On_Off	DDDDD	0 ~ 16383
W	P	DDDDDDD	0 ~ 1638363
W	R	DDDDD	0 ~ 16383
W	Register_Data	DDDDD	0 ~ 16383
W	Reset_Cancellation	DDDDD	0 ~ 16383
W	Robot_Position	DDDDDDD	0 ~ 1638363
W	S	DDDDDDD	0 ~ 1638300
W	Start	DDDDDDD	0 ~ 1638363
W	State_Switch	DDDDD	0 ~ 16383
W	Status	DDDDDDD	0 ~ 1638363
W	String_Display_To_Pendant	DDDDDDD	0 ~ 1638300
W	System_Information	DDDDDDDDD	0 ~ 163836300
W	S_32BYTE	DDDDDDD	0 ~ 1638300
W	Move_Instruction_Cartesian	DDDDDDD	0 ~ 1638300
W	Move_Instruction_Pluse	DDDDDDD	0 ~ 1638300

Wiring Diagram:

Ethernet cable



YASKAWA Memobus (MP Series Controllers)

Supported Series: YASKAWA MP2200, MP2300, MP2300S, MP9xx communication module.
Website: http://www.yaskawa.com/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	YASKAWA Memobus (MP Series Controllers)		
PLC I/F	RS485/Ethernet	RS232/RS485 2w/4w, Ethernet	
Baud rate	19200	9600~57600	
Data bits	8		
Parity	Even		
Stop bits	1		
Port no.	502	default	Ethernet Module Only
PLC sta. no.	1	1-31	

PLC Setting:


Communication mode	MEMOBUS, Slave, RTU

PLC Ethernet Setting:


1. Use MPE720 program software, open Module Configuration, double click “218IFA”.

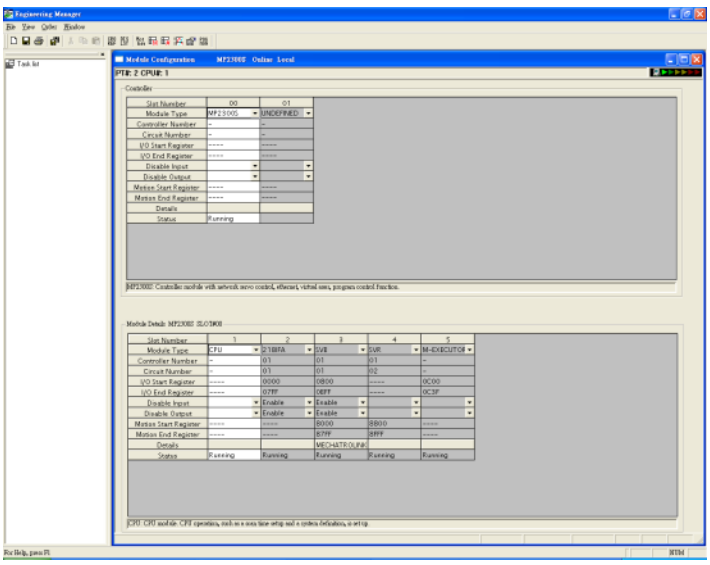

2. In Transmision Parameters input MP2300S IP address, Subnet Mask, Gateway IP. In Connection Parameter, CNO -1 input: Local Port=502, Node IP address=000.000.000.000, Node Port=00000, Connect Type=TCP, Protocol Type=MEMOBUS, Code=RTU.

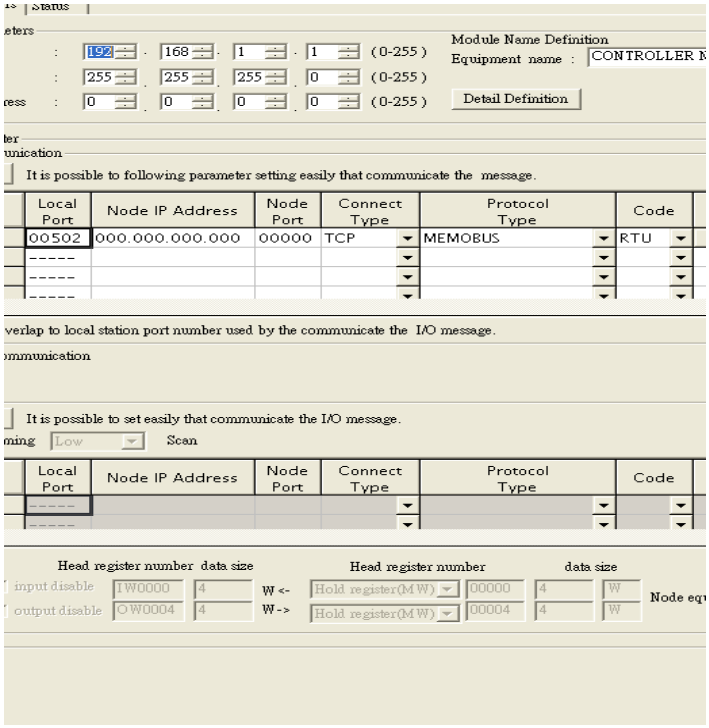

3. Click MECHATROLINK to set up MP2300S PLC as Master.

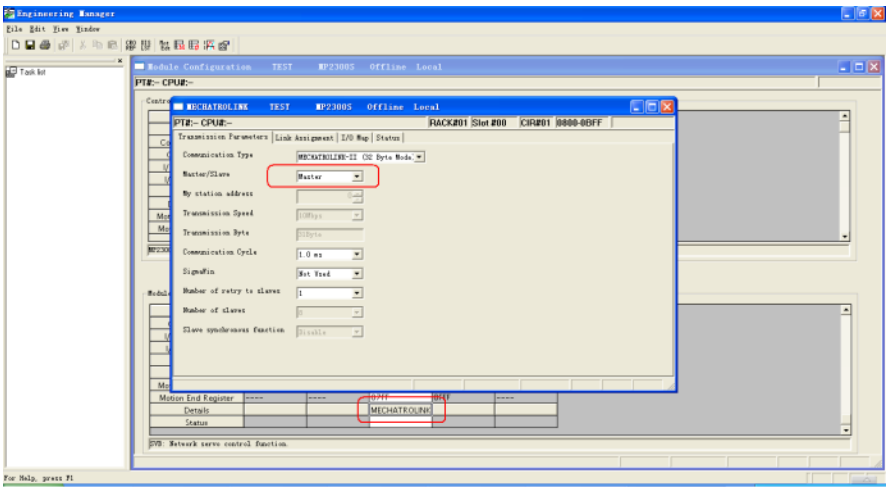

4.Close all dialogs and save to MP2300S.

Note:

1. Only CNO 01 can auto communicate with one HMI. Other CNO need a ladder program created for communication.
2. DIP SW2-2 of MP2300S must be set to OFF position during normal communication, otherwise, IP address will be erased after reset power, and it will be unable to communicate with HMI when set to ON position.

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MB_1	DDDDh	0 ~ 9999f	MB 0 ~ 9999
B	MB_2	DDDDDh	100000 ~ 65534f	MB 10000 ~ 65535
B	IB	HHHHH	0 ~ a7ff0	Read only
B	IW_Bit	HHHHdd	0~ a7ff15	
W	IW	HHHH	0 ~ a7ff	Read only
DW	IL	HHHH	0 ~ a7ff	Read only
DW (F)	IF	HHHH	0 ~ a7ff	Read only
W	MW	DDDDD	0 ~ 65534	Holding register
DW	ML	DDDDD	0 ~ 65533	Double word
DW (F)	MF	DDDDD	0 ~ 65533	Floating point

*: When connect via Ethernet interface the max range of IW, IL and IF would be restricted.

Wiring Diagram:

RS-232 9P D-Sub (Diagram1~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	7

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1		RS232 9P D-Sub Male
	RS232 9P Female		
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	7

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1		RS232 9P D-Sub Male
	RS232 9P Female		
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	7

217IF-01 RS485 14 P Connector (Diagram4~ Diagram10)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI			PLC
	COM1	COM3	217IF-01 RS485 14P Connector
	RS485 2W 9P Male	RS485 2W 9P Male	
Data-	1	6	⟷ 2, 4 D-
Data+	2	9	⟷ 1, 3 D+
GND	5	5	⟷ 14 GND

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	2, 4 D-
Data+	6	1	⟷	1, 3 D+
GND	5	5	⟷	14 GND

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	2, 4 D-
Data+	2	8	⟷	1, 3 D+
GND	**5**	**9**	⟷	14 GND

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2, 4 D-
Data+	2	9	⟷	1, 3 D+
GND	5	5	⟷	14 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2, 4 D-
Data+	2	8	⟷	1, 3 D+
GND	5	5	⟷	14 GND

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2 RS485 2W 9P Female		217IF-01 RS485 14P Connector
Data-	1	⟷	2, 4 D-
Data+	2	⟷	1, 3 D+
GND	5	⟷	14 GND

Diagram 10

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI			PLC
	COM1 RS485 4W 9P Male		217IF-01 RS422 14P Connector
Rx-	1	⟷	2
Rx+	2	⟷	1
Tx-	3	⟷	4
TX+	4	⟷	3
GND	5	⟷	14

217IF-01 RS422 14 P Connector (Diagram11~ Diagram13)

Diagram 11

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI			PLC
	COM2 RS485 4W 9P Female		217IF-01 RS422 14P Connector
Rx-	7	⟷	2
Rx+	6	⟷	1
Tx-	9	⟷	4
TX+	8	⟷	3
GND	5	⟷	14

Diagram 12

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6071iP / MT8071iP / MT6103iP***

HMI			PLC
	COM2 RS485 4W 9P Male		217IF-01 RS422 14P Connector
Rx-	1	⟷	2
Rx+	2	⟷	1
Tx-	3	⟷	4
TX+	4	⟷	3
GND	5	⟷	14

Diagram 13

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI			PLC
	COM1 RS485 4W 9P Female		217IF-01 RS422 14P Connector
Rx-	1	⟷	2
Rx+	2	⟷	1
Tx-	3	⟷	4
TX+	4	⟷	3
GND	5	⟷	14

Diagram 14

Ethernet cable:



YASKAWA MP Series Ethernet (Extension)

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YASKAWA MP Series Ethernet (Extension)		
PLC I/F	Ethernet (UDP)		
Port no.	10000		
PLC sta. no.	1		

PLC Setting:


Yaskawa PLC Communication Parameter Settings

(1) PLC Factory Communication Parameter Settings:


Item	Set
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Gateway IP Address	0.0.0.0
System Port No.	10000 (UDP)
TCP Zero Window Timer Value	3 (s)
TCP Retry Time	500 (ms)
TCP Close Time	60 (s)
IP Assemble Time	30 (s)
Max. Packet Length	1500 (bytes)

(2) Setting Steps:


1. Set IP for PLC.

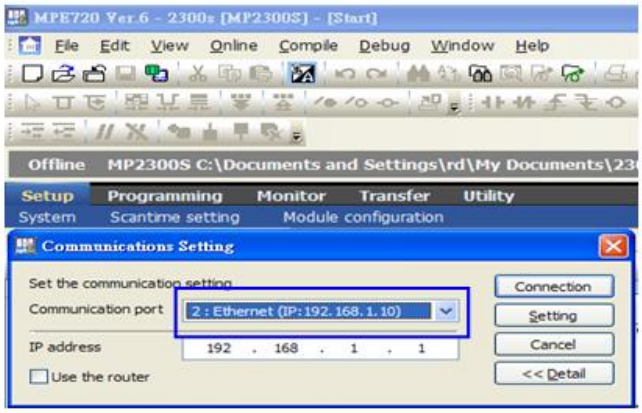


2. Communication parameter setting.

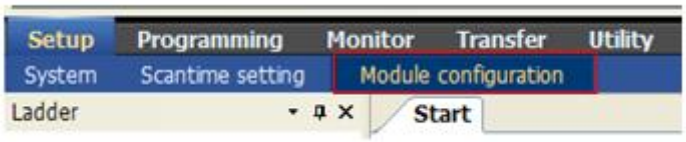


3. Go to Module Details and select [218IFA] for setting relevant parameters for Ethernet transmission.

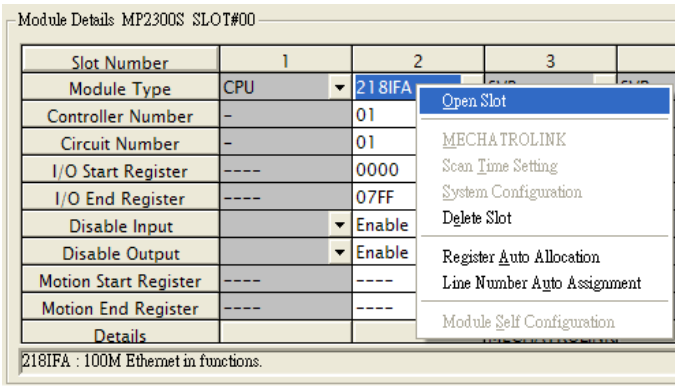

4. The settings are shown below, PLC IP can't be repeated.

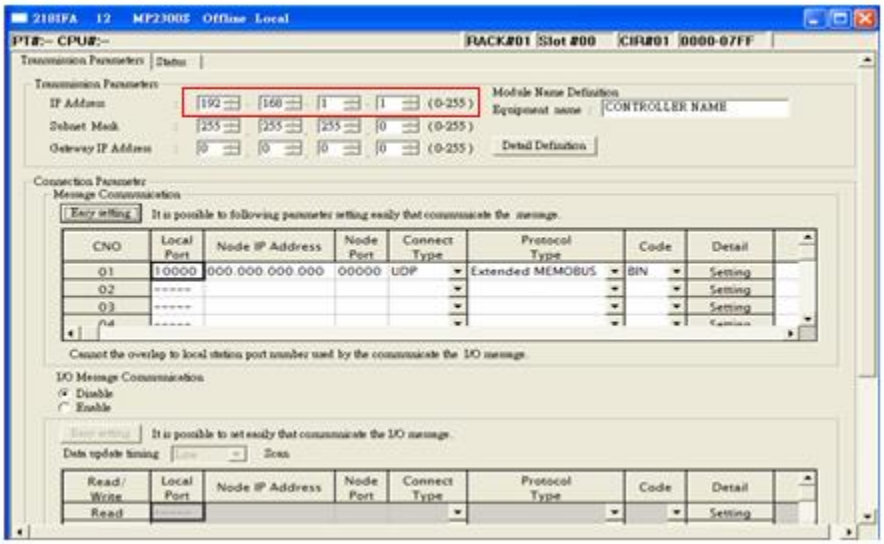

5. Download PLC communication parameters to PLC, and restart the controller.

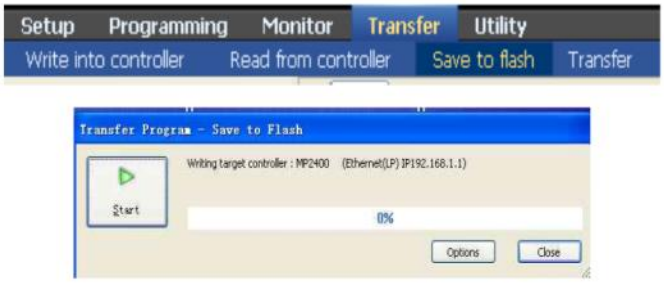

(3) HMI Settings:

1. Select Ethernet for PLC I/F.
2. Tick [UDP].
3. Set PLC IP and Port, the default Port is 10000.



Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SB	DDDDh	0 ~ 8191f	
B	IB	HHHHh	0 ~ fffff	
B	OB	HHHHh	0 ~ fffff	
B	MB	DDDDDh	0 ~ 65534f	
W	SW	DDDD	0 ~ 8191	
W	IW	HHHH	0 ~ ffff	
W	OW	HHHH	0 ~ ffff	
W	MW	DDDDD	0 ~ 65534	
DW	ML	DDDDD	0 ~ 65534	

Wiring Diagram:

Ethernet cable



YASKAWA MP Series Memobus (Ethernet)

Supported Series: YASKAWA MP2200, MP2300, MP2300S, MP9xx with 218IF-02 ethernet module.
Website: http://www.yaskawa.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YASKAWA MP Series Memobus (Ethernet)		
PLC I/F	Ethernet		
Port no.	502		

PLC Setting:


How to connect one Yaskawa Ethernet device with multiple HMIs?
http://www.weintek.com/Download/MT8000/eng/FAQ/FAQ_61_How_to_connect_Yaskawa_Ethernet.pdf

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	MB	DDDDDh	0 ~ 65534F	
B	IB	HHHHH	0 ~ A7FFF	Read only
B	IW_Bit	HHHHdd	0 ~ A7FF15	Read only
W	IW	HHHH	0 ~ A7FF	Read only
DW	IL	HHHH	0 ~ A7FF	Read only
DW	IF	HHHH	0 ~ A7FF	Float , Read only
W	MW	DDDDD	0 ~ 65534	
DW	ML	DDDDD	0 ~ 65533	
DW	MF	DDDDD	0 ~ 65533	Float

Wiring Diagram:

Ethernet cable

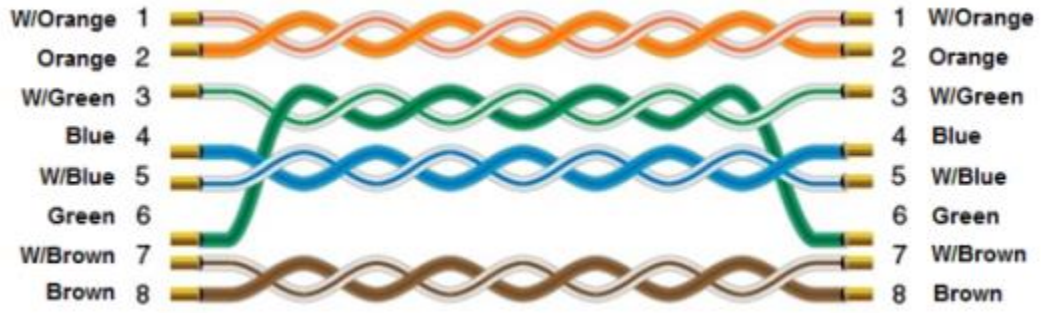

YASKAWA MP Series SIO (Extension)

Supported Series: YASKAWA MP2200, MP2300, MP2300S, MP9xx communication module.
Website: http://www.yaskawa.com/

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YASKAWA MP Series SIO (Extension)		
PLC I/F	RS485	RS232/RS485 2w/4w	
Baud rate	19200	9600~57600	
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1	1-31	

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	SB	DDDDh	0 ~ 8191F	
B	IB	HHHHh	0 ~ FFFFF	
B	OB	HHHHh	0 ~ FFFFF	
B	MB	DDDDDh	0 ~ 65534F	
W	SW	DDDD	0 ~ 8191	
W	IW	HHHH	0 ~ FFFF	
W	OW	HHHH	0 ~ FFFF	
W	MW	DDDDD	0 ~ 65534	

Wiring Diagram:

RS-232 9P D-Sub (Diagram1~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2 TX
Tx	3	7	⟷	3 RX
GND	5	5	⟷	7 GND

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	7

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	7

217IF-01 RS485 14P Connector (Diagram4~ Diagram9)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	↔	8
Data+	2	9	↔	3
GND	5	5	↔	5

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	↔	8
Data+	6	1	↔	3
GND	5	5	↔	5

Diagram 6

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	8
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	5

Diagram 7

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	2, 4 D-
Data+	2	9	⟷	1, 3 D+
GND	5	5	⟷	14 GND

Diagram 8

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		217IF-01 RS485 14P Connector
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	2, 4 D-
Data+	2	8	⟷	1, 3 D+
GND	5	5	⟷	14 GND

Diagram 9

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		217IF-01 RS485 14P Connector
	RS485 2W 9P Female		
Data-	1	⟷	2, 4 D-
Data+	2	⟷	1, 3 D+
GND	5	⟷	14 GND

YASKAWA MP2300Siec

Website: http://www.yaskawa.com/site/home.nsf/home/home.html

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YASKAWA MP2300Siec		
PLC I/F	Ethernet		
Port no.	44818		
Assembly instance	Input::101 Output:111	Input::101~106 Output:111~116	
PLC sta. no.	1		

PLC Setting:

MP2300Siec-Motion Works IEC Express (YASKAWA) Settings:

Step 1. Before HMI communicates with MP2300Siec using Ethernet/IP, the Instance Input and Instance Output of MP2300Siec device must be set correctly. Multiple Instances are allowed to be built at one time, please click [Save] after setting.

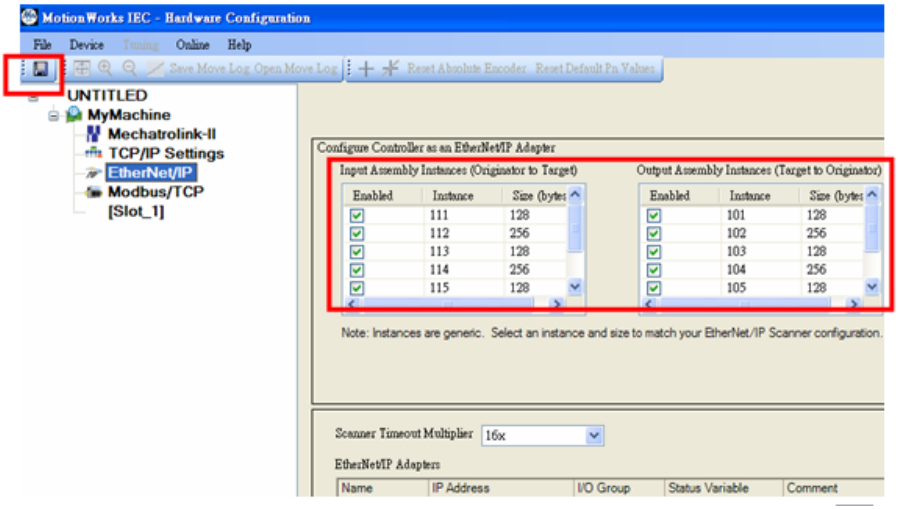


Fig. 1 Assembly Instances

Step 2. Global Variables will automatically add in E/IP Input and Output data, Input and Output data name and address type can be user-defined.

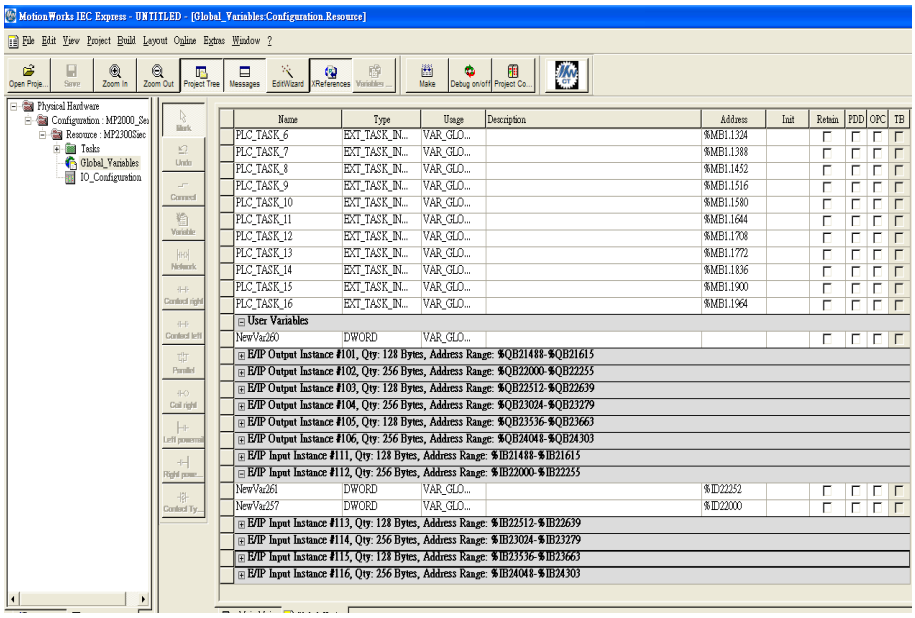


Fig. 2 Global Variables

Step 3. When download Project to device (MP2300Siec), please go to (Fig. 3) Resource->Settings to access setting dialog (Fig. 4) for setting MP2300Siec IP address.

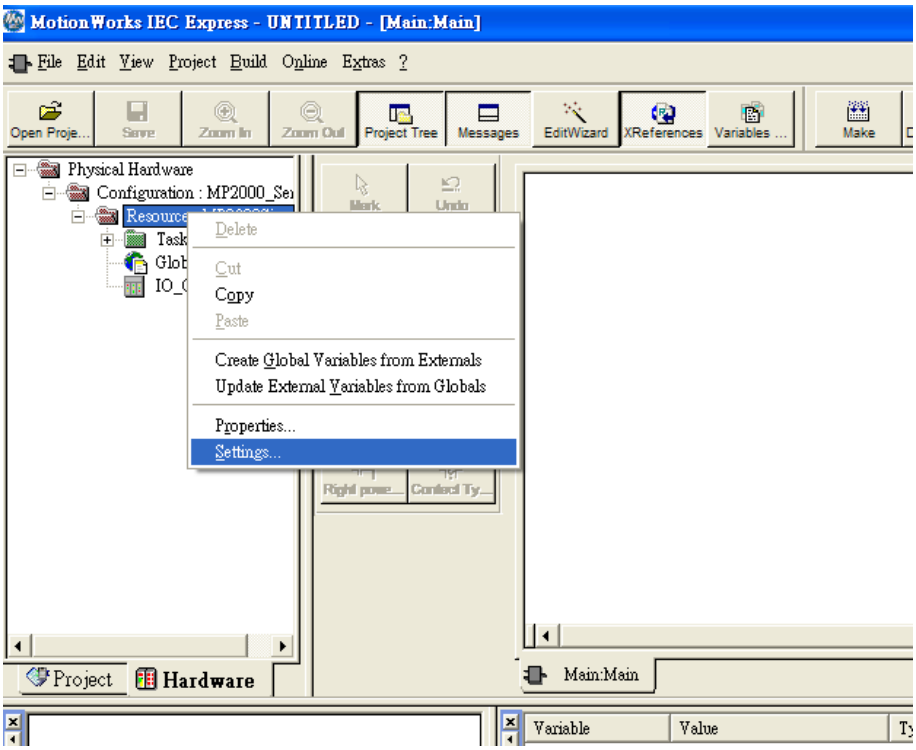


Fig. 3 Motion Works IEC Express – Settings

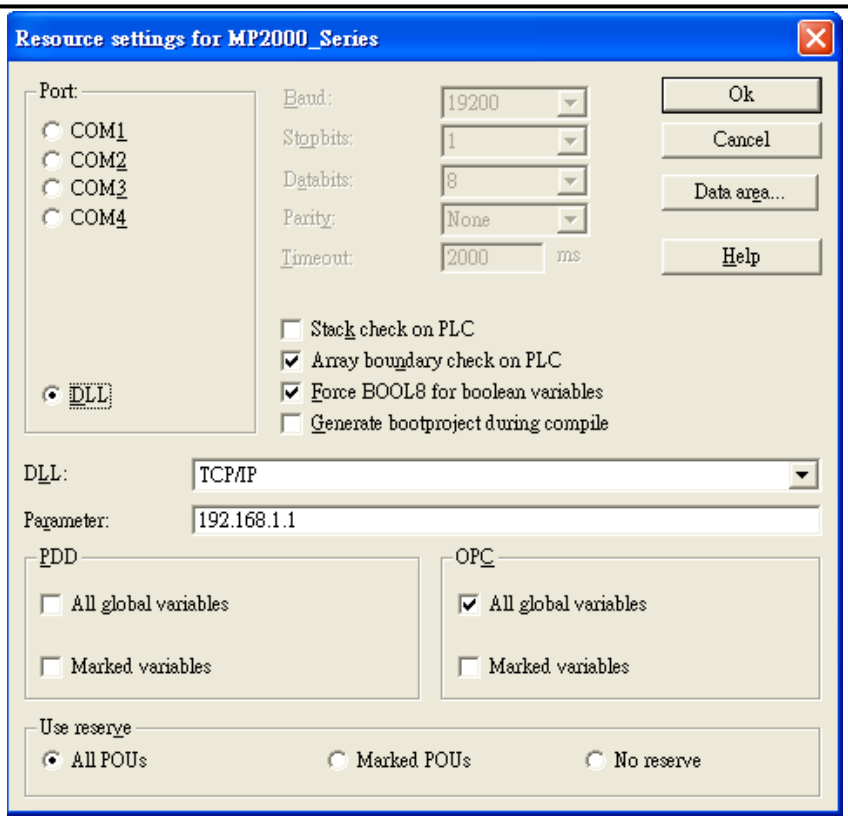


Fig. 4 Resource Settings

Step 4. Start compilation.

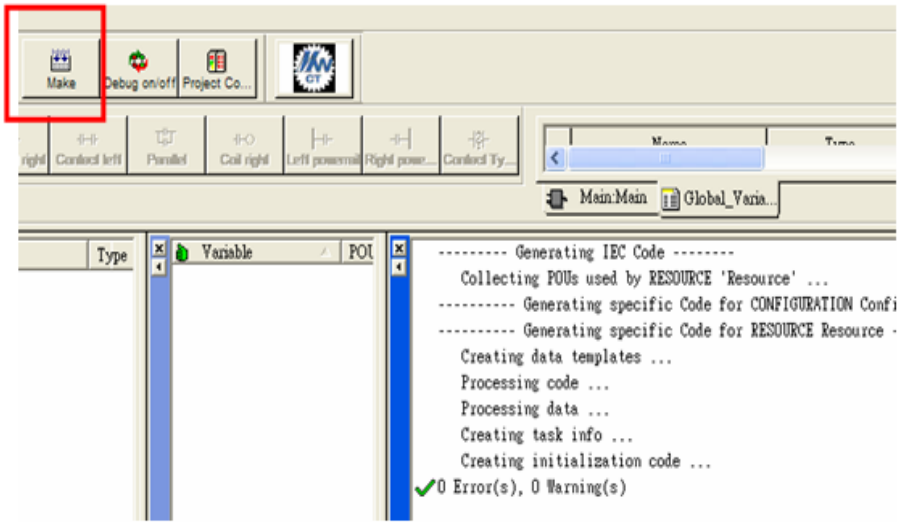


Fig. 5 Editing Screen

Step 5. Download project to device- MP2300Siec, and execute Cold.

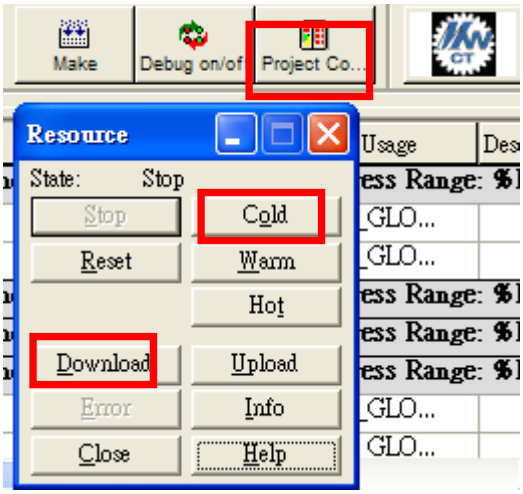


Fig. 6 Project Downloading

You may use one of the two drivers to connect Yaskawa MP2300Siec:

1. **Yaskawa MP2300Siec driver.**
2. **Rockwell EtherNet/IP (CompactLogix) – Free Tag Names driver.**

(1) Yaskawa MP2300Siec driver.

Step 1. System Parameter Settings

Open EasyBuilder project, as shown in Fig. 7, Assembly Instance and Size must match the software default factory settings, and please don't select UDP. Fig.8 below shows how HMI Input / Output address is mapped to MP2300Siec device.

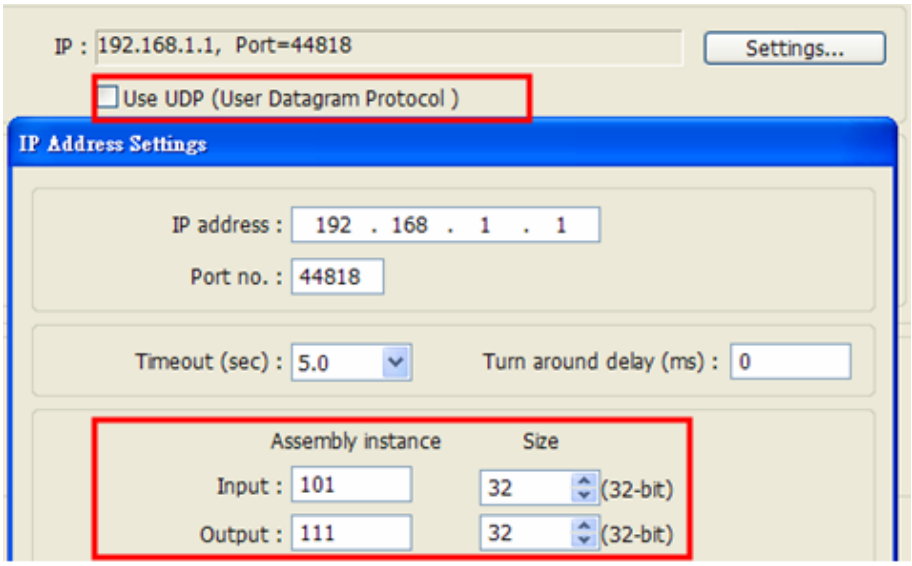


Fig. 7 Instance Setting

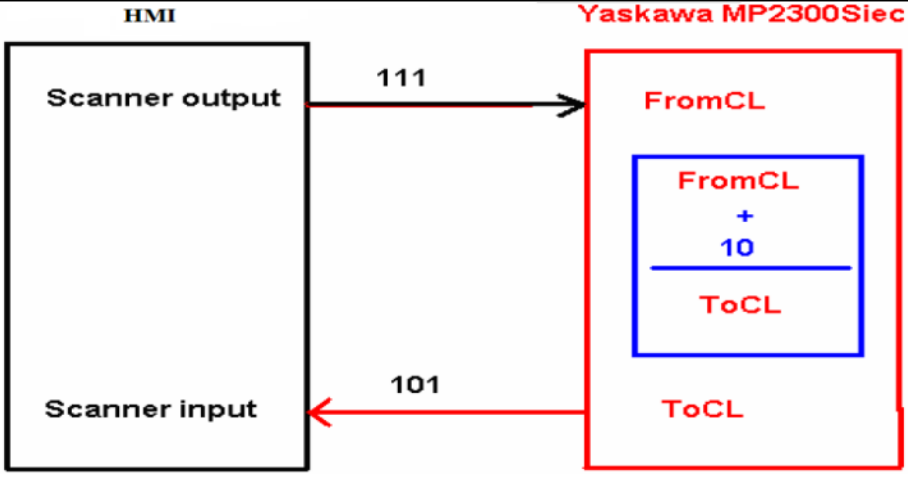


Fig.8 HMI and MP2300Siec I/O Mapping

Step 2. Address Setting:

Instance 101 and Instance 111 are defined as 128Bytes, on the project window , WORD objects can be used, with data typed defined as 32-Bit Unsigned, Input addresses set to 0、2、4、6…..62 for reading Instance 101 data.

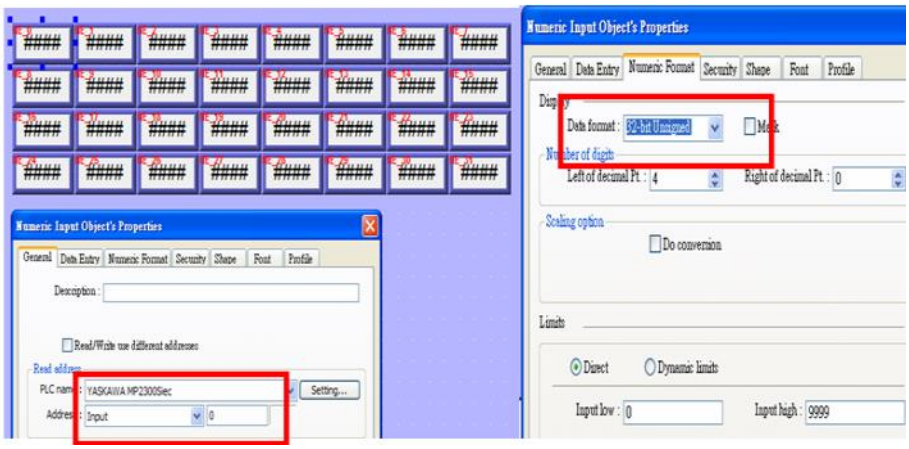


Fig. 9 Address Setting

(2) Rockwell EtherNet/IP (CompactLogix) – Free Tag Names driver.

Step 1. In EasyBuilder8000/EasyBuilder Pro project, when using Rockwell EIP driver to import CSV file (as in Fig. 10), please open Structure Editor (Fig. 11), and right click on Module Defined to add New Data Type.

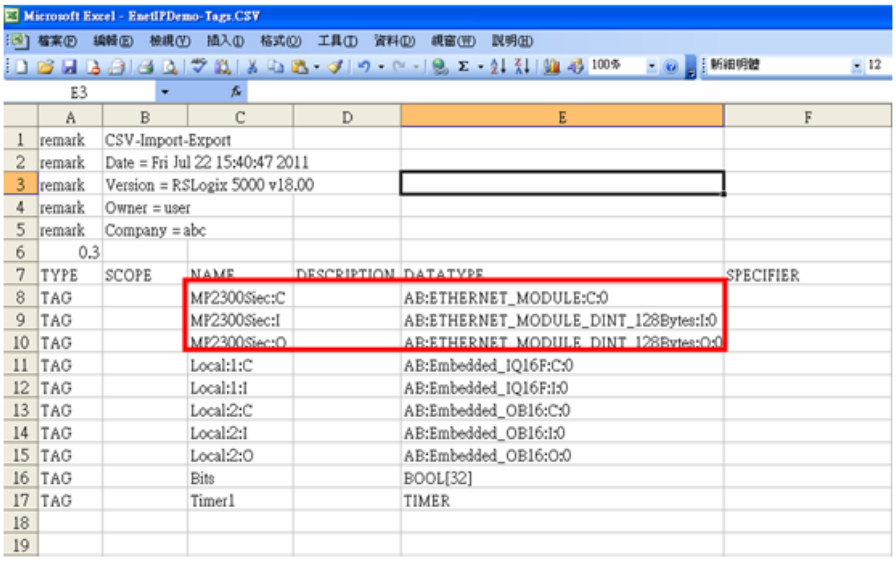


Fig. 10 RSLogix 5000 (Rockwell Software) Export Free Tag CSV File

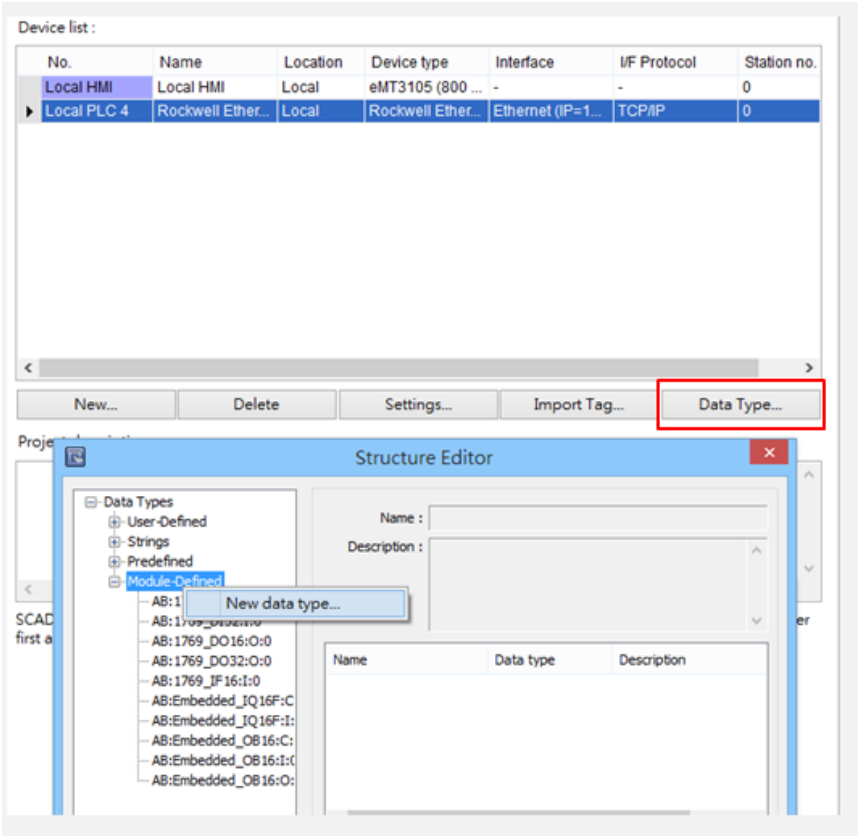


Fig.11 Structure Editor

Step 2. As in Fig 12, in Structure Editor add Name of the new data type. The Name must be set identically to the Data Type in Free Tag CSV file. As in Fig 14, Data Member Name must be set identically to the Rockwell software (as Data in Fig. 13), then click [Save] (Fig. 15).

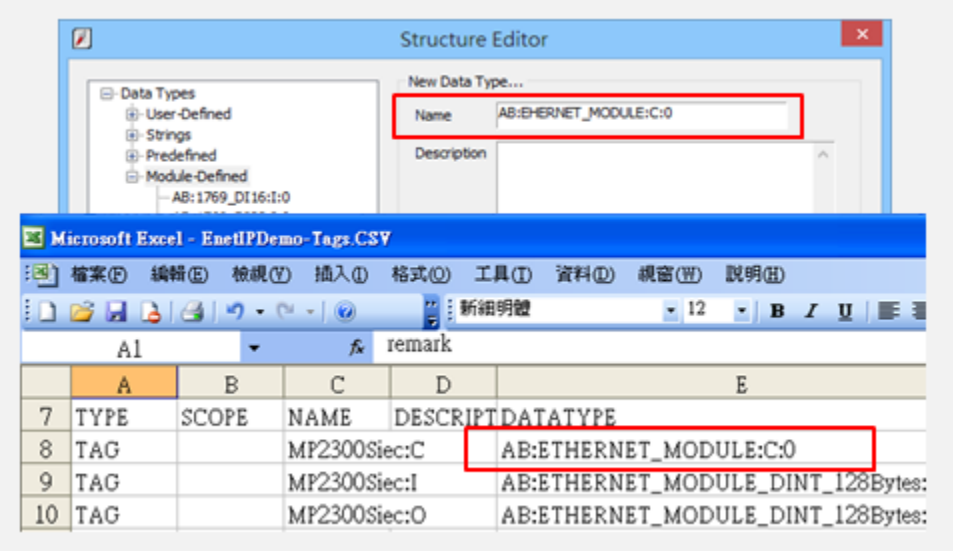


Fig.12 Structure Editor

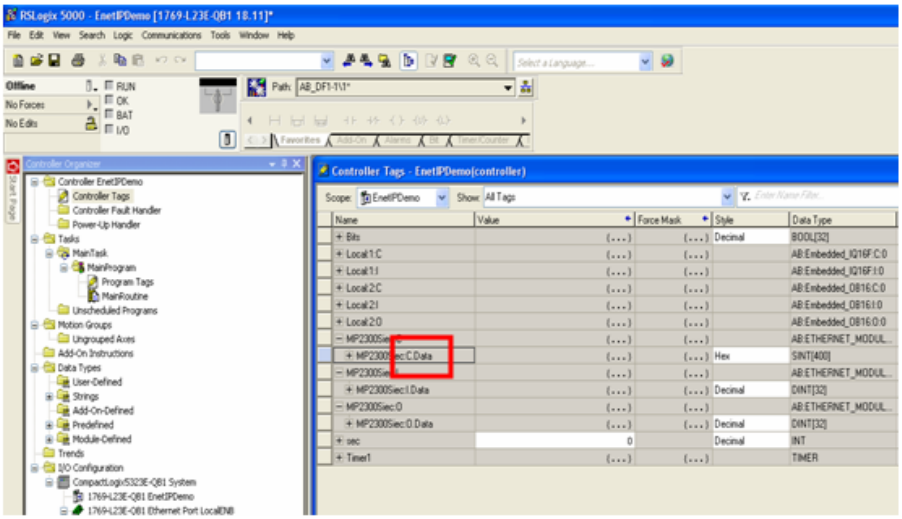


Fig.13 Tag Information

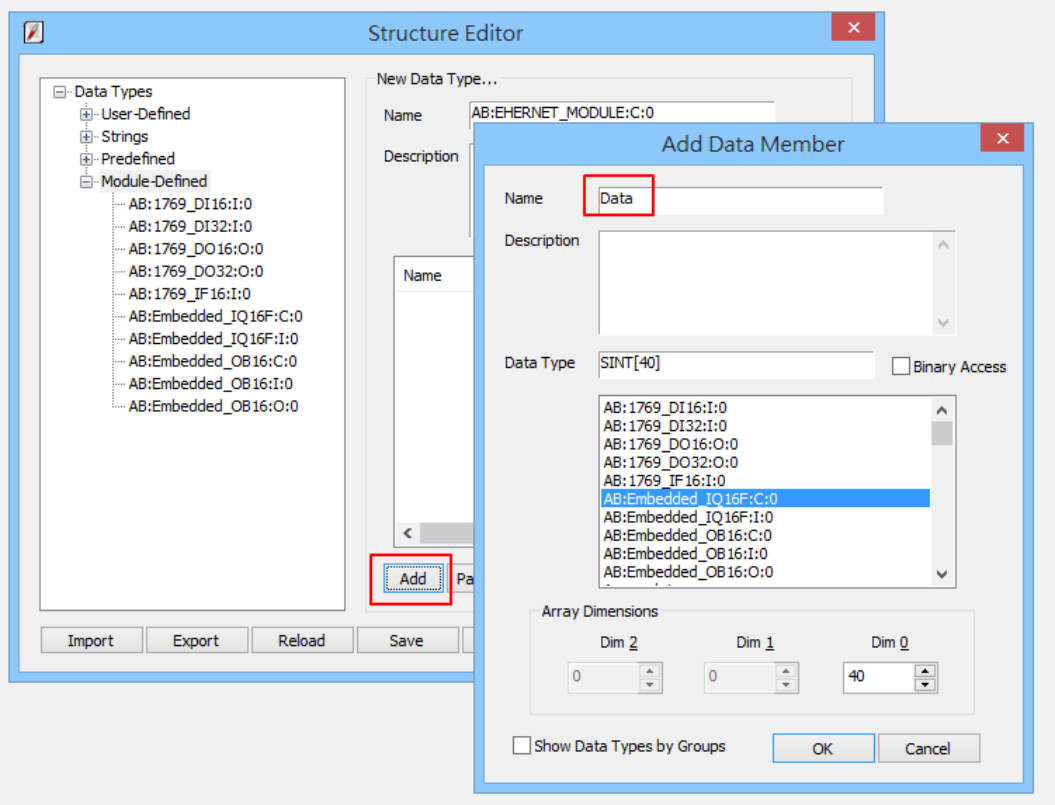


Fig.14 Add Data Member - Name Tag Information

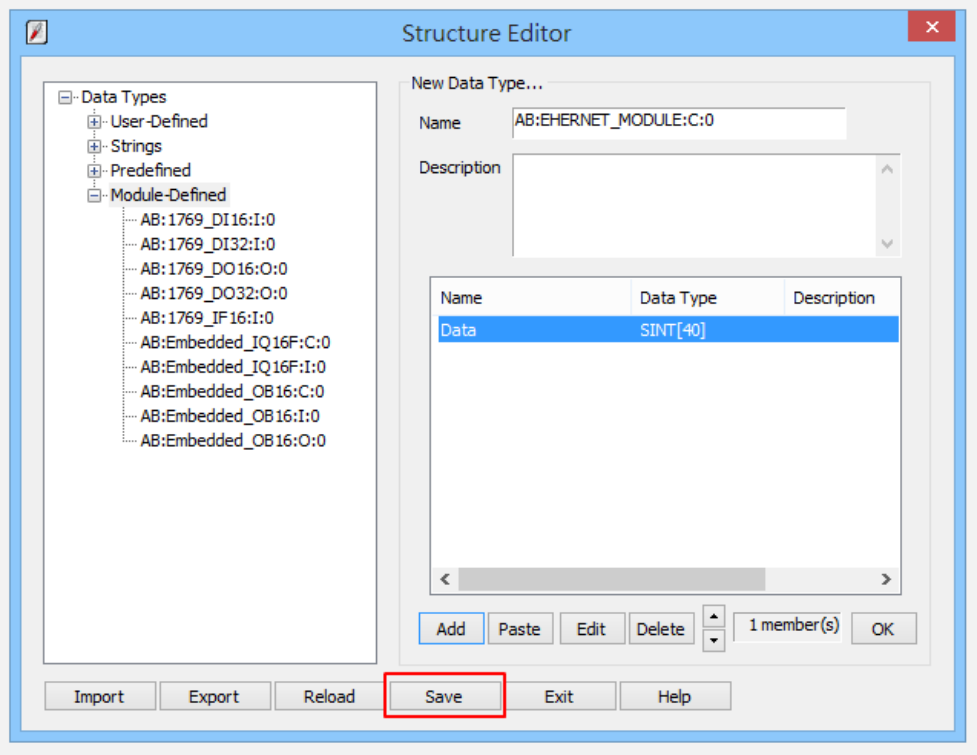


Fig. 15 Add Data Member-Settings - Save

Step 3. Import CSV file, Tag Information can be viewed from object address.

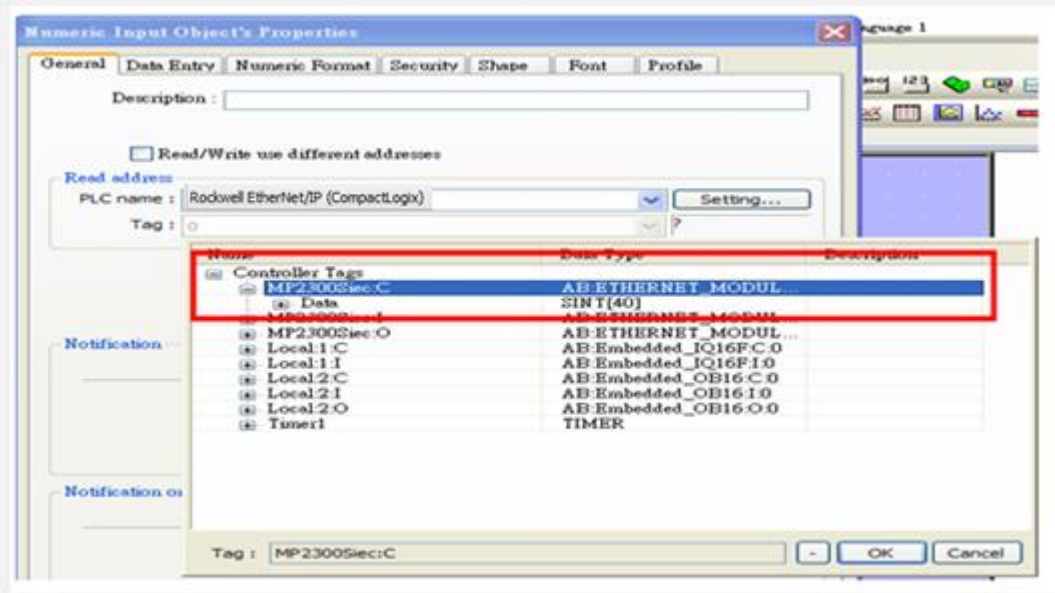


Fig.16 Tag Information

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	Input_Bit	DDDDDdd	0 ~ 6553515	
B	Output_Bit	DDDDDdd	0 ~ 6553515	
DW	Input	DDDDD	0 ~ 65535	
DW	Output	DDDDD	0 ~ 65535	

Wiring Diagram:

Ethernet cable



YASKAWA Sigma-5

Supported Series: YASKAWA ∑-V Series
Website: http://www.yaskawa.co.jp/

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	YASKAWA Sigma-5		
PLC I/F	RS232	RS232/RS485	
Baud rate	19200		
Data bits	8		
Parity	Even		
Stop bits	1		
PLC sta. no.	1	0 ~ 127	

Device Address:

Bit/Word	Device type	Format	Range	Note
B	0_bit	HHHh	0 ~ FFFF	Normal Parameters Area
B	E_bit	HHHh	0 ~ FFFF	Monitor Area
W	0	HHH	0 ~ FFF	Normal Parameters Area
W	E	HHH	0 ~ FFF	Monitor Area

*The following addresses are 32 bit parameters. Please use two words when reading or writing.

- Normal Parameters area
  020AH / 020EH / 0210H / 0212H / 0282H / 051BH / 0520H / 0522H / 0524H / 0526H / 0531H
- Monitor Area
  E003H / E009H / E00EH / E010H / E012H / E016H / E01BH / E084H / E52AH / E52CH / E52EH / E530H / E532H / E534H / E536H / E538H / E53AH / E53CH / E601H / E603H / E605H / E705H / E707H / E110H / E120H / E130H

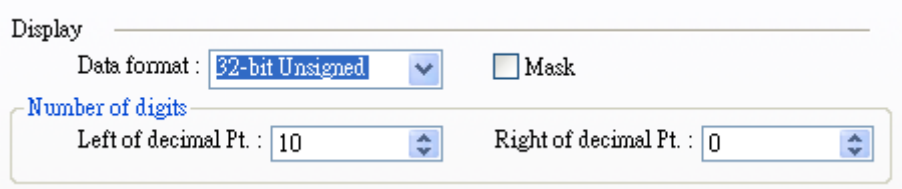

Wiring Diagram:

SGDV CN3 RS232 14P (Diagram1~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		SGDV CN3 RS232 14P Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	4
GND	5	5	⟷	14

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		SGDV CN3 RS232 14P Male Connector
Rx	2	⟷	2
Tx	3	⟷	4
GND	5	⟷	14

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		SGDV CN3 RS232 14P Male Connector
Rx	9	⟷	2
Tx	6	⟷	4
GND	5	⟷	14

YASKAWA SMC 3010

Supported Series: YASKAWA SMC Series Servo Motor Controller.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YASKAWA SMC 3010		
PLC I/F	RS232		
Baud rate	19200	9600, 19200	
Data bits	8		
Parity	None		
Stop bits	1		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	AF	D	0 ~ 1	
B	BN	D	0 ~ 1	Write only
B	BP	D	0 ~ 1	Write only
B	BV	D	0 ~ 1	Write only
B	CB	DDDD	0 ~ 9999	Write only
B	CM	D	0 ~ 1	Read only
B	DV	D	0 ~ 1	
B	EB	D	0 ~ 1	
B	OE	D	0 ~ 1	
B	RS	D	0 ~ 1	Write only
B	ST	D	0 ~ 1	Write only
B	TB	Do	0 ~ 17	Read only
B	V_Bit	DDDdd	0 ~ 99931	*2
B	D_arr_Bit	DDDdd	0 ~ 99931	
DW	AC	D	0 ~ 4	
DW	DC	D	0 ~ 4	
DW	BL	D	0 ~ 4	
W	CD	D	0 ~ 2	Write only
W	CE	D	0 ~ 2	
DW	DE	D	0 ~ 4	
DW	DP	D	0 ~ 4	

Bit/Word	Device type	Format	Range	Memo
W	DT	D	0 ~ 2	
W	EC	D	0 ~ 2	
DW	EM	D	0 ~ 4	
W	ER	D	0 ~ 2	
W	FA	D	0 ~ 2	
DW	FL	D	0 ~ 4	
W	FV	D	0 ~ 2	
DW	GR	D	0 ~ 4	
DW	JG	D	0 ~ 4	
DW	MM	D	0 ~ 4	
W	MT	D	0 ~ 2	
W	NA	D	0 ~ 2	
W	OP	D	0 ~ 2	
DW	PA	D	0 ~ 4	Write only
DW	PR	D	0 ~ 4	
DW	SP	D	0 ~ 4	
W	TC	D	0 ~ 2	Read only
W	TM	D	0 ~ 2	
W	TW	D	0 ~ 2	
DW	VA	D	0 ~ 4	
DW	VD	D	0 ~ 4	
DW	VS	D	0 ~ 4	
DW	IL	D	0 ~ 4	
DW	IT	D	0 ~ 4	
DW	KD	D	0 ~ 4	
DW	KI	D	0 ~ 4	
DW	KP	D	0 ~ 4	
DW	OF	D	0 ~ 4	
DW	TL	D	0 ~ 4	
DW	VR	D	0 ~ 4	
DW	VT	D	0 ~ 4	
DW	PF	D	0 ~ 4	*1
DW	VF	D	0 ~ 4	
DW	V	DDD	0 ~ 999	*2
F	F	DDD	0 ~ 999	*2
W	D_array	DDD	0 ~ 999	
W	R_array	DDD	0 ~ 999	

Note:

*1 PF is the communication parameter of SMC_3010, the default is 10.4, if the value is not 10.4, all values will be displayed incorrectly.

*2 User defined integer variable V000~V999, floating point variable F000~F999.

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

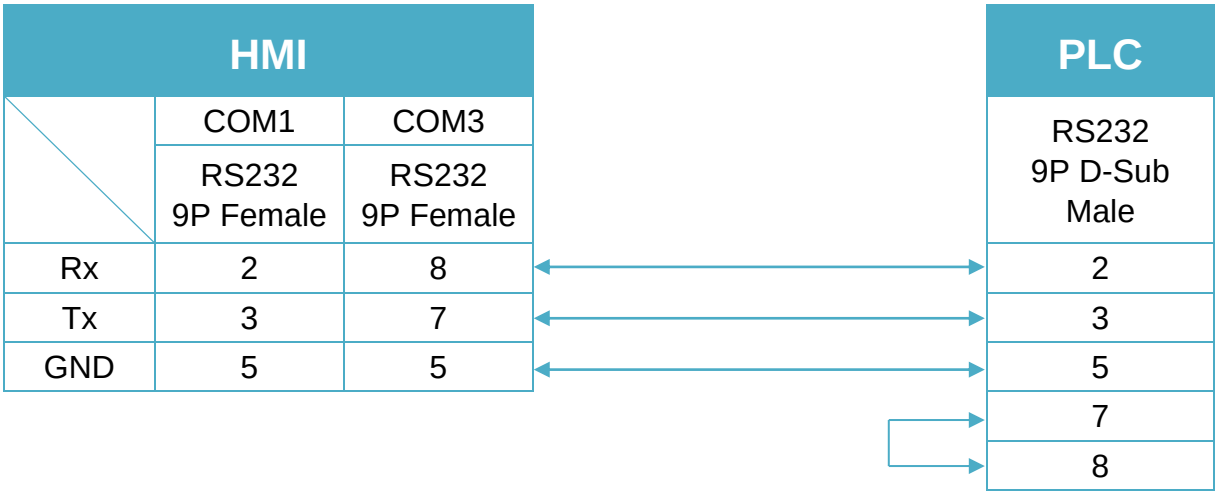


Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	↔	2
Tx	3	↔	3
GND	5	↔	5
			7
			8

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051Ip / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	↔	2
Tx	6	↔	3
GND	5	↔	5
			7
			8

YASKAWA SMC 3010 (Ethernet)

Supported Series: YASKAWA SMC Series Servo Motor Controller.

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YASKAWA SMC 3010 (Ethernet)		
PLC I/F	Ethernet		
Port no.	23		

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	AF	D	0 ~ 1	
B	BN	D	0 ~ 1	Write only
B	BP	D	0 ~ 1	Write only
B	BV	D	0 ~ 1	Write only
B	CB	DDDD	0 ~ 9999	Write only
B	CM	D	0 ~ 1	Read only
B	DV	D	0 ~ 1	
B	EB	D	0 ~ 1	
B	OE	D	0 ~ 1	
B	RS	D	0 ~ 1	Write only
B	ST	D	0 ~ 1	Write only
B	TB	Do	0 ~ 17	Read only
B	V_Bit	DDDdd	0 ~ 99931	*2
B	D_arr_Bit	DDDdd	0 ~ 99931	
DW	AC	D	0 ~ 4	
DW	DC	D	0 ~ 4	
DW	BL	D	0 ~ 4	
W	CD	D	0 ~ 2	Write only
W	CE	D	0 ~ 2	
DW	DE	D	0 ~ 4	
DW	DP	D	0 ~ 4	
W	DT	D	0 ~ 2	
W	EC	D	0 ~ 2	
DW	EM	D	0 ~ 4	

Bit/Word	Device type	Format	Range	Memo
W	ER	D	0 ~ 2	
W	FA	D	0 ~ 2	
DW	FL	D	0 ~ 4	
W	FV	D	0 ~ 2	
DW	GR	D	0 ~ 4	
DW	JG	D	0 ~ 4	
DW	MM	D	0 ~ 4	
W	MT	D	0 ~ 2	
W	NA	D	0 ~ 2	
W	OP	D	0 ~ 2	
DW	PA	D	0 ~ 4	Write only
DW	PR	D	0 ~ 4	
DW	SP	D	0 ~ 4	
W	TC	D	0 ~ 2	Read only
W	TM	D	0 ~ 2	
W	TW	D	0 ~ 2	
DW	VA	D	0 ~ 4	
DW	VD	D	0 ~ 4	
DW	VS	D	0 ~ 4	
DW	IL	D	0 ~ 4	
DW	IT	D	0 ~ 4	
DW	KD	D	0 ~ 4	
DW	KI	D	0 ~ 4	
DW	KP	D	0 ~ 4	
DW	OF	D	0 ~ 4	
DW	TL	D	0 ~ 4	
DW	VR	D	0 ~ 4	
DW	VT	D	0 ~ 4	
DW	PF	D	0 ~ 4	*1
DW	VF	D	0 ~ 4	
DW	V	DDD	0 ~ 999	*2
W	F	DDD	0 ~ 999	*2
W	D_array	DDD	0 ~ 999	
W	R_array	DDD	0 ~ 999	

Note:

*1 PF is the communication parameter of SMC_3010, the default is 10.4, if the value is not 10.4, all values will be displayed incorrectly.

*2 User defined integer variable V000~V999, floating point variable F000~F999.

Wiring Diagram:

Ethernet cable



YOKOGAWA FA-M3

Supported Series : FA-M3 CPU SP35-5N, SP55-5N CPU port, F3LC11 Computer Link module.
Website : http://www.yokogawa.com/itc/itc-index-en.htm

HMI Setting:


Parameters	Recommended	Options	Notes
PLC type	YOKOGAWA FA-M3		
PLC I/F	RS232		
Baud rate	19200	9600 ~ 115200	
Data bits	8	7, 8	
Parity	Even	Even, Odd, None	
Stop bits	1	1, 2	
PLC sta. no.	1	1-32	

PLC Setting:

Communication mode	**Use Personal Communication Link** **Use checksum** **Use End Character**

WideField communication setting:

For WideField communication setting, select [Tool]/ [Set Environment], the default is [Automatic]. Using the Automatic Recognition, WideField software will connect the current PLC and get the PLC communication setting. If the PLC communication configuration is already known, select the [Fixed] mode, It will connect with the PLC quickly.

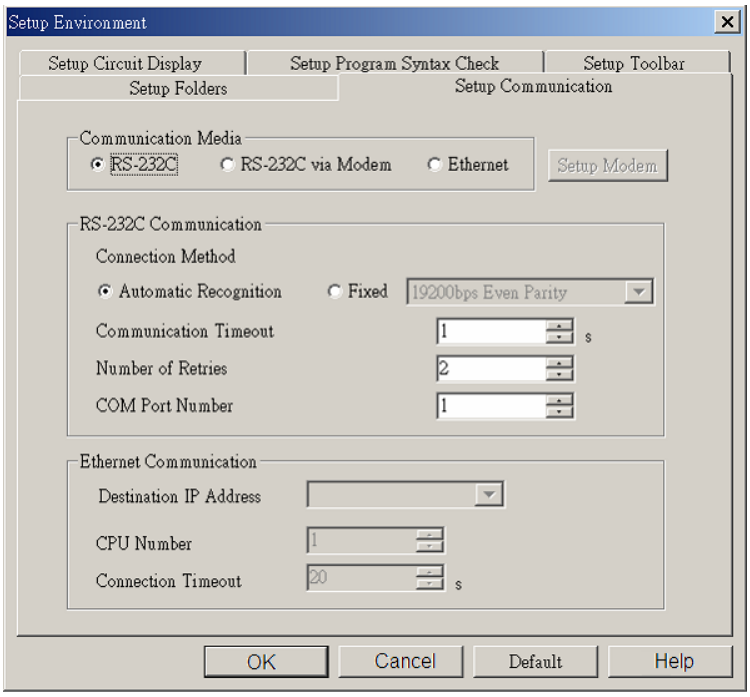


P.S Since Personal Computer link is used, when connecting to PLC it will delay about 20sec for testing communication.

YOKOGAWA PLC Communcation Setting:


YOKOGAWA FA-M3

CPU SP55-5N (same SP35-5N)

[File] /[New Project] to create a new project.

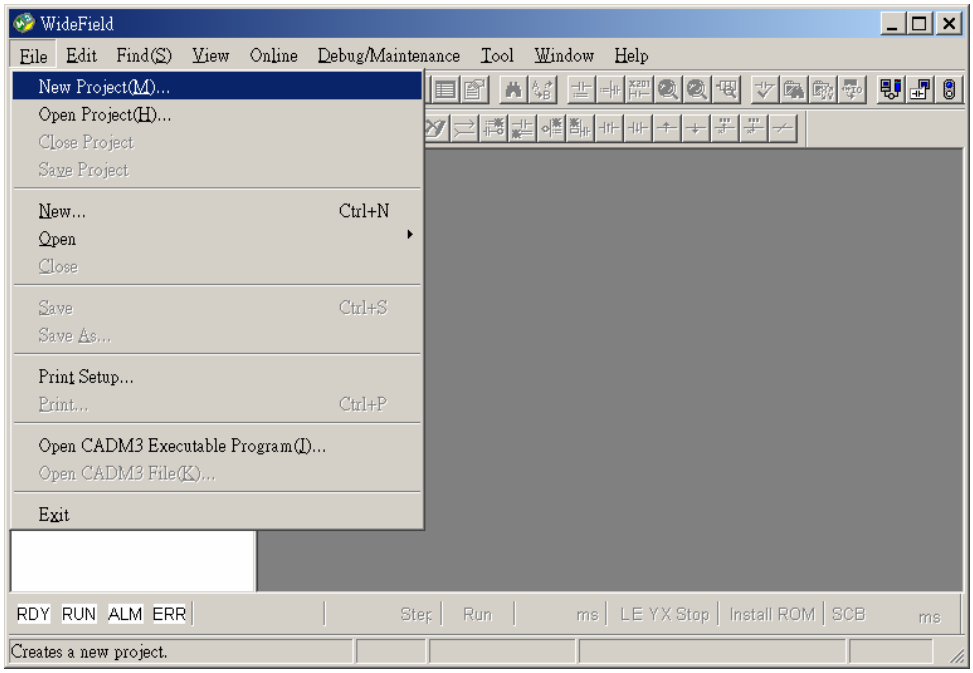

Click [Configuration] to set up communication.

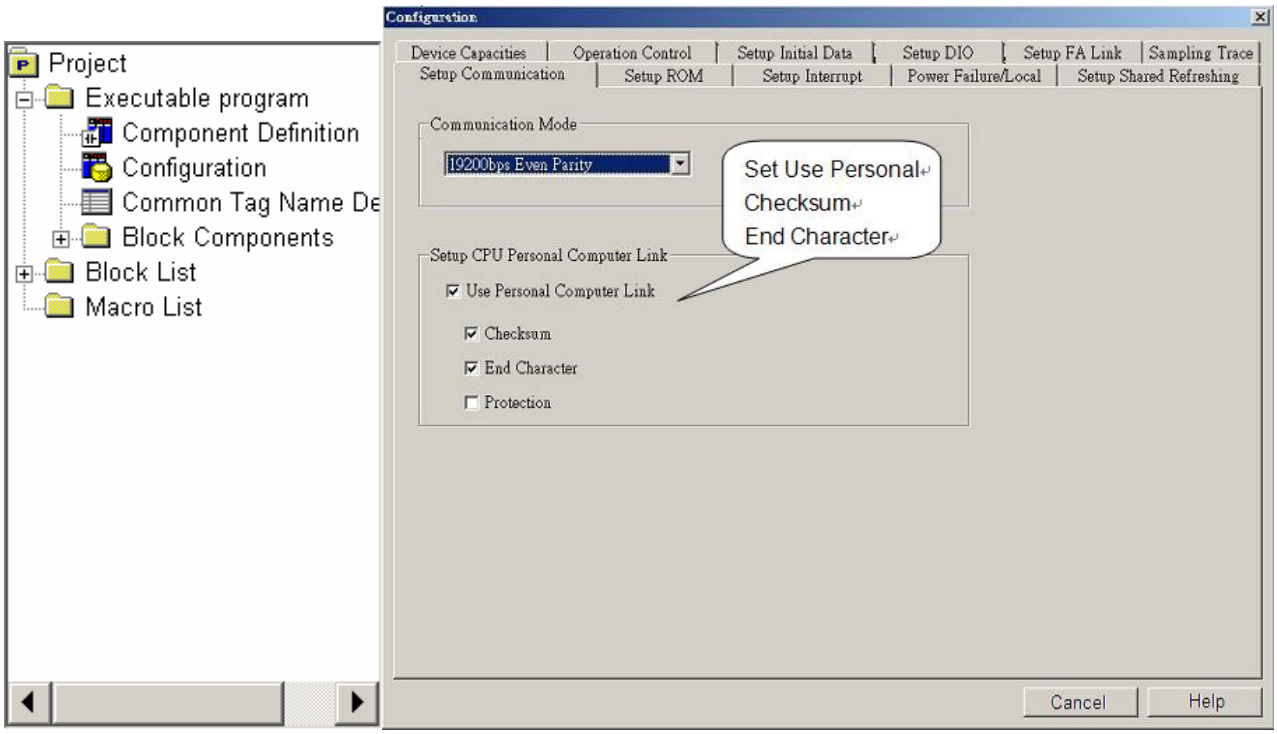

Device Address:

Bit/Word	Device	Format	Range	Memo
B	X	DDDDD	0 ~ 71664	
B	Y	DDDDD	0 ~ 71664	
B	I	DDDDD	1 ~ 65535	
B	M	DDDD	1 ~ 9984	
B	L	DDDDD	0 ~ 78192	
W	D	DDDDD	1 ~ 65535	
W	B	DDDDDD	1 ~ 262144	
W	V	DDD	1 ~ 256	
W	W	DDDDD	1 ~ 78192	
W	Z	DDDD	1 ~ 1024	
W	F	DDDDDD	1 ~ 524288	

Wiring Diagram:

RS-232 9P D-Sub (Diagram 1 ~ Diagram3)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	⟷	2
Tx	3	7	⟷	3
GND	5	5	⟷	5

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	2	⟷	2
Tx	3	⟷	3
GND	5	⟷	5

Diagram 3

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI			PLC
	COM1 RS232 9P Female		RS232 9P D-Sub Male
Rx	9	⟷	2
Tx	6	⟷	3
GND	5	⟷	5

RS-232 9P D-Sub (Diagram 4 ~ Diagram6)

Diagram 4

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***
MT-iE	***MT8073iE / MT8102iE***
MT-XE	***MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM1	COM3		RS232 9P D-Sub Male
	RS232 9P Female	RS232 9P Female		
Rx	2	8	↔	3
Tx	3	7	↔	2
GND	5	5	↔	5
			↔	7
			↔	5

Diagram 5

cMT Series	***cMT-SVR***
mTV	***mTV***
MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE / MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8121XE / MT8150XE / MT8090XE***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	2	3
Tx	3	2
GND	5	5
		7
		8

Diagram 6

MT-iE	***MT8050iE***
MT-iP	***MT6051iP / MT6071iP / MT8071iP***

HMI		PLC
	COM1 RS232 9P Female	RS232 9P D-Sub Male
Rx	9	3
Tx	6	2
GND	5	5
		7
		8

YOKOGAWA FA-M3 (Ethernet)


Supported Series : FA-M3 CPU SP35-5N, SP55-5N with F3LE01-5T/F3LE11-0T Ethernet module.
Website: http://www.yokogawa.com/itc/itc-index-en.htm

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	YOKOGAWA FA-M3 (Ethernet)		
PLC I/F	Ethernet		
Port no.	12289		
PLC sta. no.	1		

PLC Setting:

Communication mode	Set IP Address, and set all condition setup switch to OFF.

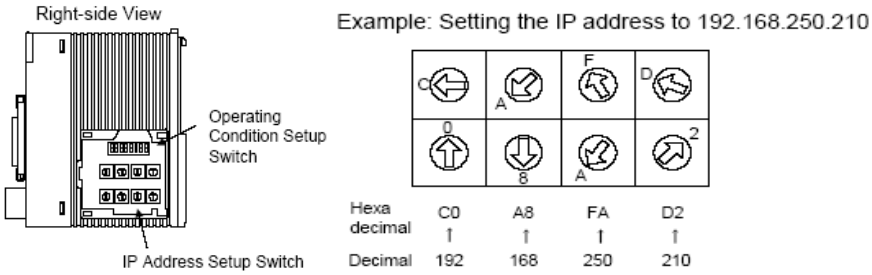

Device Address:

Bit/Word	Device type	Format	Range	Memo
B	X	DDDDD	0 ~ 71664	
B	Y	DDDDD	0 ~ 71664	
B	I	DDDDD	1 ~ 65535	
B	M	DDDD	1 ~ 9984	
B	L	DDDDD	0 ~ 78192	
W	D	DDDDD	1 ~ 65535	
W	B	DDDDDD	1 ~ 262144	
W	V	DD	1 ~ 256	
	W	DDDDD	1 ~ 78192	
W	Z	DDDD	1 ~ 1024	
W	F	DDDDDD	1 ~ 524288	

Wiring Diagram:

Ethernet cable



YUDIAN AIBUS

Supported Series: UDIAN Automation AI-501, AI-518, AI-519, AI-701, AI-702M, AI-704M, AI-706M, AI-719.
Website: http://www.yudian.us

HMI Setting:

Parameters	Recommended	Options	Notes
PLC type	AIBUS		
PLC I/F	RS485 2W	RS232	
Baud rate	9600	9600, 19200	
Data bits	8		
Parity	None		
Stop bits	2		
HMI sta. no.	0		
PLC sta. no.	1	0-100	

On-line simulation	YES
Extend address mode	NO

Device Address:

AI-518

Bit/Word	Device type		Format	Range	Memo
W	0	00H	DD		SV/STEP
W	1	01H	DD	-1999 ~ 9999	HIAL
W	2	02H	DD	-1999 ~ 9999	LoAL
W	3	03H	DD	0 ~ 9999	dHAL
W	4	04H	DD	0 ~ 9999	dLAL
W	5	05H	DD	0 ~ 2000	dF
W	6	06H	DD	0 ~ 4	CtrL
W	7	07H	DD	0 ~ 9999	M5
W	8	08H	DD	1 ~ 9999	P
W	9	09H	DD	0 ~ 2000	t
W	10	0AH	DD	0 ~ 125	Ctl

Bit/Word	Device type		Format	Range	Memo
W	11	0BH	DD	0 ~ 37	Sn (read only)
W	12	0CH	DD	0 ~ 3	dIP (read only)
W	13	0DH	DD	-1999 ~ 9999	dIL
W	14	0EH	DD	-1999 ~ 9999	dIH
W	15	0FH	DD	0 ~ 9999	ALP
W	16	10H	DD	-1999 ~ 4000	Sc
W	17	11H	DD	0 ~ 48	Op1
W	18	12H	DD	-110 ~ 110%	oPL
W	19	13H	DD	0 ~ 110%	oPH
W	20	14H	DD	0 ~ 127	CF (read only)
W	21	15H	DD	0 ~ 19.2K	Baud rate（bAud）
W	22	16H	DD	0 ~ 100	ADDR
W	23	17H	DD	0 ~ 20	dL
W	24	18H	DD	0 ~ 127	Run
W	25	19H	DD	0 ~ 9999	Loc

AI-701

Bit/Word	Device type		Format	Range	Memo
W	1	01H	DD	-9990 ~ 30000	HIAL
W	2	02H	DD	-9990 ~ 30000	LoAL
W	3	03H	DD	-9990 ~ 30000	HdAL
W	4	04H	DD	-9990 ~ 30000	LdAL
W	5	05H	DD	0 ~ 2000	AHYS
W	11	0BH	DD	0 ~ 37	InP (read only)
W	12	0CH	DD	0 ~ 3	dPt
W	13	0DH	DD	-9999 ~ 30000	SCL
W	14	0EH	DD	-9999 ~ 30000	SCH
W	15	0FH	DD	0 ~ 4444	AOP
W	16	10H	DD	-1999 ~ 4000 0.1℃	Scb
W	17	11H	DD	0 ~ 48	Opt
W	21	15H	DD	0 ~ 19.2K	Baud rate（bAud） /808P status word run: 0 suspend: 4 stop: 12 (read only)
W	22	16H	DD	0 ~ 80	ADDR

Bit/Word	Device type		Format	Range	Memo
W	23	17H	DD	0 ~ 40	FILt
W	25	19H	DD	0 ~ 255	Loc

Wiring Diagram:

RS-485 2W Terminal (Diagram 1 ~ Diagram6)

Diagram 1

cMT Series	***cMT3151***
eMT Series	***eMT3070/ eMT3105 / eMT3120 / eMT3150***

HMI				PLC
	COM1	COM3		RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	4
Data+	2	9	⟷	3
GND	5	5	⟷	

Diagram 2

cMT Series	***cMT-SVR***
mTV	***mTV***

HMI				PLC
	COM2	COM3		RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	7	4	⟷	4
Data+	6	1	⟷	3
GND	5	5	⟷	

Diagram 3

MT-iE	***MT8070iE / MT6070iE / MT8100iE / MT8121iE / MT8150iE***
MT-XE	***MT8121XE / MT8150XE***

HMI				PLC
	COM1	COM3		RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	7	⟷	4
Data+	2	8	⟷	3
GND	**5**	**9**	⟷	

Diagram 4

MT-iE	***MT8071iE / MT6071iE / MT8072iE / MT6072iE / MT8073iE / MT8101iE / MT8102iE / MT8103iE***
MT-XE	***MT8090XE / MT8092XE***
MT-iP	***MT6103iP***

HMI				PLC
	COM2	COM3		RS485 2W terminal
	RS485 2W 9P Male	RS485 2W 9P Male		
Data-	1	6	⟷	4
Data+	2	9	⟷	3
GND	5	5	⟷	

Diagram 5

MT-iE	***MT8050iE***
MT-iP	***MT6051iP***

HMI				PLC
	COM1	COM3		RS485 2W terminal
	RS485 2W 9P Female	RS485 2W 9P Female		
Data-	1	7	⟷	4
Data+	2	8	⟷	3
GND	5	5	⟷	

Diagram 6

MT-iP	***MT6071iP / MT8071iP***

HMI			PLC
	COM2		RS485 2W terminal
	RS485 2W 9P Female		
Data-	1	⟷	4
Data+	2	⟷	3
GND	5	⟷	